LUXURY TOP5

REPLACEMENT PARTS

EDITION 1

Revision 2

TRUCKMAN FITTING INSTRUCTIONS

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 0845 6444704 or email fitting@autostylinguk.com. Failure to comply with these instructions may affect any warranty considerations

www.autostylinguk.com

TRUCKMAN

REPLACEMENT PARTS • ACTUATOR

Actuator Replacement



- Unscrew this screw from the bell crank to disconnect the actuator head.
- Unscrew the actuator housing from the locking plate (2 screws).





- Open the rear door of the hardtop.
- Remove the interior handle from the door.
- Remove the cover from the door.






Call our experts on 0845 6444704 or email fitting@autostylinguk.com

- Disconnect the actuator wires making a note of which colours are paired together.
 - Replace the actuator with the new one, recconnecting the bullet connectors



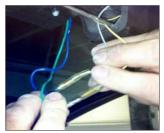

- Reattach the actuator with the three screws removed in steps 4 & 5.
- Check that the actuator works and reverse steps 3-1 to finish.



Auto Styling UK Limited, Unit 4 Narrowboat Way, Hurst Business Park, Brierley Hill, DY5 1UF, UK Tel: 0845 6444704 Fax: 0845 64445014 Email: fitting@autostylinguk.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations. For your safety, we recommend that any wiring is performed by gualified Auto Electricians.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at www.autostylinguk.com

www.autostylinguk.com