

MAZDA PICK-UP DOUBLE CAB/FREESTYLE 04/06




MISUTONIDA s.r.l. - 12062 CHERASCO (CN) - Via Fondovalle n° 3
Tel. 0172-489283 - Fax 0172-488381

Web Site: <http://www.misutonida.com> - E-mail: misutonida@misutonida.com

BULLONERIA ED ACCESSORI BOLT AND ACCESSORIES

2	CAVALLETTE AD „U“	A
4	M10 - NUT	B
4	ROND Ø8 - WASHER	C
4	GROW Ø8	D
2	TE 10x30 - BOLT	E
2	ROND Ø10 - WASHER	F
2	GROW Ø10	G
4	TE 10x50 - BOLT	H
8	M10 AUTOB. - NUT	I

CODICE KIT KIT CODE	141
CODICE PEDANA SIDE STEPS CODE	120

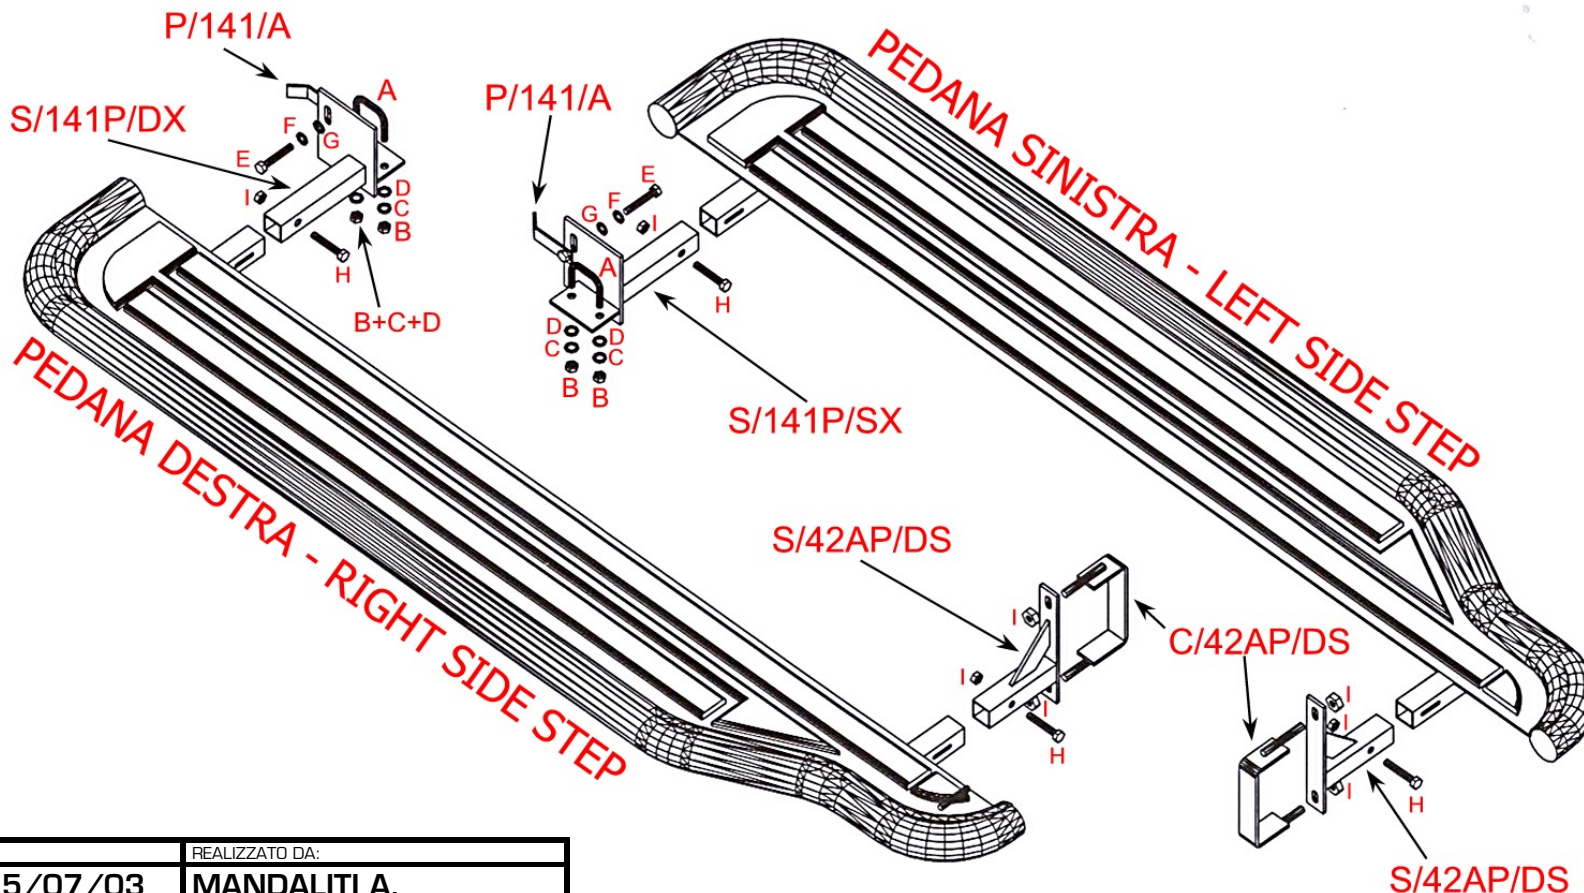

DATA	REALIZZATO DA:
25/07/03	MANDALITI A.
CONTROLLATO E APPROVATO DA	
GALLO CLAUDIO	

OGGETTO: PEDANA EXTRA LUNGA - EXTRA LONG SIDE STEPS
OBJECT: MAZDA PICK-UP DOUBLE CAB/FREESTYLE 04/06

ARTICOLO: P/141/IX **Versione acciaio INOX AISI 304**
ITEM: Stainless steel AISI 304 version

- S/42AP/DS** SUPPORTO ANTERIORE DESTRO O SINISTRO (FRONT STAND RIGHT/LEFT)
- C/42AP/DS** CHIUSURA ANTERIORE DESTRA O SINISTRA (FRONT SHUTTING RIGHT/LEFT)
- S/141P/DX** SUPPORTO POSTERIORE DESTRO (REAR STAND RIGHT)
- S/141P/SX** SUPPORTO POSTERIORE SINISTRO (REAR STAND LEFT)
- P/141/A** STAFFA LIBERA PER PARTE POSTERIORE (REAR BRACKET)

MAZDA PICK-UP DOUBLE CAB/FREESTYLE 04/06



DATA	25/07/03	REALIZZATO DA:	MANDALITI A.
CONTROLLATO E APPROVATO DA		GALLO CLAUDIO	

OGGETTO: OBJECT:	PEDANA EXTRA LUNGA - EXTRA LONG SIDE STEPS		
ARTICOLO: ITEM:	P/141/IX	Versione acciaio INOX AISI 304 Stainless steel AISI 304 version	

ISTRUZIONI DI MONTAGGIO

PARTE POSTERIORE

1. UTILIZZARE I FORI ESISTENTI NEL TELAIO COME MOSTRA FOTO 1
2. INSERIRE LA CAVALLETTA IN DOTAZIONE NEL KIT COME FOTO 2 E SISTEMARLA NEI FORI AL TELAIO COME FOTO 3
3. MONTARE IL SUPPORTO S/141P/DX O S/141P/SX COME FOTO 4
4. INSERIRE LA STAFFA P/141/A E FISSARLA CON IL BULLONE IN DOTAZIONE AL SUPPORTO PRECEDENTEMENTE MONTATO (FOTO 5)

PARTE ANTERIORE

1. MONTARE I SUPPORTI ANTERIORI
2. MONTARE LE PEDANE



FITTING INSTRUCTIONS

REAR SIDE

1. USE THE PRE-EXISTENT HOLES IN THE CHASSIS (FOTO 1)
2. INSERT THE U-BRACKET SUPPLIED IN THE KIT AS SHOWN IN PICTURE 2 AND SETTLE IT IN THE HOLES ON THE CHASSIS AS SHOWN IN PICTURE 3
3. ASSEMBLE THE SUPPORT (PICTURE 4)
4. INSERT THE BRACKET P/141/A AND FIX IT WITH THE BOLT SUPPLIED WITH THE PREVIOUSLY ASSEMBLED SUPPORT (PICTURE 5)

FRONT SIDE

1. ASSEMBLE THE FRONT SUPPORTS
2. ASSEMBLE THE SIDESTEPS

