

COBRA

TECHNOLOGY & LIFESTYLE

Ⓜ Fitting Instructions:	FRONTGUARD
Ⓝ Montageanleitung:	FRONTBÜGEL
Ⓝ Montagevoorschrift:	FRONTGUARD
Ⓜ Instructions de montage:	PARE-BUFFLES
Ⓜ Instrucciones de montaje:	DEFENSA DELANTERA BIG BAR
Ⓜ Schema di montaggio:	PROTEZIONE FRONTALE CENTRALE
Ⓜ Manual:	FRONTBÅGE

FORD Transit



Type Nr.: FT/5
Best.-Nr.: FORD1251EC




45 Min.



All rights reserved to modify the text

Type Nr.: FT/5

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
 Herramientas necesarias / Utensile necessarie / Verktuyg somsomkrävs

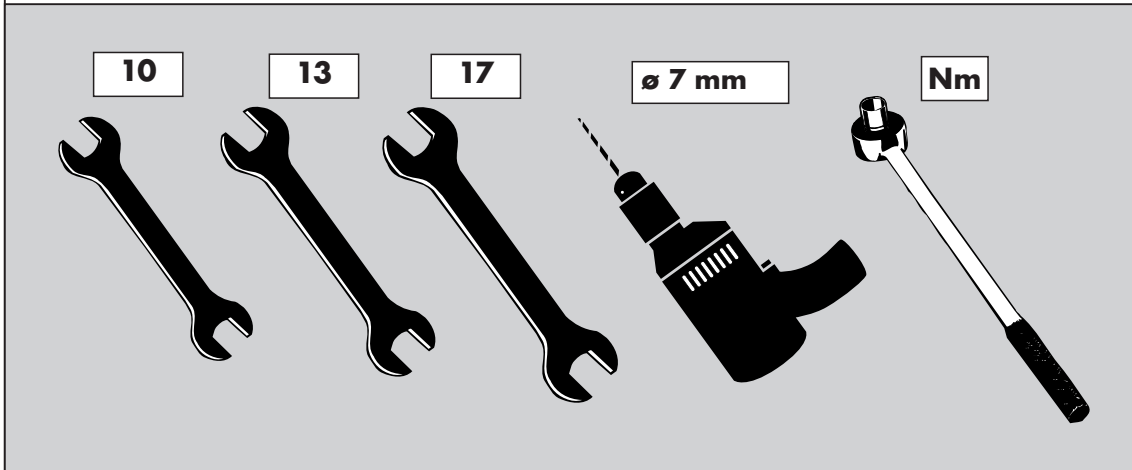

COBRA
 TECHNOLOGY & LIFESTYLE

☉ Fitting Instructions: FRONTGUARD
 ☉ Montageanleitung: FRONTBÜGEL
 ☉ Montagevoorschrift: FRONTGUARD
 ☉ Instructions de montage: PARE-BUFFLES
 ☉ Instrucciones de montaje: DEFENSA DELANTERA BIG BAR
 ☉ Schema di montaggio: PROTEZIONE FRONTALE CENTRALE
 ☉ Manual: FRONTBÄGE

FORD Transit

Type Nr.: FT/5
 Best.-Nr.: FORD1251EC







45 Min.








TW
 All rights reserved to modify the text

1 ISSUE 1 22.01.2007

**Parts list / Teileliste / Onderdelenlijst / Liste de pièces
 Lista de accesorios / Lista di pezzi / Artikel lista**

1		1 x	9		M 6	2 x
2		2 x	10		M 8 x 45	2 x
3		2 x	11		M 8 x 20	2 x
4		2 x	12		M 8	2 x
5		2 x	13		ø 8,4	2 x
6		4 x	14		ø 8,1	2 x
7		2 x	15		ø 17 x 3 x 10	2 x
8		2 x	16		ø 20 x 5 x 7,5	2 x
				Für Nr.-Schild		

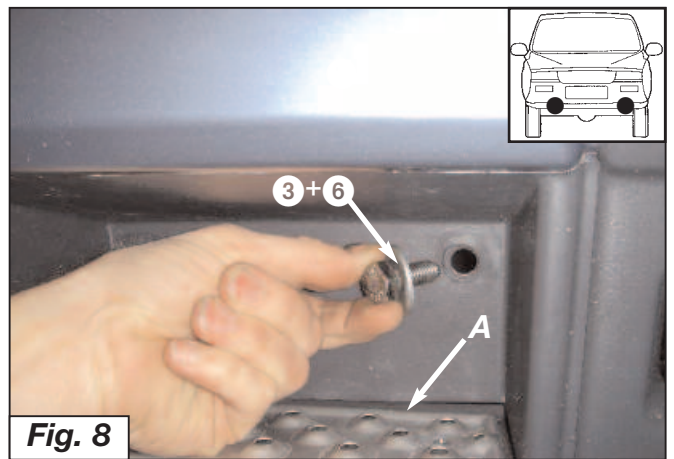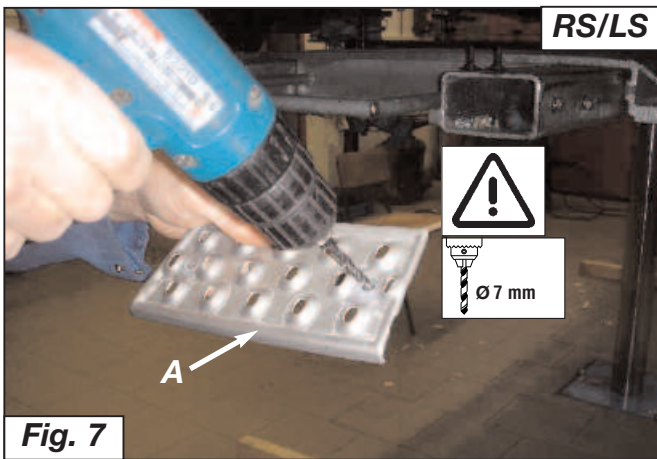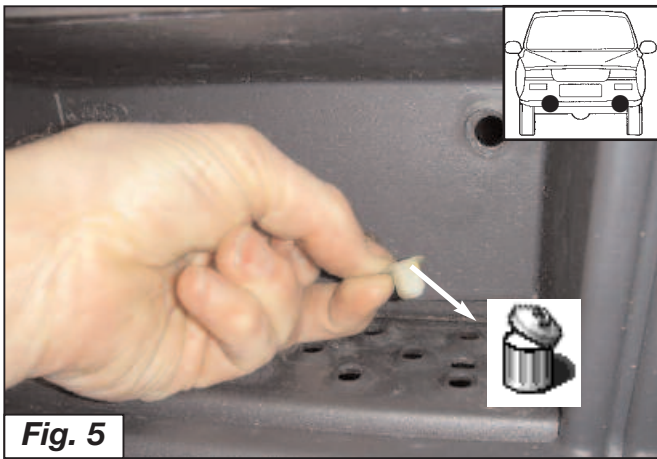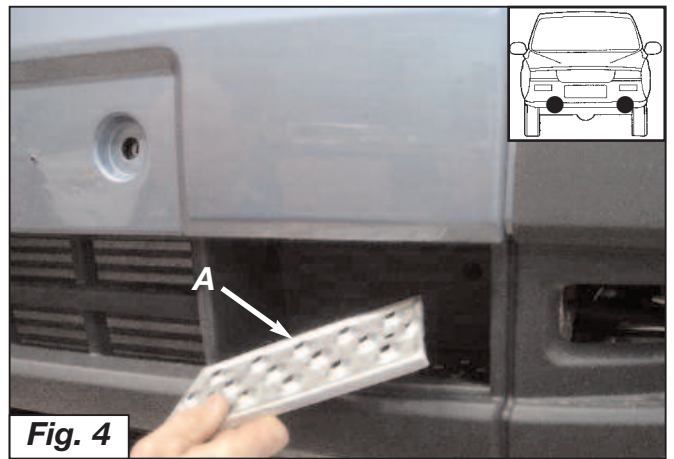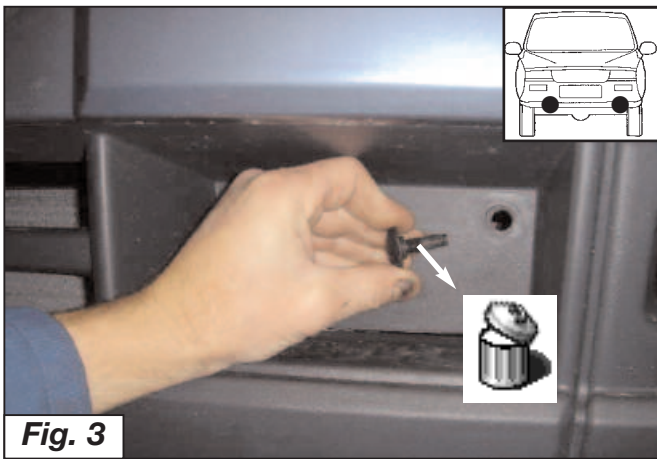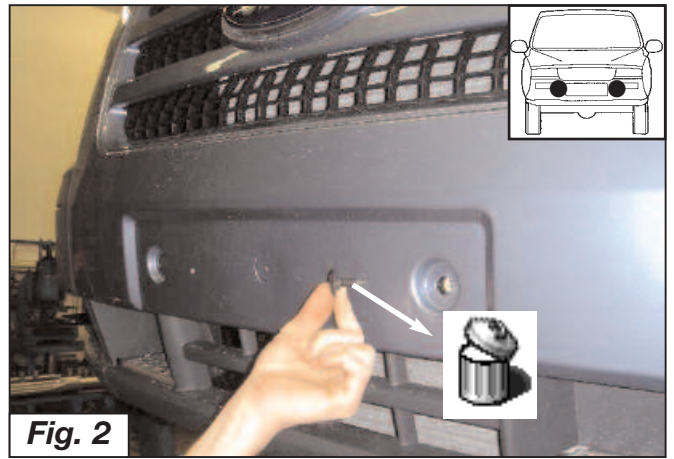

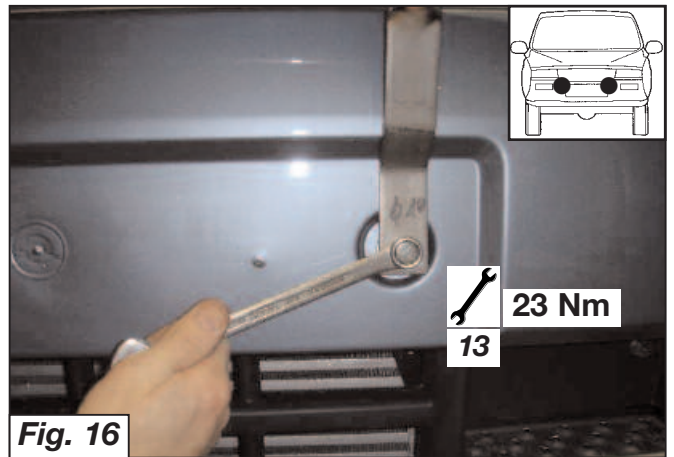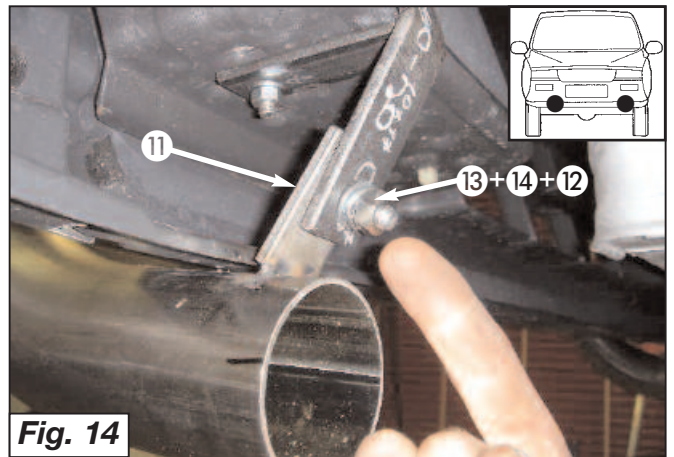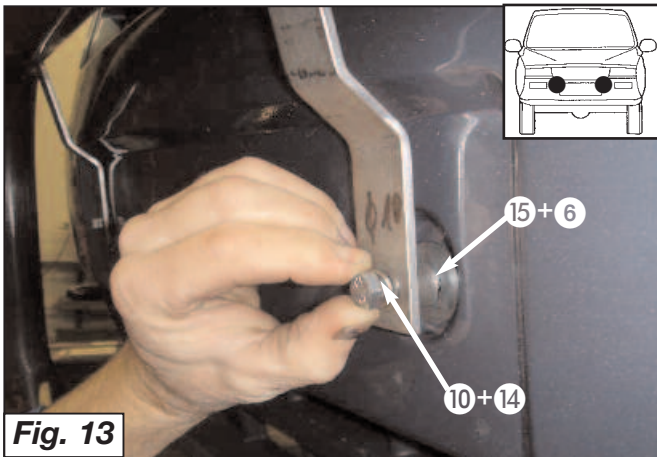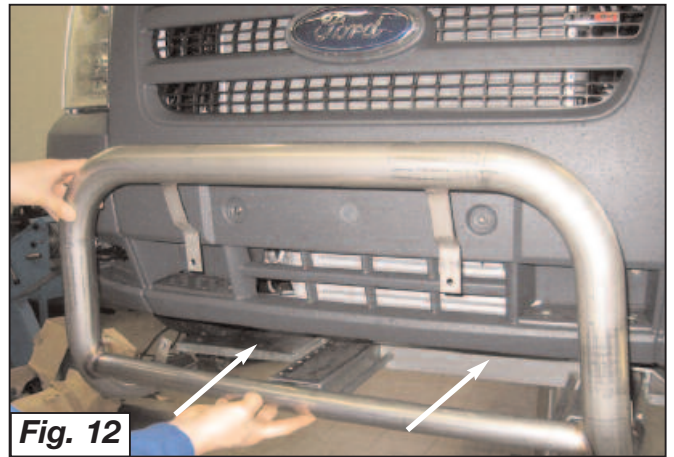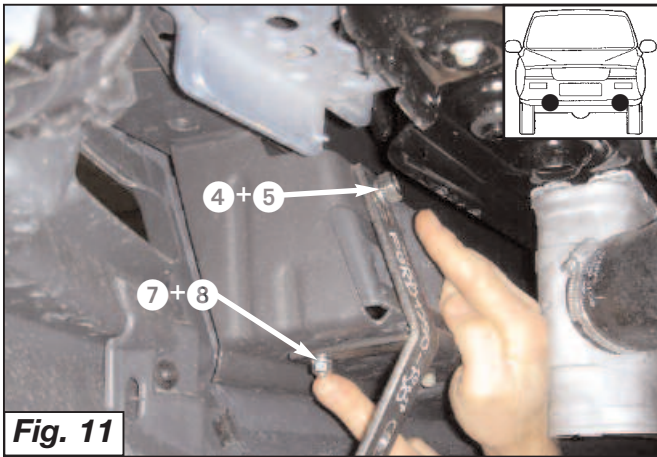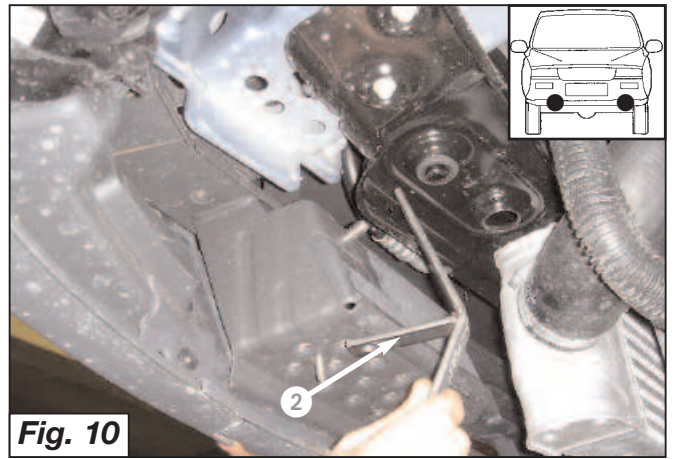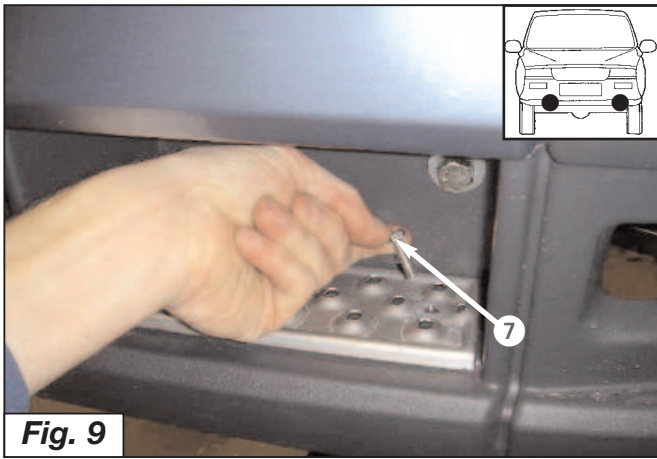

Type Nr.: FT/5

