




LINER INSTALLATION INSTRUCTIONS

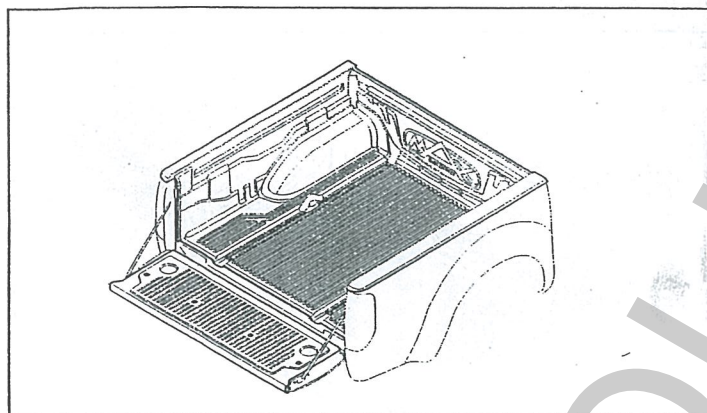


Caution for installation

Read this mounting manual carefully, before you start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.


Product name : EXP MAX LINER O/R (C-CHANNEL 2)
 Model name : NISSAN NAVARA D40 DBC 2006
 Body : F2124NID/01
 Tail gate : F2170NID/32
 Instruction : F21-03NID33
 Inst. number : L03-0431

Component parts

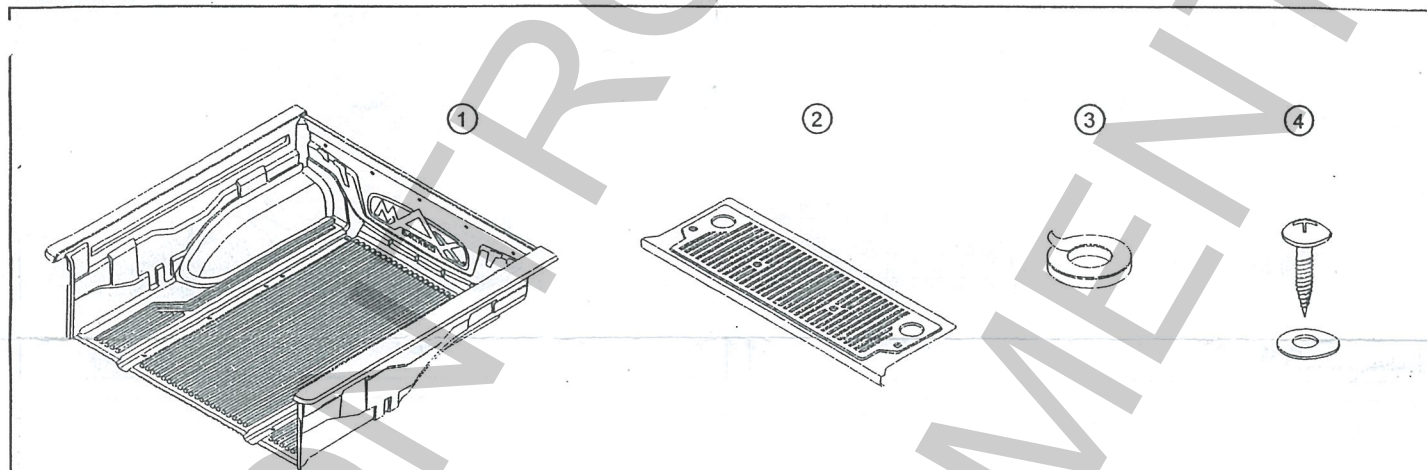

No.	Part Name	Q'ty
1.	Body liner	1 Pc.
2.	Tail gate	1 Pc.
3.	Plastic washer	4 Pcs.
4.	Screw # 6x25, Washer 6/20	4 Sets

Tools used

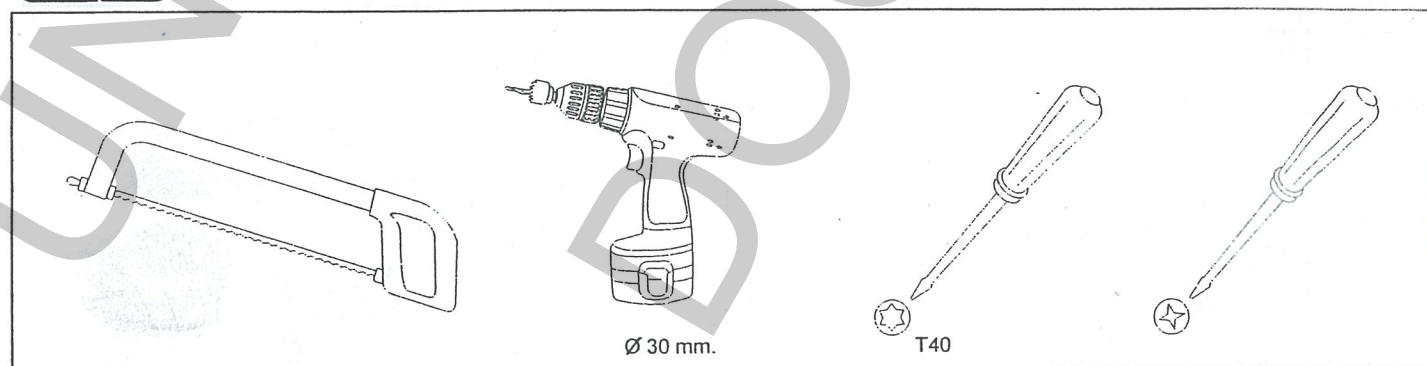

Vandapac Co., Ltd.

700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi 20000 Thailand Tel : (038)743-582-3,743-729, Fax : (038)743-730 Email : mail @ vandapac. com

Instruction procedure

