


# BEDLINER INSTALLATION INSTRUCTIONS

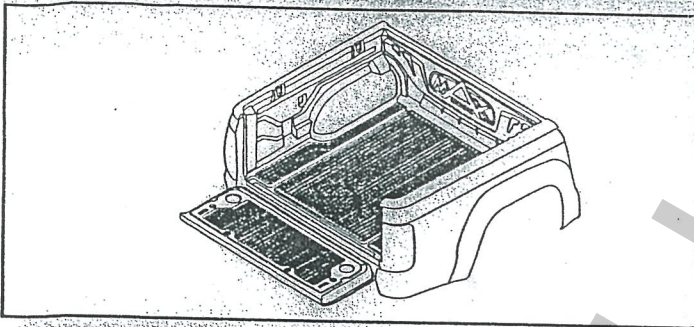


## Caution for installation

Read this mounting manual carefully, before you start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.


Product name : EXP MAX LINER O/R (UL)  
 Model name : VOLKSWAGEN AMAROK DBC 2010  
 Instructions : F21-ULVOD01  
 Inst. number : L03-0805

## Component parts

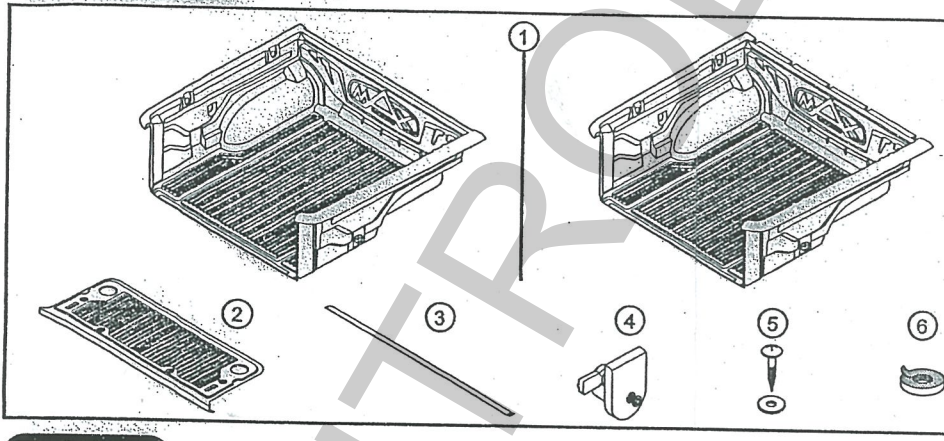


No.	Part Name	Q'ty
1.	Body liner	1 Pc.
2.	Tailgate	1 Pc.
3.	U-clip lock	1 Pc.
4.	U-lock	4 Sets
5.	Screw, Washer	5 Sets
6.	Plastic washer	5 Pcs.

## Tools used

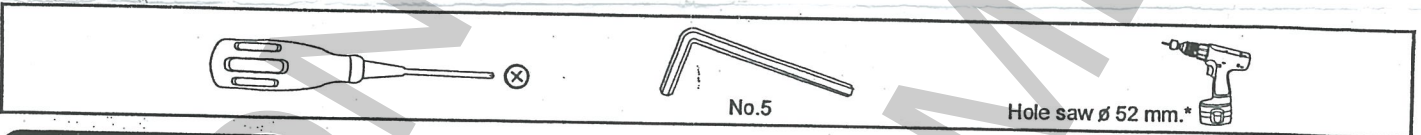

## Instruction procedure

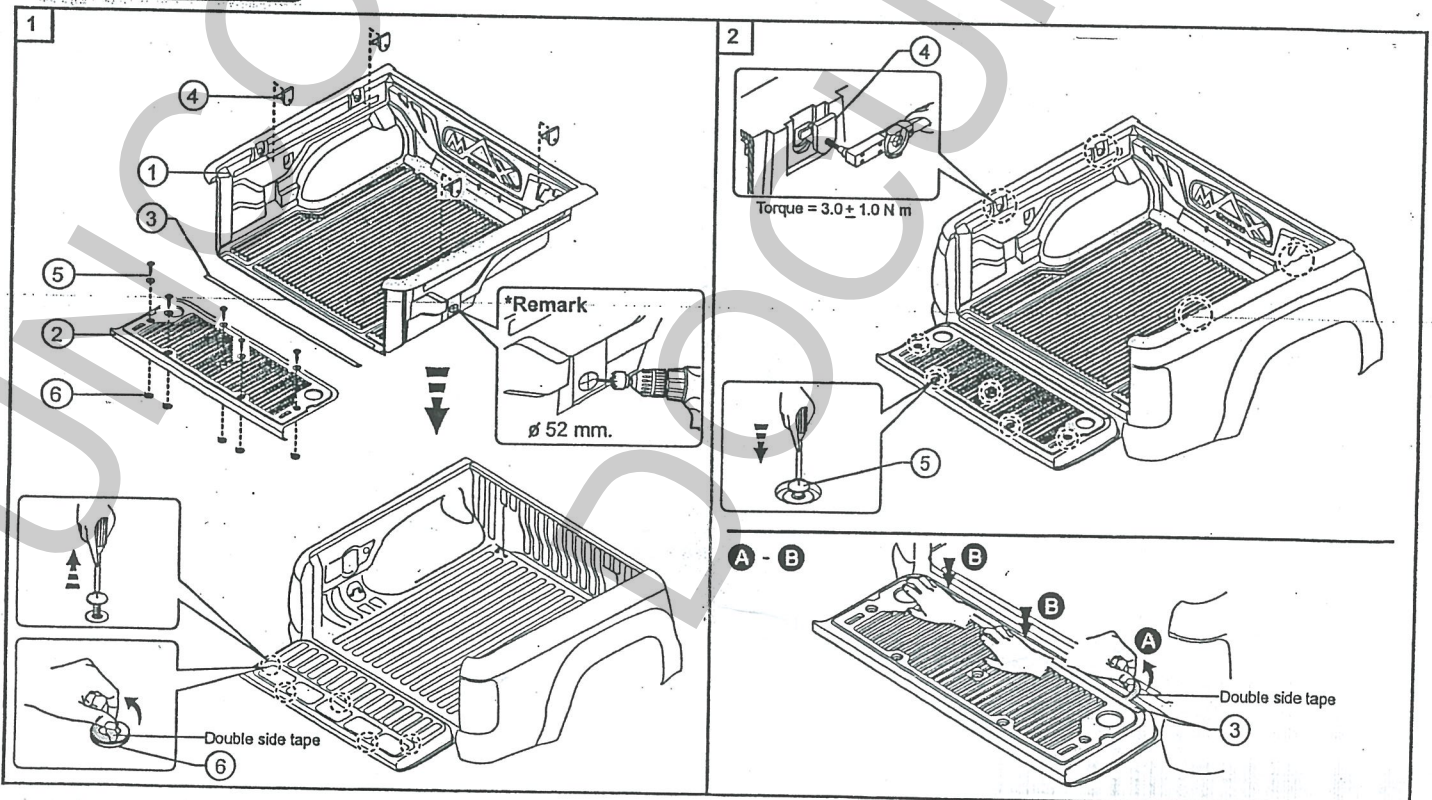

**1**

**2**

Torque =  $3.0 \pm 1.0$  N m

\*Remark  
 $\varnothing$  52 mm.

Double side tape

Double side tape

