




## 2. Put ProLift brackets with the tailgate


using original bolts

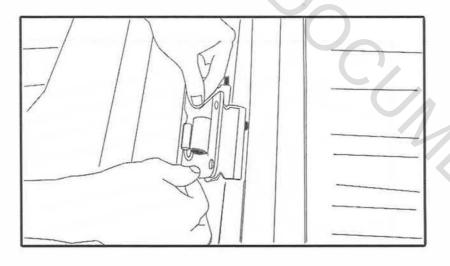

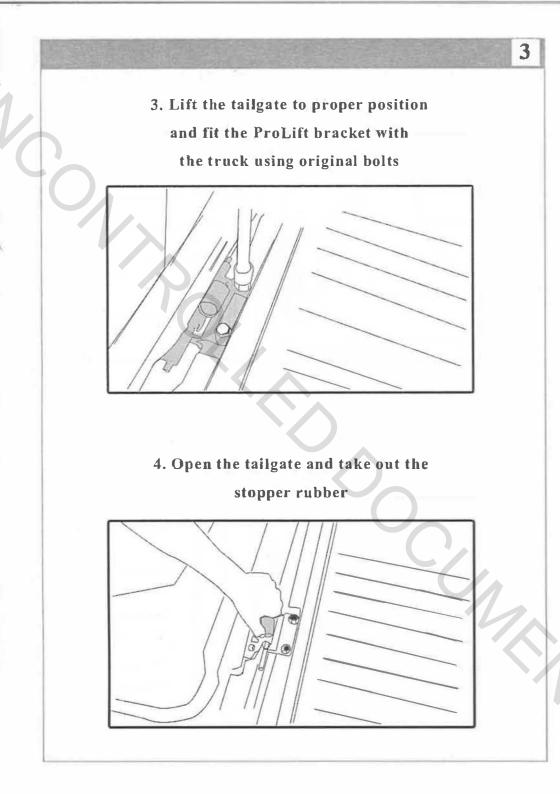


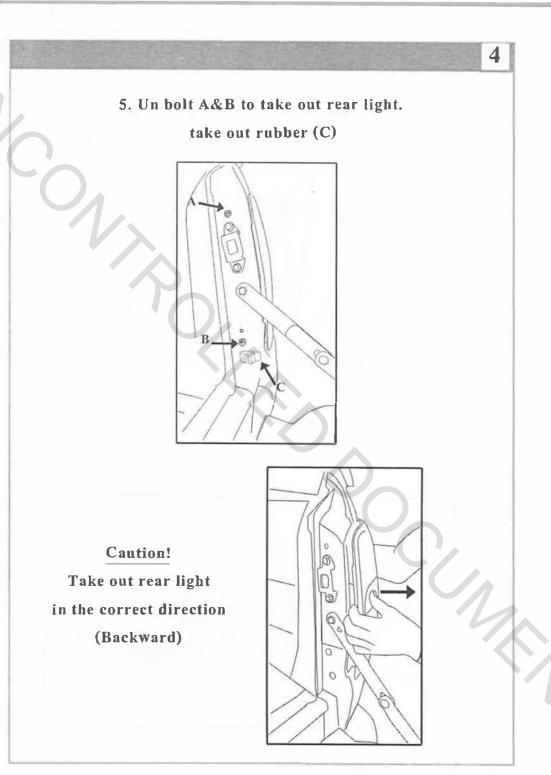


6. Attach damper bracket with the truck using M8 bolts and nut(D)(E). Then put back the rear light.

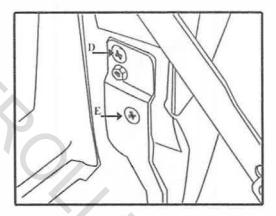

7. Attach damper bracket to the tailgate using original bolts.

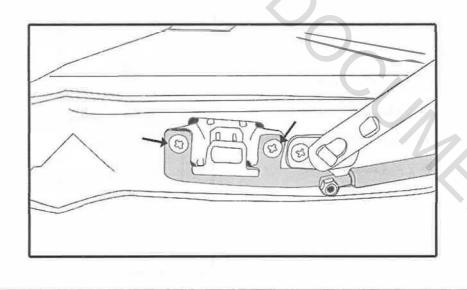

5

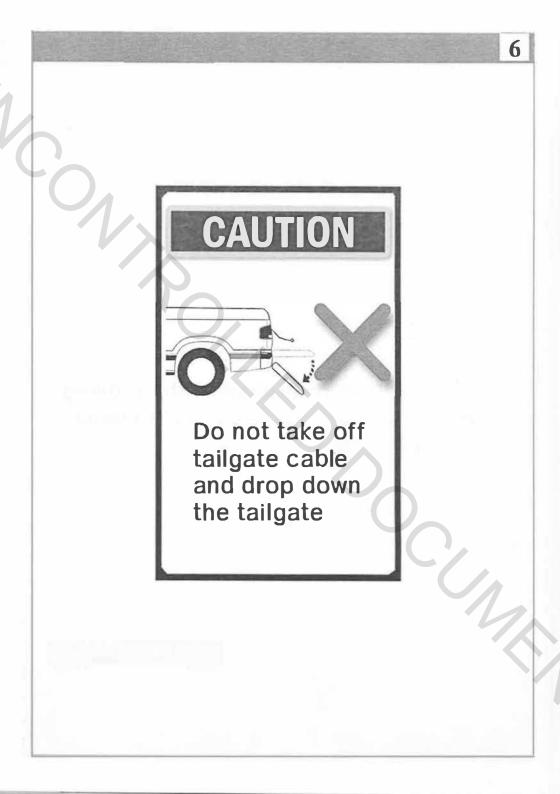

## Note :

Apply WD40 or grease to the moving parts regulary for good performance of the product.

Patent Pending Worldwide