


PRO lift


FITTING INSTRUCTION

AMAROK

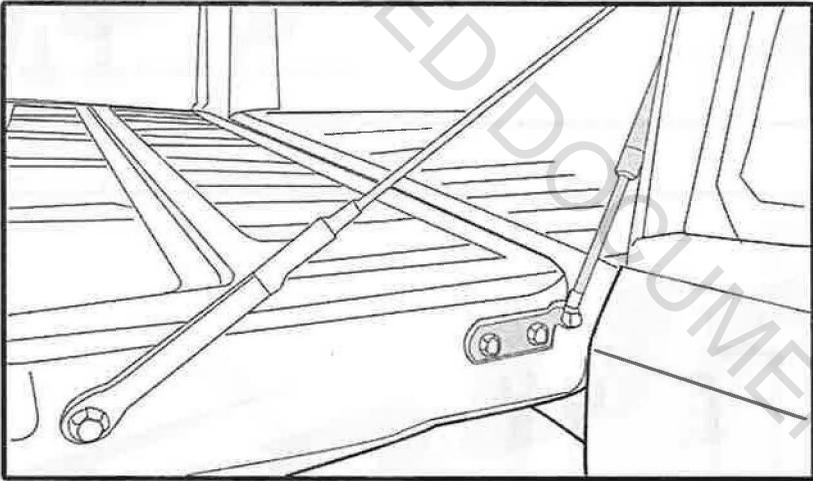

Patent Pending Worldwide

Part list



JT M6x20



M8x20



M6x20

Tooling



allen wrench



No.12

No.6

No.10

screwdriver




No.17

No.12


No.10

**NOTE : Process #2 - #4 will
be done from the bottom of
the tailgate while the tailgate
in closed position.**


1. take off rear bumper

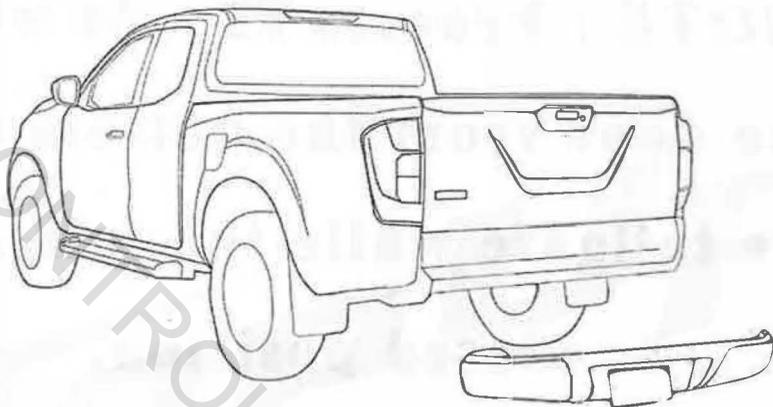

2. un-bolt the truck tailgate bracket

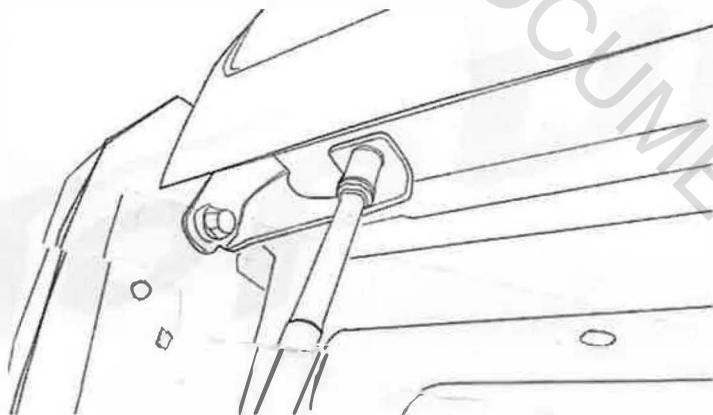


3. Attache tailgate bracket on the truck

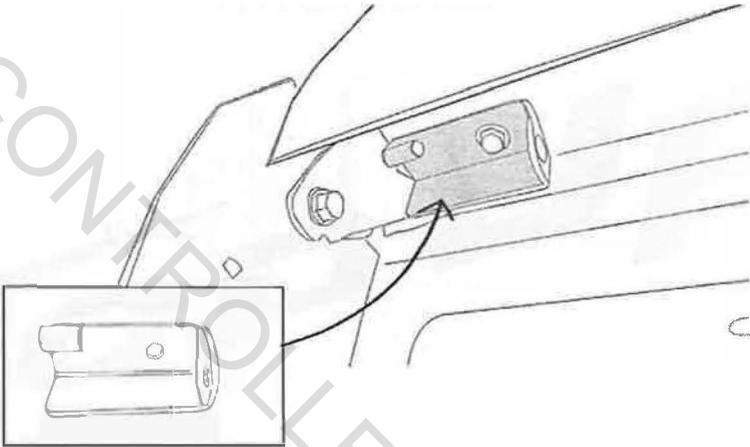


4. Assembly the spring set with tailgate bracket


4.1 put spring set with tailgate bracket as below picture

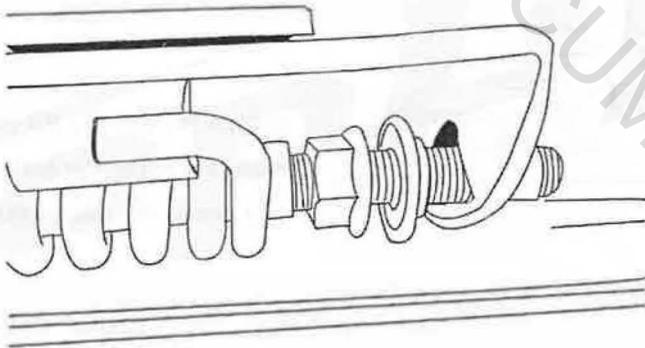

4.3 tighten nut (E) while holding the rod of the spring set with #6 wrench (F)

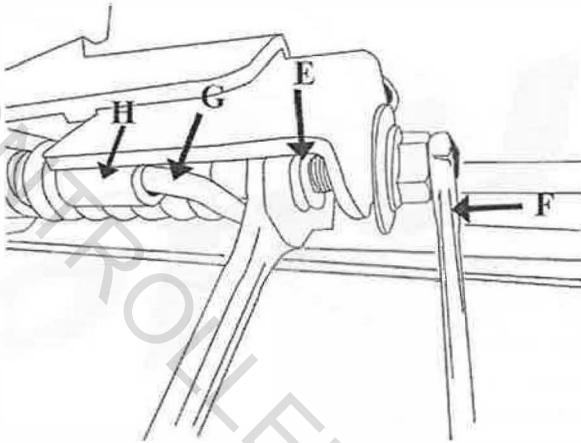


Make sure that the spring end (G) is slided in the bush (H) of the tailgate bracket

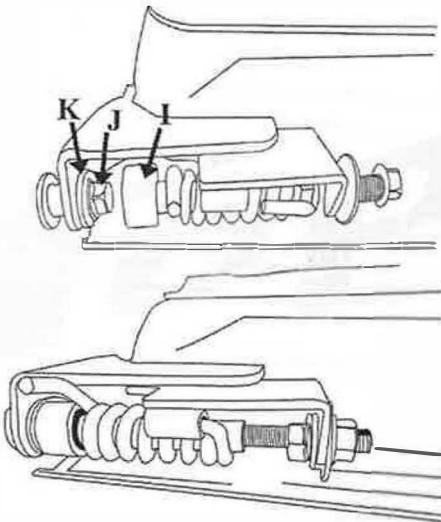


tighten the nut (E) till bush (I) completely cover the bolt head (J) and touch the flat washer (K)


4.4 tighten nut (L) with wrench #12 (M) while holding nut (E) with wrench #12 (N)

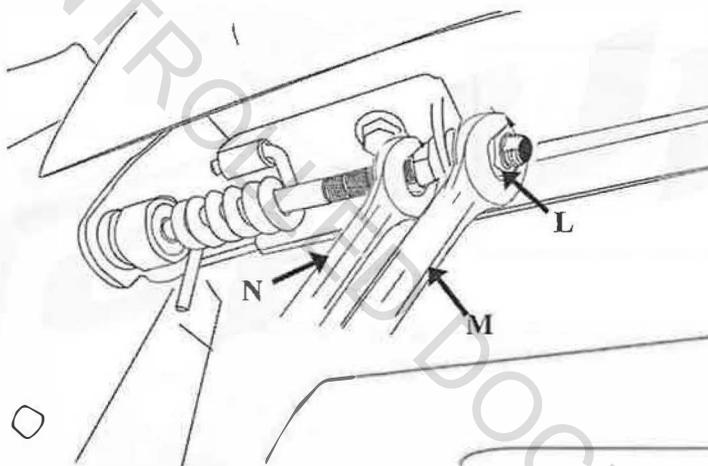

- 5. Attache spring pushing bracket with the truck using M6x20 bolt**

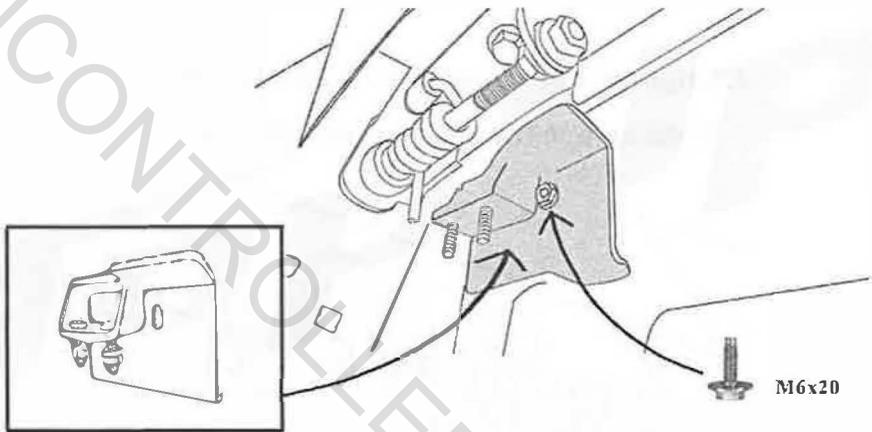


- 6. Attache bracket stopping rubber**

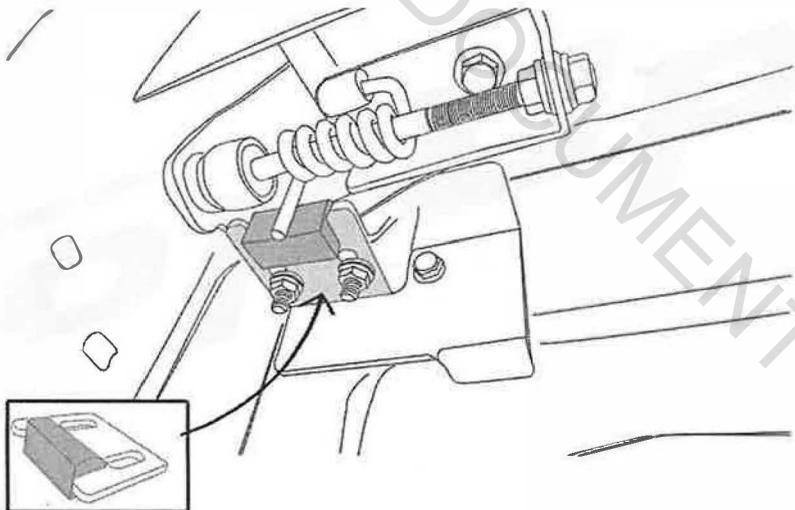


7. Attach damper to the tailgate by putting damper

Caution!

Take out rear light
in the correct direction
(Backward)


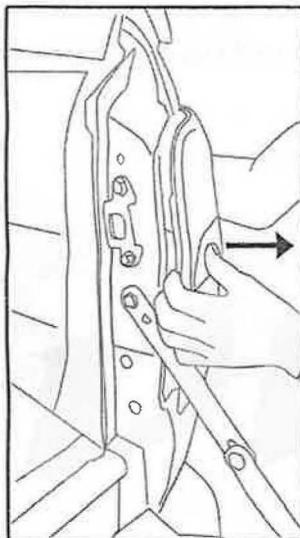


8. Attache damper to the truck using original bolt (R) (S)

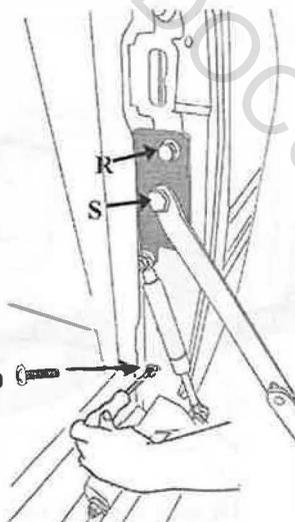


replace original bolt with JT M6x20

9. Attach damper to the tailgate by putting damper bracket (T) under tailgate sling bracket (U) and tighten together with original bolt (V) (W)

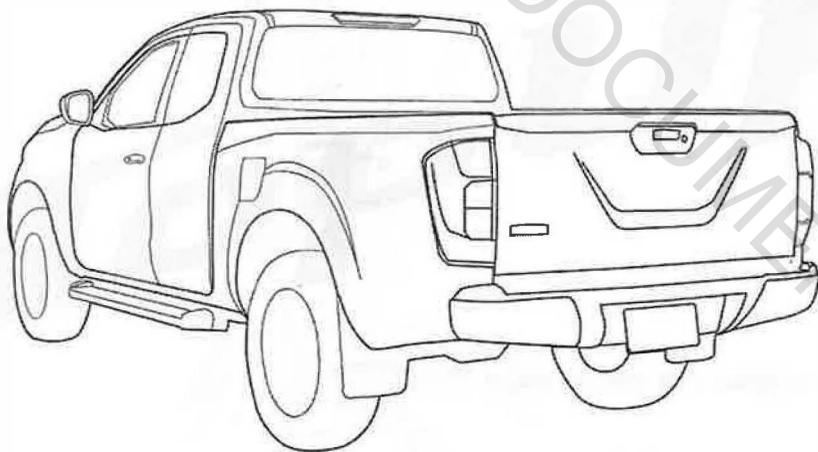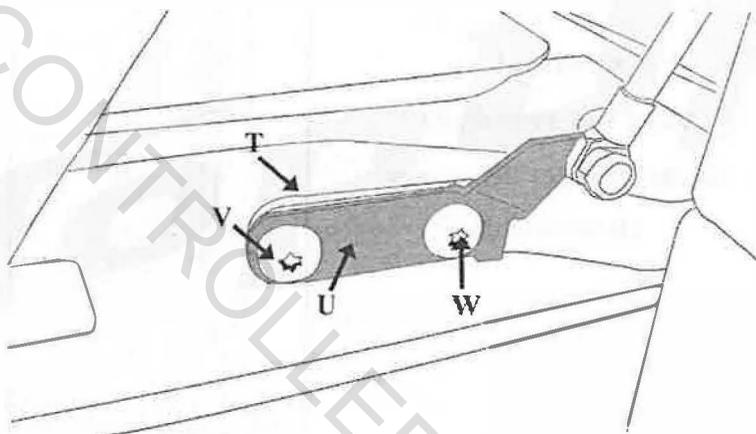

10. put back rear bumper

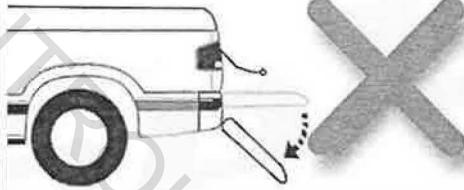CAUTION

Do not take off
tailgate cable
and drop down
the tailgate

Note :

Apply WD40 or grease to the moving parts regularly for good performance of the product.

Patent Pending Worldwide