



EZDown Reloaded Installation  
- 2nd Fitment


## EZDown Reloaded MERCEDES BENZ X CLASS - RL0710

**1** RHS and LHS are determined when sitting in the Drivers side of the Vehicle.

**CAUTION:**  
Do not remove the red bolt from cylinder D until fully installed - if you do you will lose the pre-tension.

**CRITICALLY IMPORTANT:**  
The RED bolts must be removed before you open the tailgate after installation. Failure to do this will create irreparable damage and warranty will be void.

**3** LHS Flat bar to be flush mounted against vehicle bin

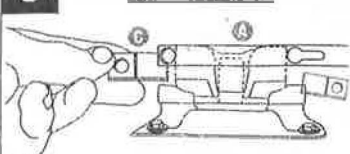


Position LHS clamps and insert bolts as shown in slide 4.



Repeat slides 3 - 5 for: RHS

**2**

VEHICLE BIN SIDE

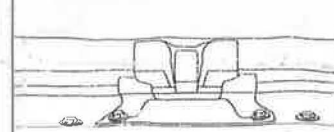


TAILGATE SIDE




**3**

TAILGATE FLAT SIDE

LHS and RHS Flat bars slide under the existing hinges when tailgate is open.  
Flush mount bars against vehicle bin




**4** LHS

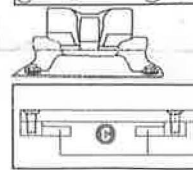

Item C slides under this hinge




**6** LHS

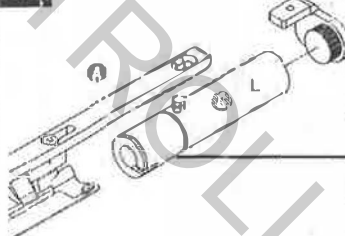

Fit bracket D to Flat bar A


**7**

Front view of pod showing how it looks when fitting it over LHS hinge

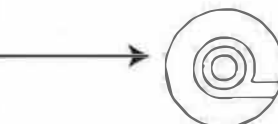


**8**

Bracket slots into Reloaded Bracket D

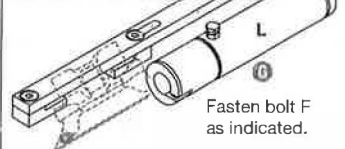


Fasten bolt F as indicated.

**9**

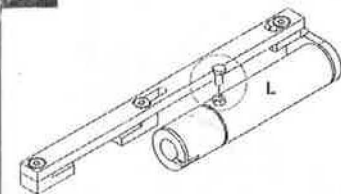

Only now remove Red as shown.


**10** RHS

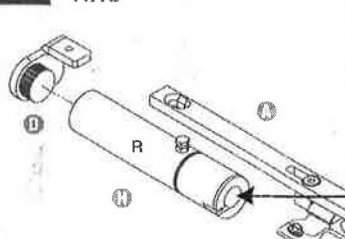


Fit bracket D to Flat bar A

**11**

Front view of pod showing how it looks when fitting it over RHS hinge

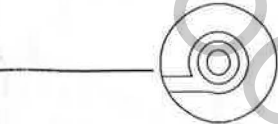


**12**

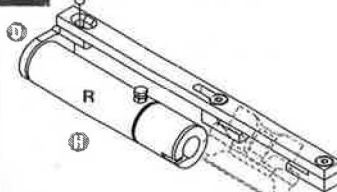


Bracket slots into Reloaded Bracket D  
Fasten bolt F as indicated.

**13**

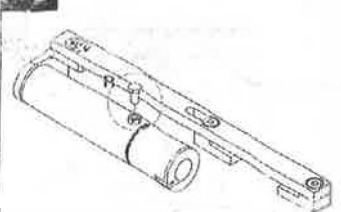


Only now remove Red as shown.

**14** VEHICLE BIN SIDE

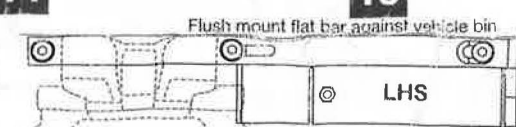

Top view of how LHS looks when full installed

**15**

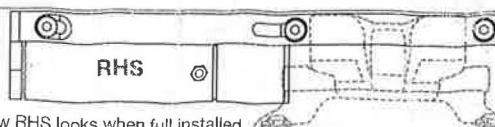

Top view of how RHS looks when full installed

**16**

SHOULD YOU WANT TO INCREASE YOUR PRELOAD OR REINSTALL YOUR PRELOAD IF REMOVED FROM THE VEHICLE PLEASE CONTACT YOUR CLOSEST STOCKIST FOR ASSISTANCE



FITTING CODE	MANUFACTURER	MODEL TYPE	YEAR	STOCKIST	PRODUCT	REVISION	LABOUR	DATE	PAGE
RL0710	MERCEDES	X CLASS	2016 onwards	GENERAL USE	EZDown RELOADED	4	25min	02/12/2018	2
TORQUE -- N.m	★ 27N.m±2N.m			★ 15N.m±2N.m				www.ezdown.co.za	

**NB:** After installation please close tailgate gently to ensure that there is no interference with any hardware.

### IMPORTANT:

All EzDown products are covered by Intellectual Property Rights and are the property of EzDown. Any use of the product without the written permission of EzDown is strictly prohibited. EzDown is not responsible for any damage or loss of property caused by the use of the product in a manner or for a purpose for which the product was not designed.



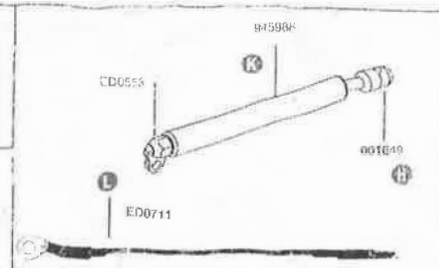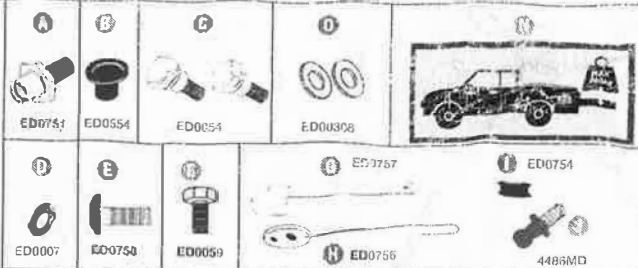

# EZDown Reloaded Instruction - 1st Fitment


## EZDown Reloaded MERCEDES BENZ X CLASS - RL0710

**1**


RHS and LHS are determined when sitting in the Drivers side of the Vehicle.

Note: We recommend you use a Rust inhibitor where you drill as well as locktite bolts were necessary.



Fit kit on RHS only

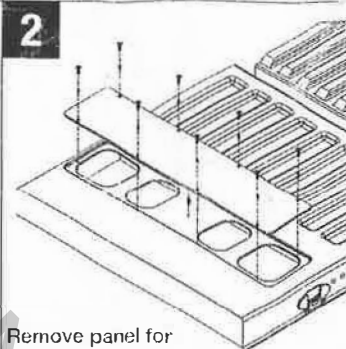

Remove panel for easy access

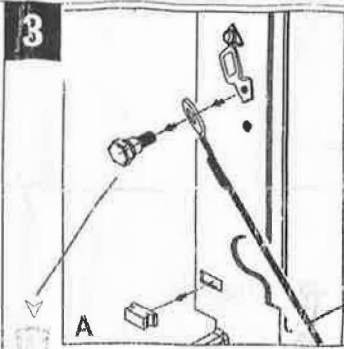


Remove Cables off RHS

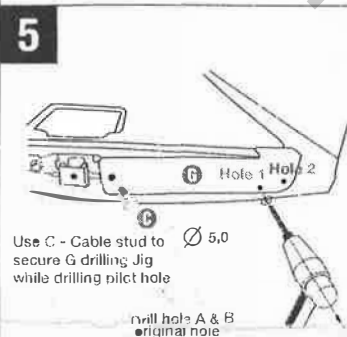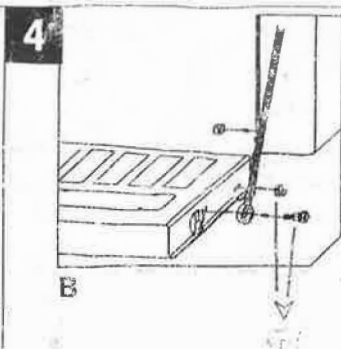


Use C - Cable stud to secure G drilling Jig while drilling pilot hole


Drill hole A & B original hole

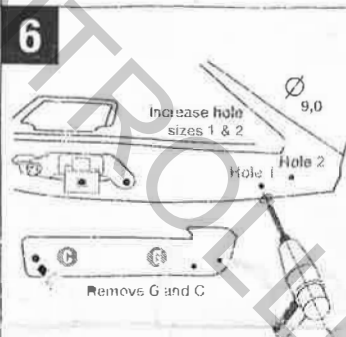


Remove G and C

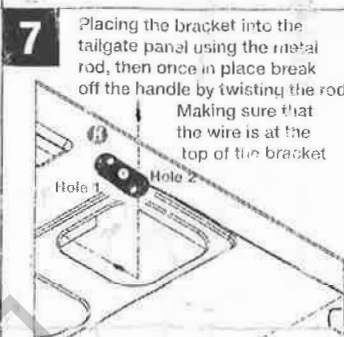


Placing the bracket into the tailgate panel using the metal rod, then once in place break off the handle by twisting the rod. Making sure that the wire is at the top of the bracket

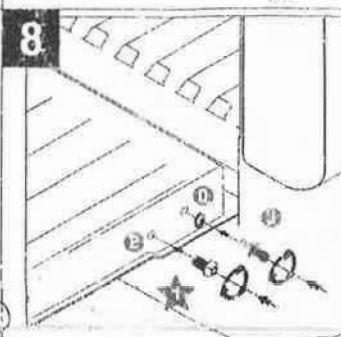




From outside the tailgate panel

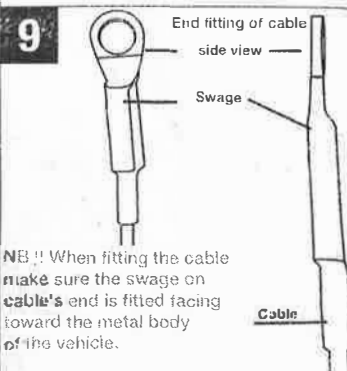

NB!! When fitting the cable make sure the swage on cable's end is fitted facing toward the metal body of the vehicle.

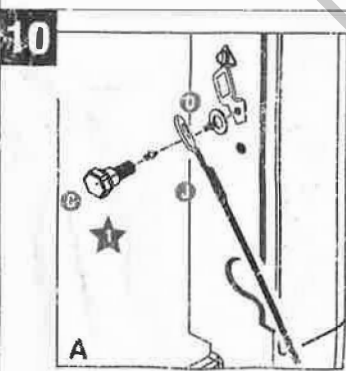

NB: Swage to be fitted facing away from tailgate.

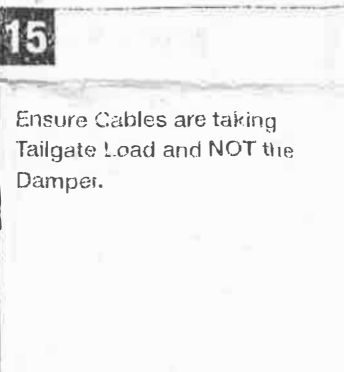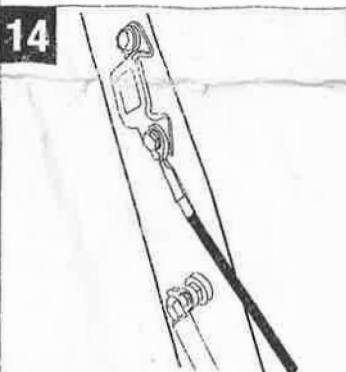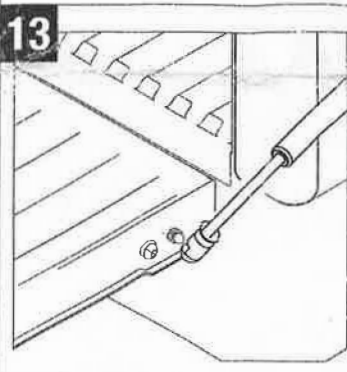

Ensure Cables are taking Tailgate Load and NOT the Damper.



FITTING CODE	MANUFACTURER	MODEL TYPE	YEAR	STOCKIST	PRODUCT	REVISION	LABOUR	DATE	PAGE
RL0710	MERCEDES	X CLASS	2016 onwards	GENERAL USE	EZDOWN RELOADED	4	20min	03/04/2019	1
TORQUE - N.m	17.5N.m±2.7N.m			17.5N.m±2.7N.m				www.ezdown.co.za	

NB: After installation please close tailgate gently to ensure that there is no interference with any hardware.

### IMPORTANT:

No liability will be incurred by Industrial Specialist Applications company, for injury, death, or property damage caused by a product which has been set up, installed, handled, used, or stored in a manner which is not in accordance with the instructions for use, or which has been subjected to misuse, negligence, or accident, or which has been repaired or altered by anyone other than Industrial Specialist Applications, or which has been used in a manner or for a purpose for which it was not designed.

