


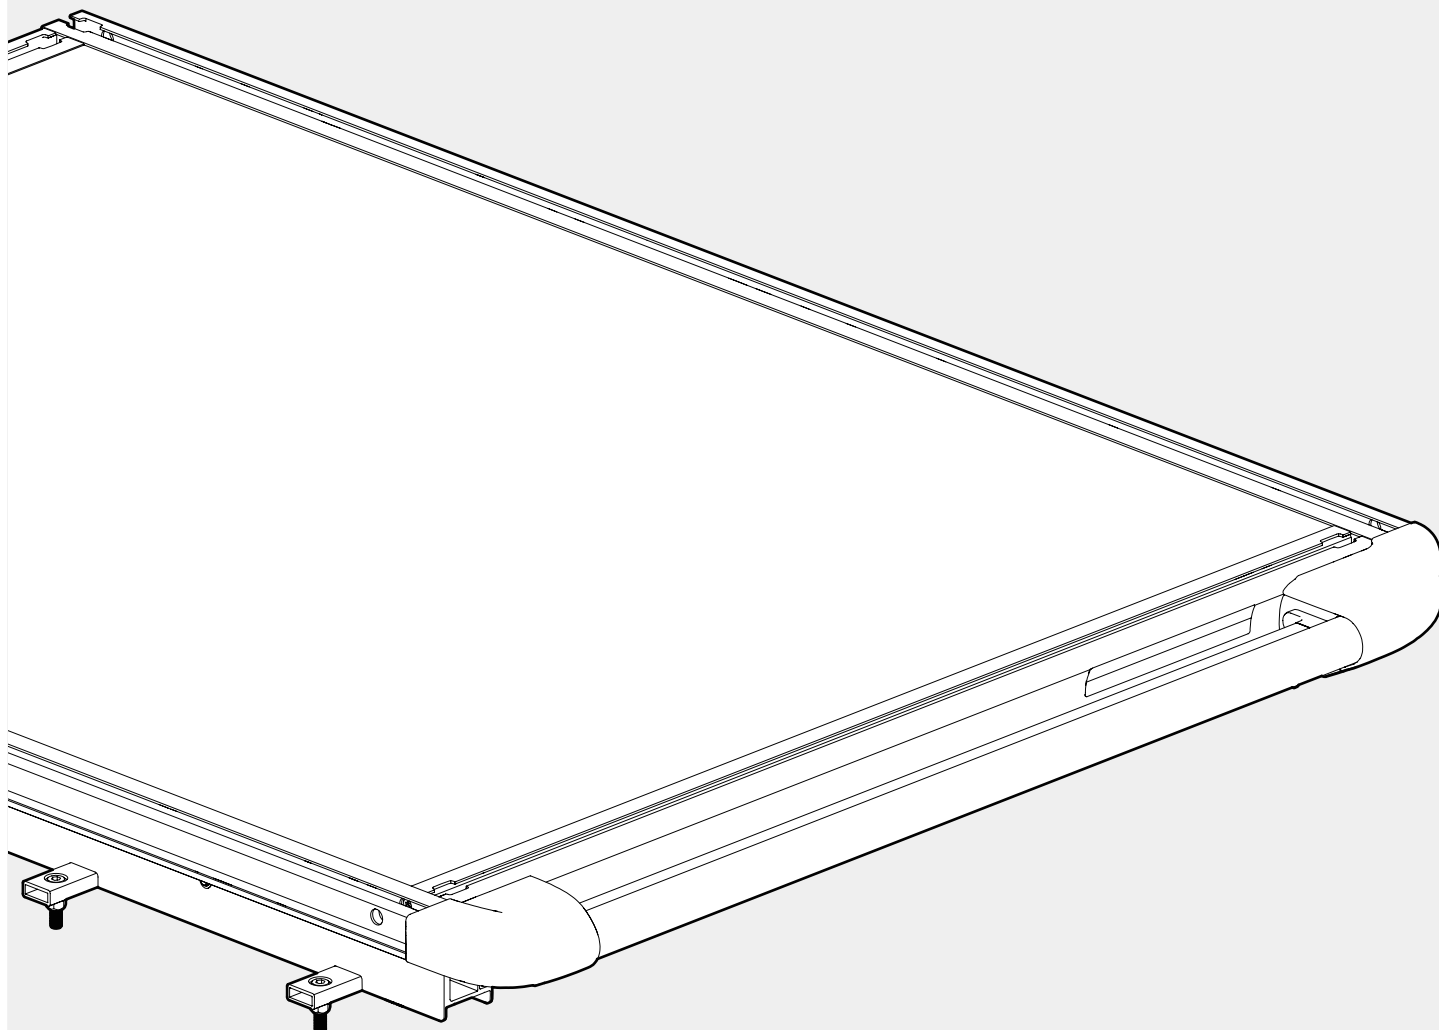

Mountain Top® Slide

Installation manual




DOWNLOAD PDF




Parts

A

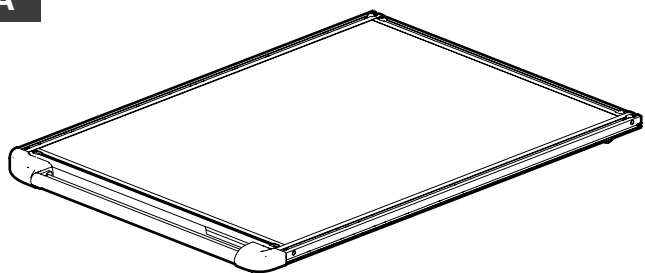

x 1

B

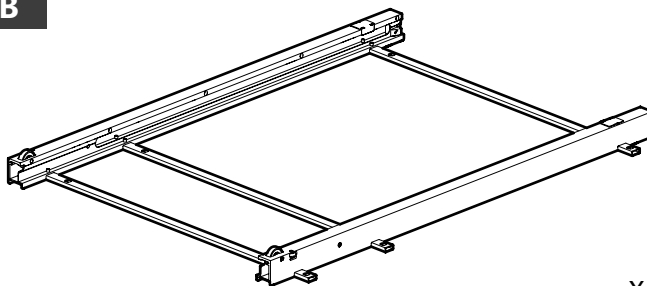


x 1



Kit # 836 012

C

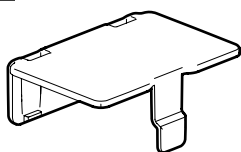


x 2




Kit # 833 940

D

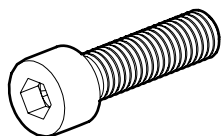


x 12

E

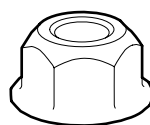

x 12

F




x 24



Kit # 836 200

G

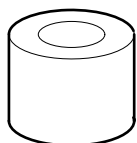


x 2




Tools and materials needed




1-25 Nm

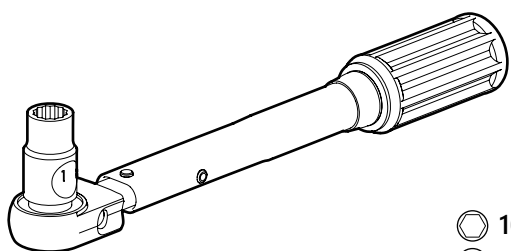

- 10 mm
- 13 mm
- 5 mm

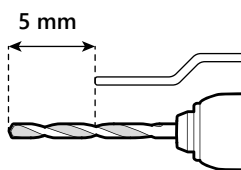


Ø 3 mm
Ø 8,5 mm

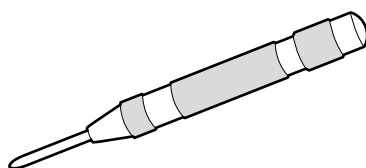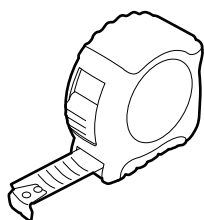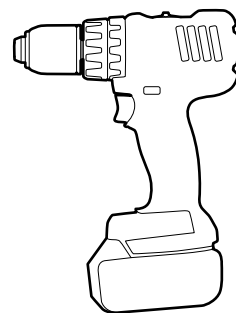


Rust protection
Rostschutzmittel
Anti-rouille
Anti roest


1

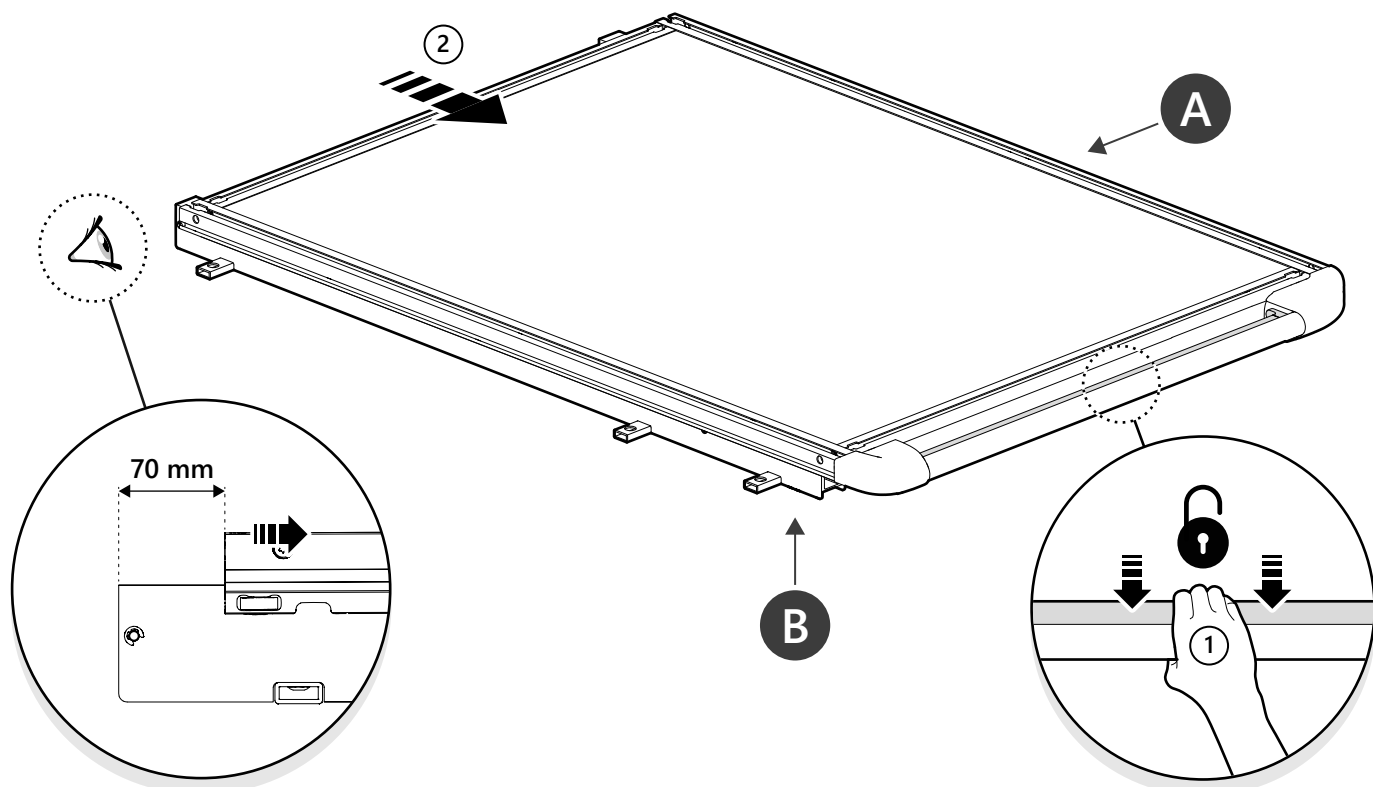


2


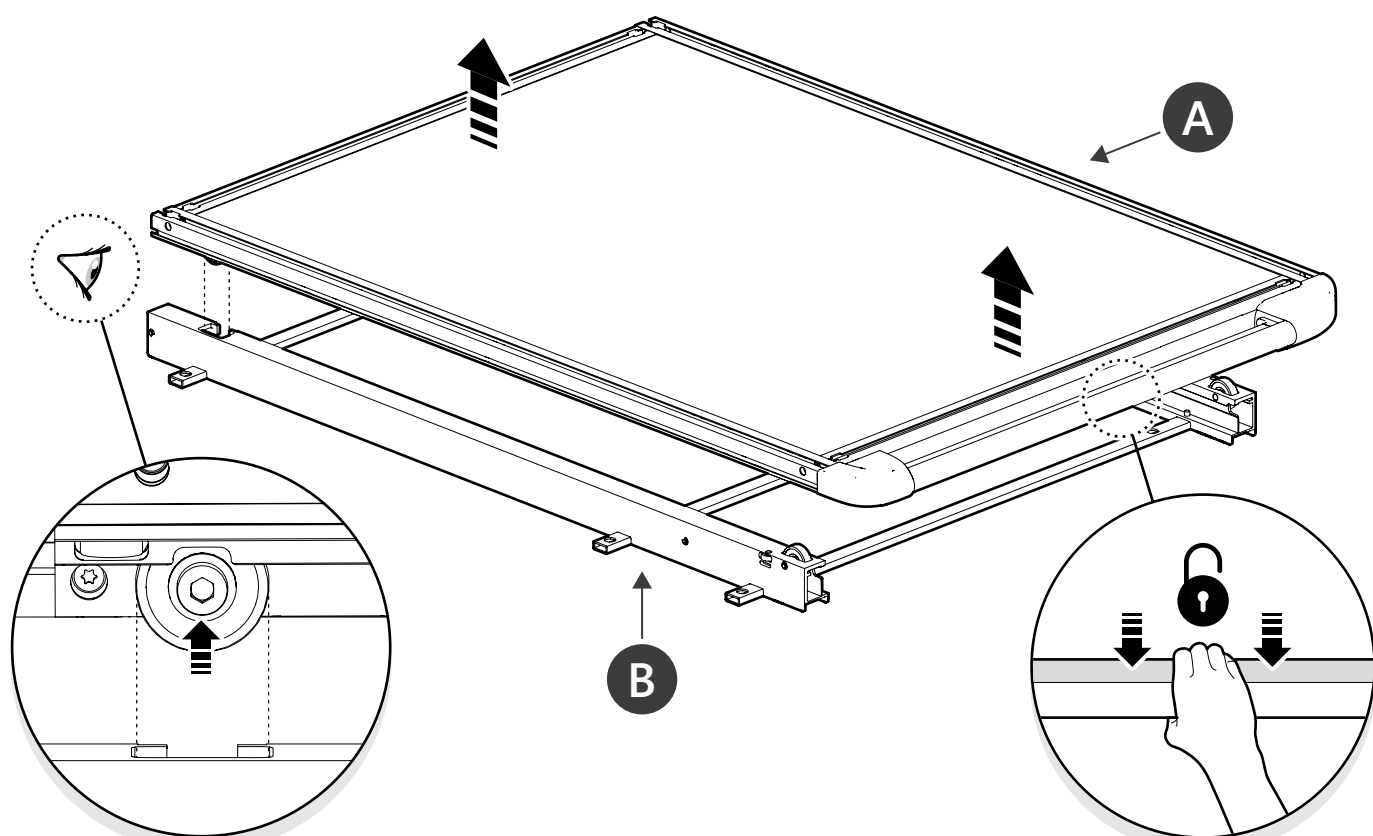




3


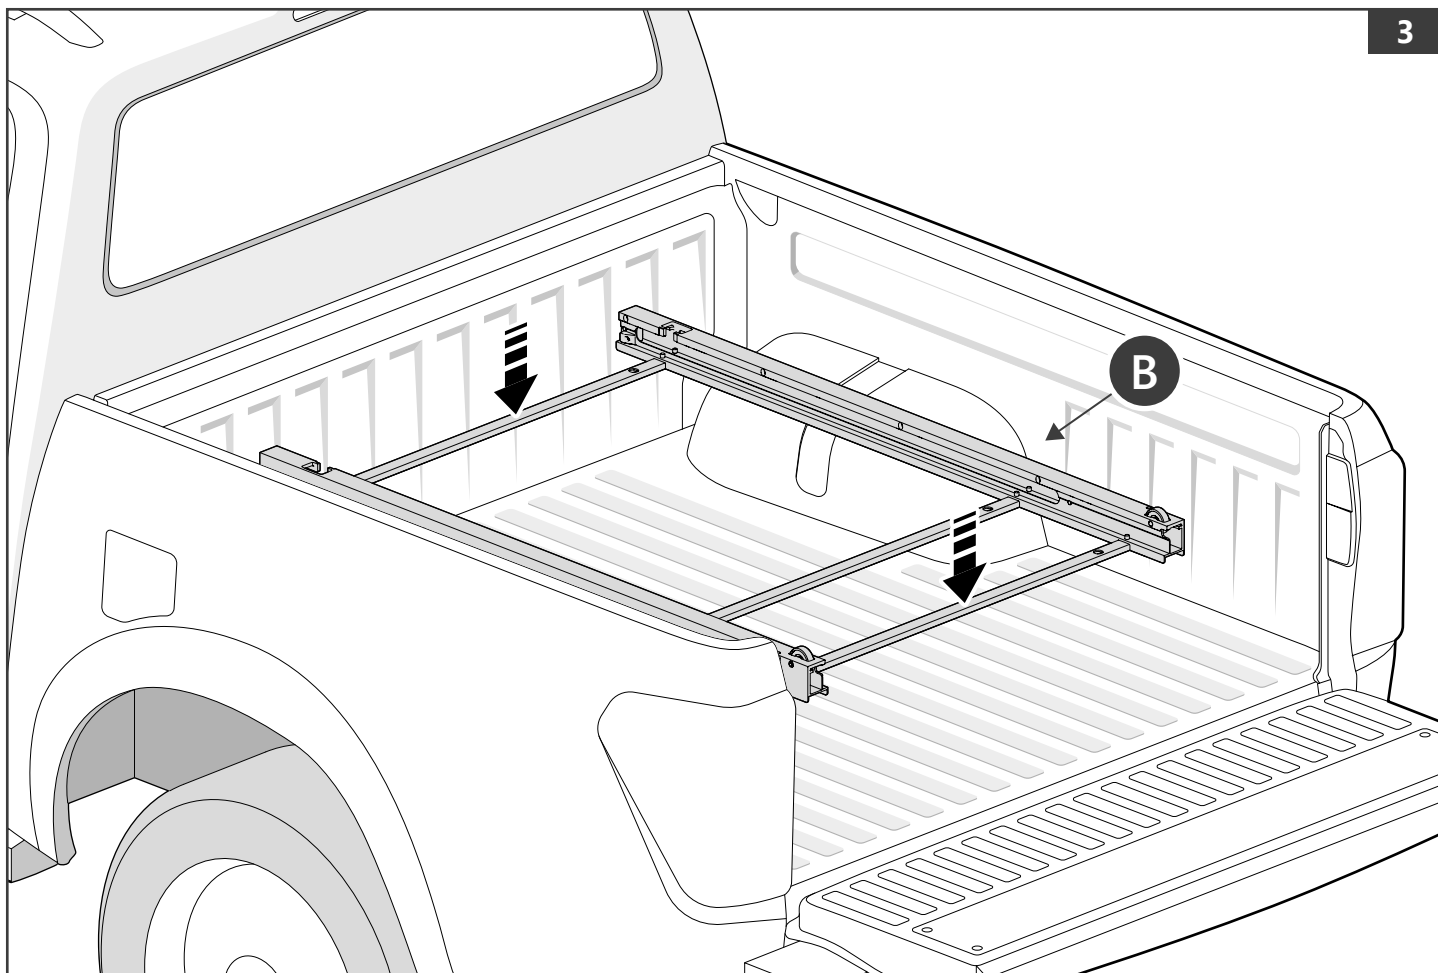




4


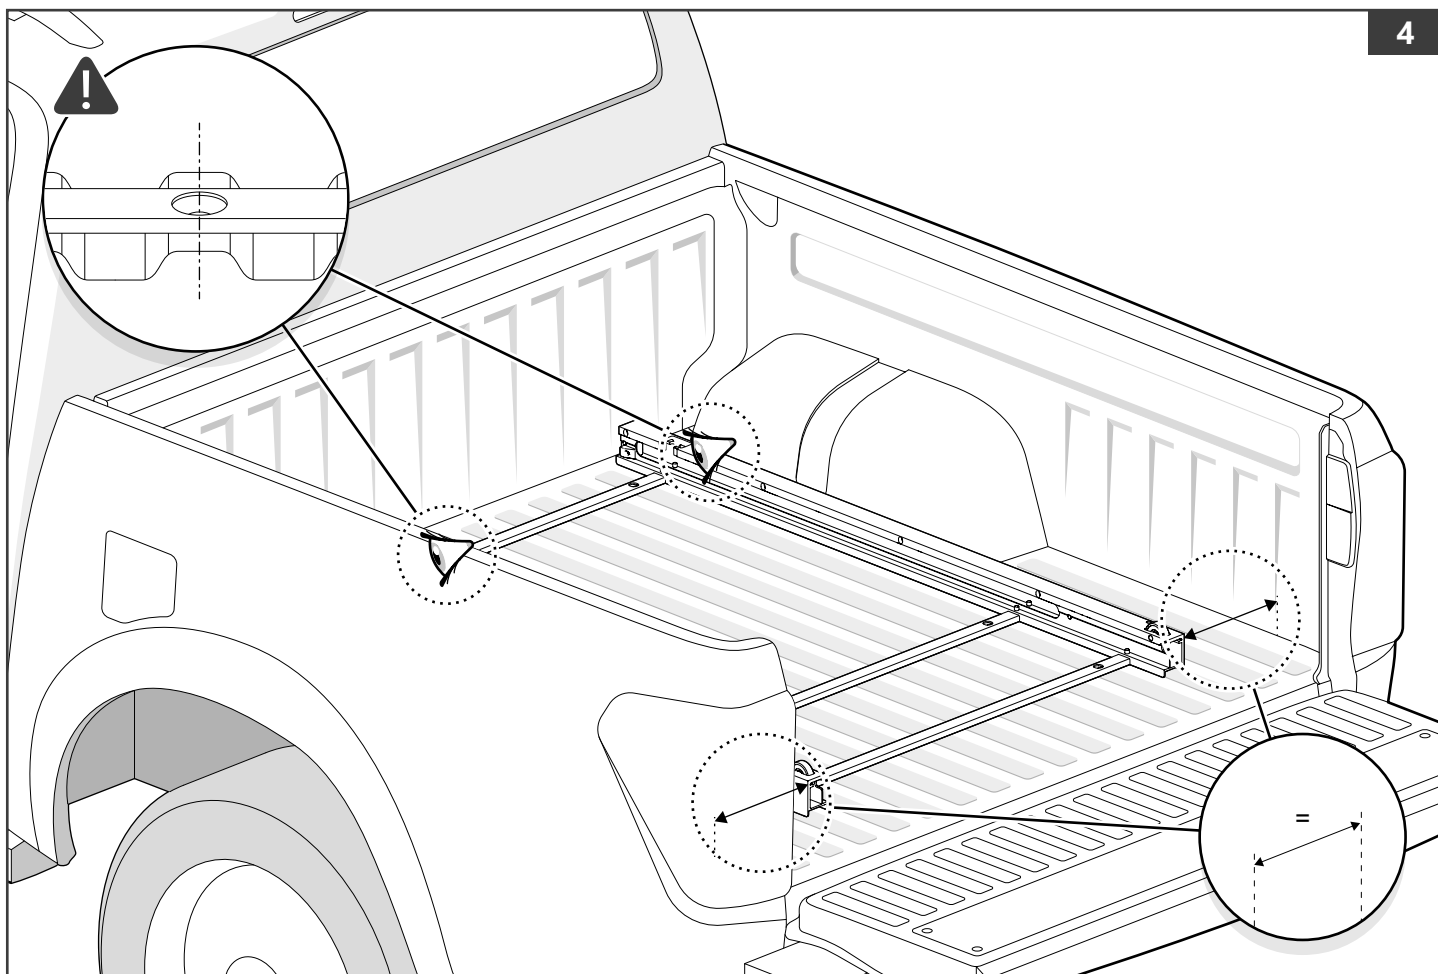


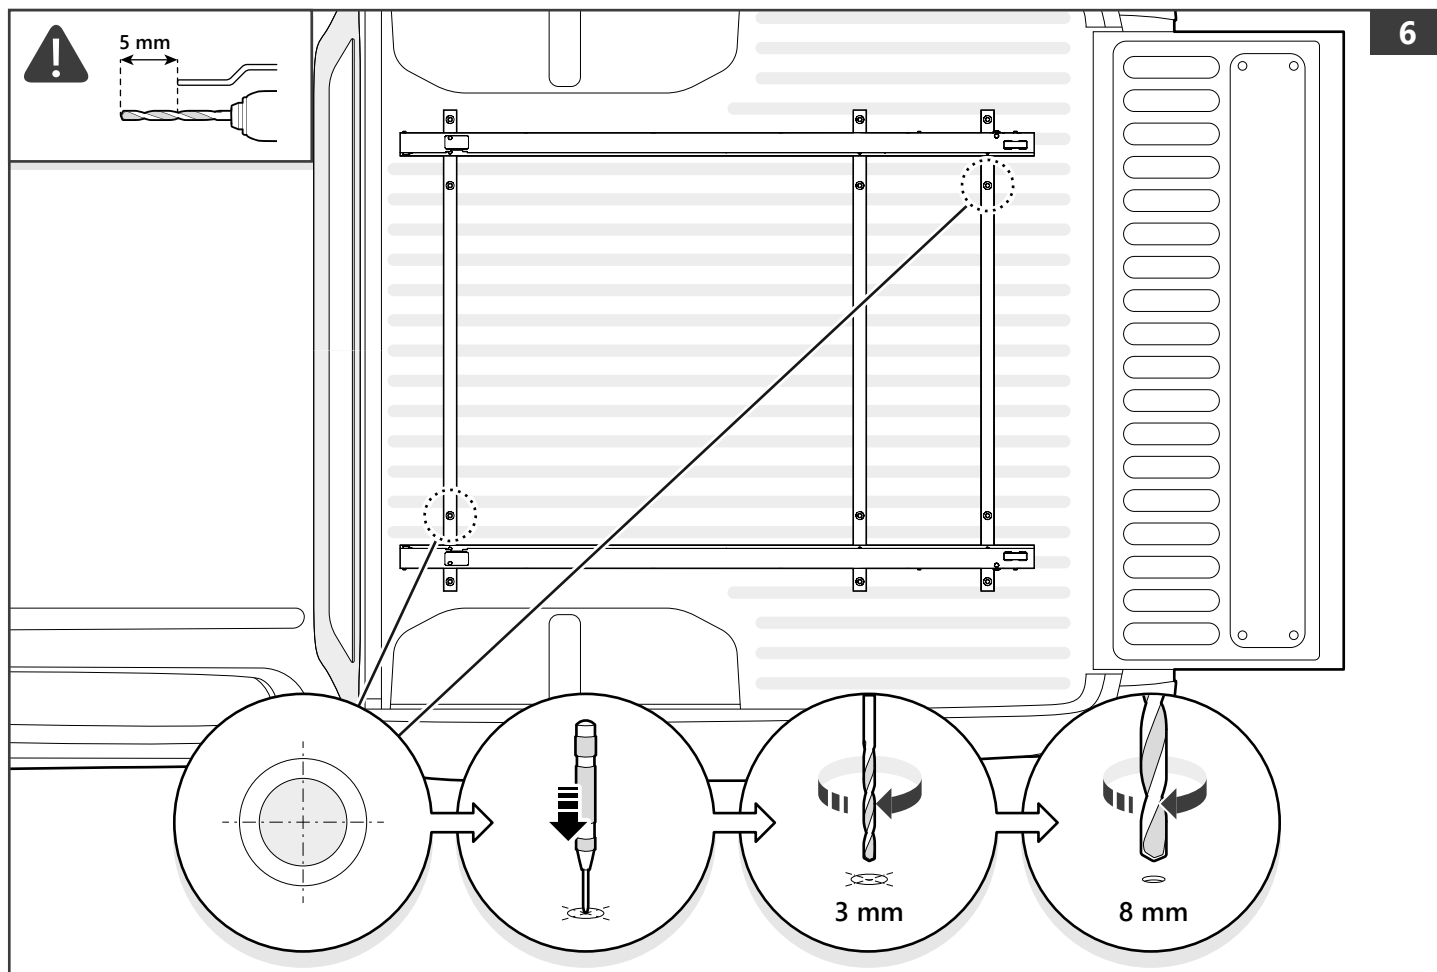
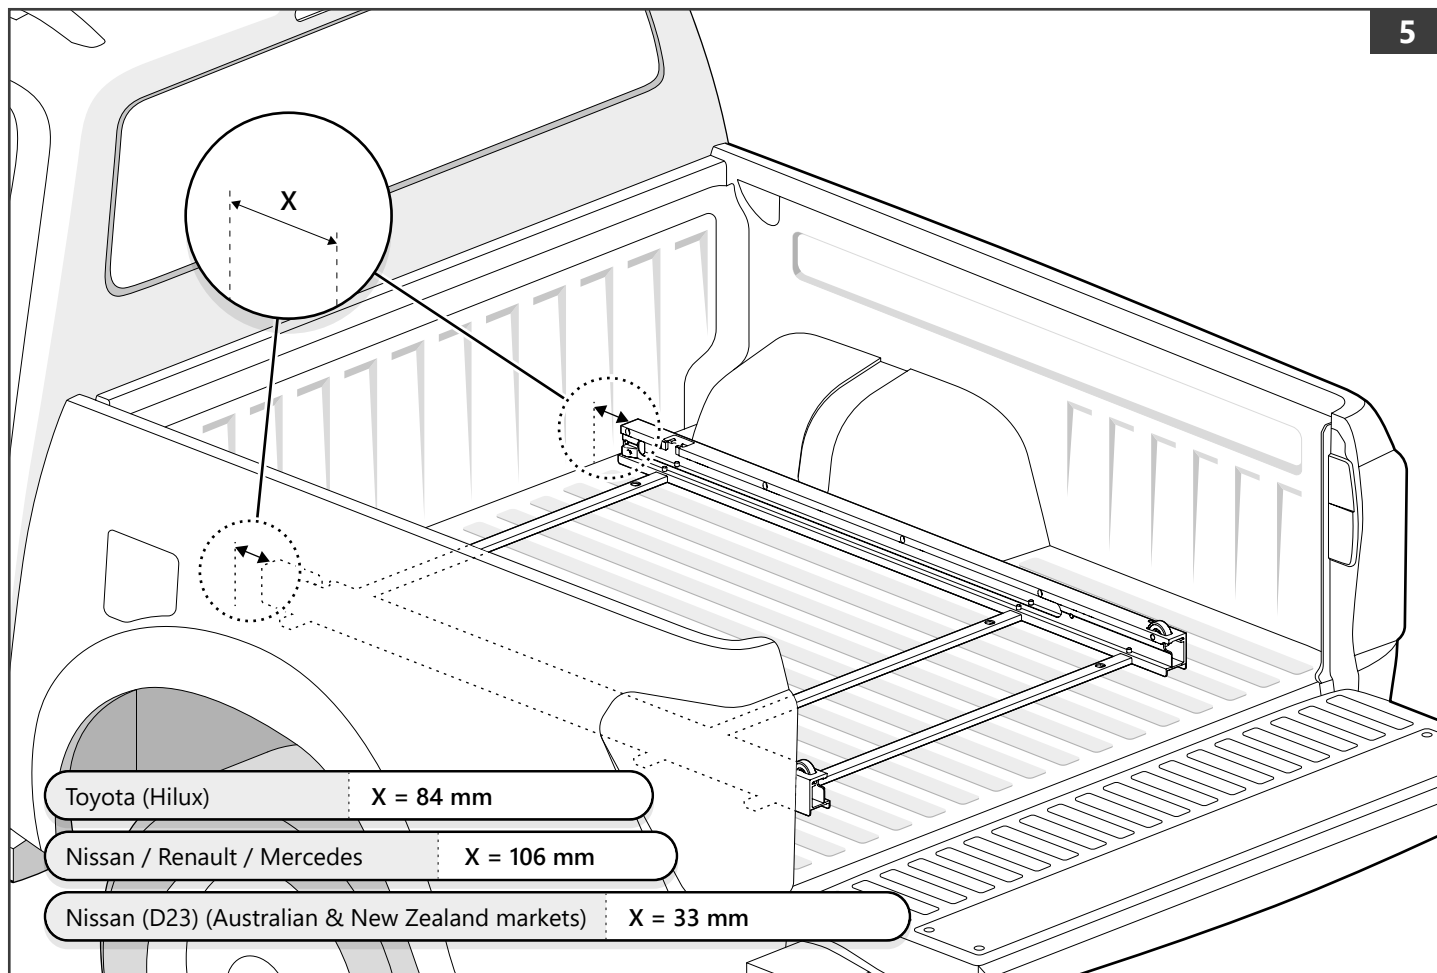


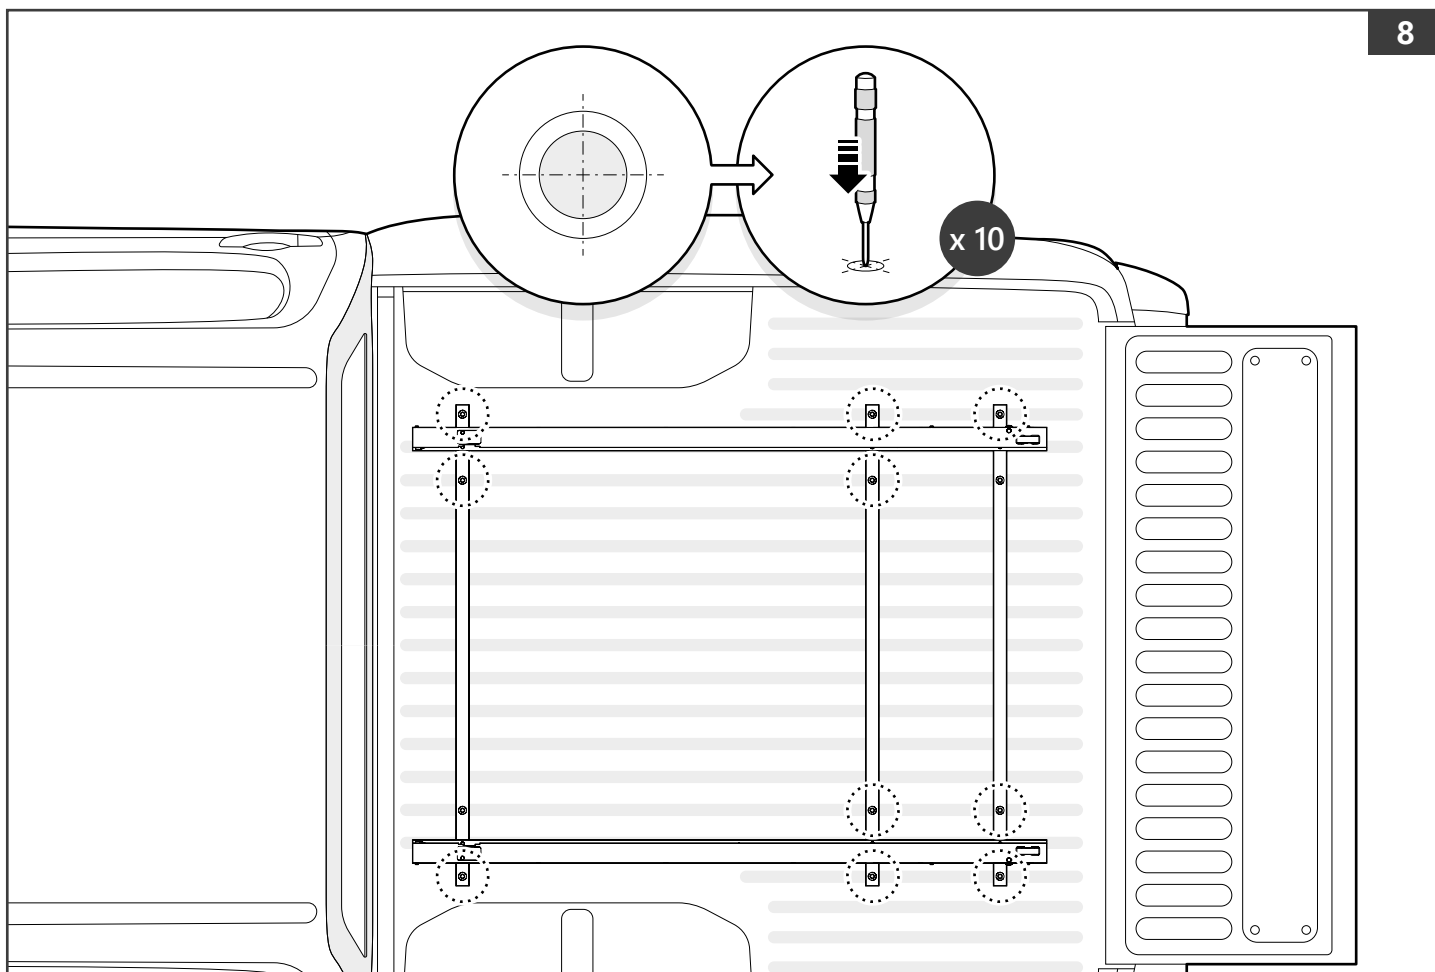
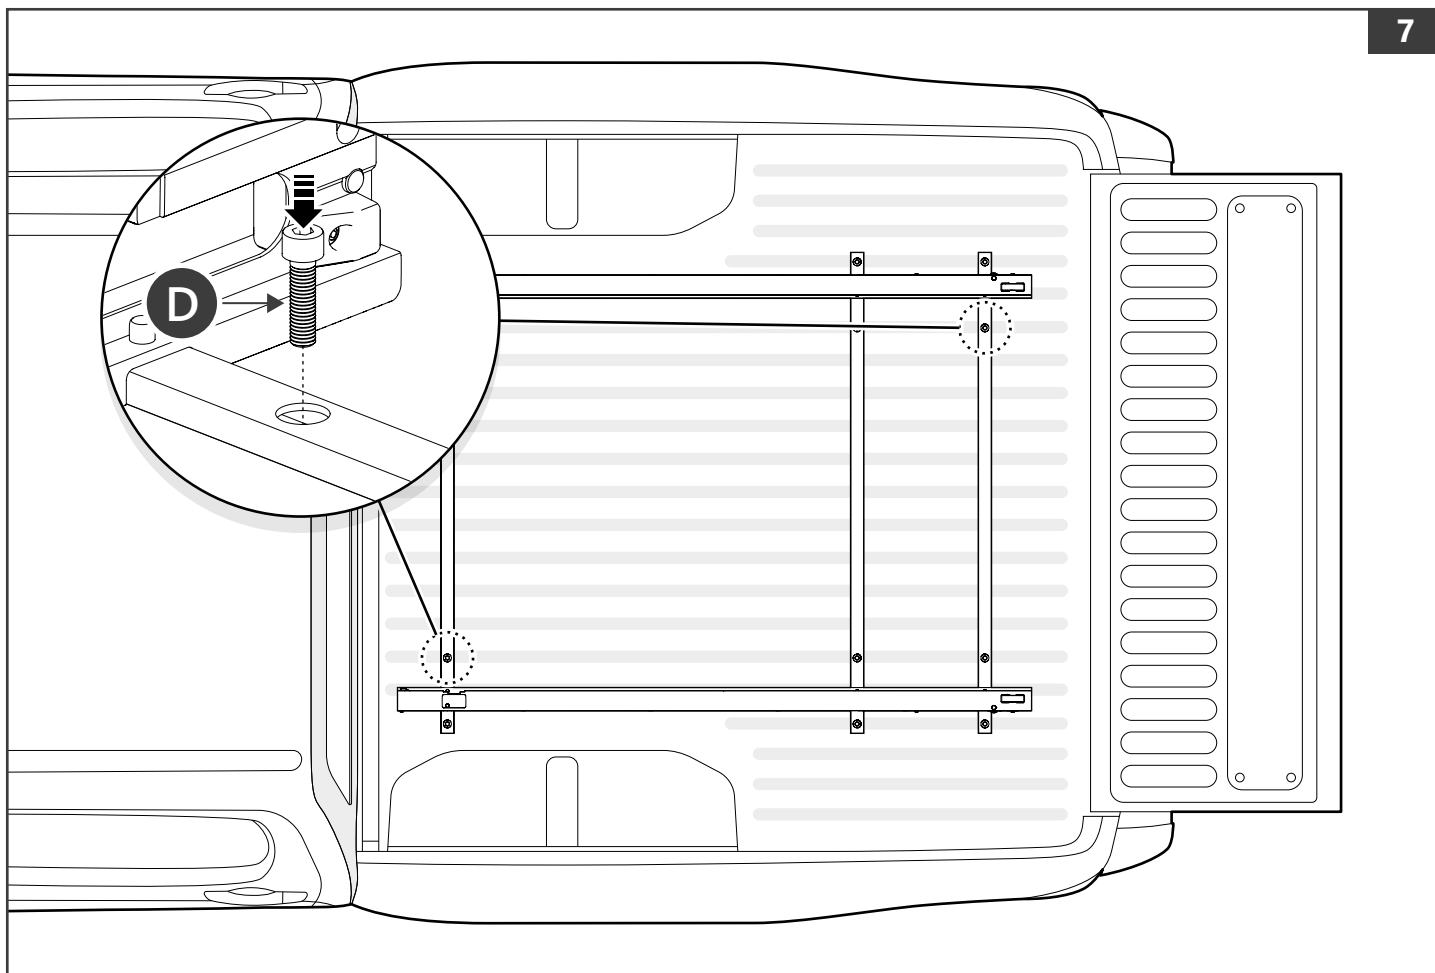


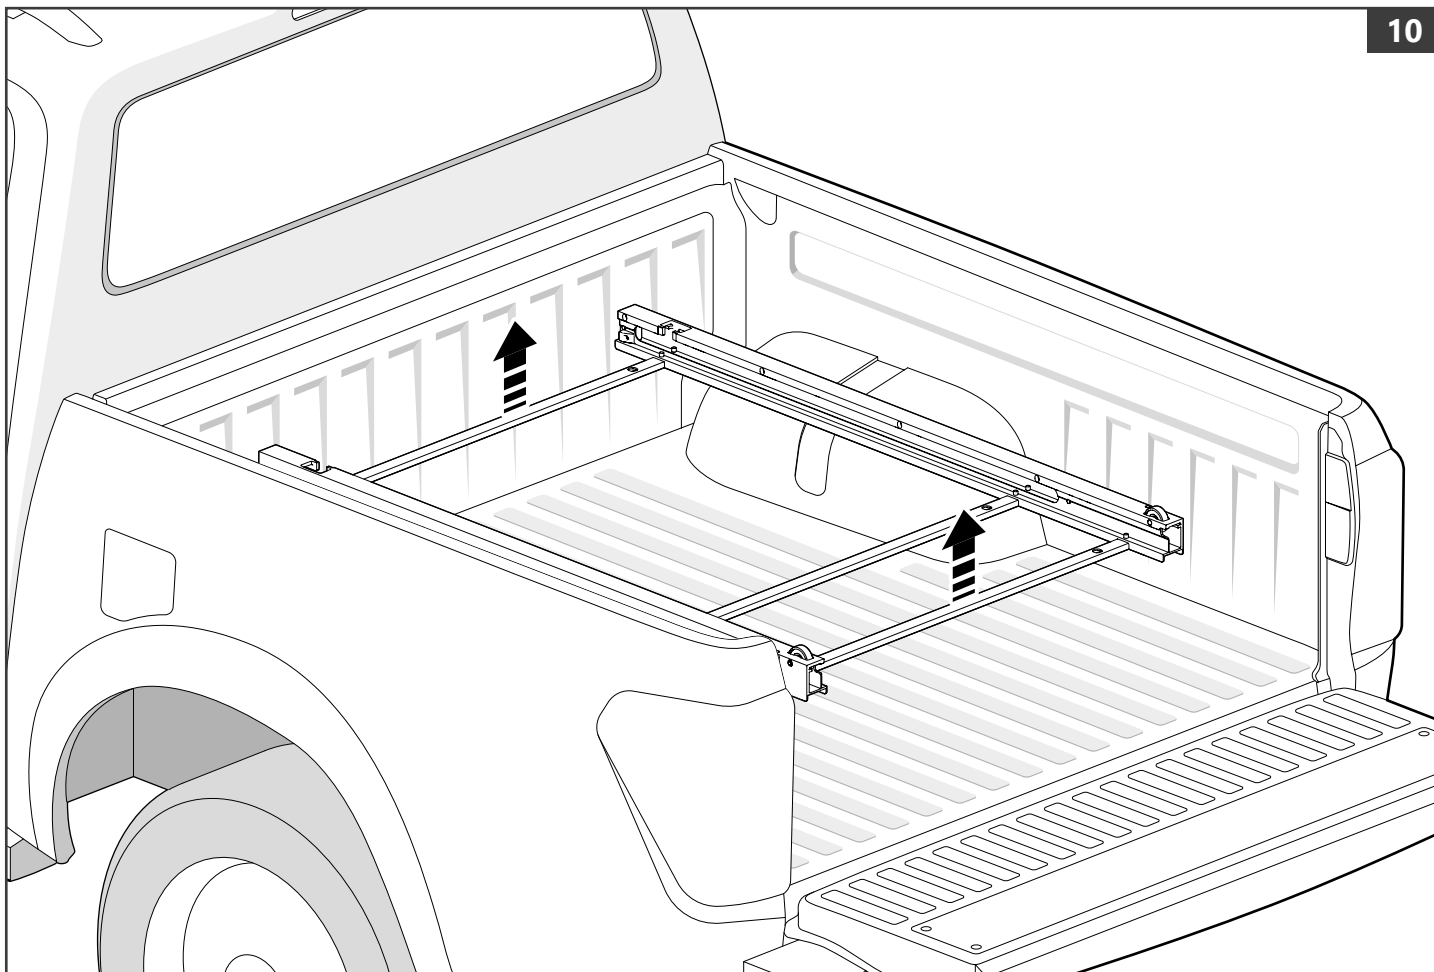
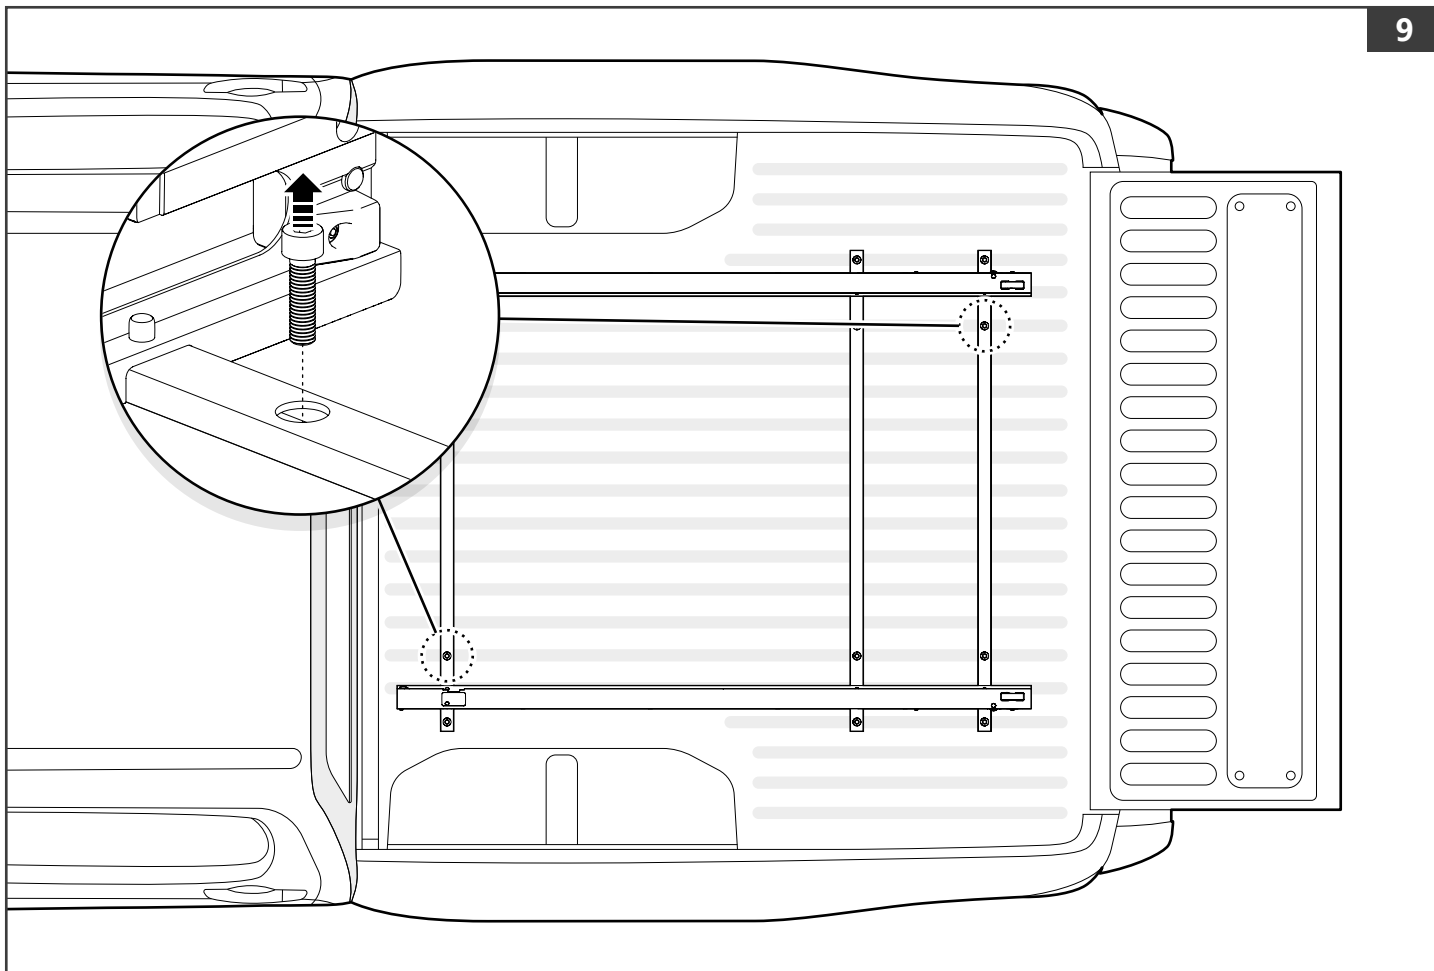


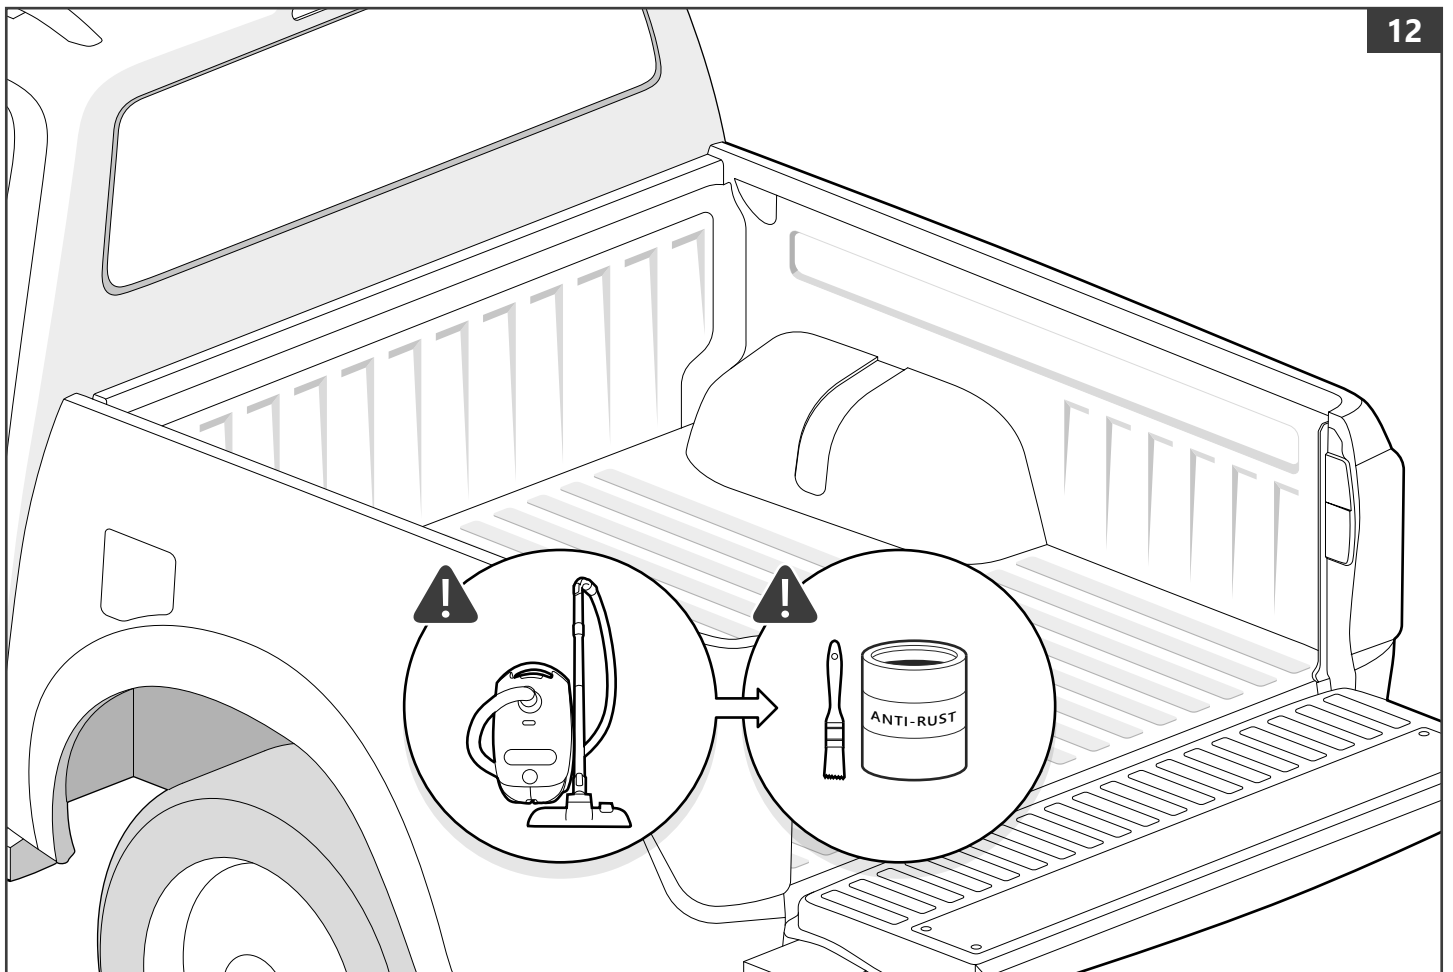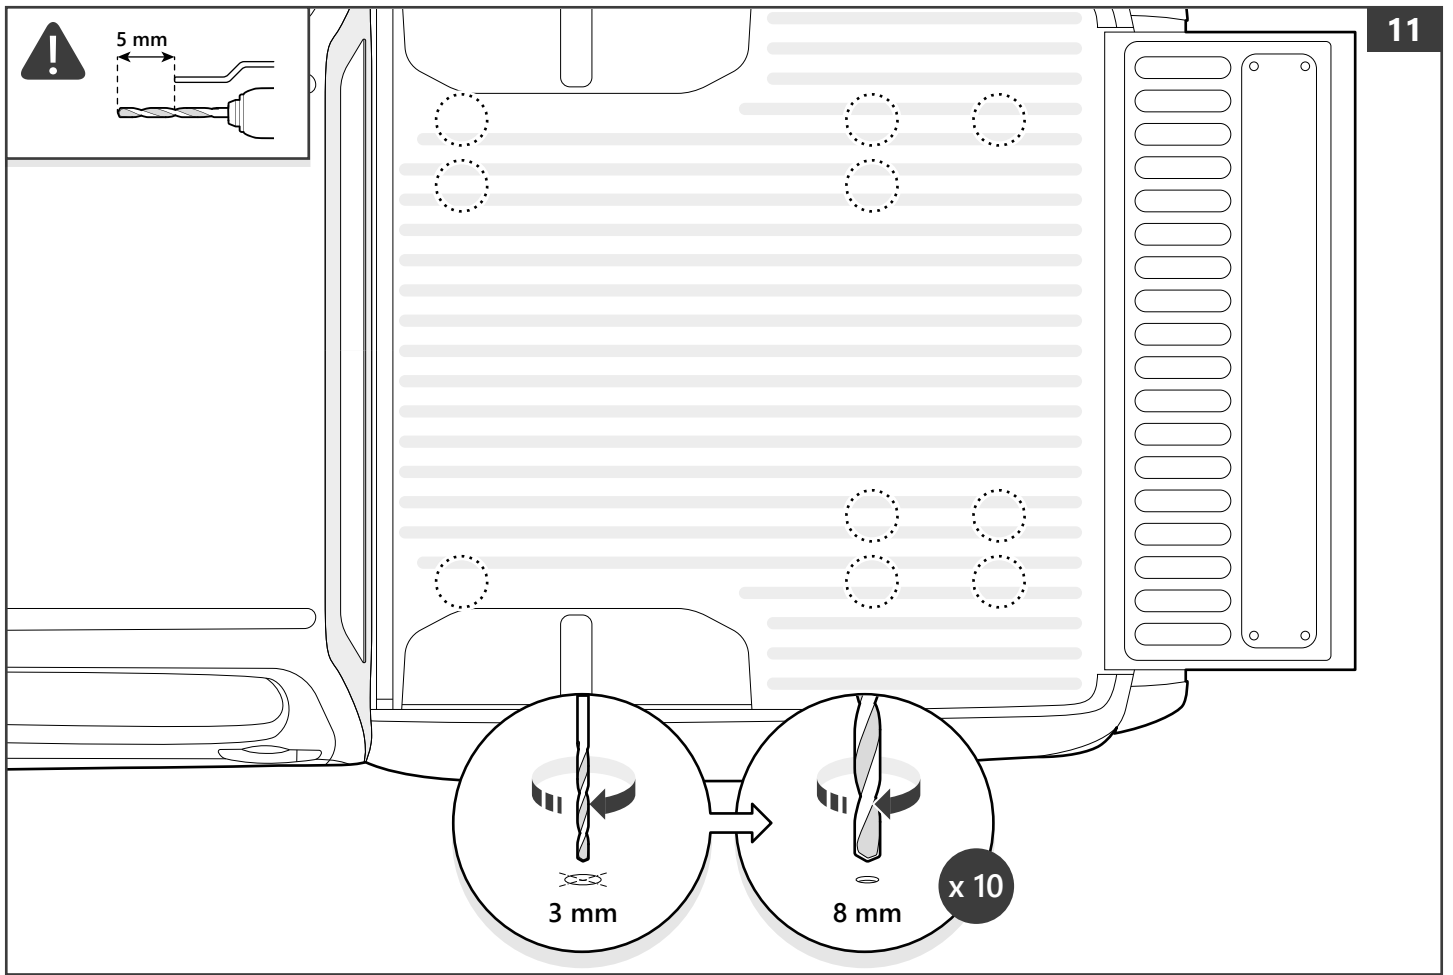

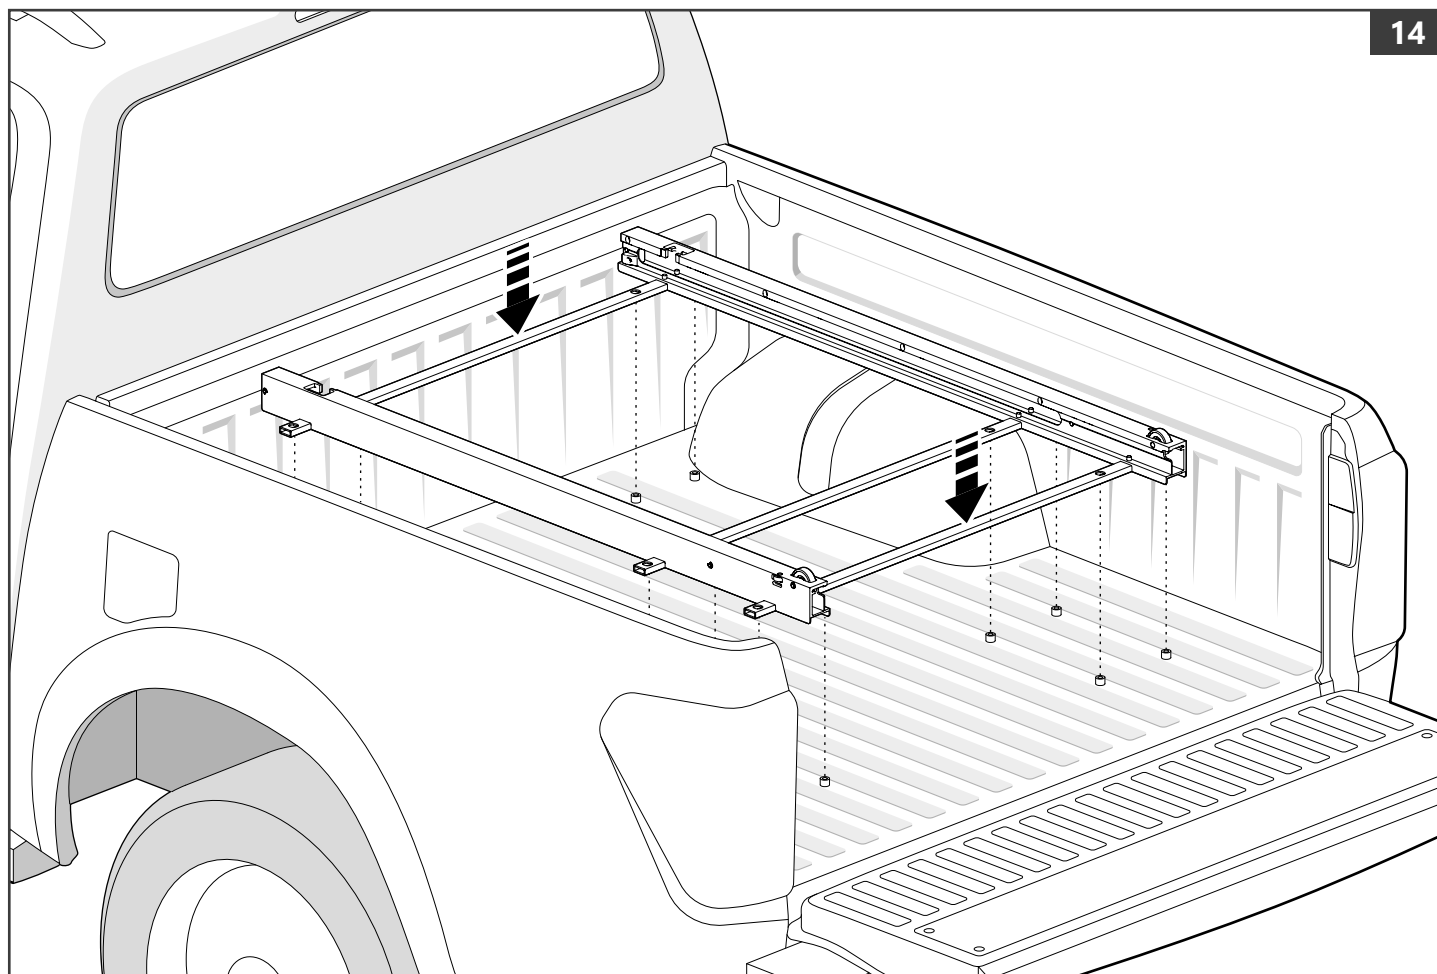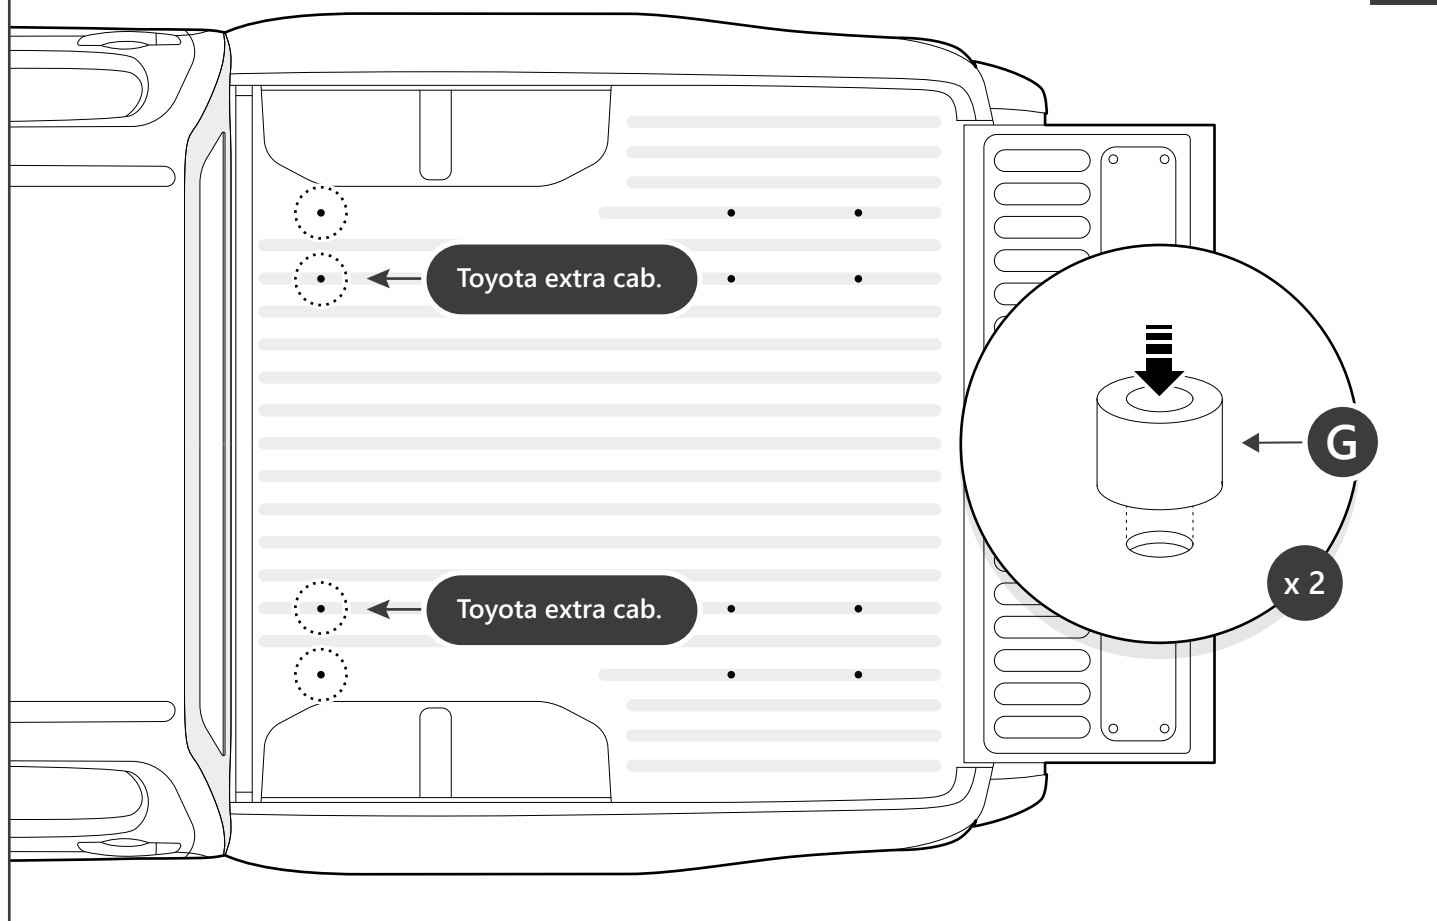

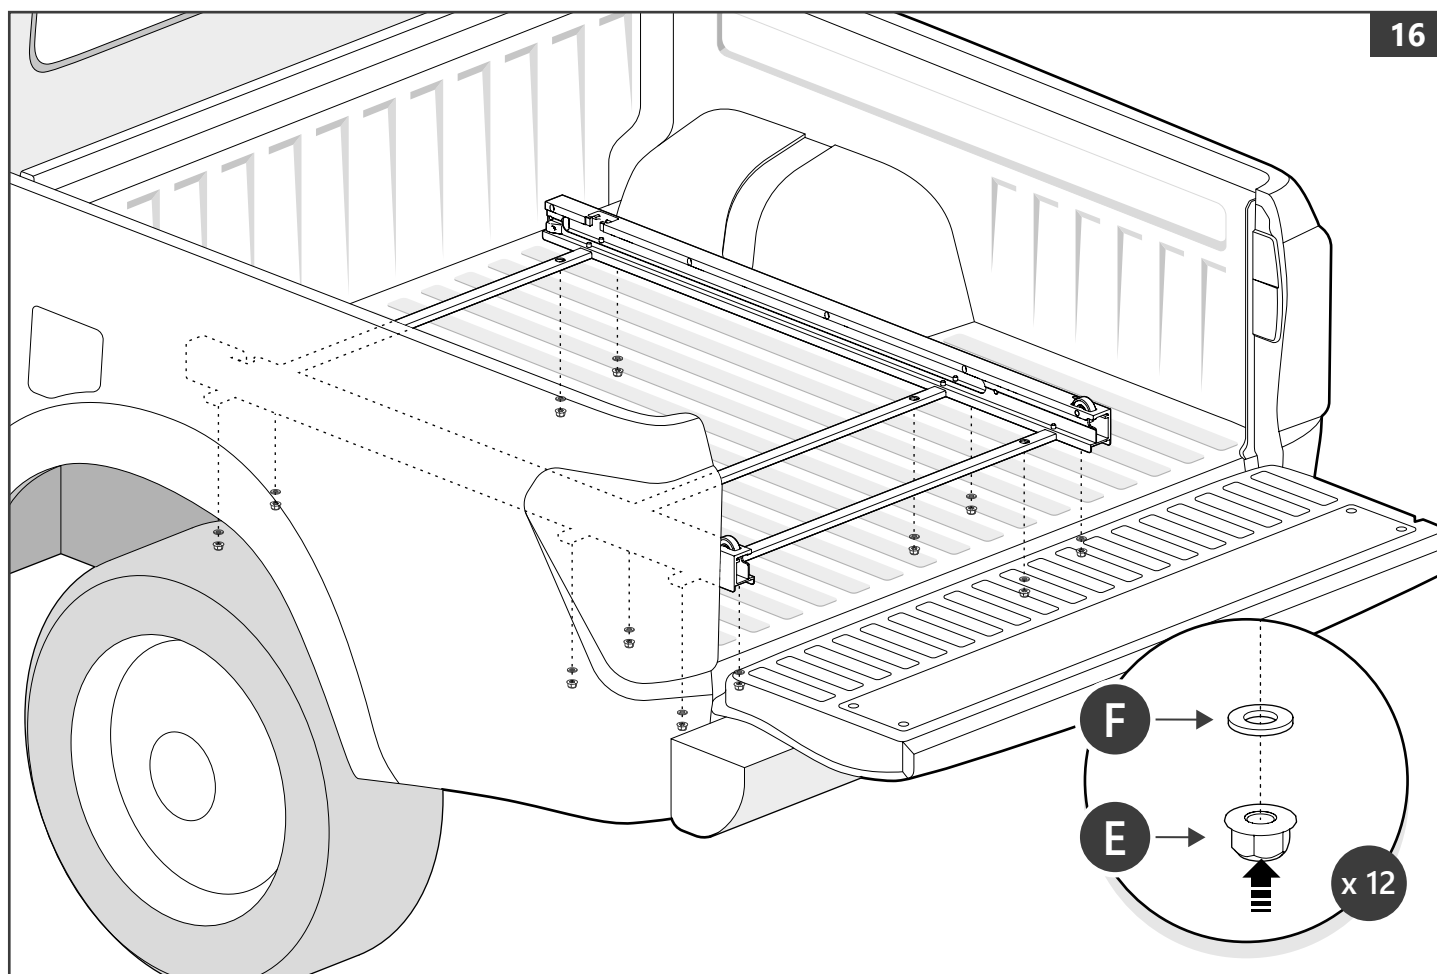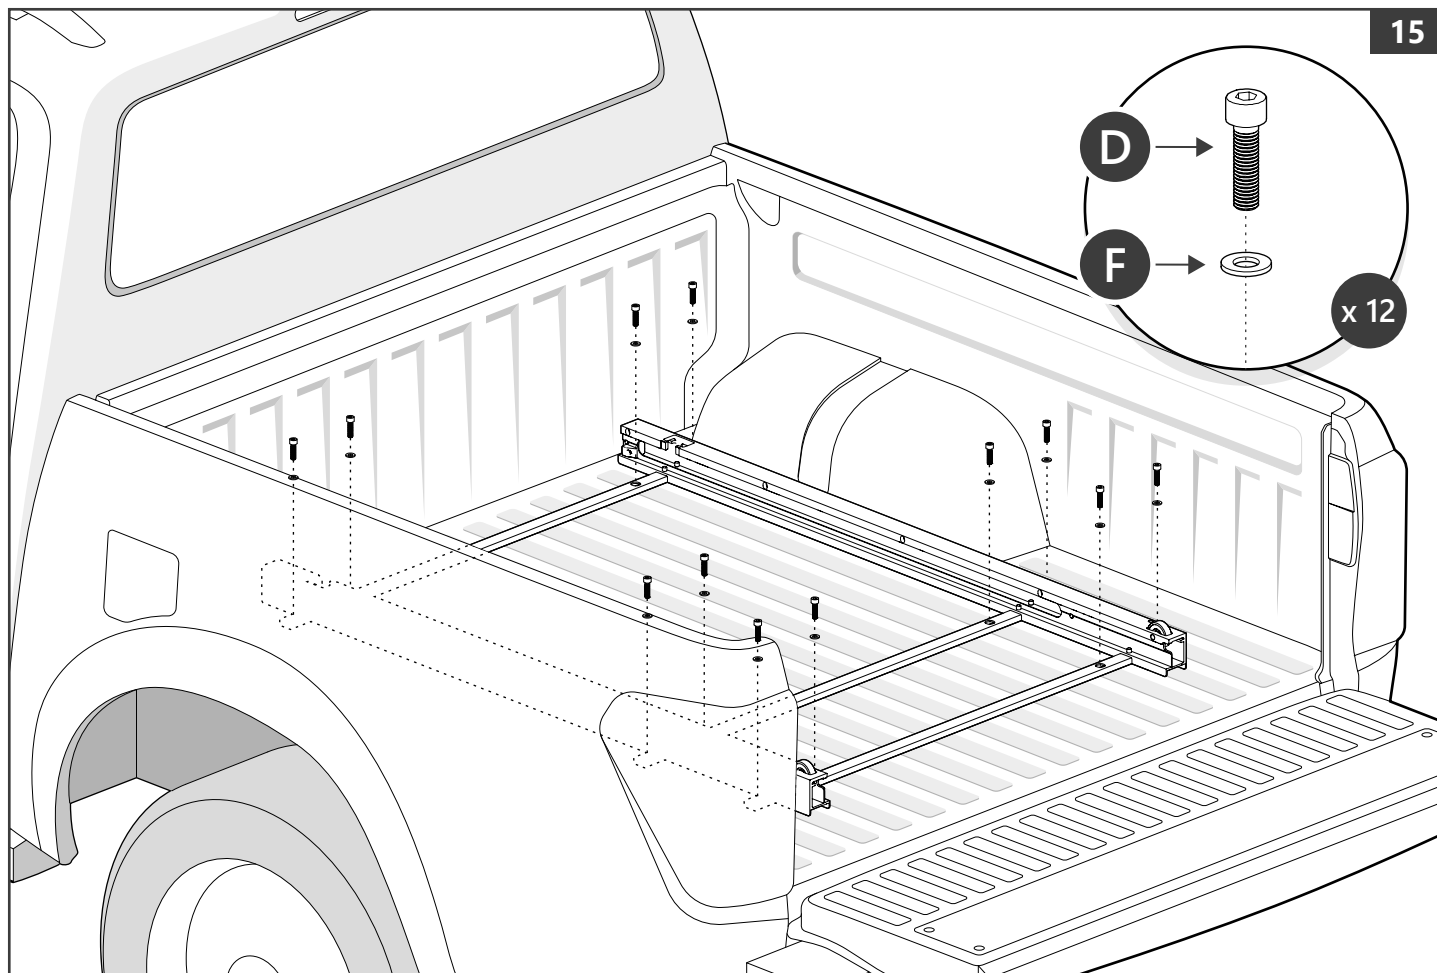

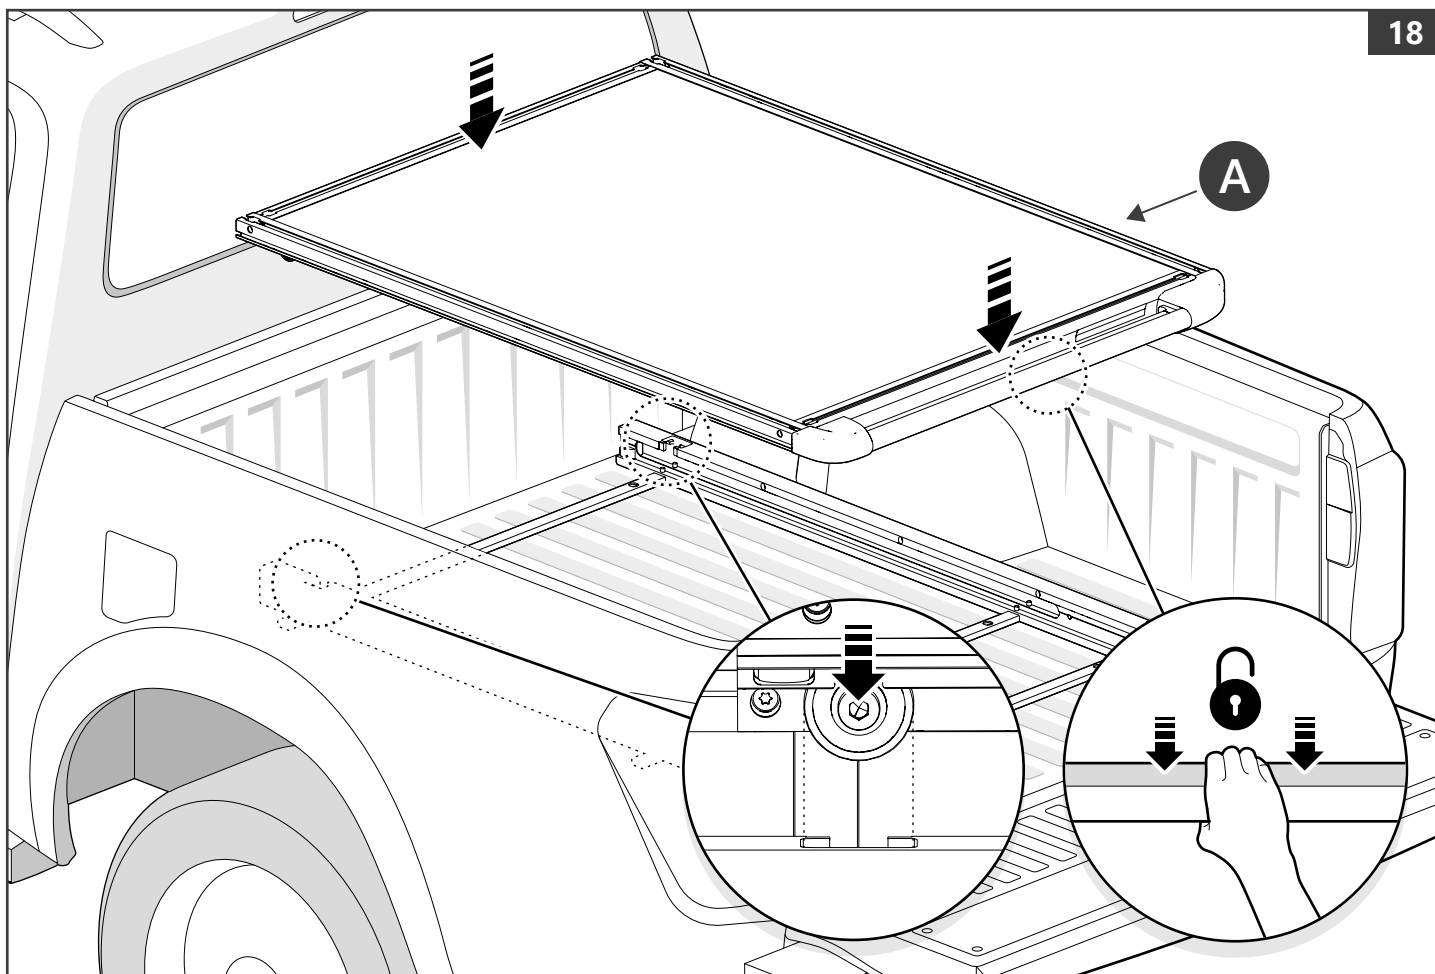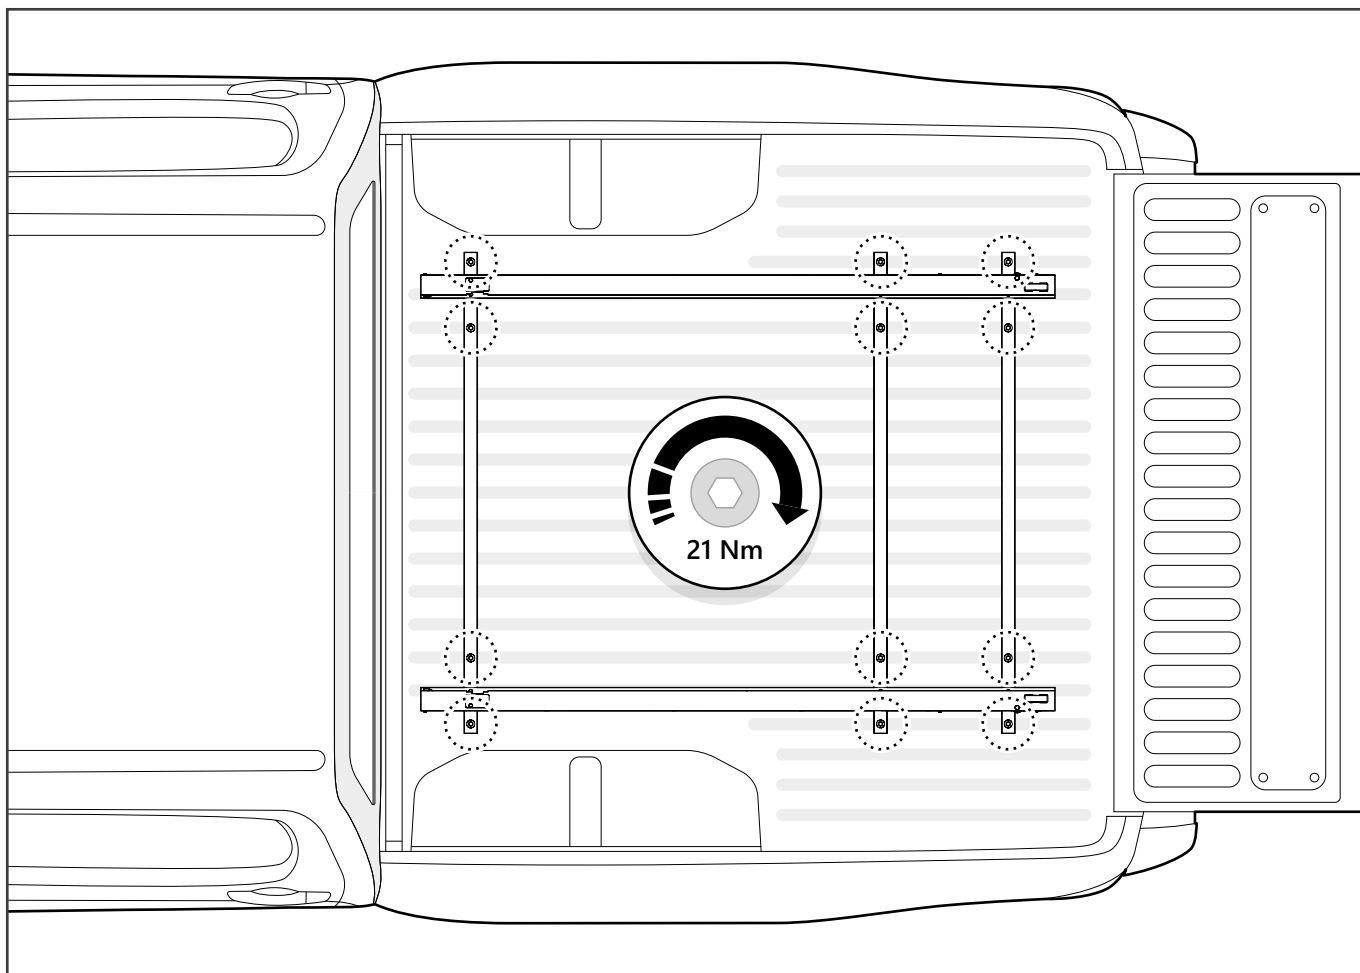

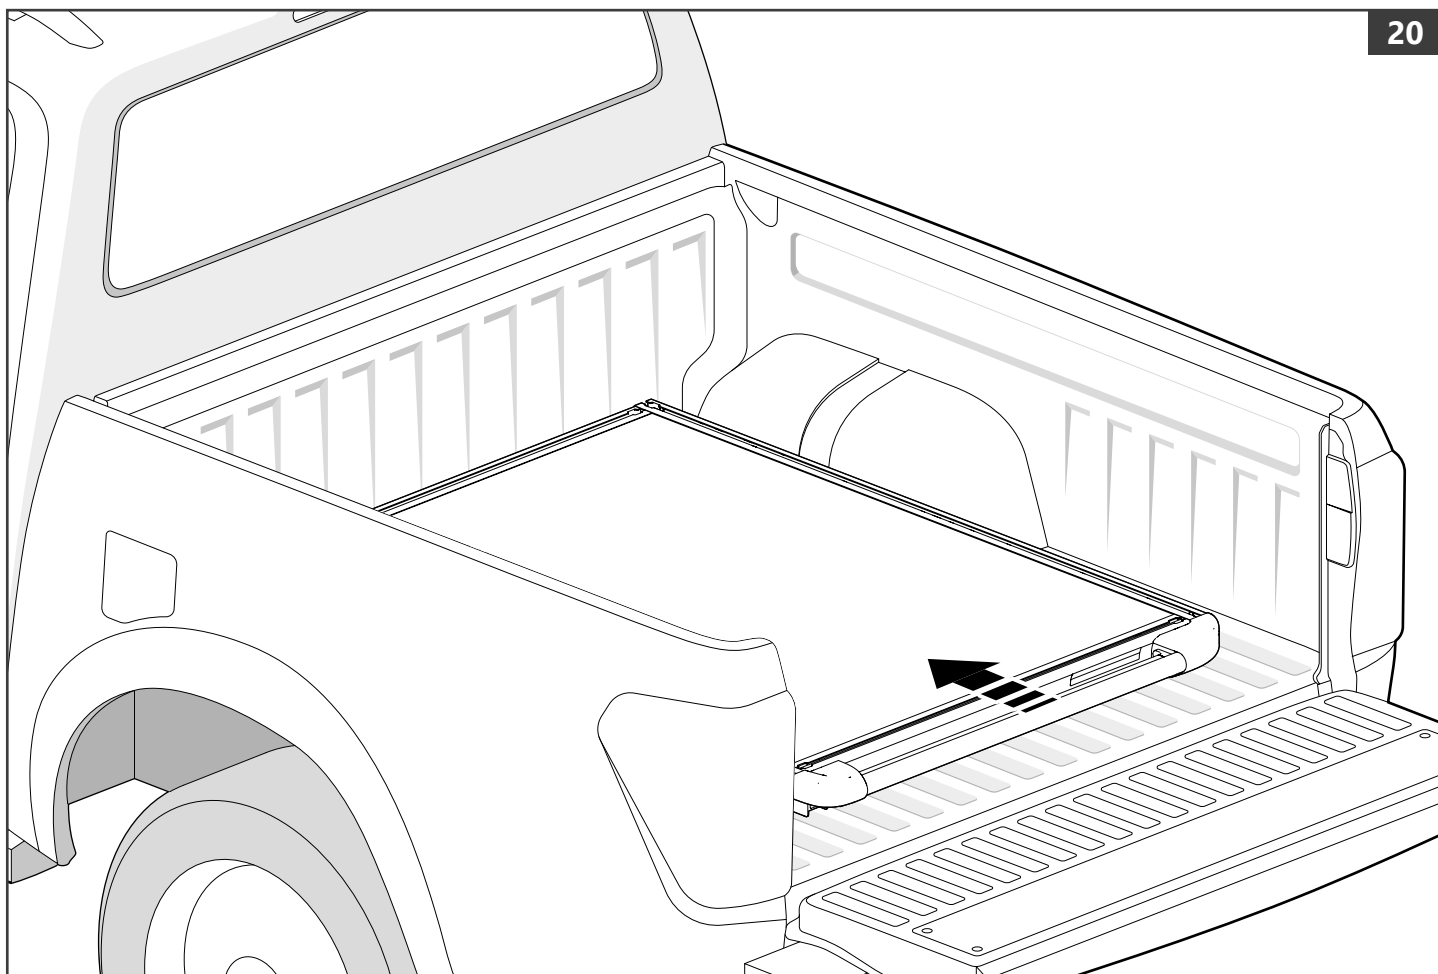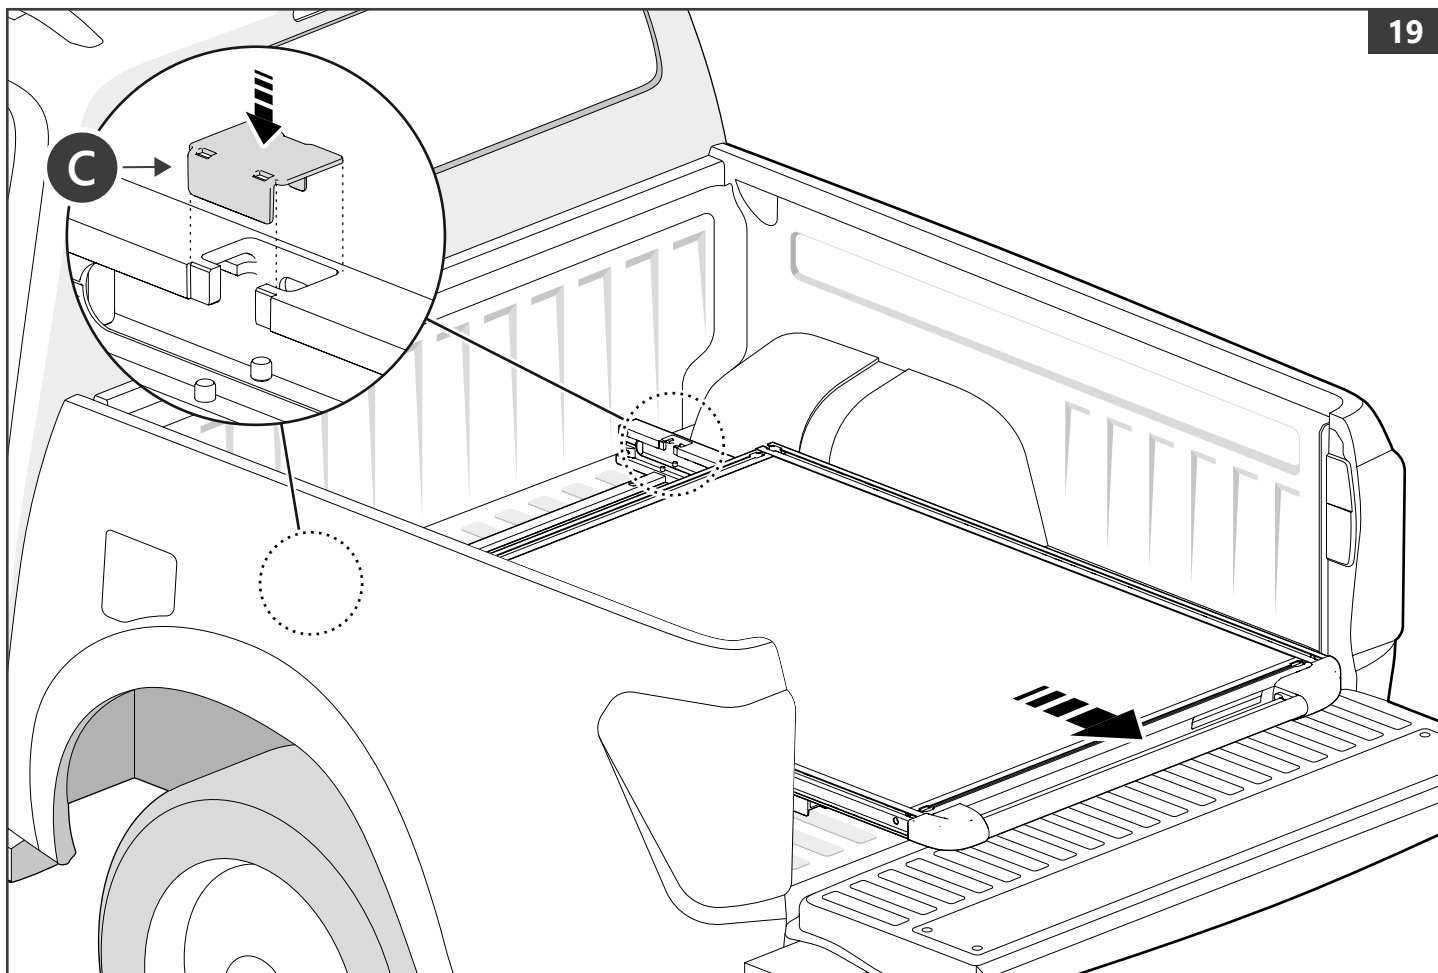



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Fax +45 4810 2960
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTS NI90	Nissan / 2015 →	Double	1 hour(s)	33 Kg
MTS TO90 / MTS TO91	Toyota / 2015 →	Double / Extra	1 hour(s)	33 / 37 Kg
MTS MB90	Mercedes / 2017 →	Double	1 hour(s)	33 Kg
MTS RE90	Renault / 2017 →	Double	1 hour(s)	33 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare