Mountain Top®
INDUSTRIES APS

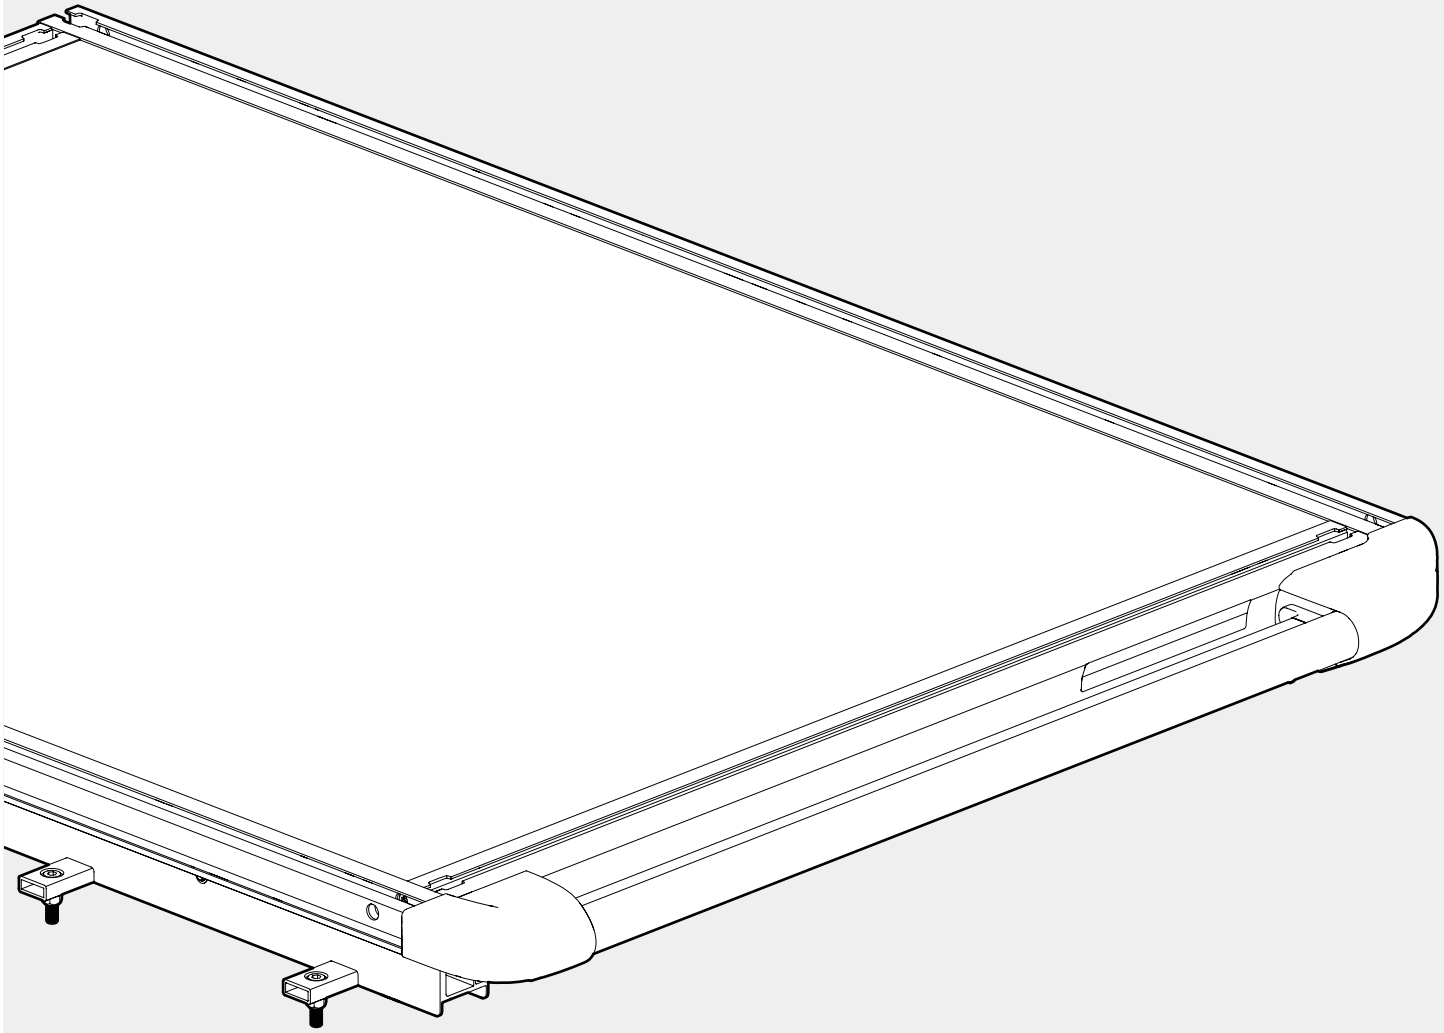

Mountain Top® Slide

Installation manual

DOWNLOAD PDF

PRINT FORMAT: A5 BOOKLET

© 2018 Mountain Top Industraies APS

ISSUE 04 / 02/03-2018 / MTI 887 043

Parts

A

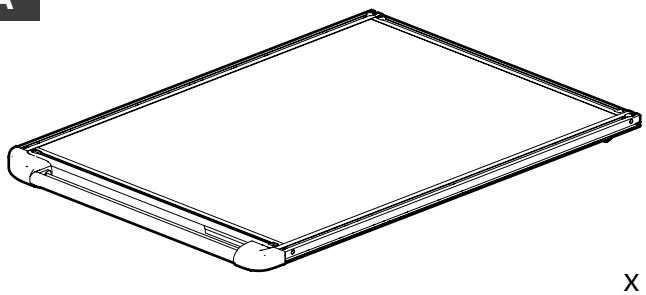

x 1

B

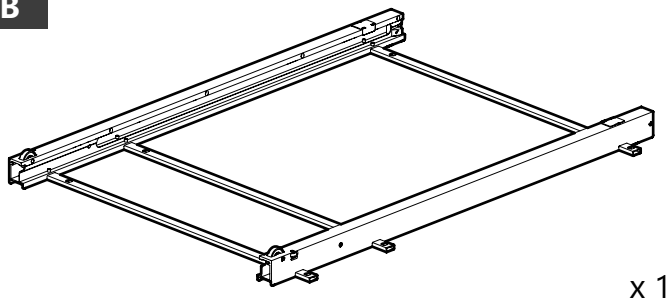

x 1

Kit # **836 012**

C

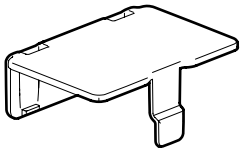

x 2

Kit # **833 940**

D

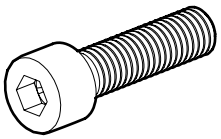

x 12

E

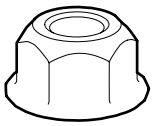

x 12

F



x 24

Kit # **MTS 0203 - SOLD SEPARATELY**

G

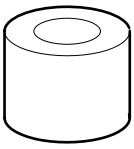

x 12

H

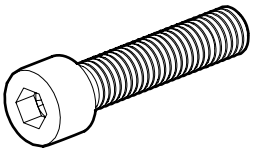

x 12

Tools and materials needed

1-25 Nm

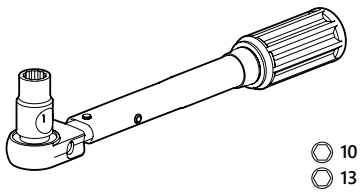

10 mm
13 mm
5 mm

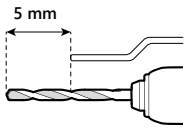

Ø 3 mm
Ø 8 mm

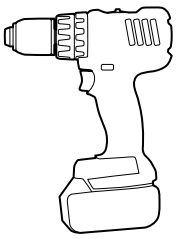

Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

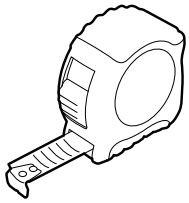

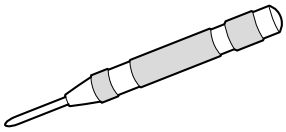

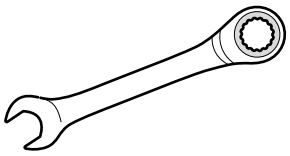

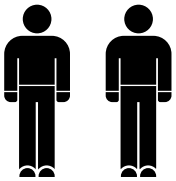

1

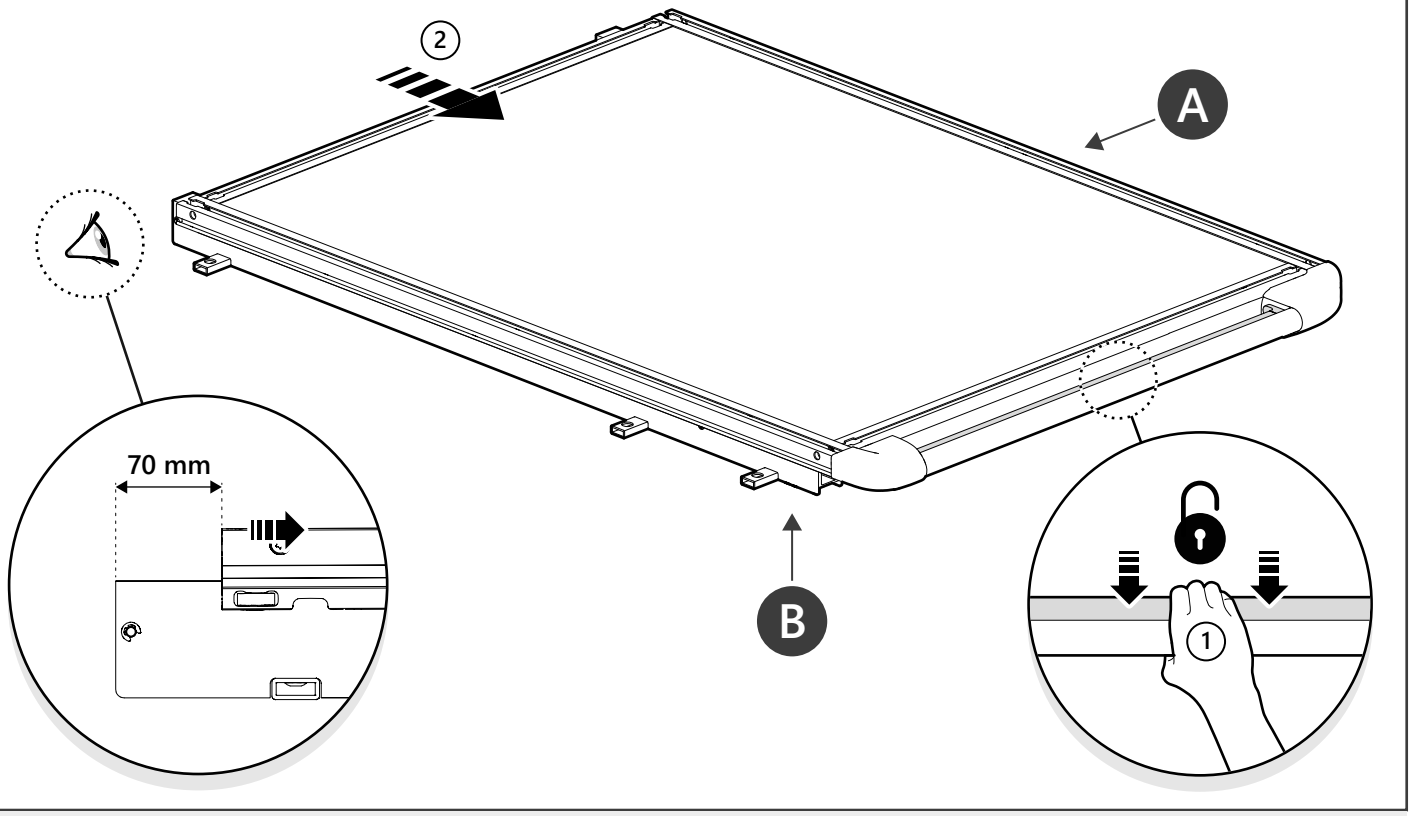

2

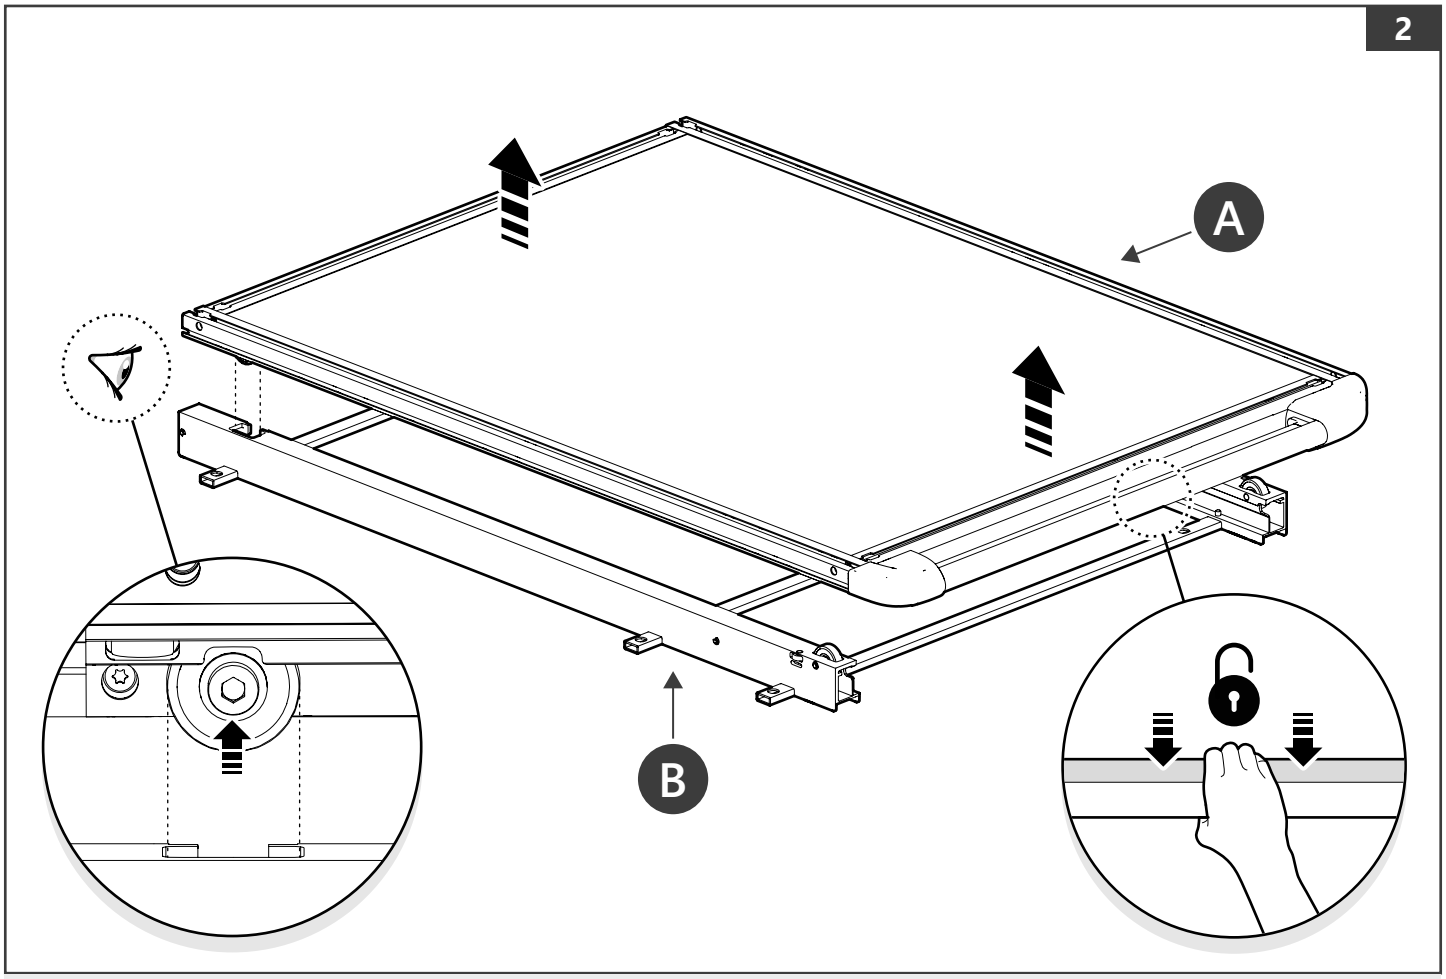

3

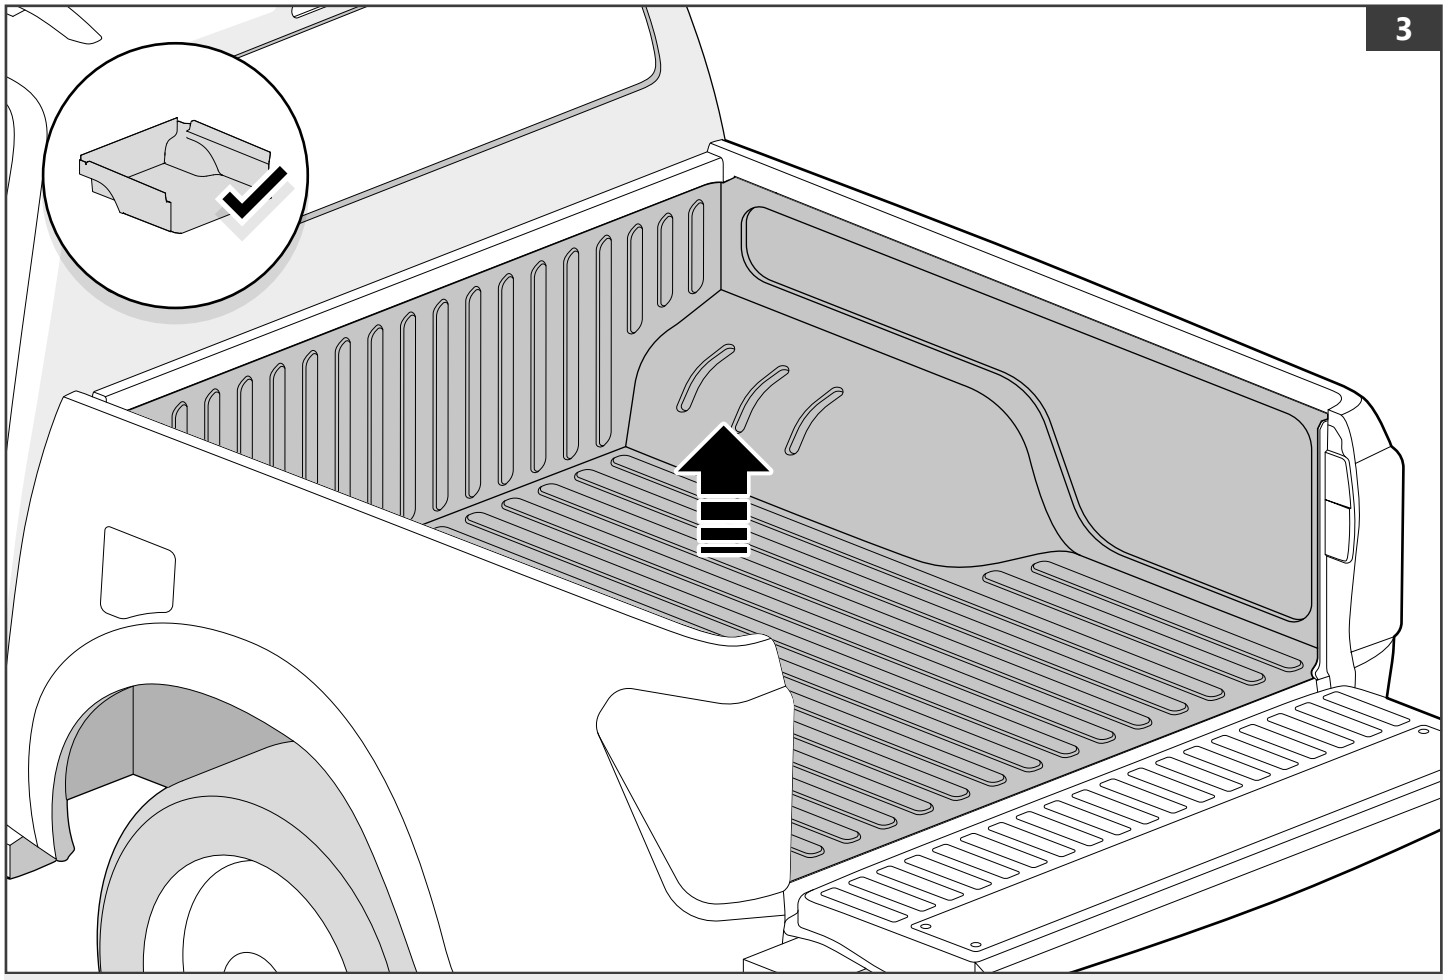

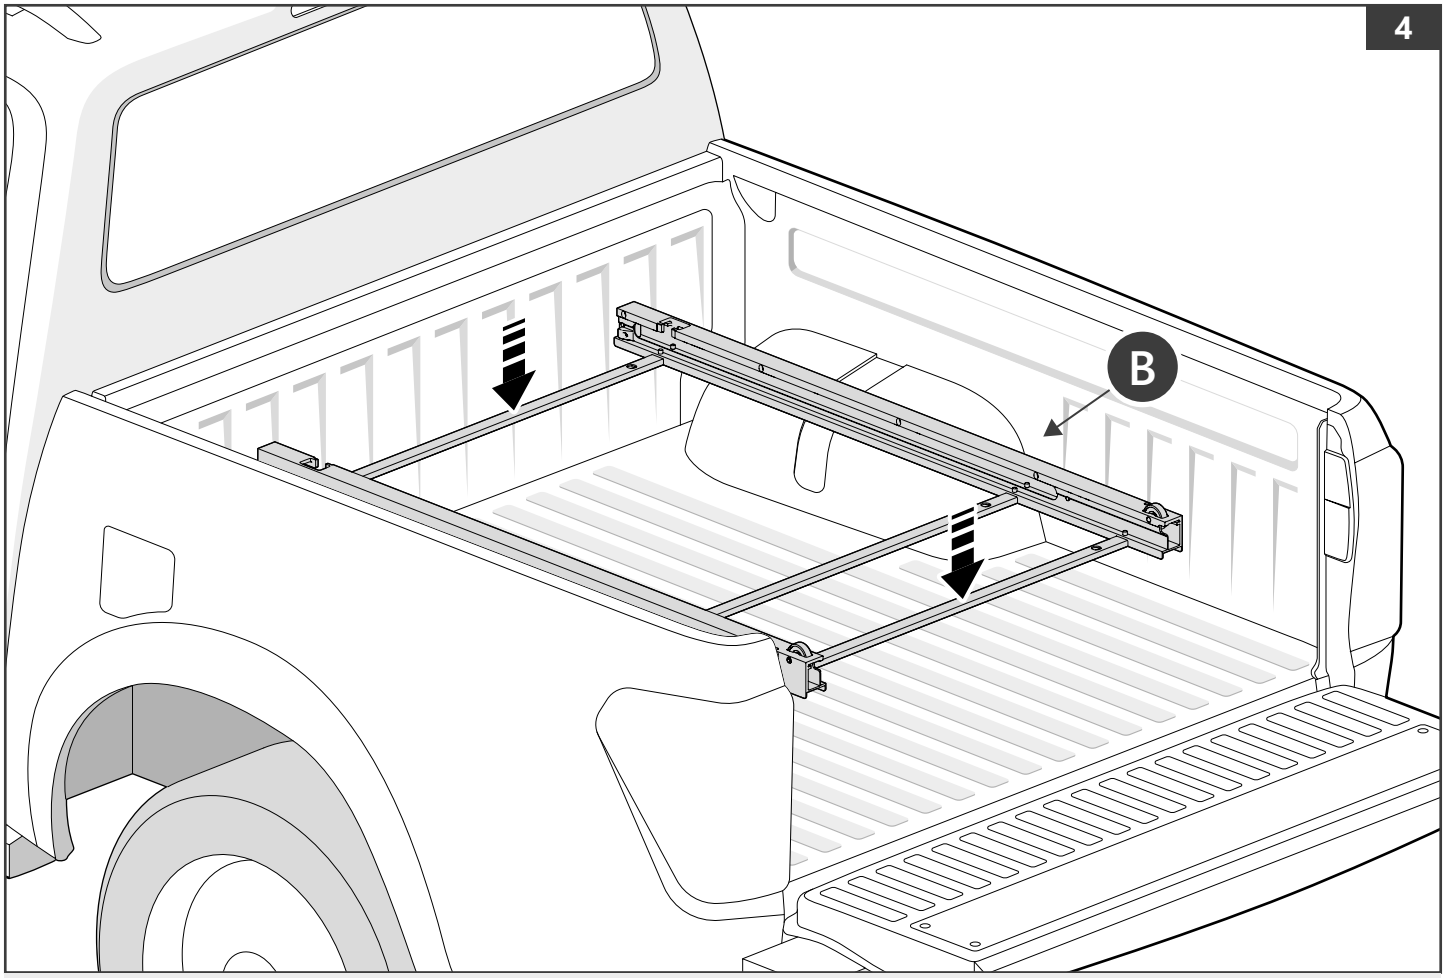
4
B

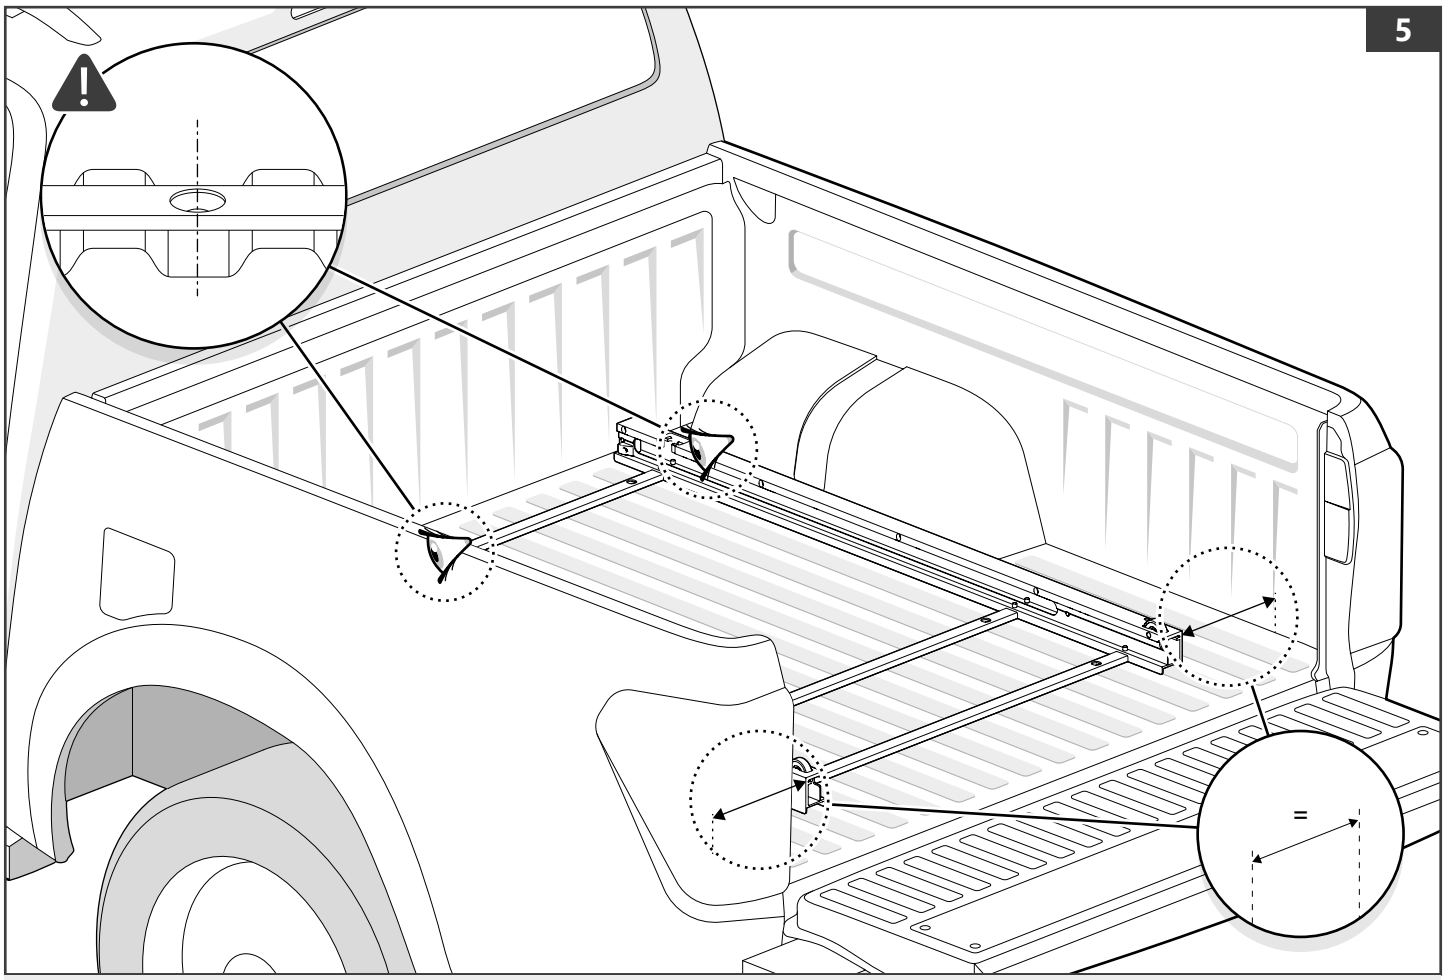
5
=

6

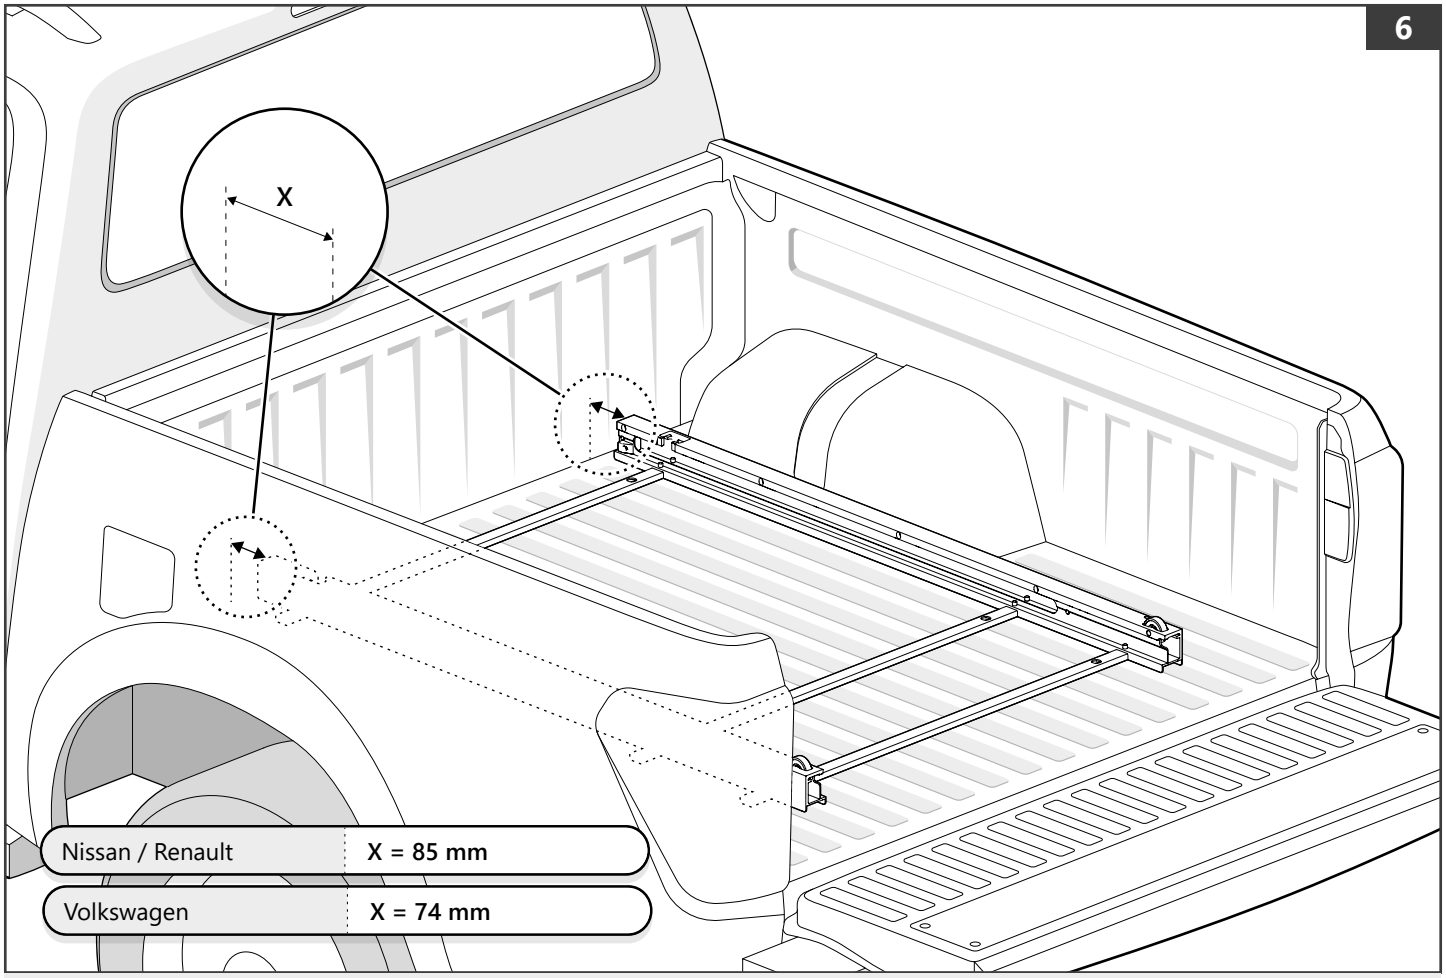

7

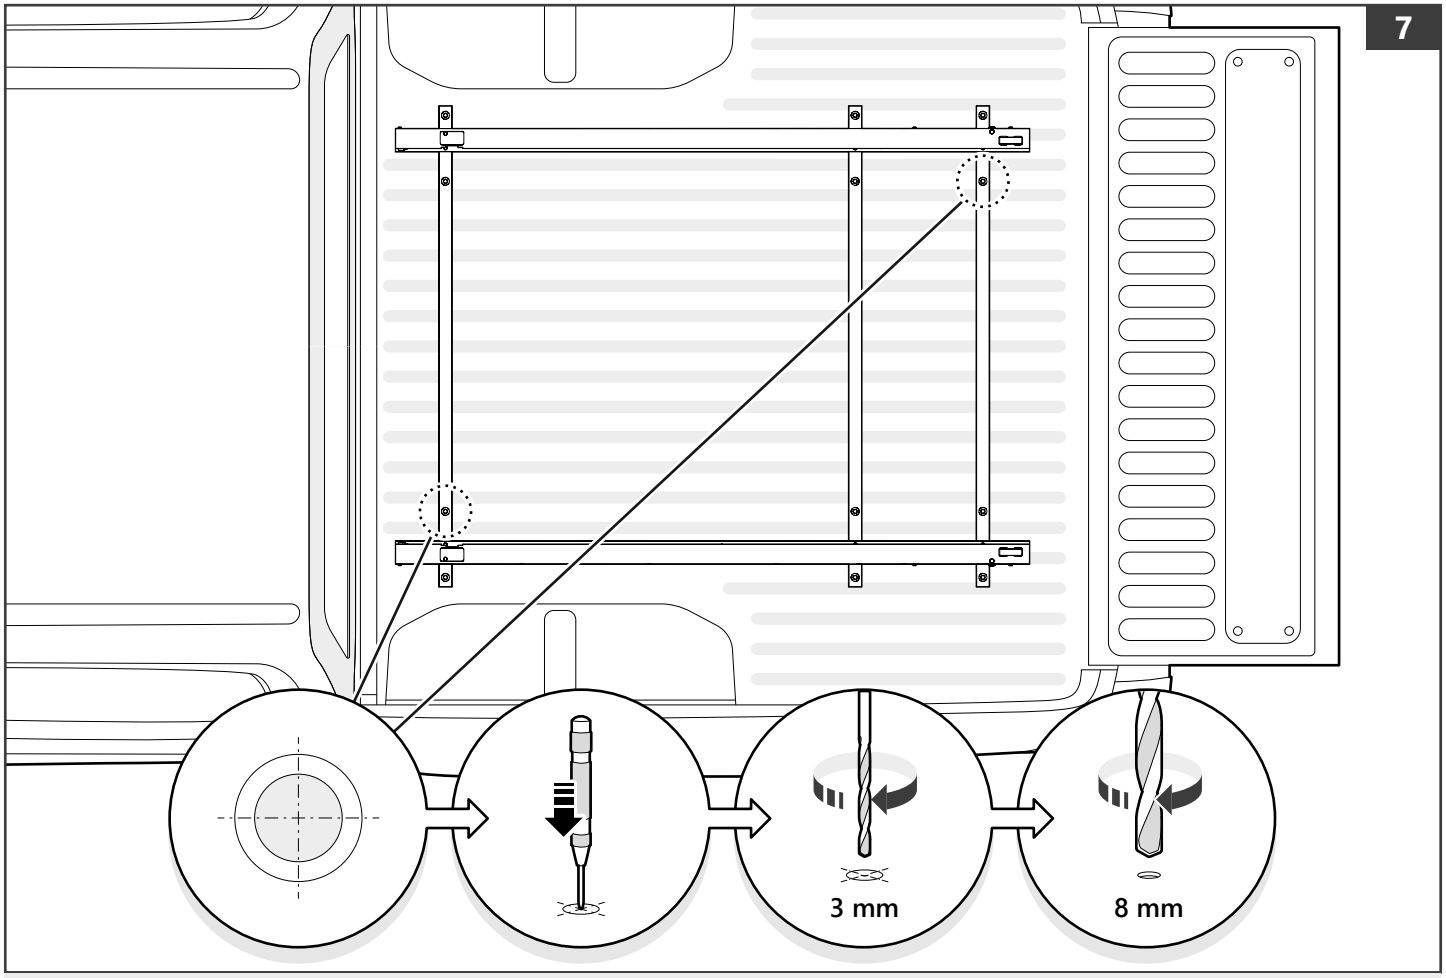

8

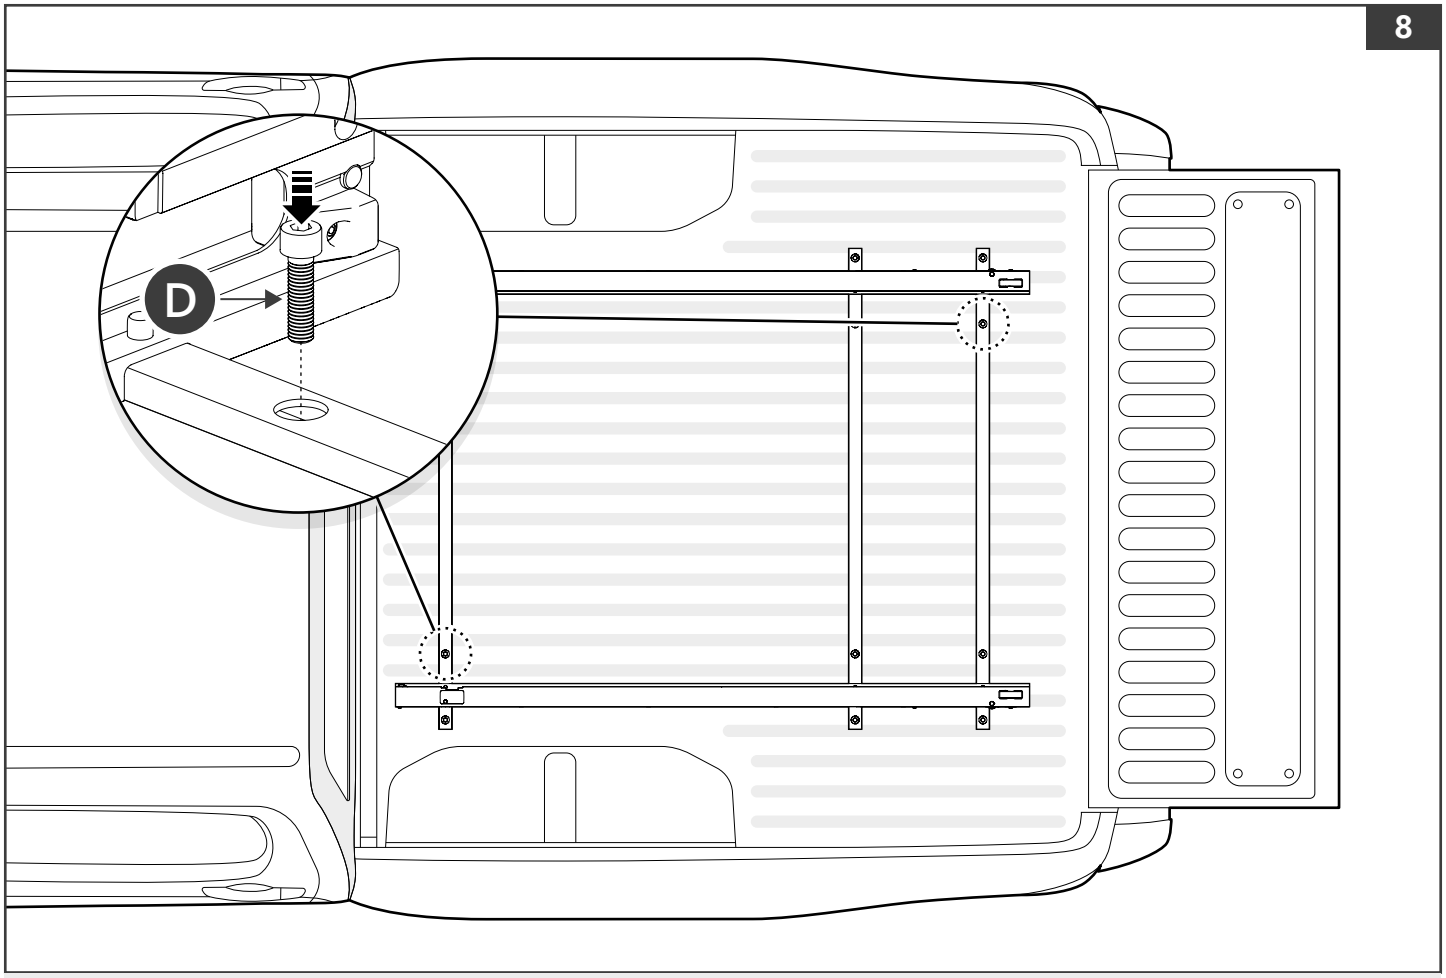

9

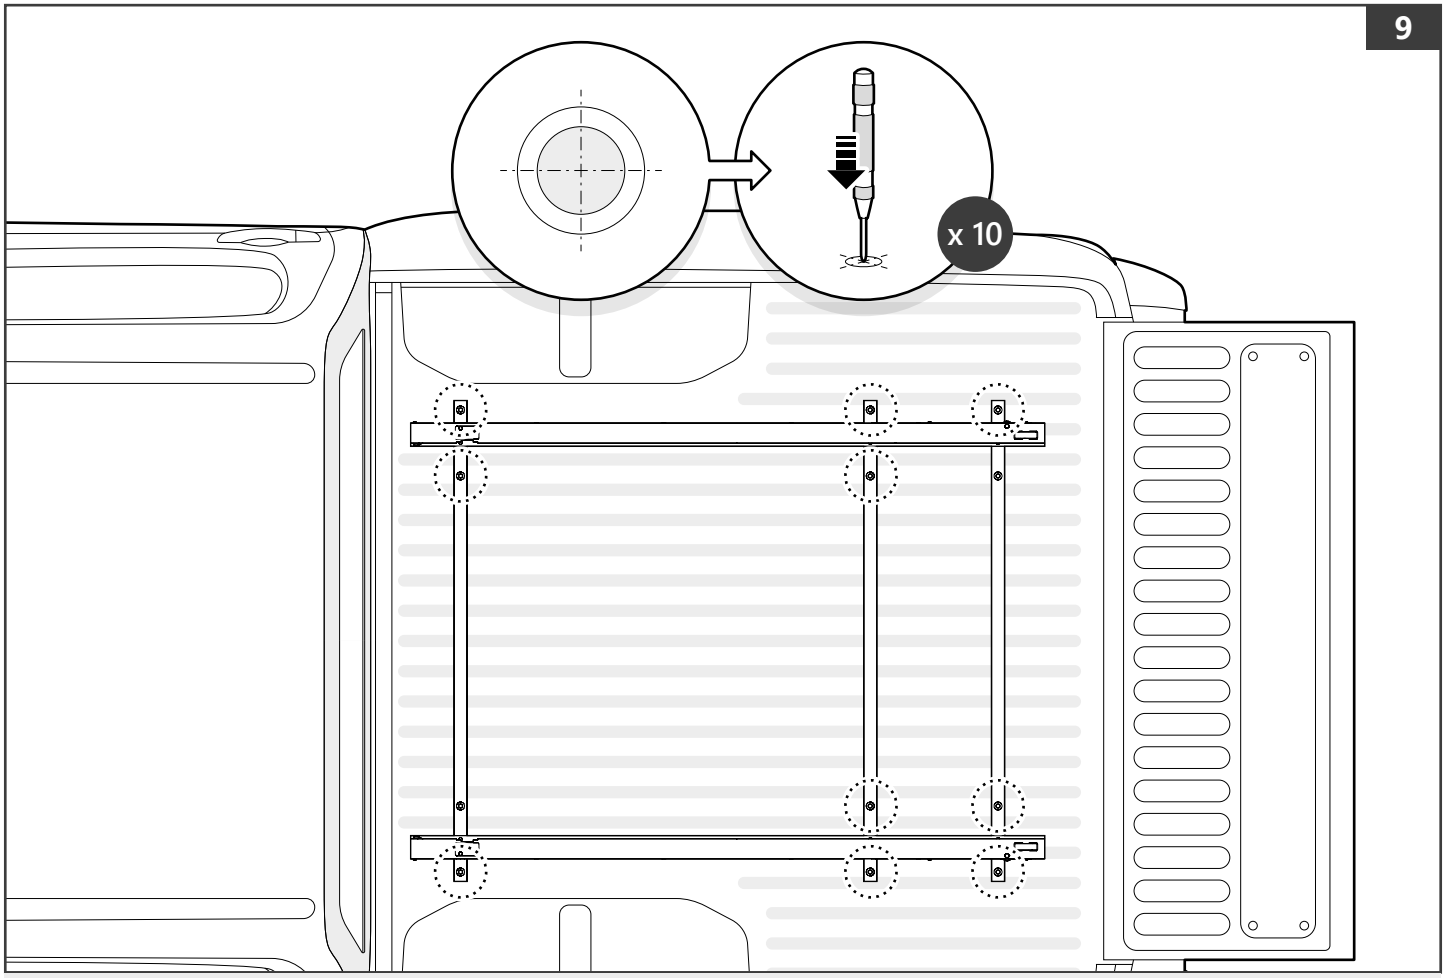

10

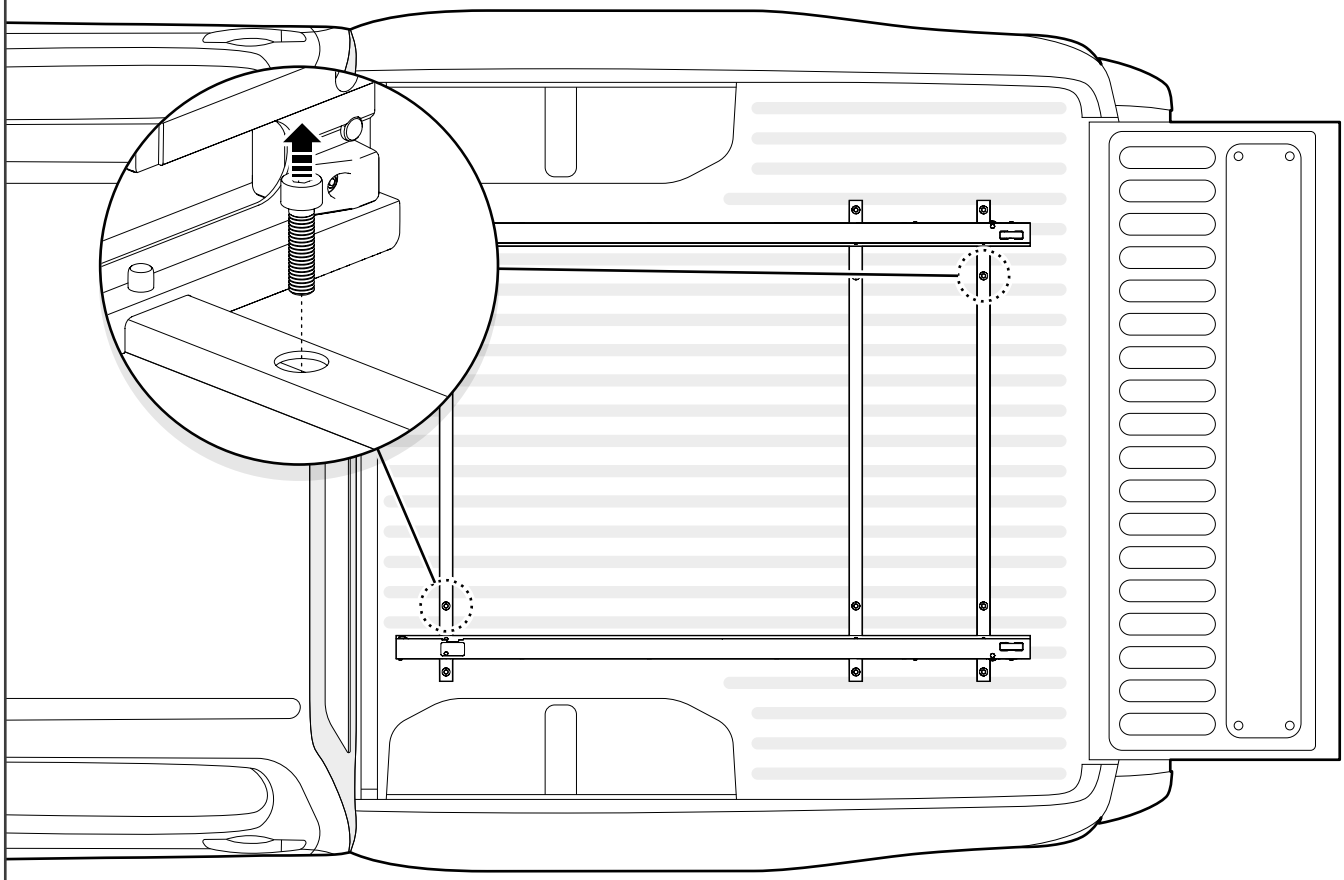

11

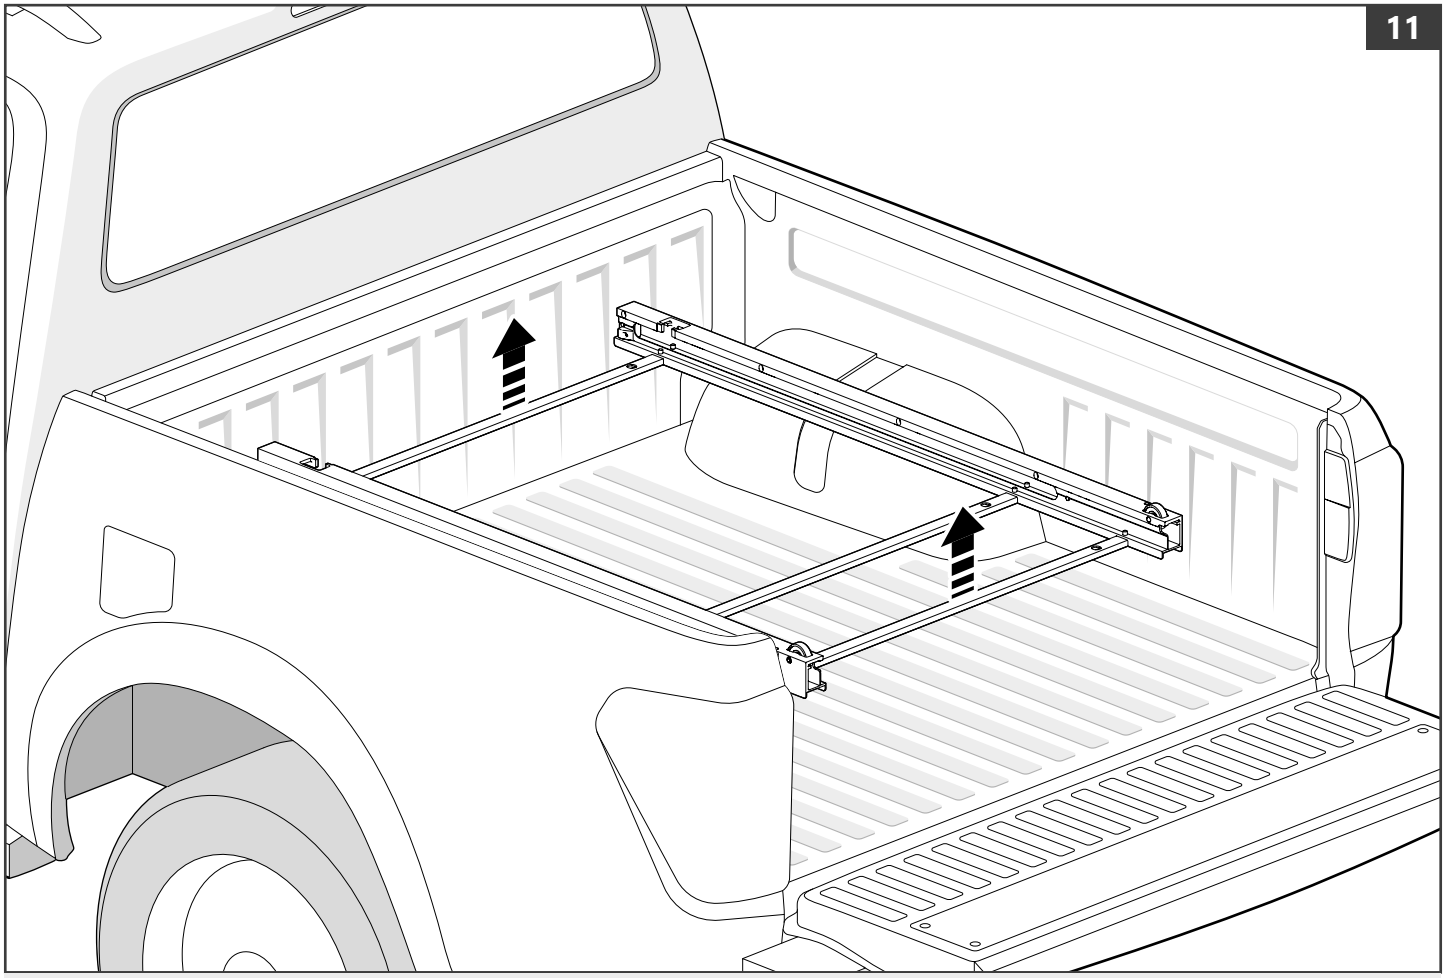

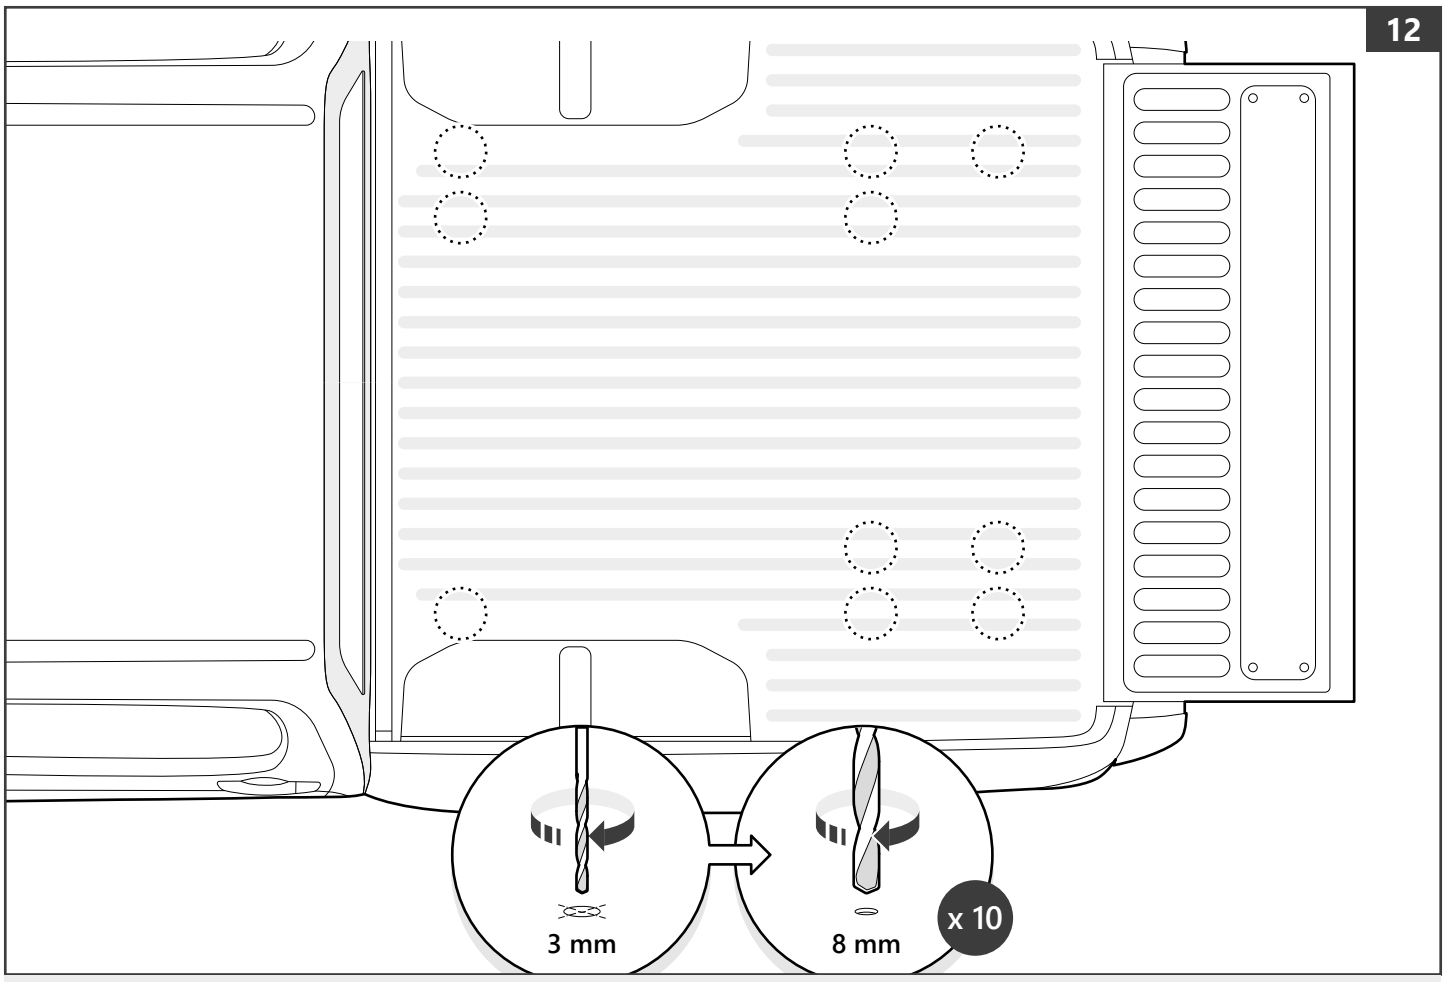
12
3 mm
8 mm
x 10

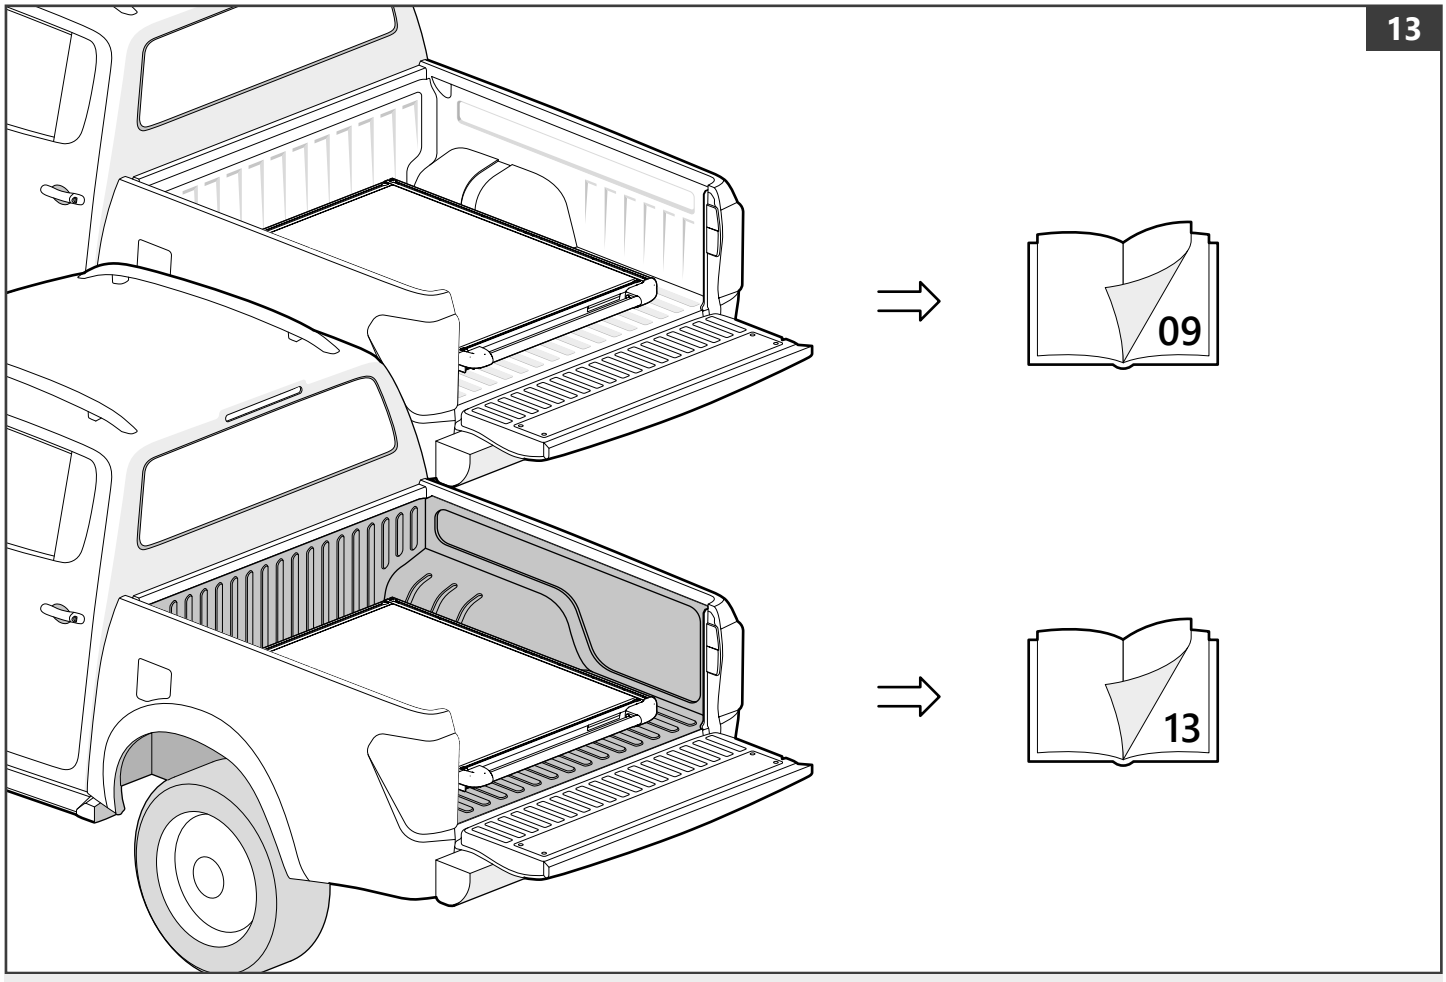
13
09
13

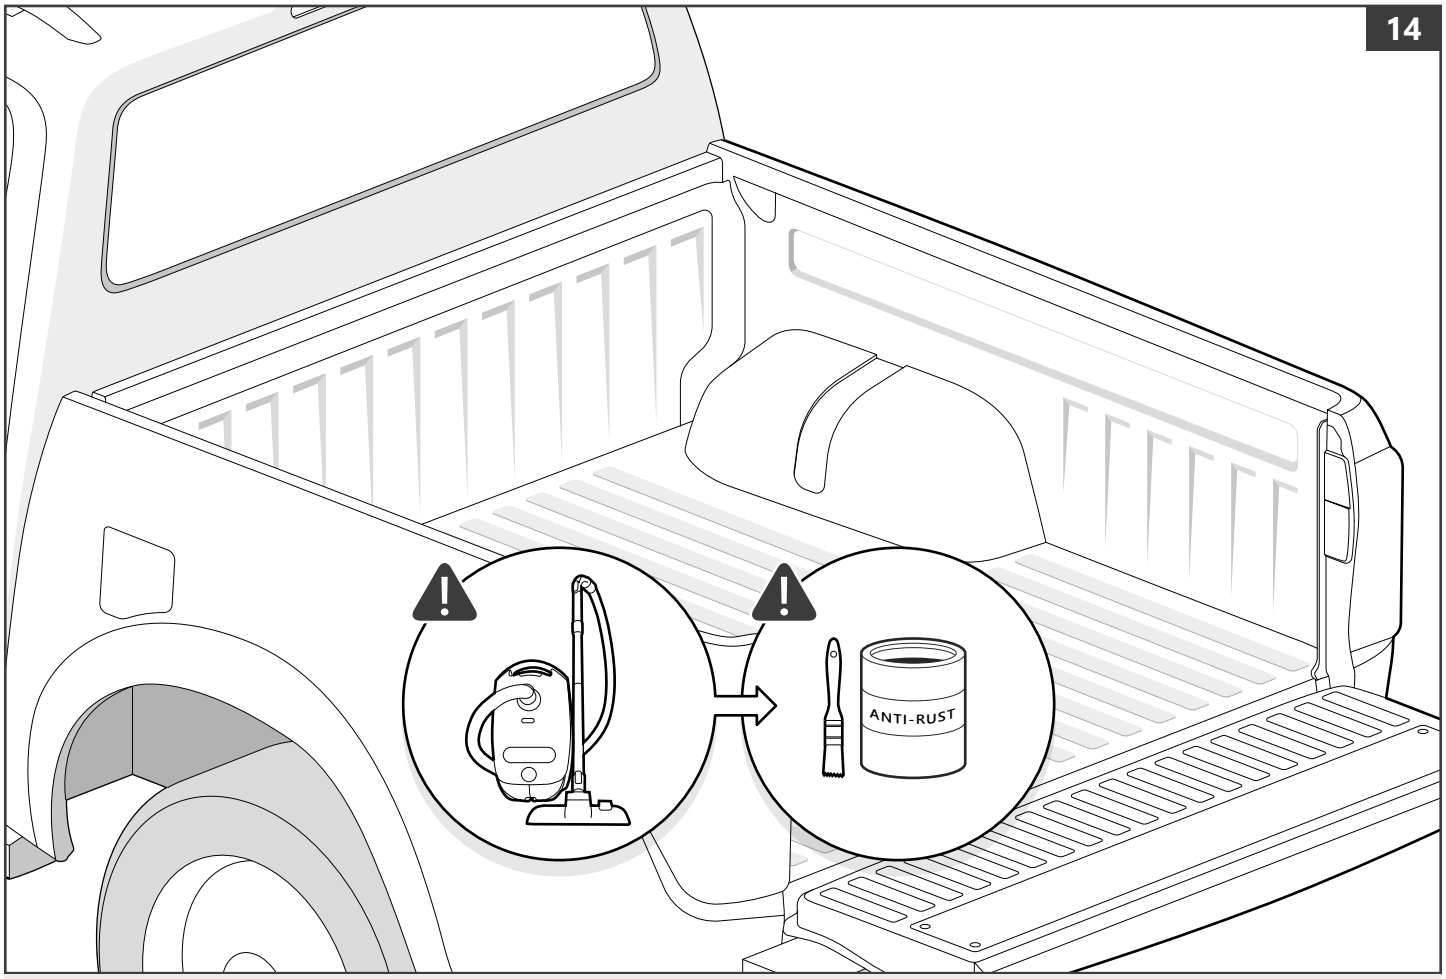
14
ANTI-RUST

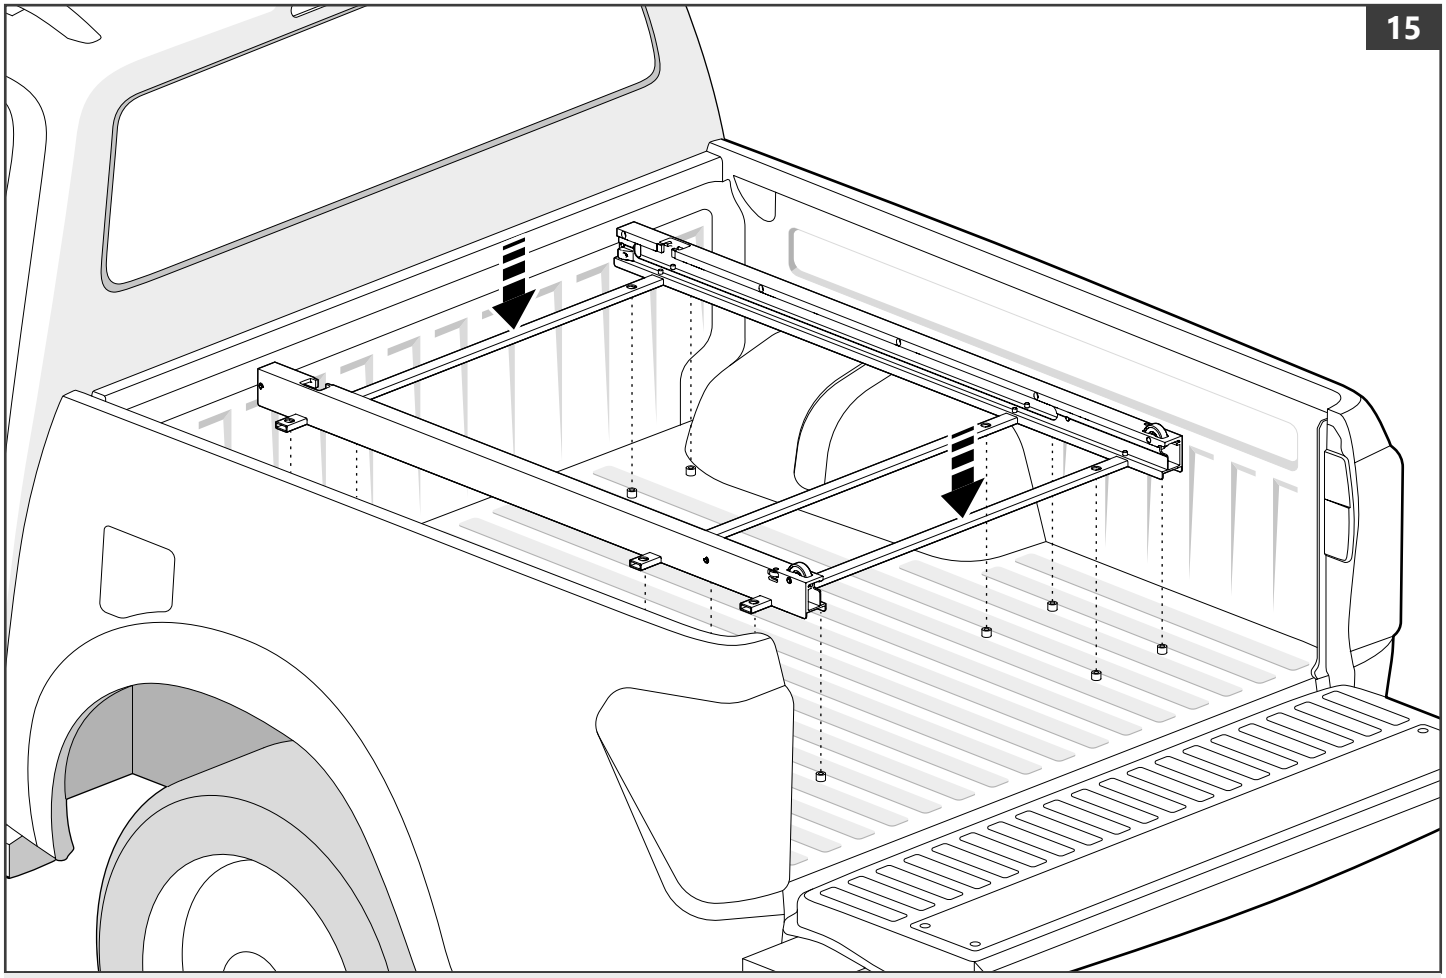
15

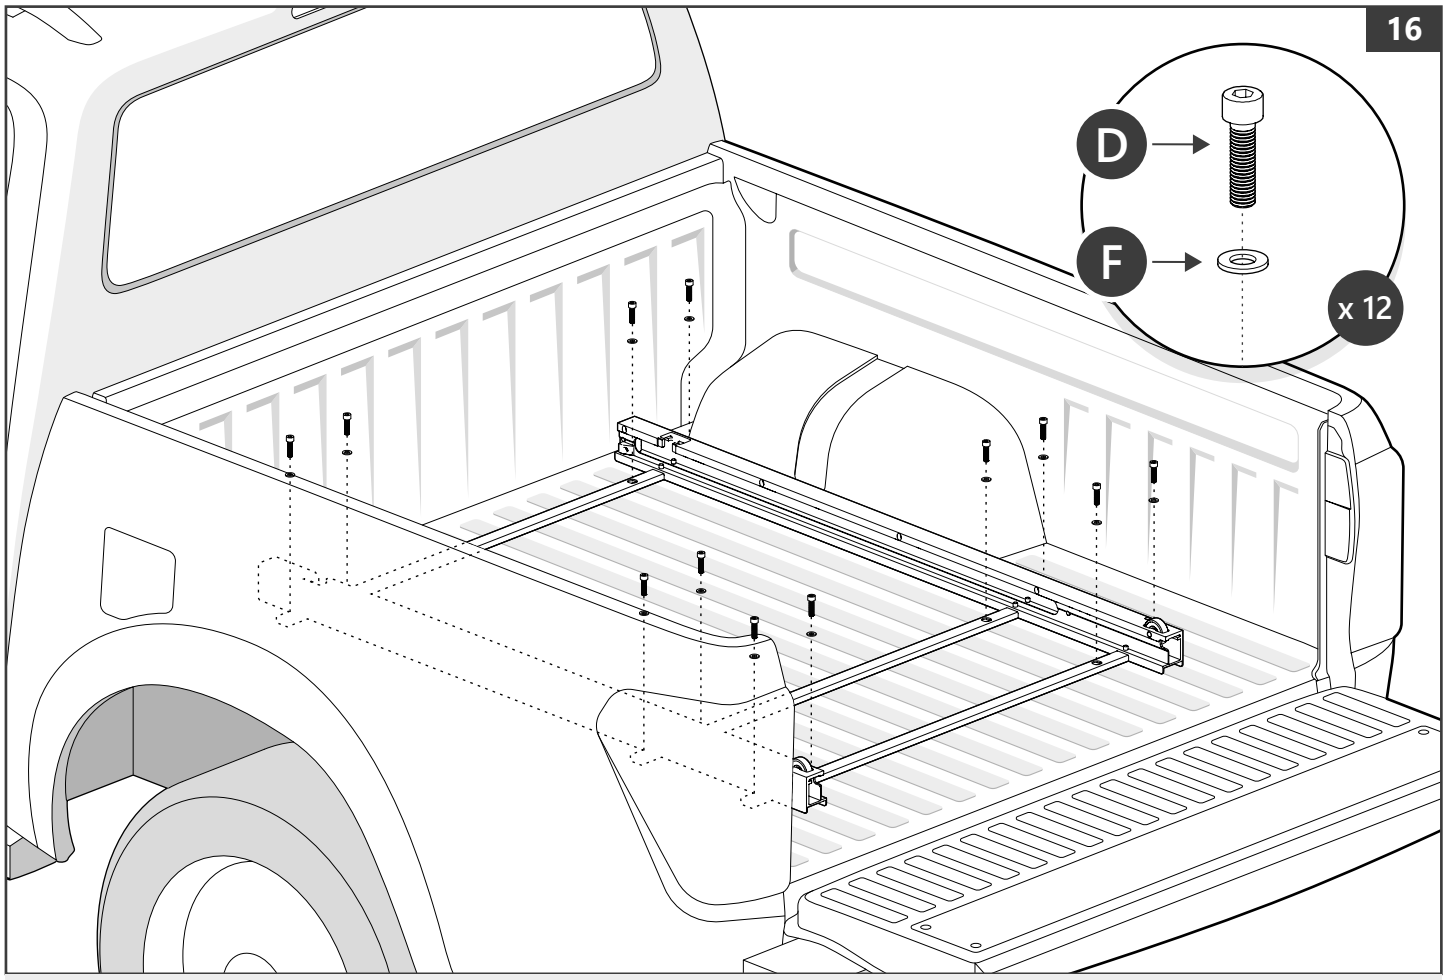
16
D
F
x 12

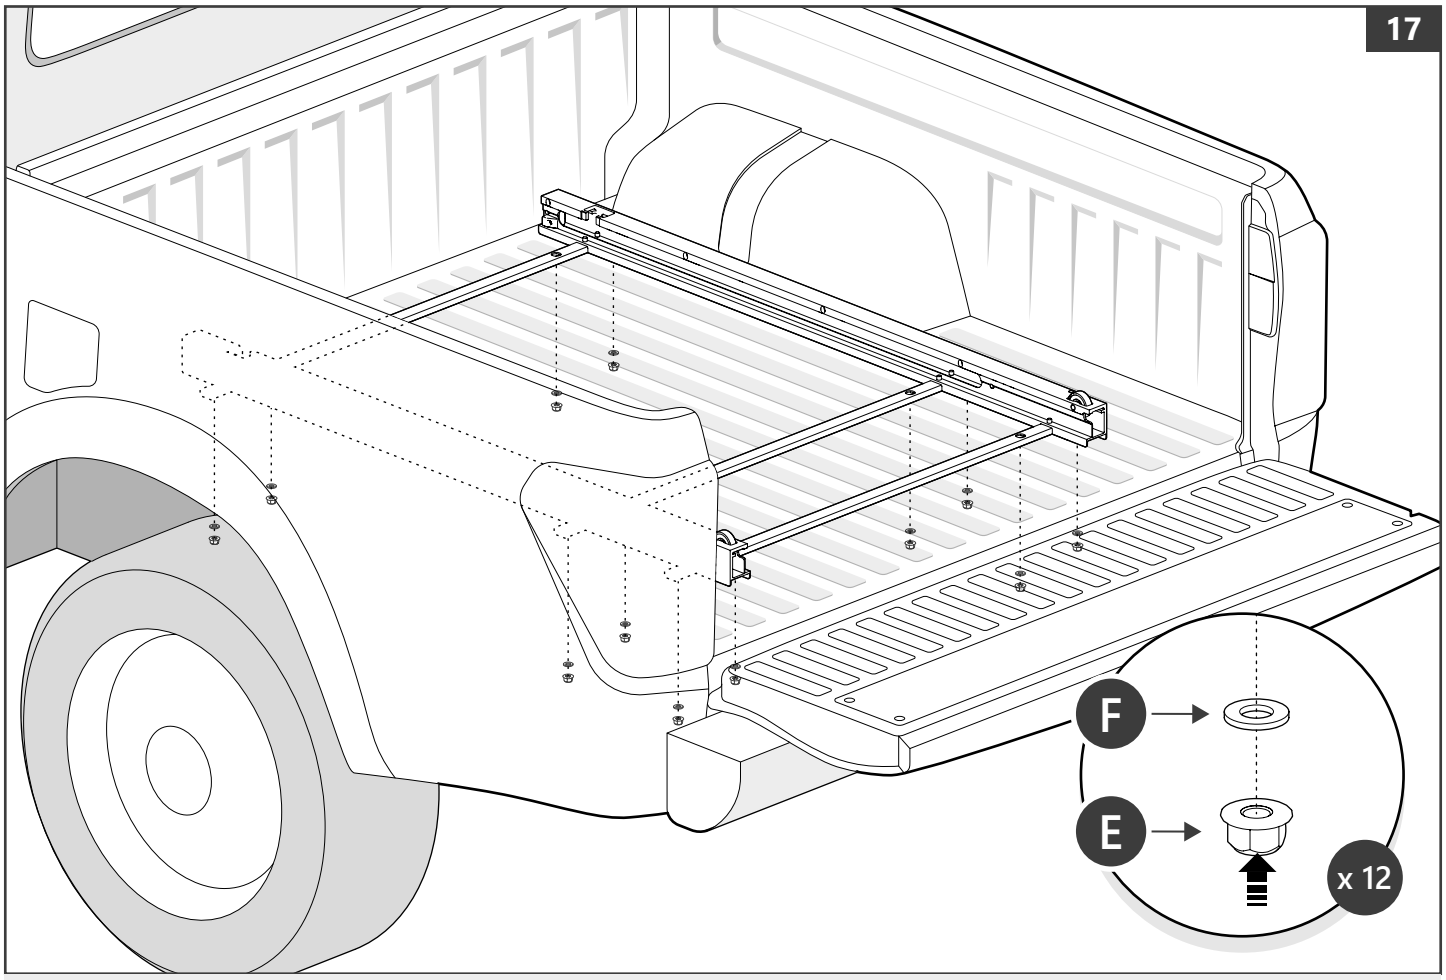
17
F
E
x 12

18

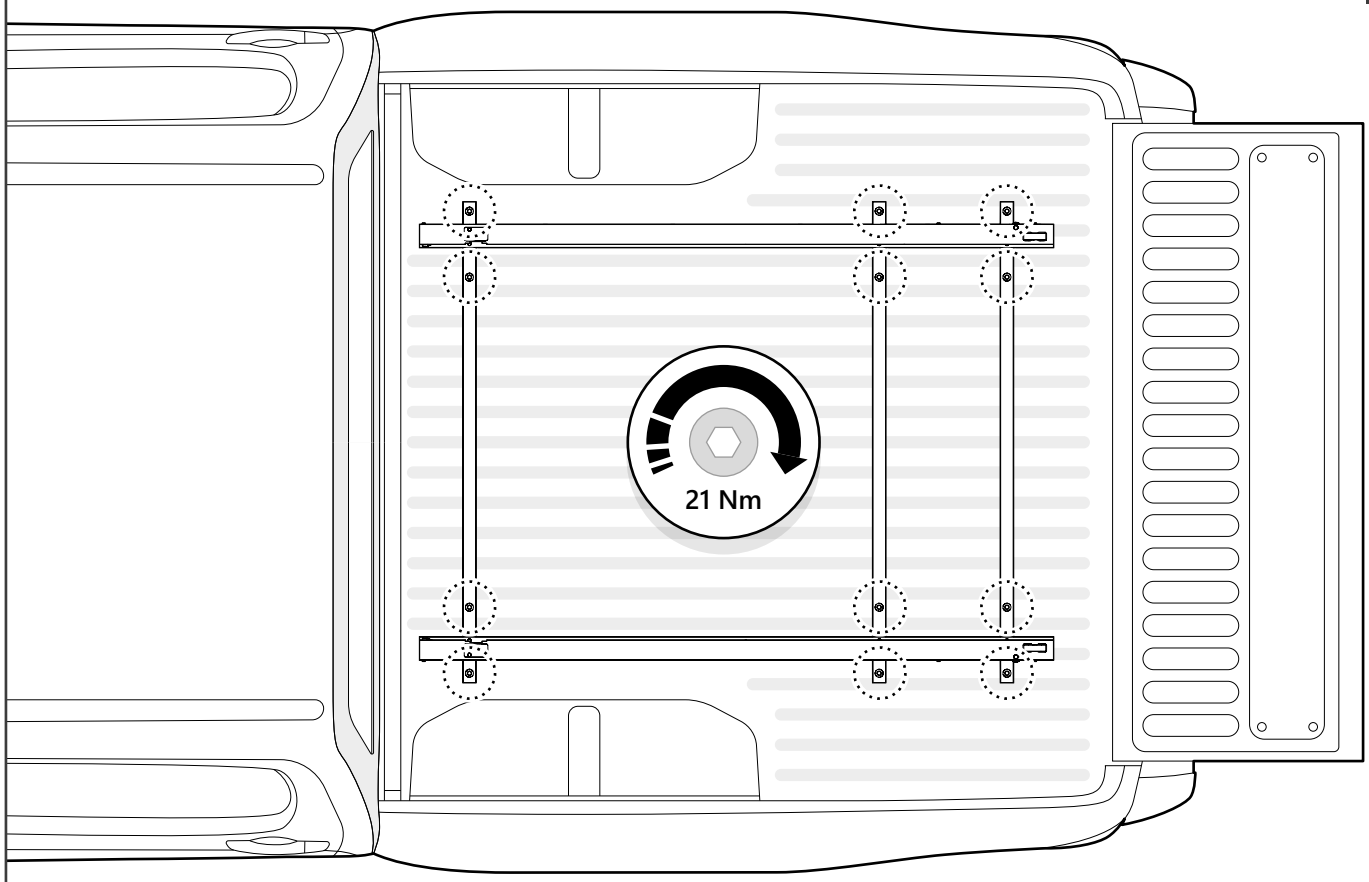

19

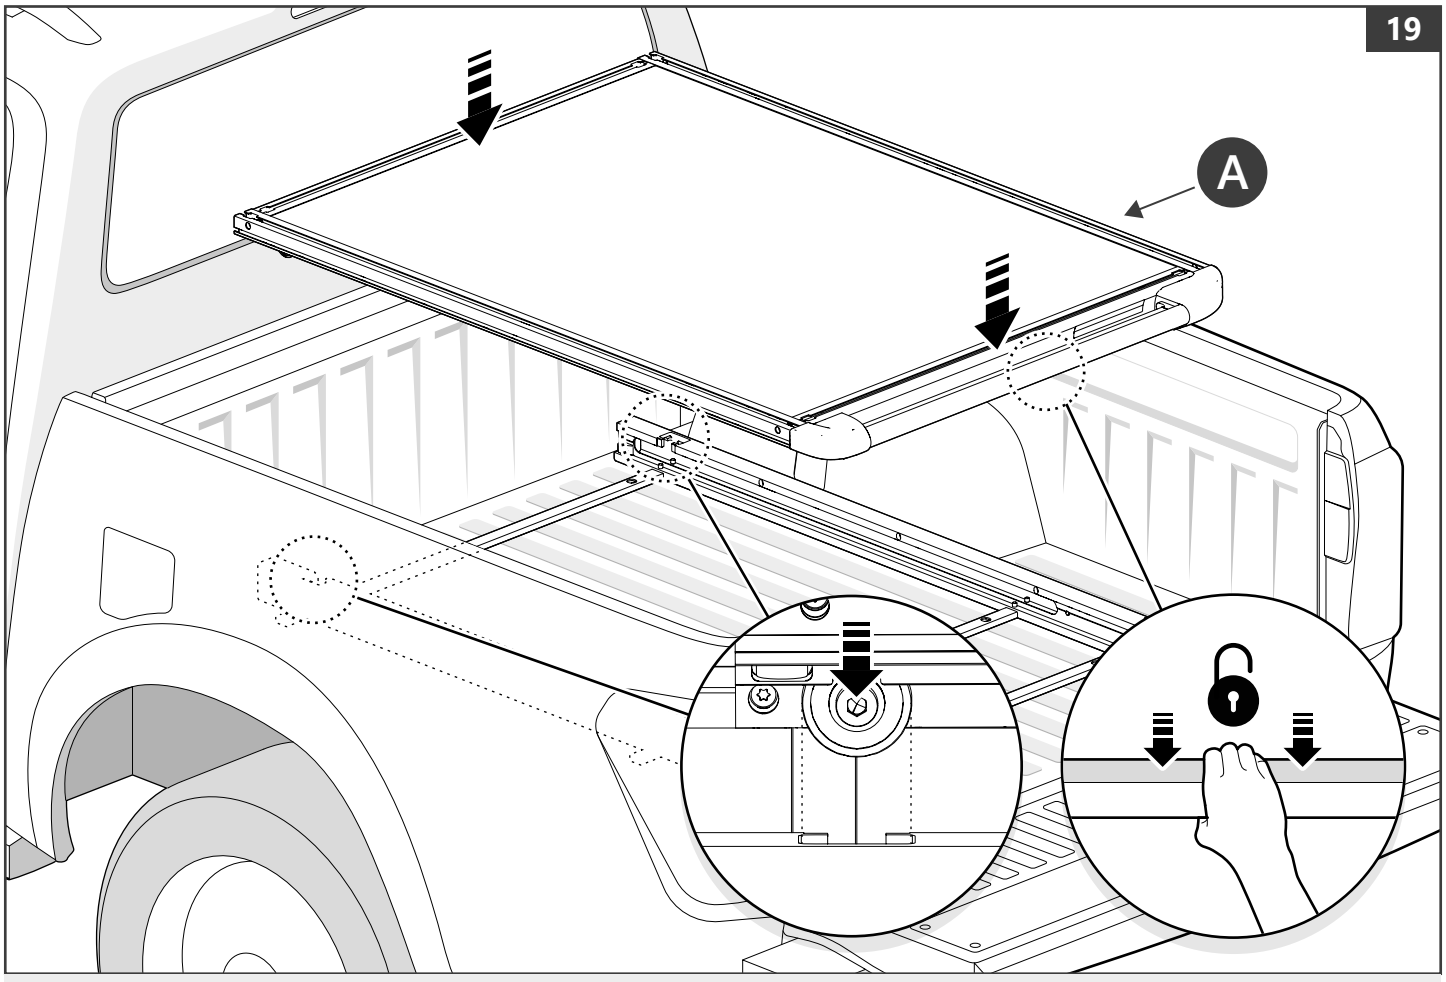

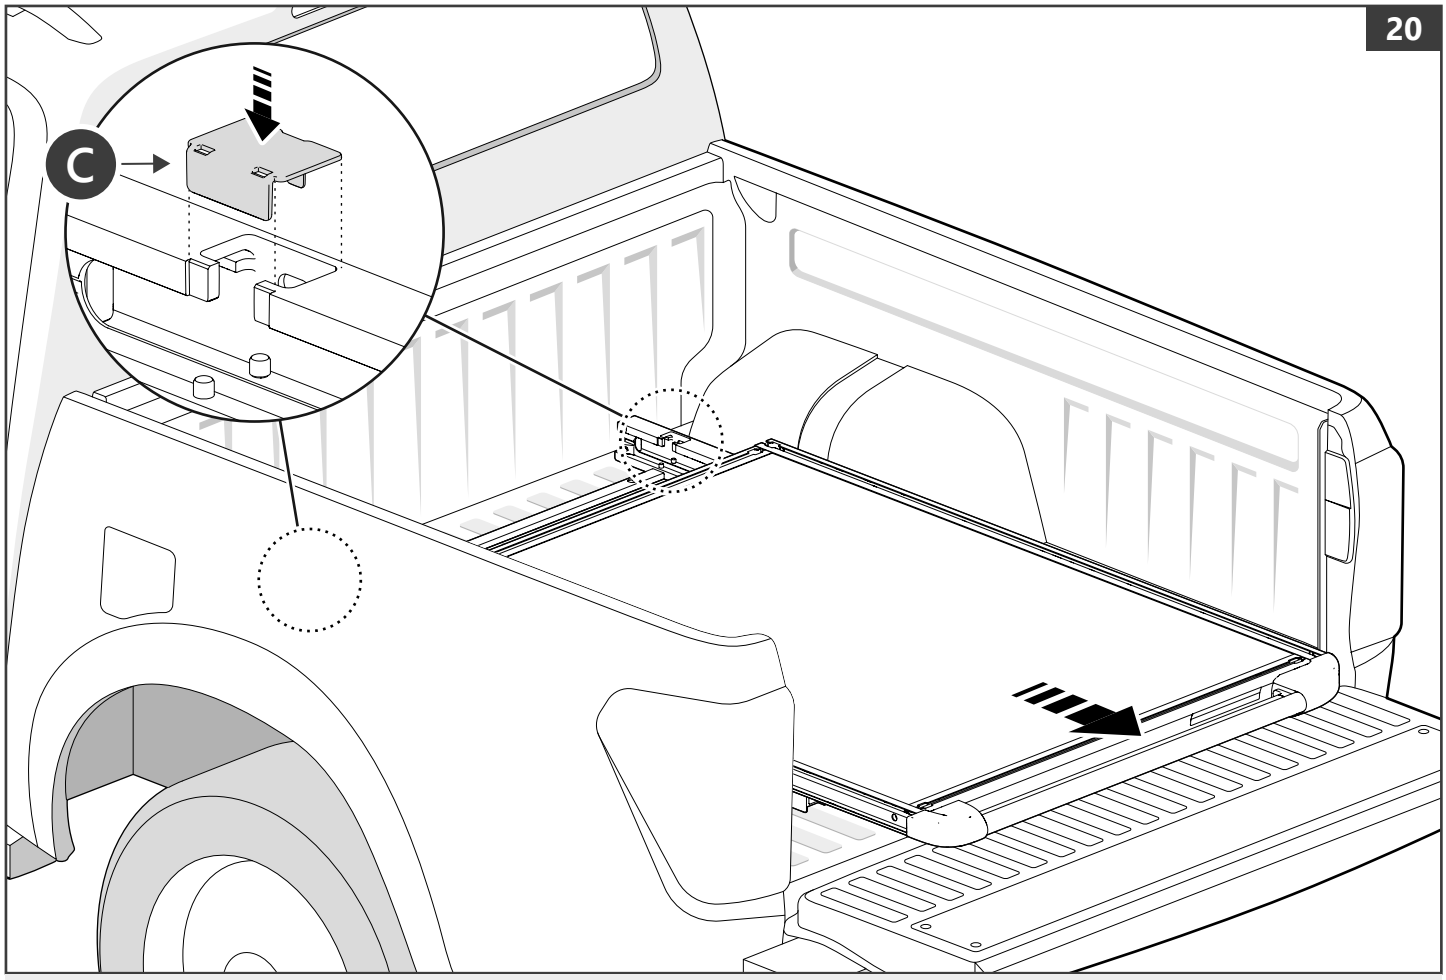
20
C

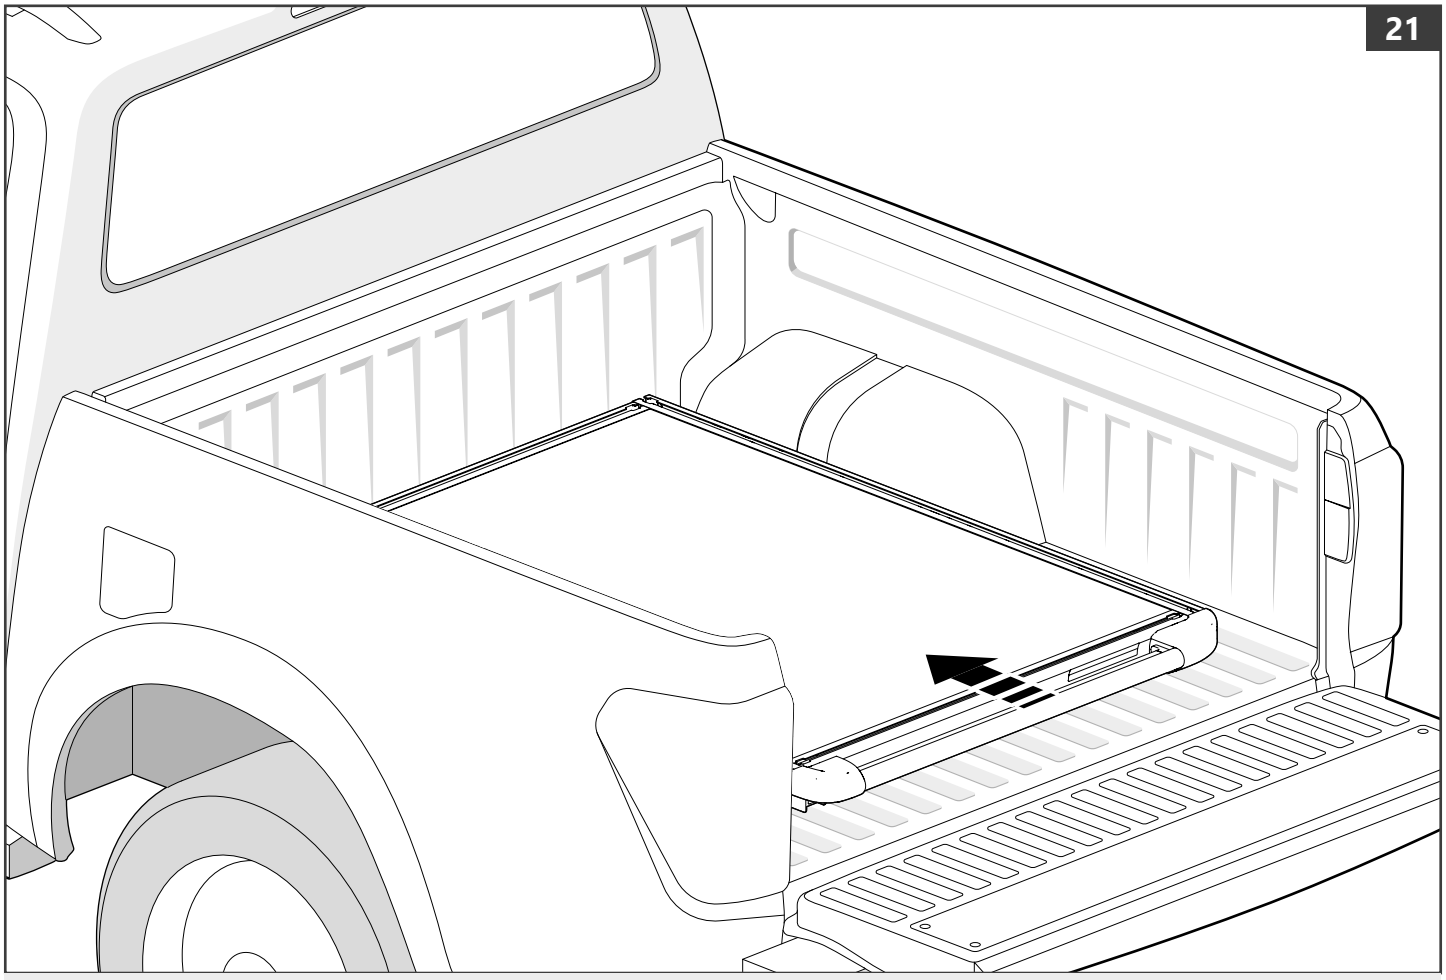
21

22

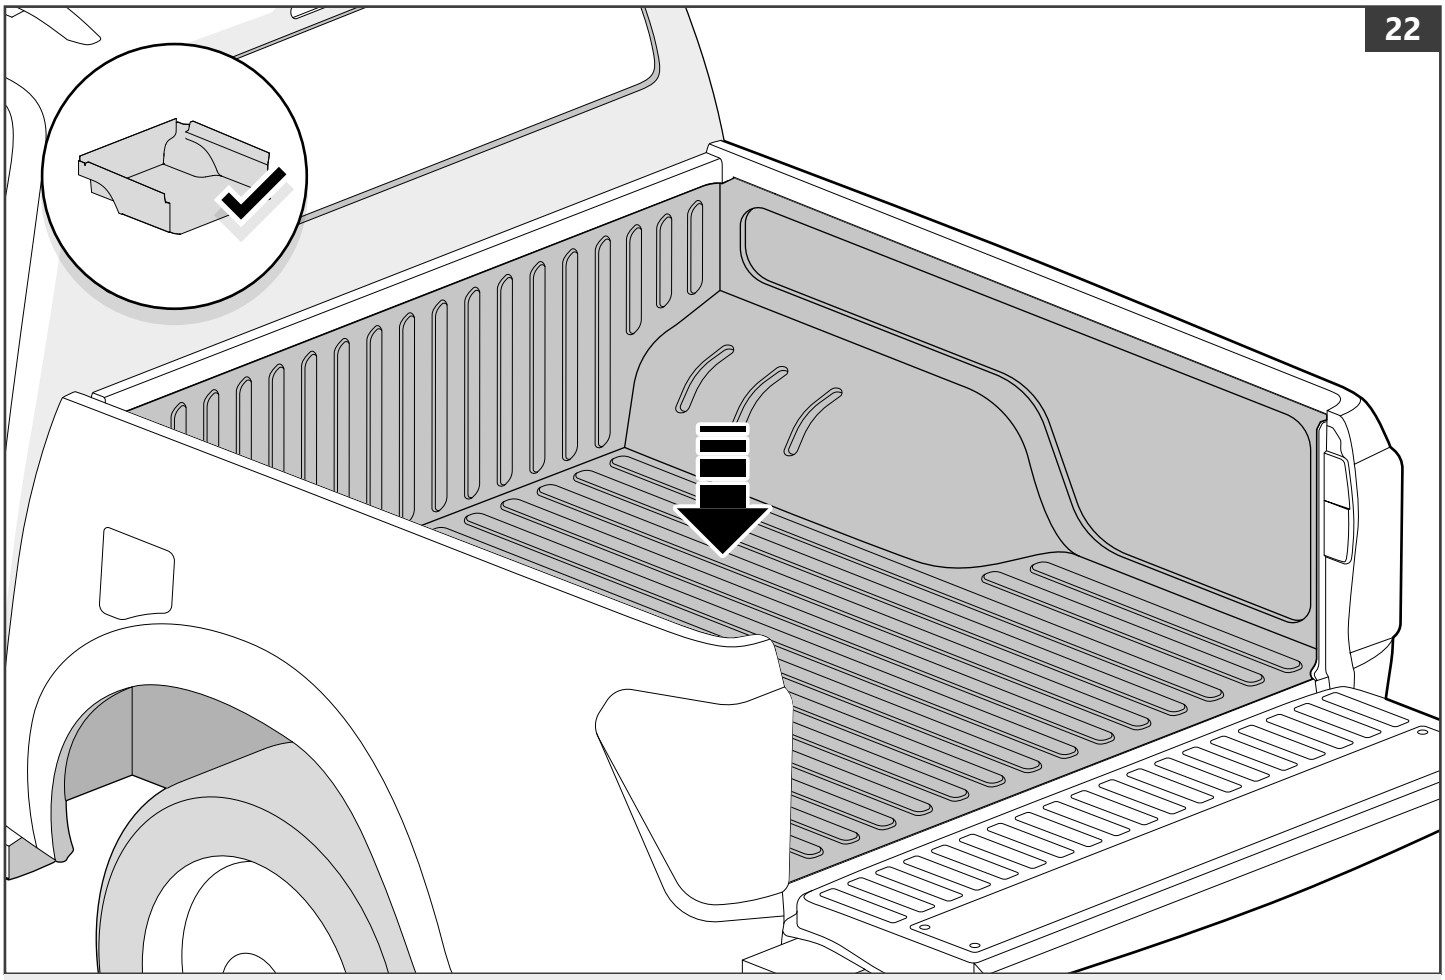

23

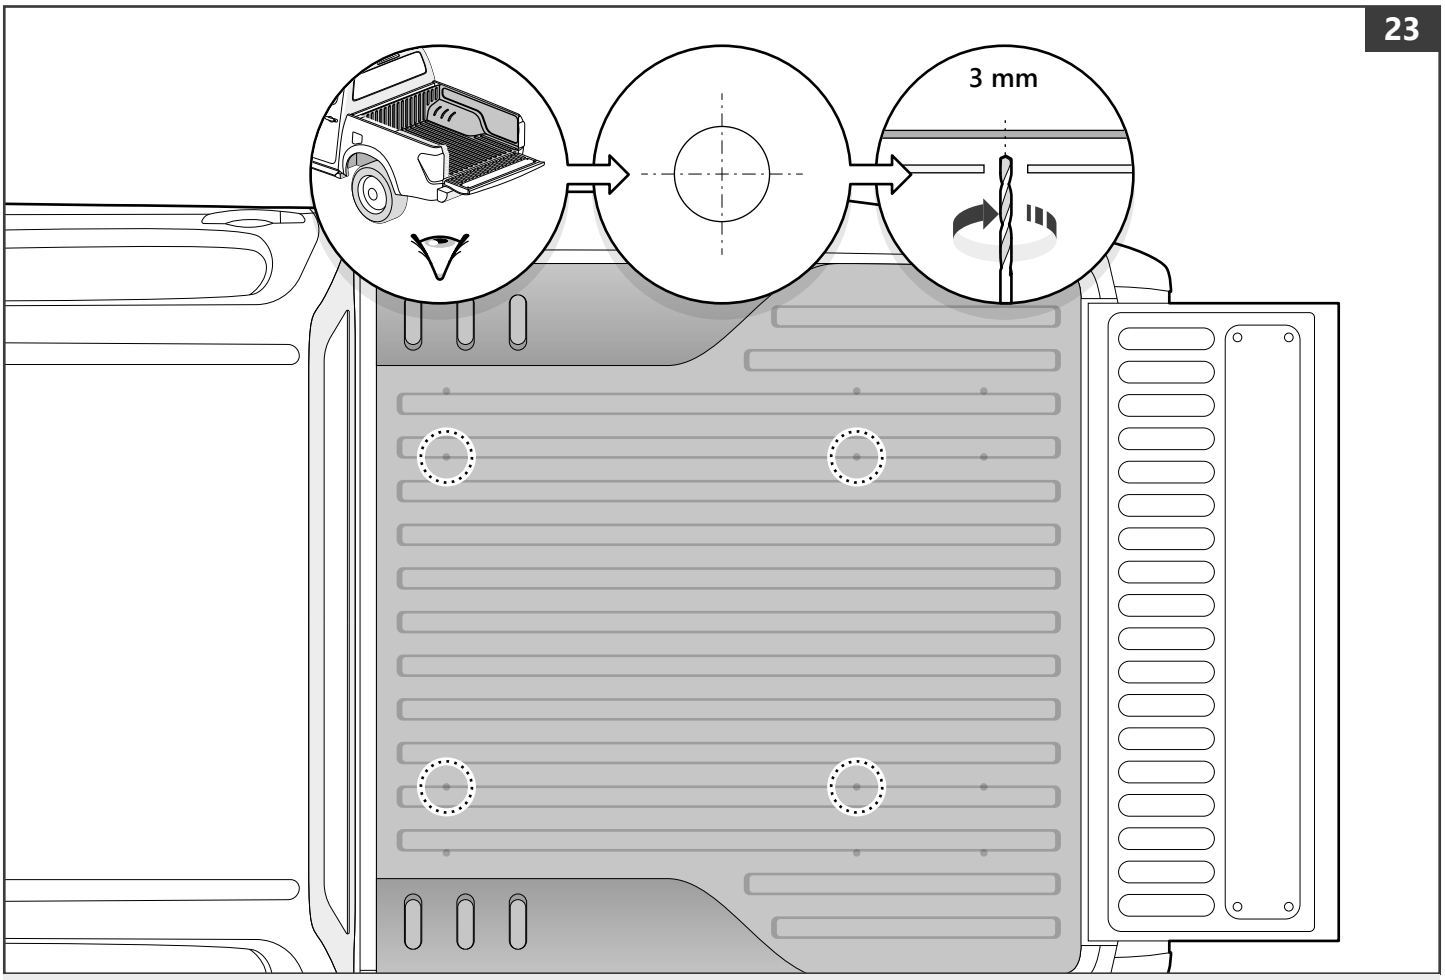

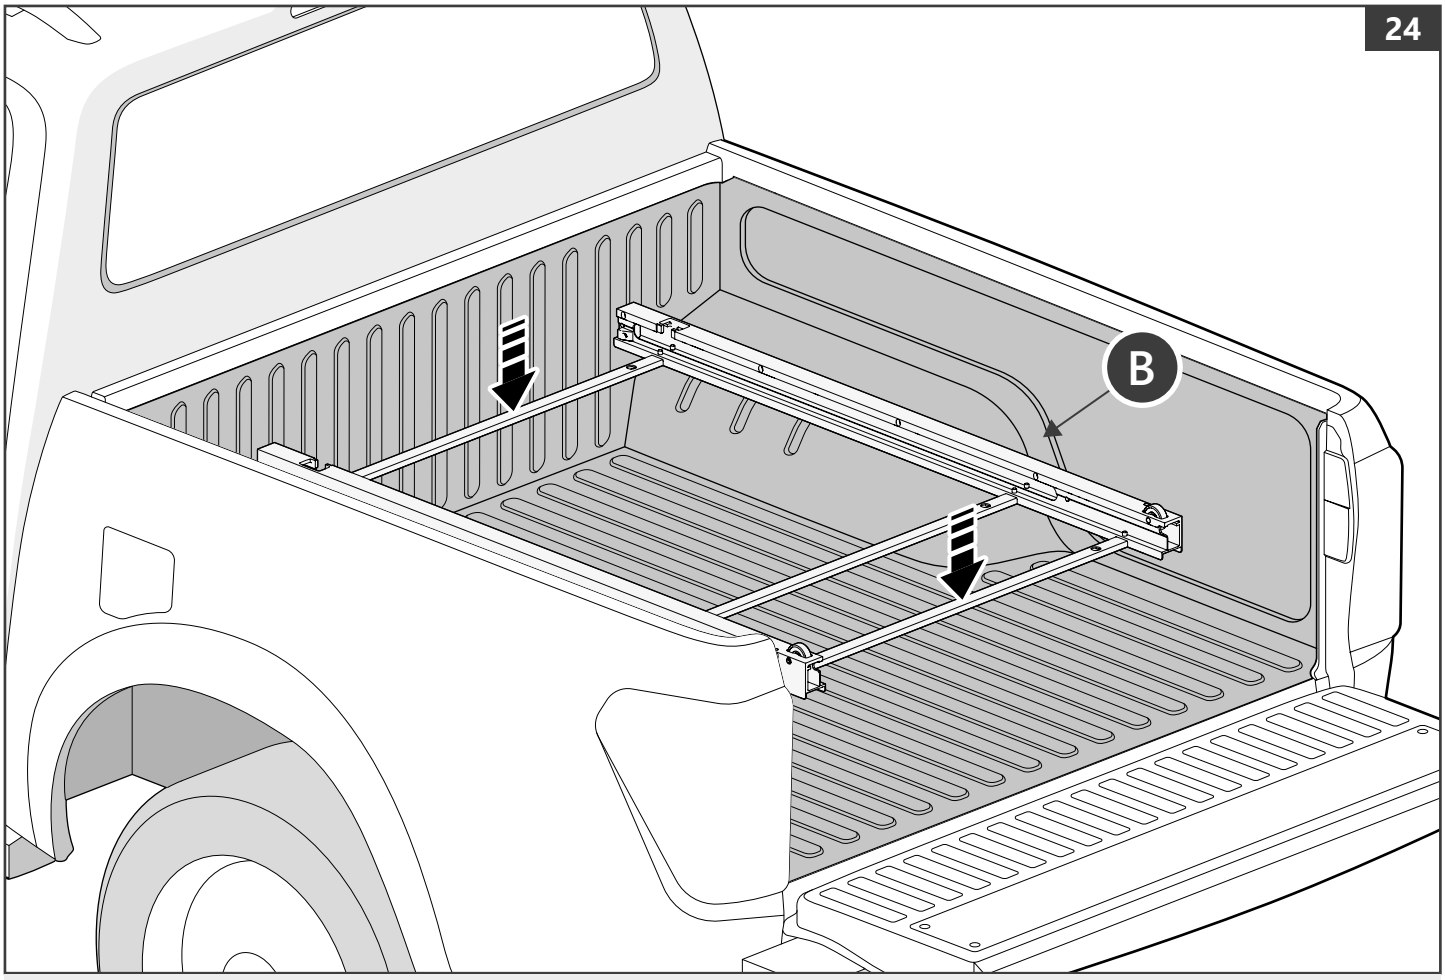
24
B

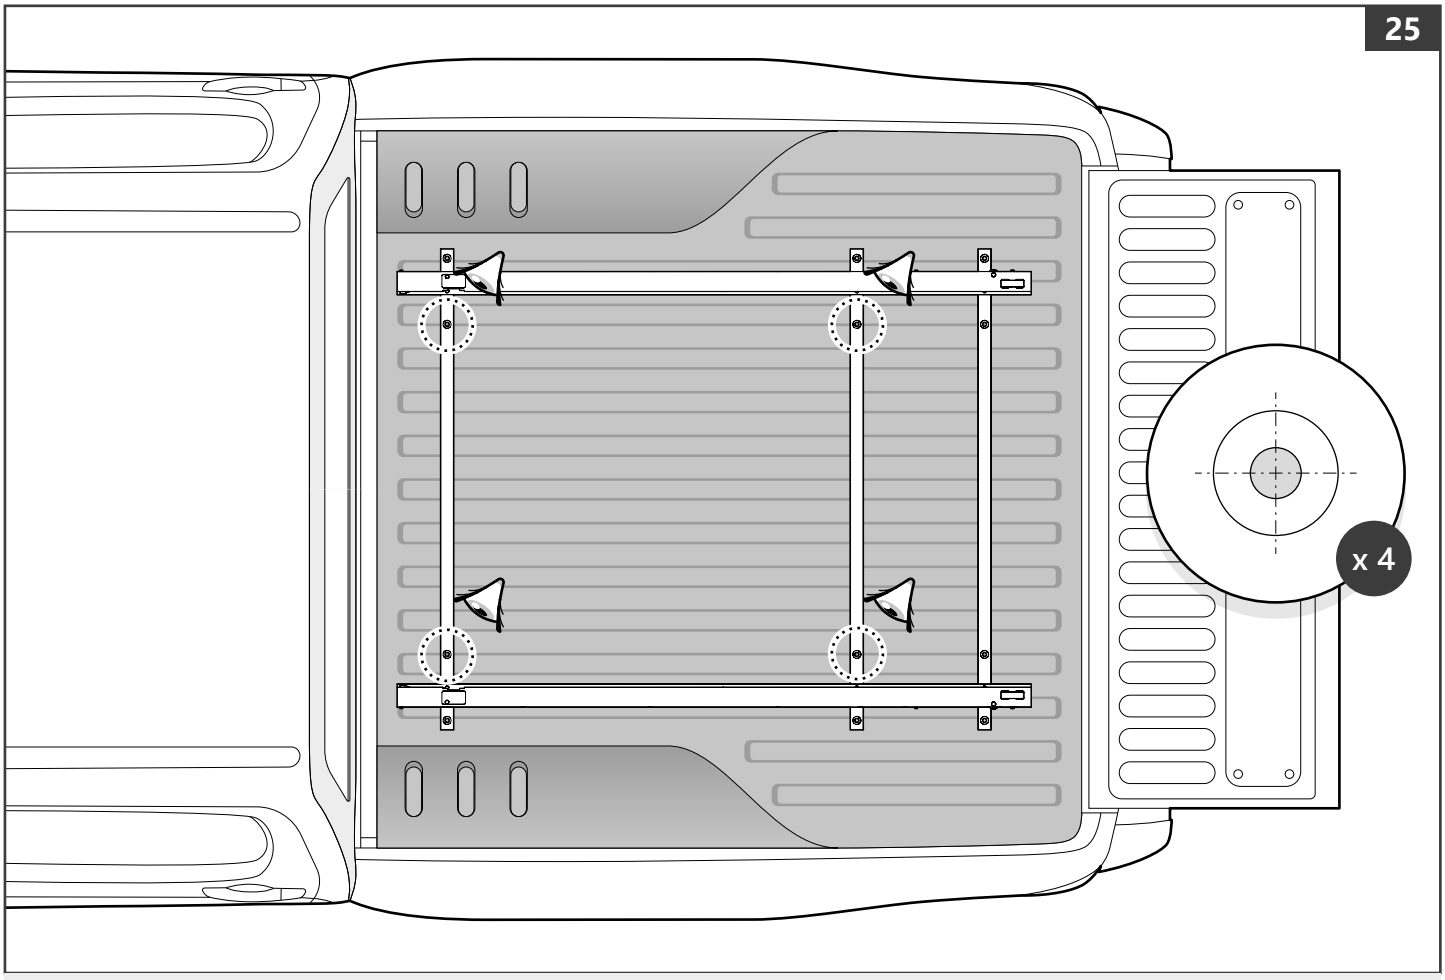
25
x 4

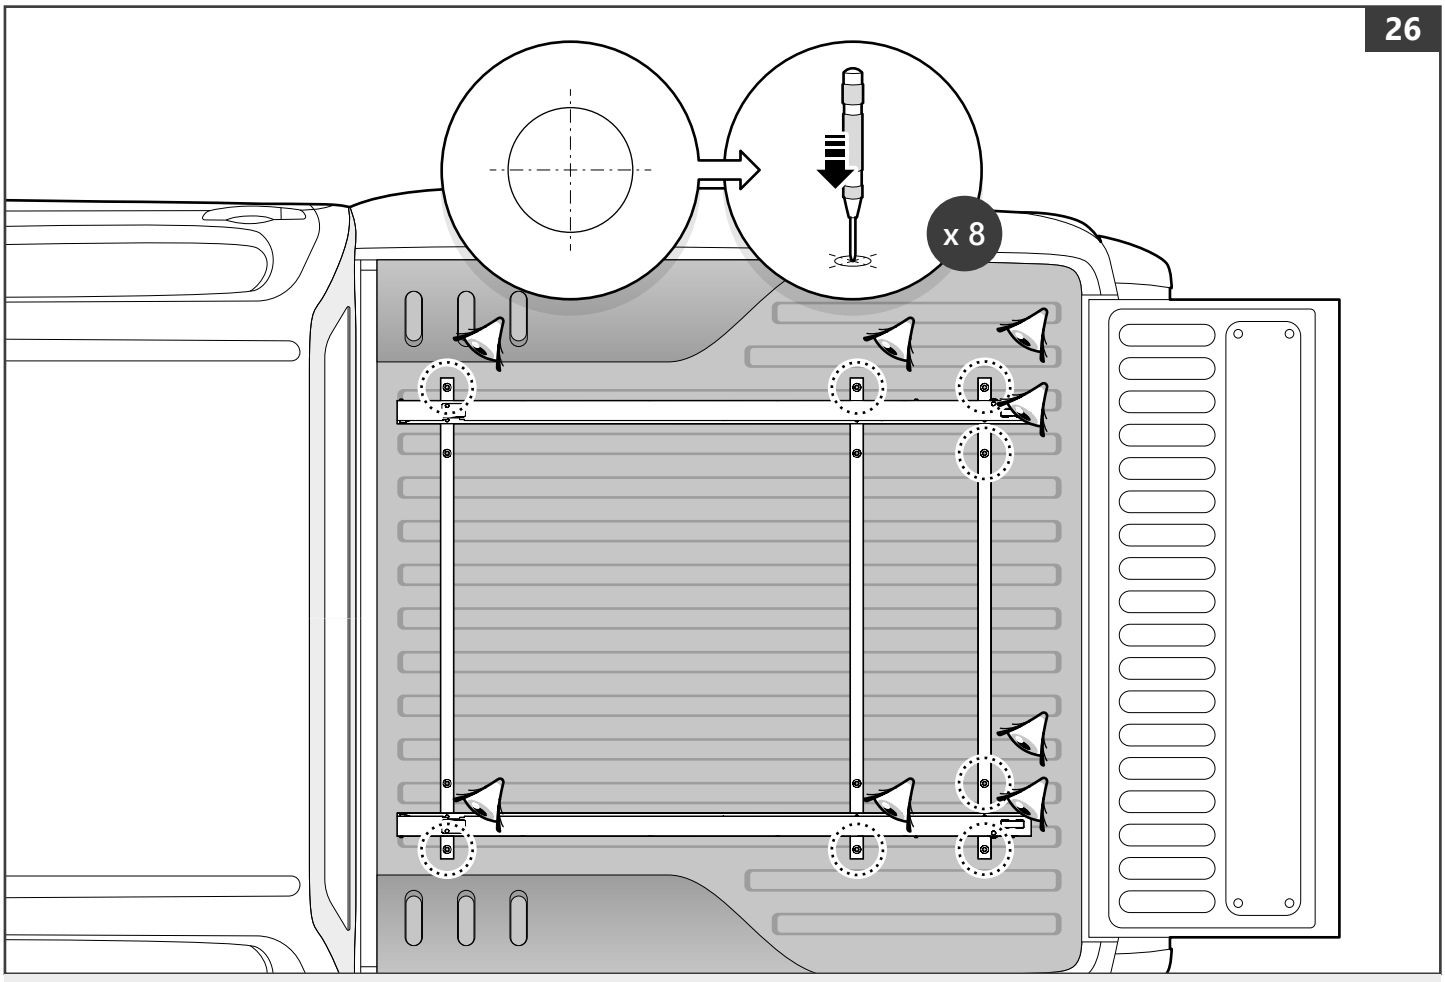
26
x 8

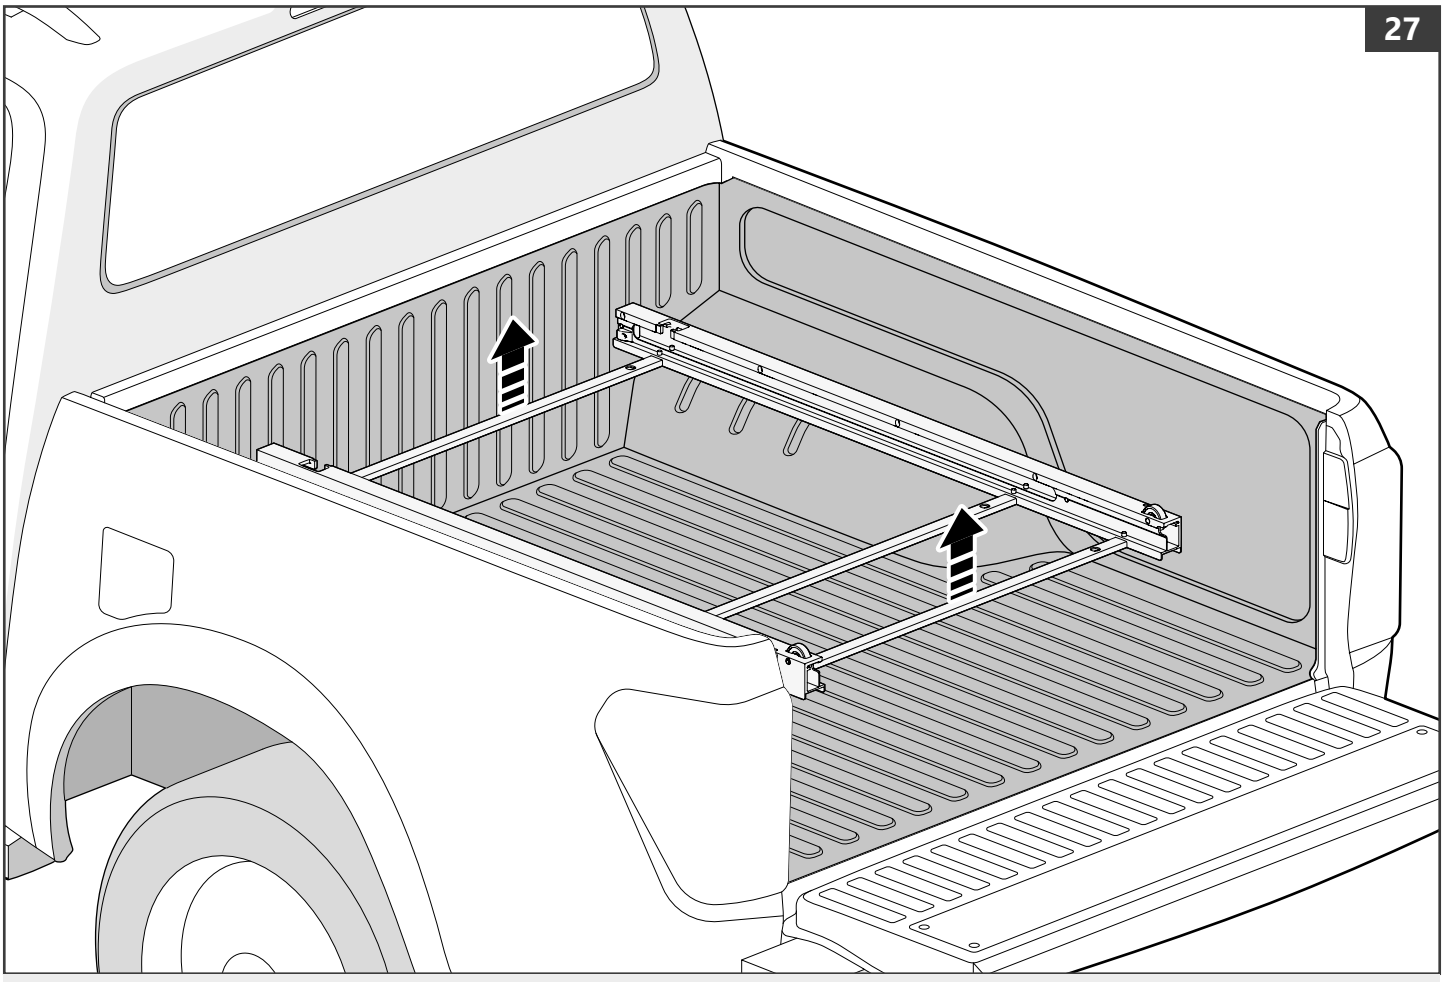
27

28

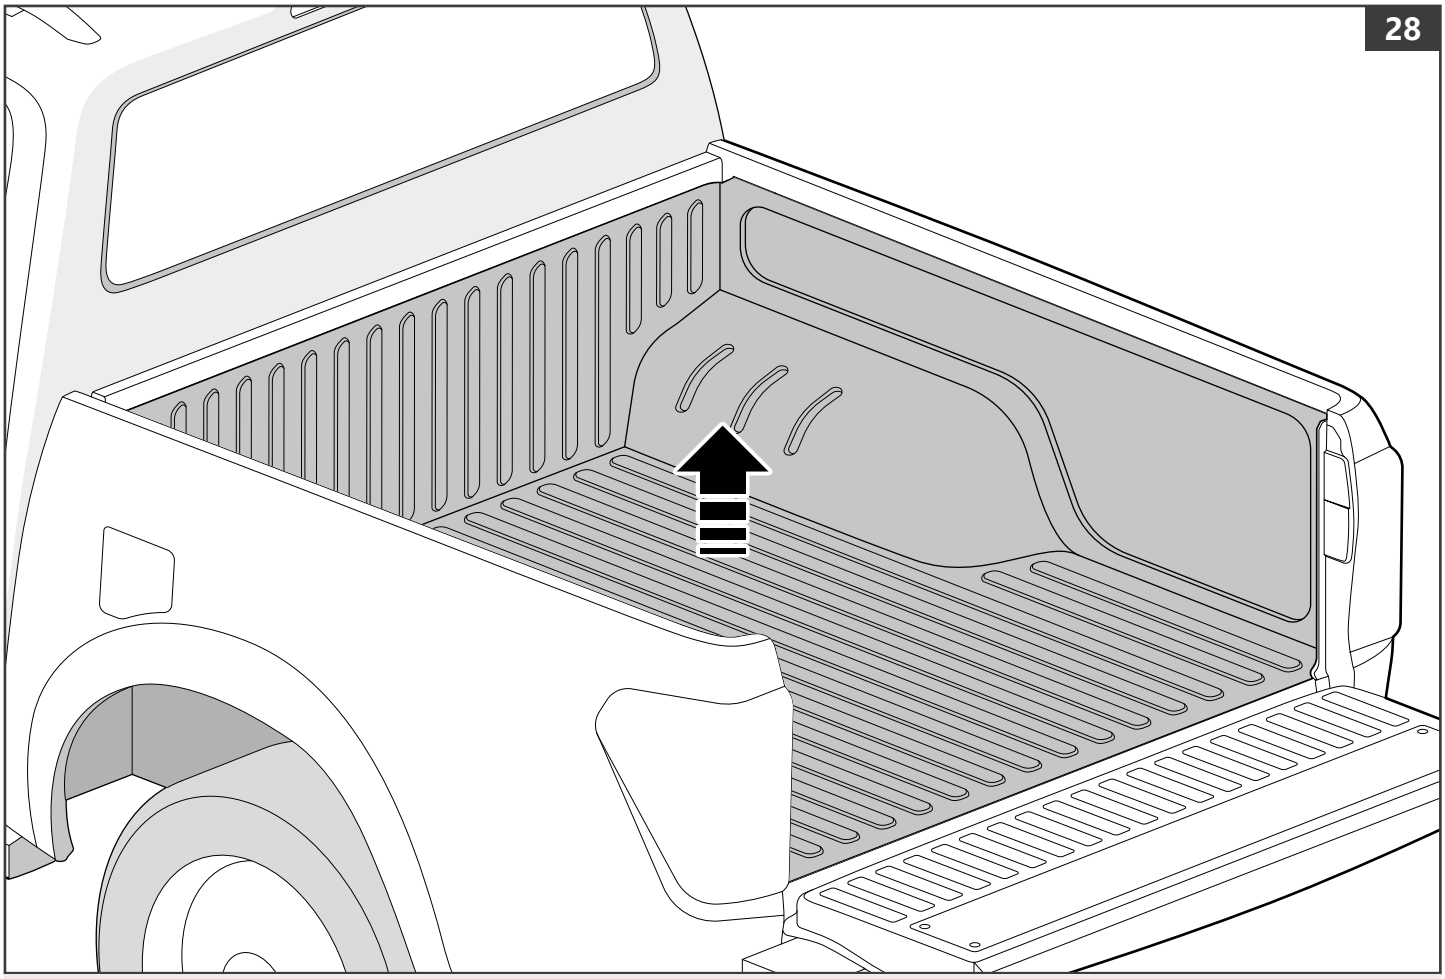

29

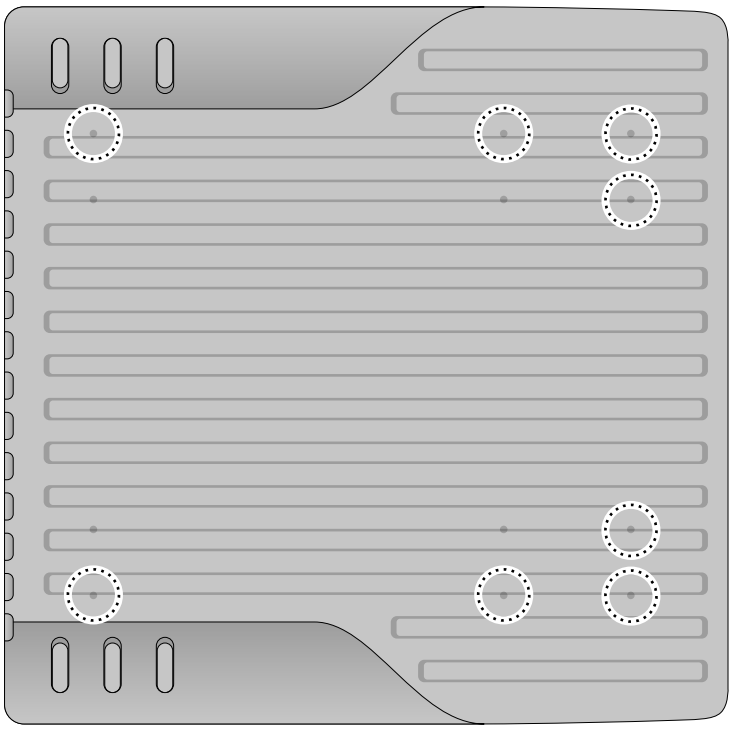

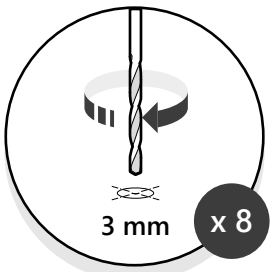

30

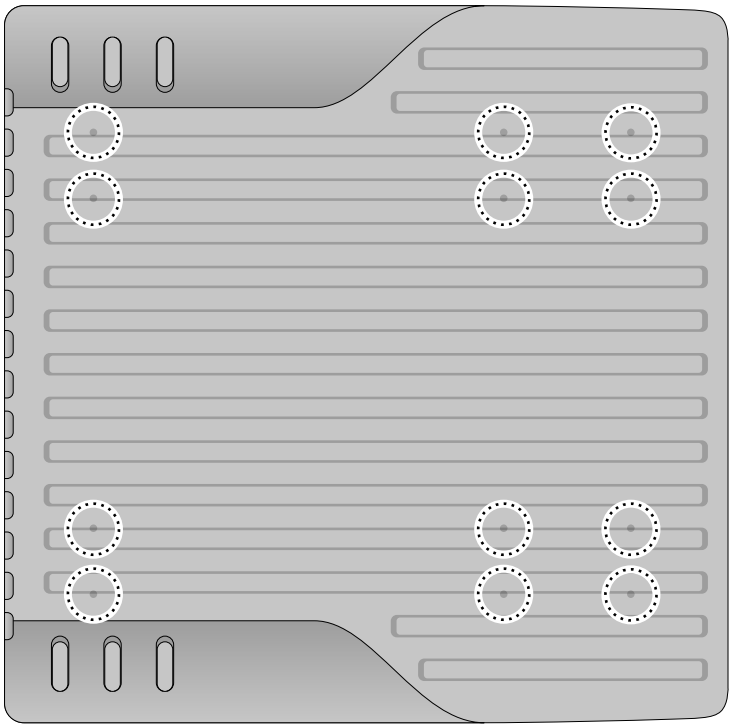

31

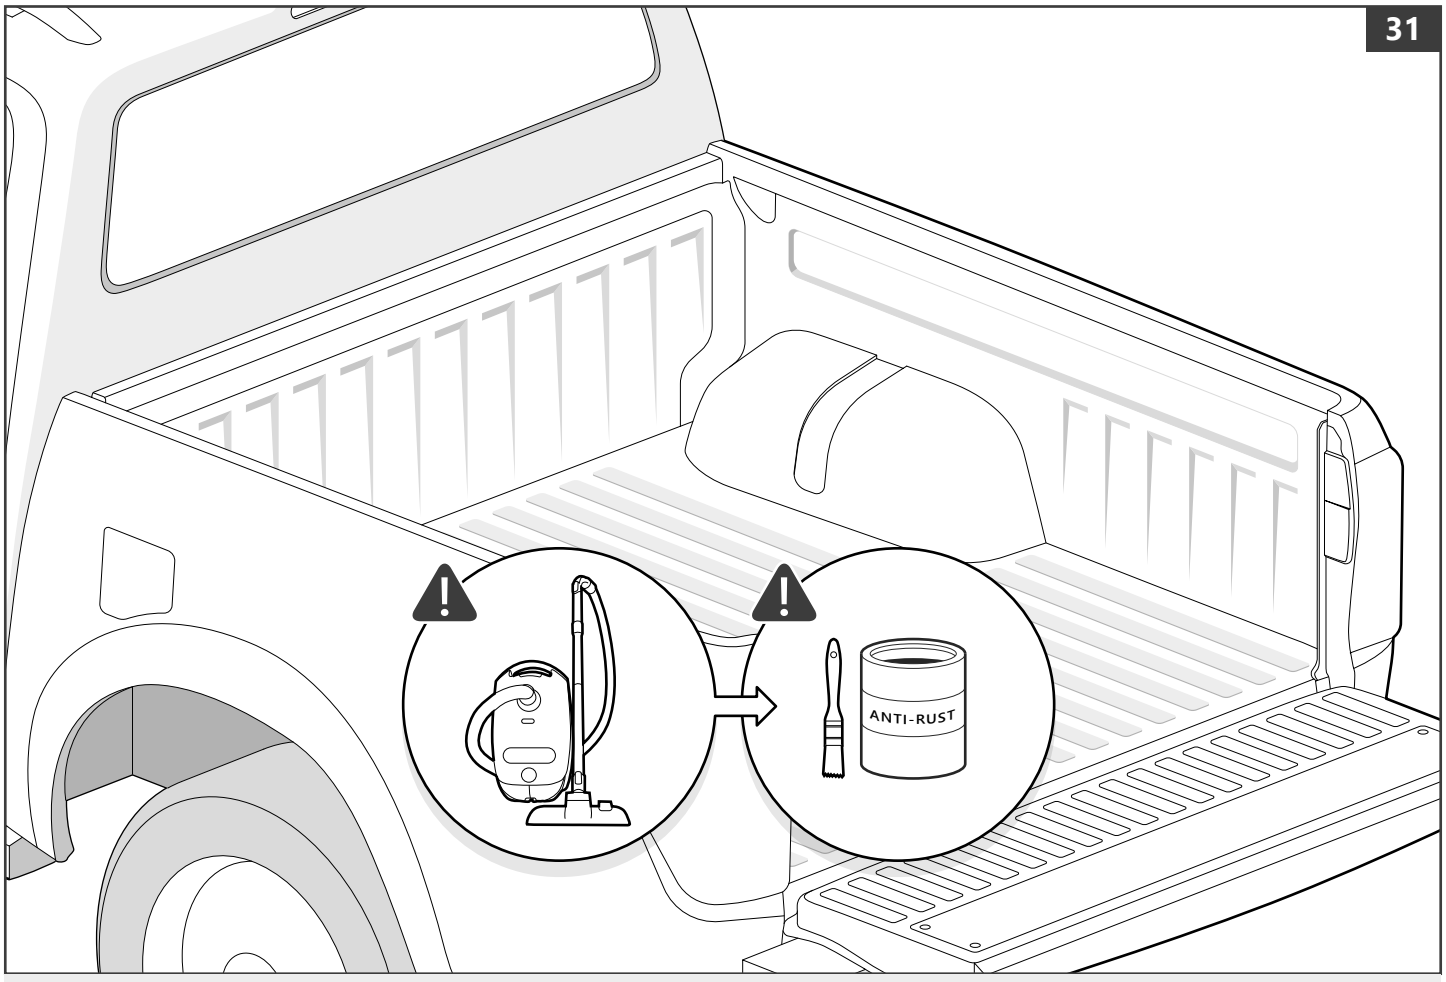

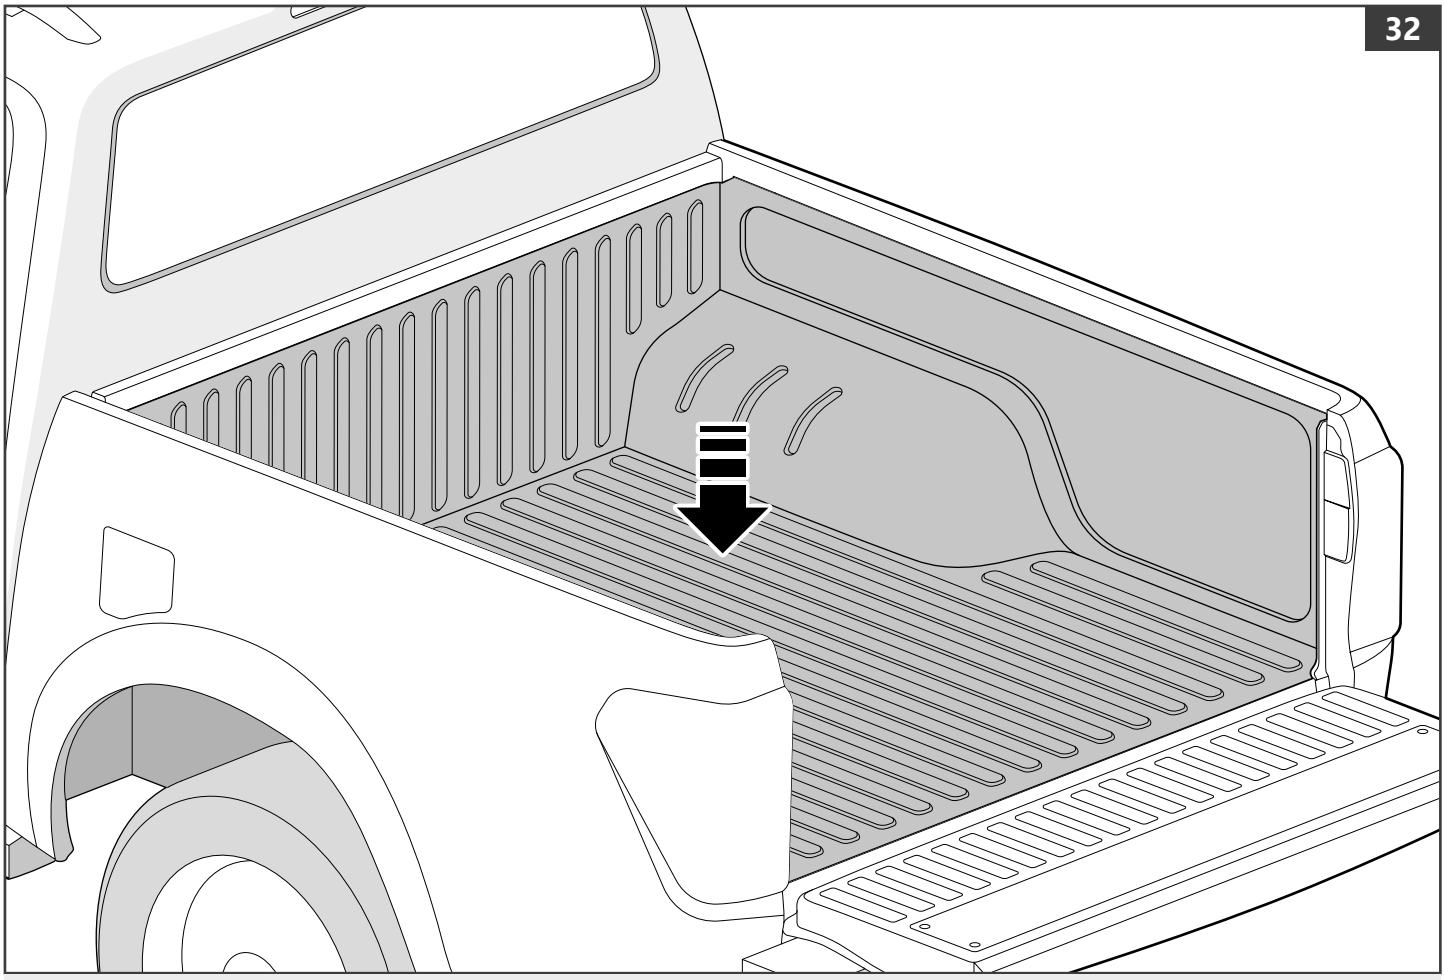
32

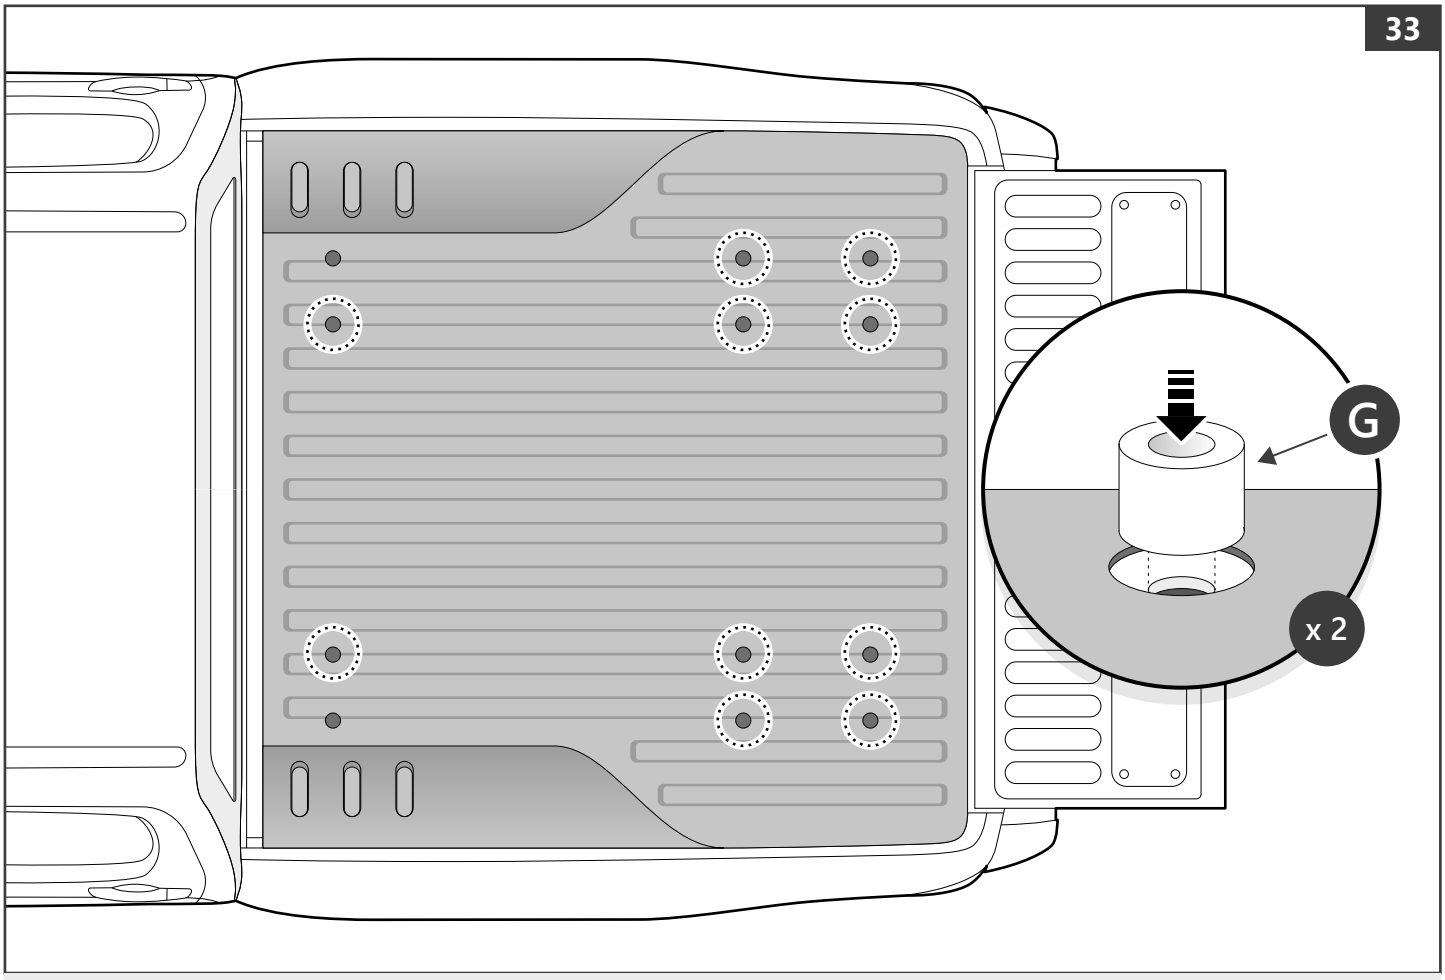
33
G
x 2

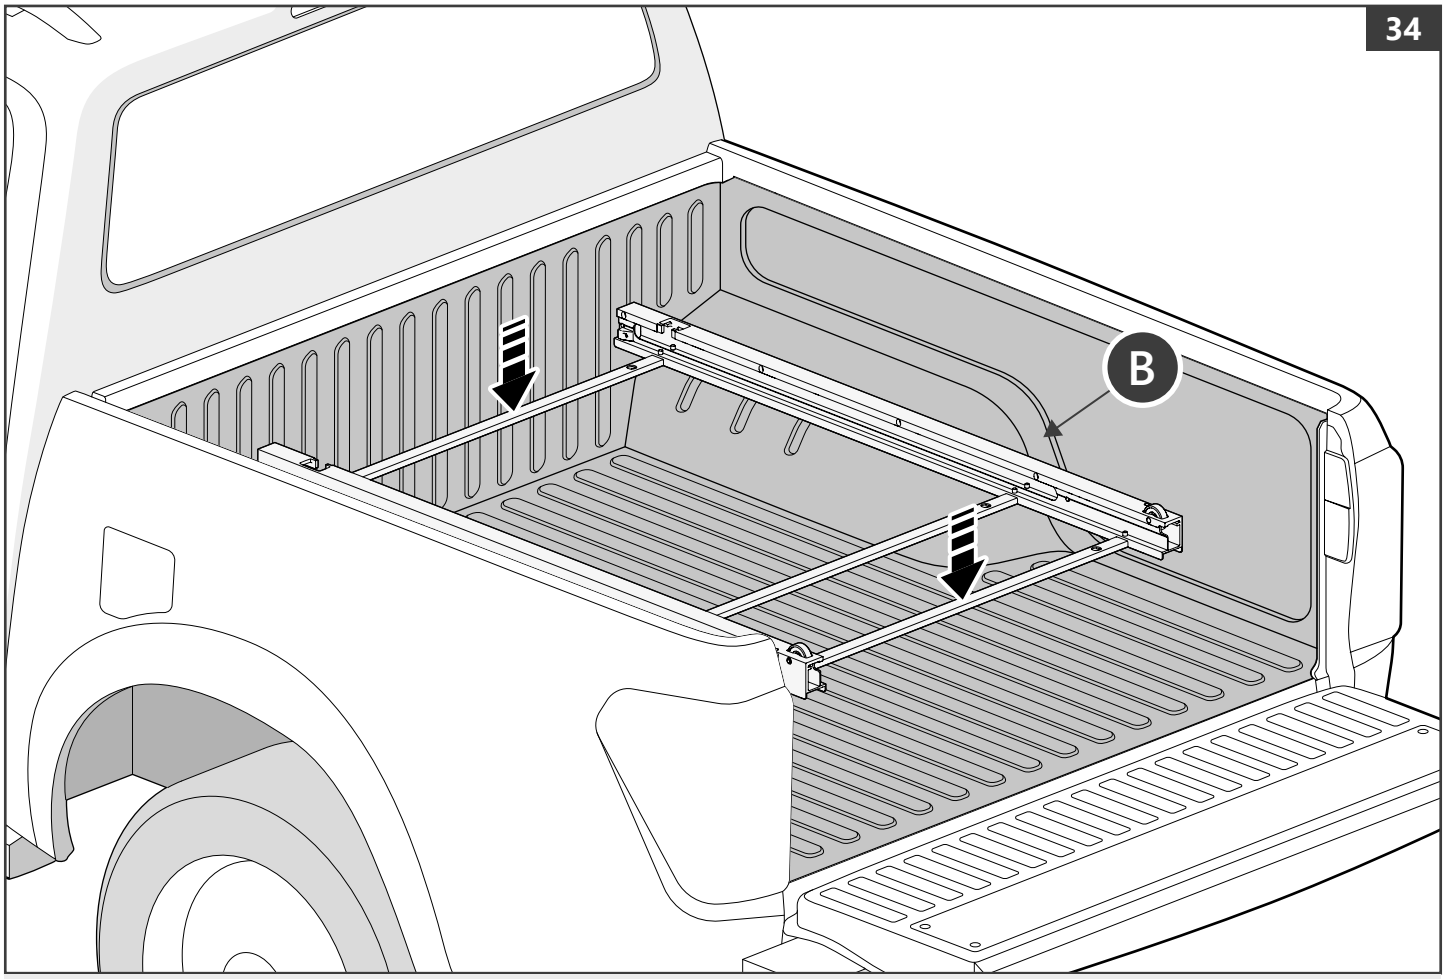
34
B

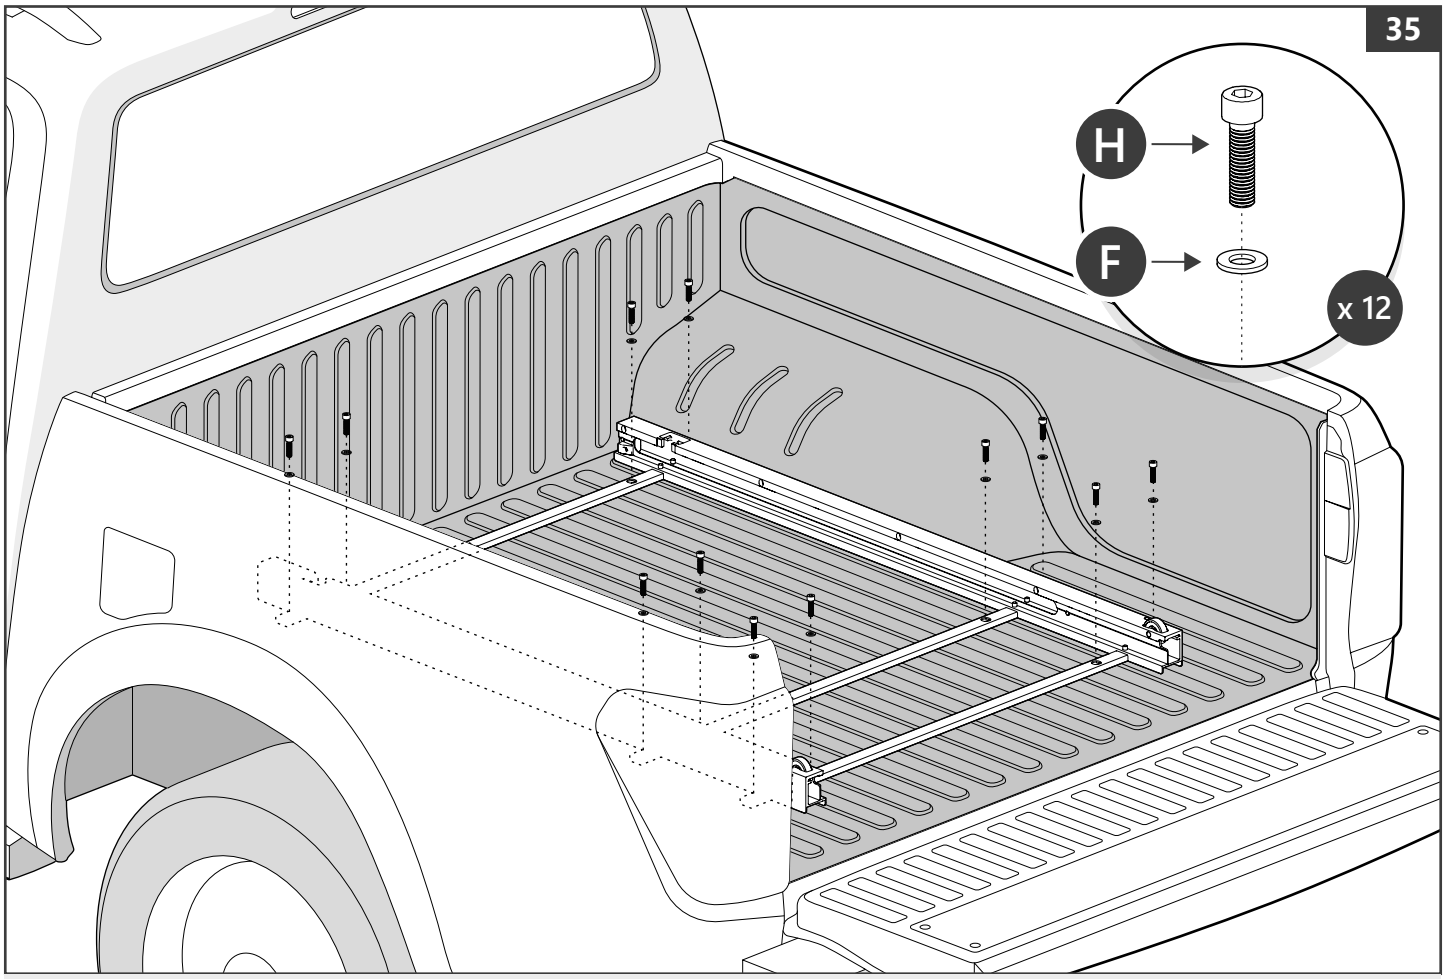
35
H
F
x 12

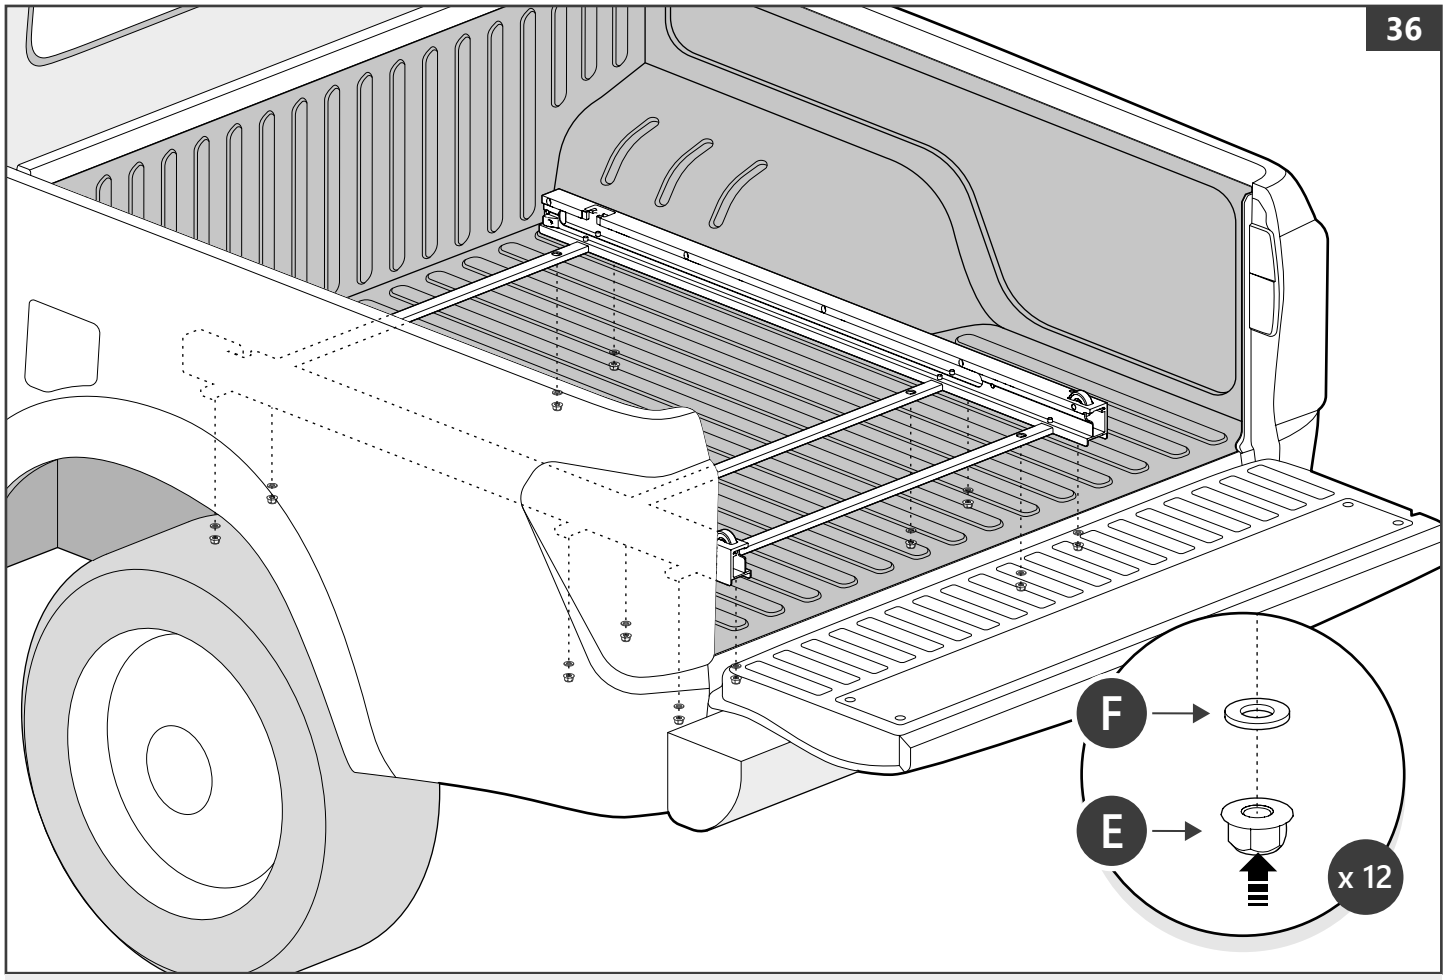
36
F
E
x 12

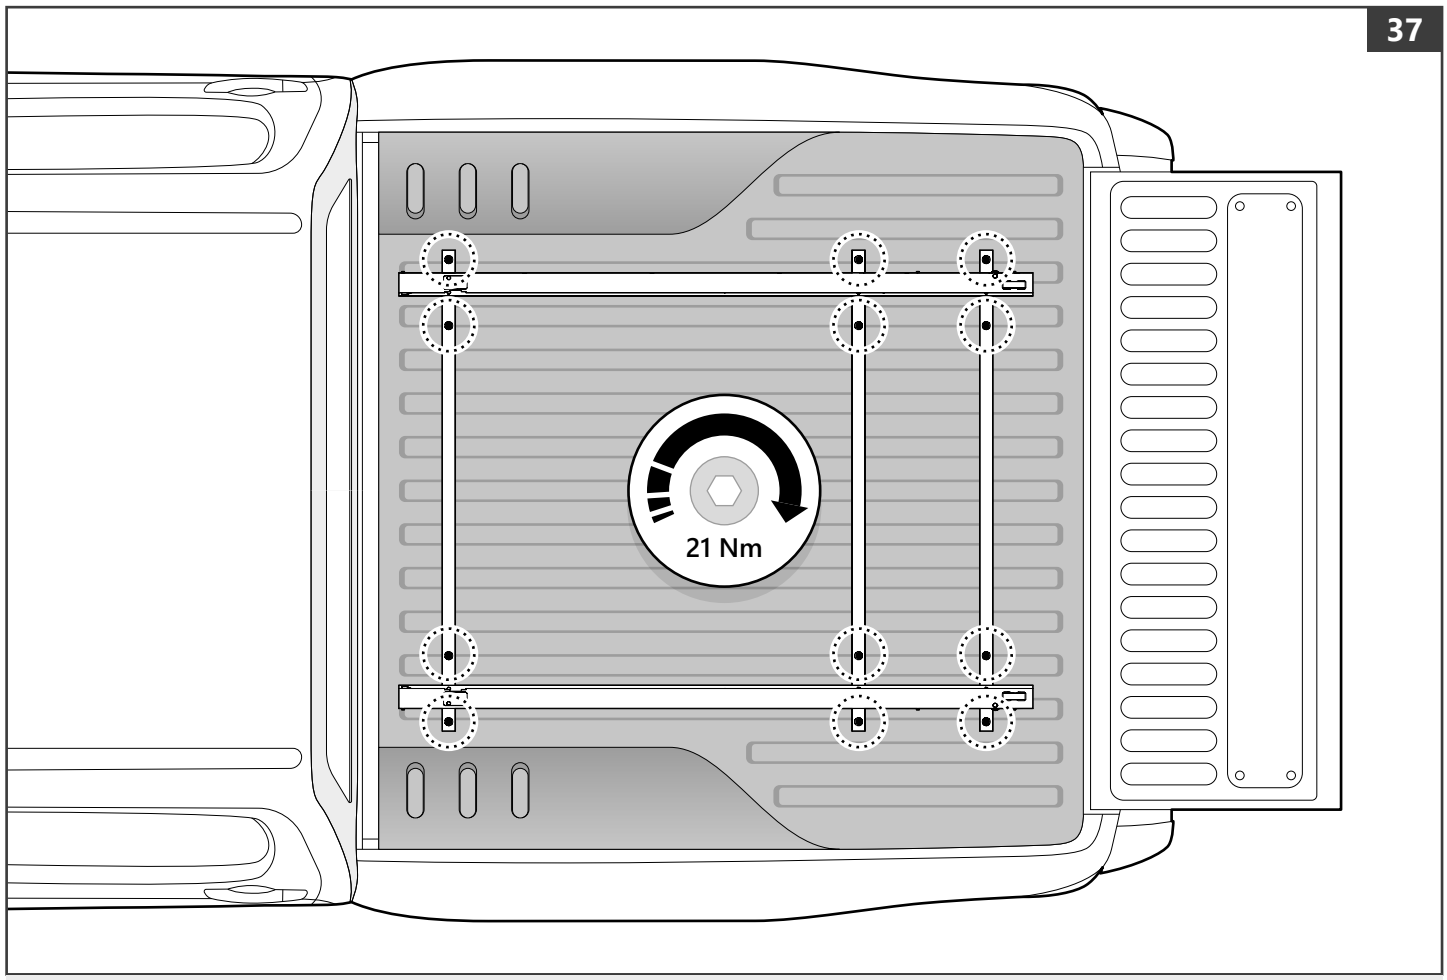
37
21 Nm

38

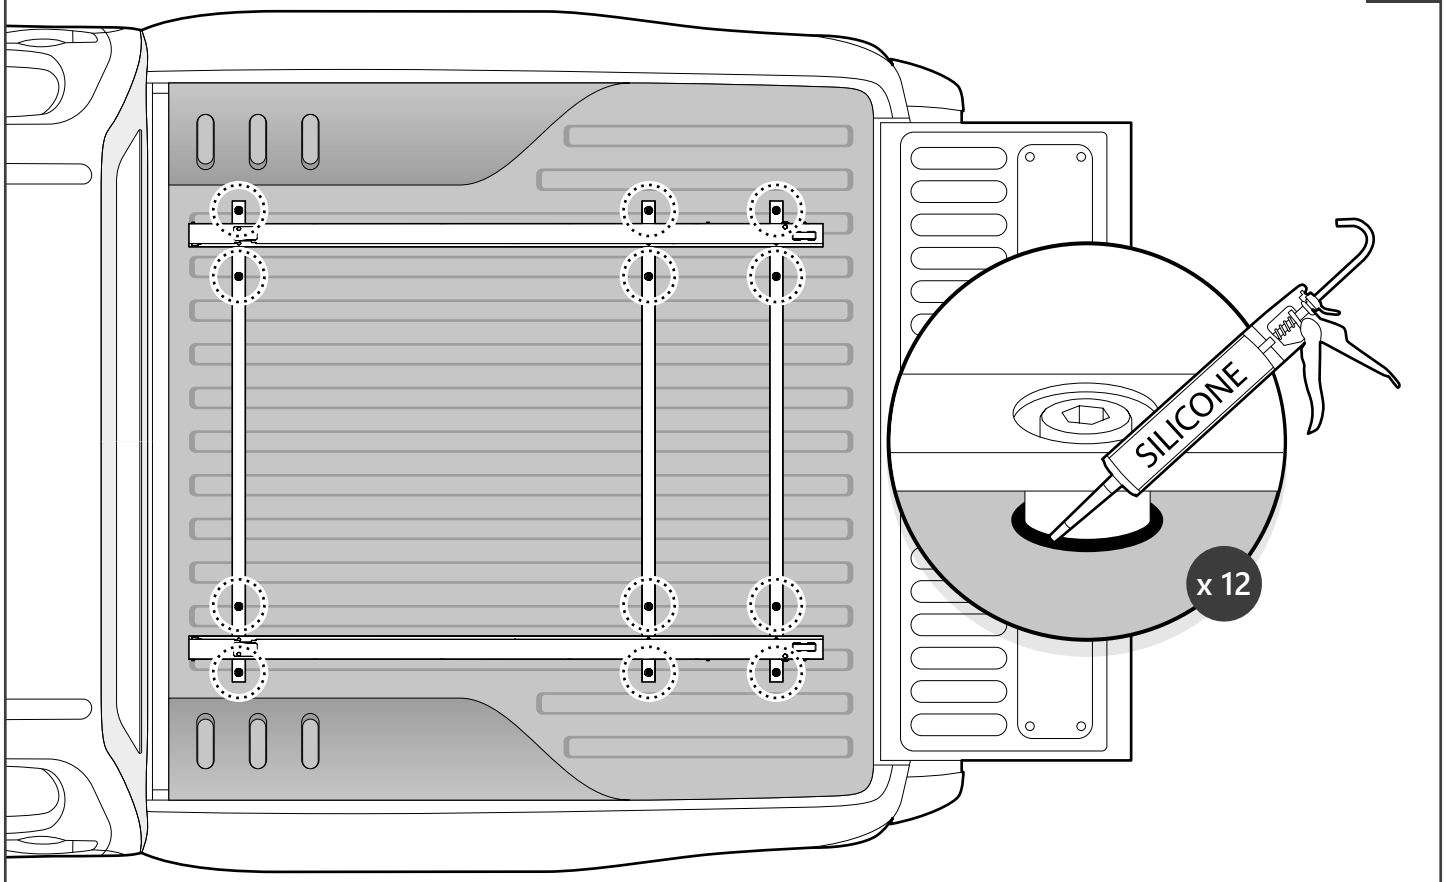

39

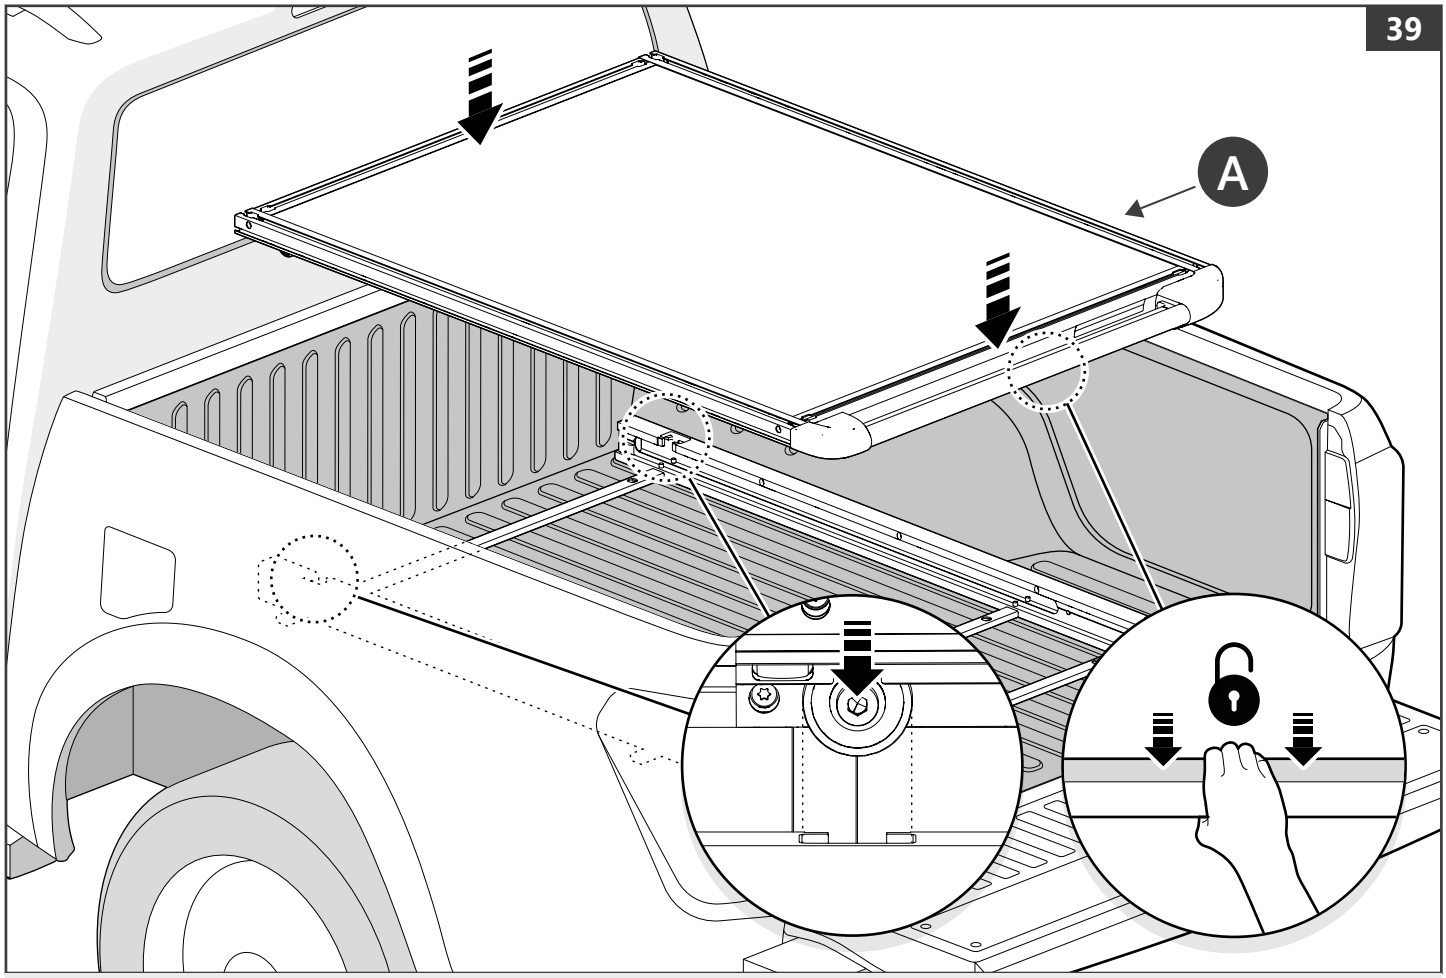

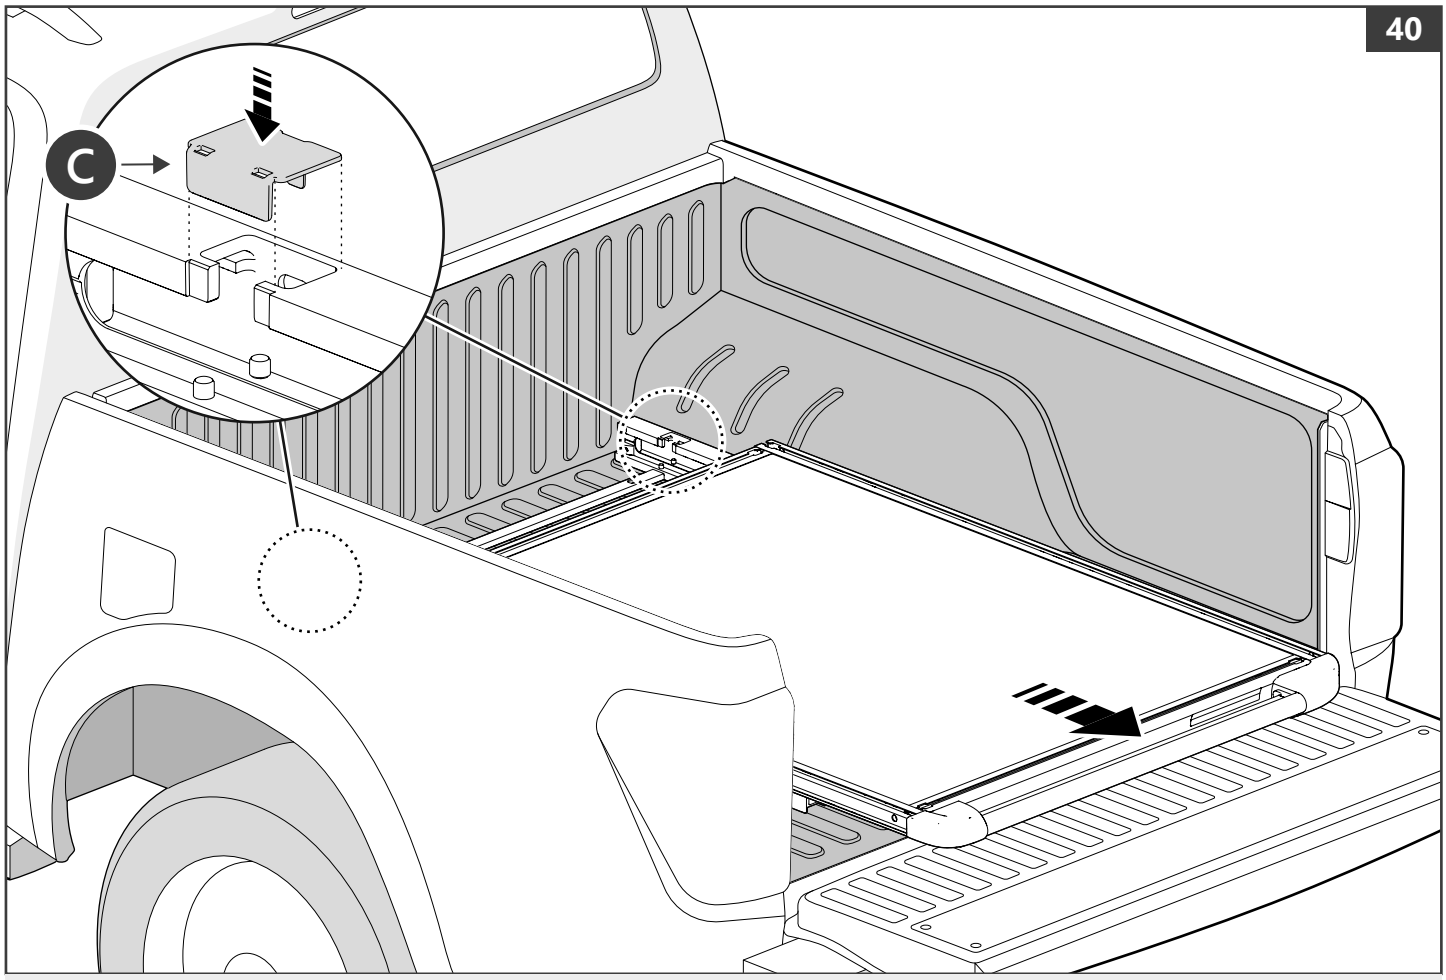
40
C

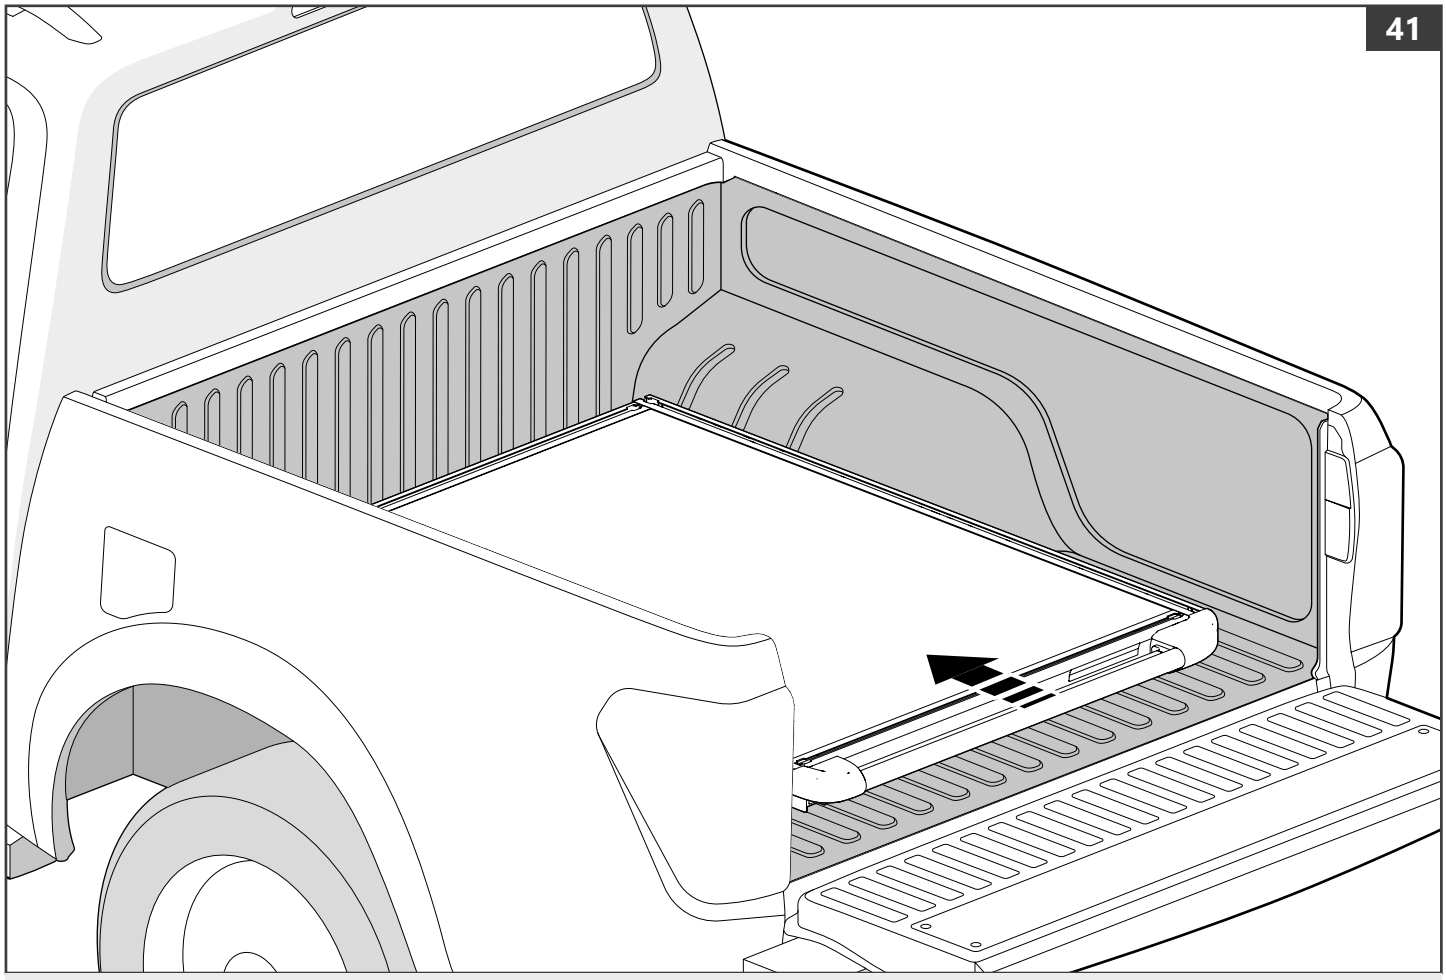
41

Customer Service	+45 4810 2950 (08:00 - 16:00 CET)
Fax	+45 4810 2960
Support	info@mountaintop.dk
Website	www.mountaintop.dk
Address	Pedersholmparken 10, 3660 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTS NI91	Nissan / 2015 →	King	1 hour(s)	37 Kg
MTS VW80	Volkswagen / 2010 →	Double	1 hour(s)	33 Kg
MTS RE91	Renault / 2017 →	King	1 hour(s)	37 Kg

GB	Installation manual	**S**	Monteringsanvisning	**D**	Einbauanleitung
SF	Asennusohje	**E**	Instrucciones de montaje	**CZ**	Návod k instalaci
F	Notice de montage	**H**	Szerelési utasítás	**I**	Istruzioni de montaggio
PL	Instrukcja montażu	**P**	Instruções de instalação	**GR**	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	**RUS**	Инструкция по установке	**DK**	Monteringsvejledning
TR	Montaj Talimatı	**N**	Monteringsveiledning	**RO**	Instructiuni de instalare