

Installation Instructions:

MV1

VW AMAROK DUAL

1555mm BED LENGTH

2010-CURRENT

TOOLS REQUIRED

- Adjustable wrench (that opens to about 1")
- 1/2" open end wrench
- #2 Phillips screwdriver
- Short 7/32" hex wrench
- 7/16" deep socket
- 3/8" socket
- T40 Torx driver
- Electric drill
- 3.5mm drill bit
- 9.5mm drill bit
- Drill stop
- Depending on truck year, you will need a 12 point M10 socket -or- a 12 point M10 bit
- Self etching primer

Watch installation videos at www.DECKED.com/video

FOLLOW US:



@DECKEDUSA | #DECKEDUSA


VERSION 1

DECKED.COM | SERVICE@DECKED.COM | 1-208-806-0251

3). If you know it, see NOTE.


NOTE* Two extra threaded inserts are included in BAG
PREP-EXTRA. That's all you get.

▼ ASSEMBLY OVERVIEW ▼

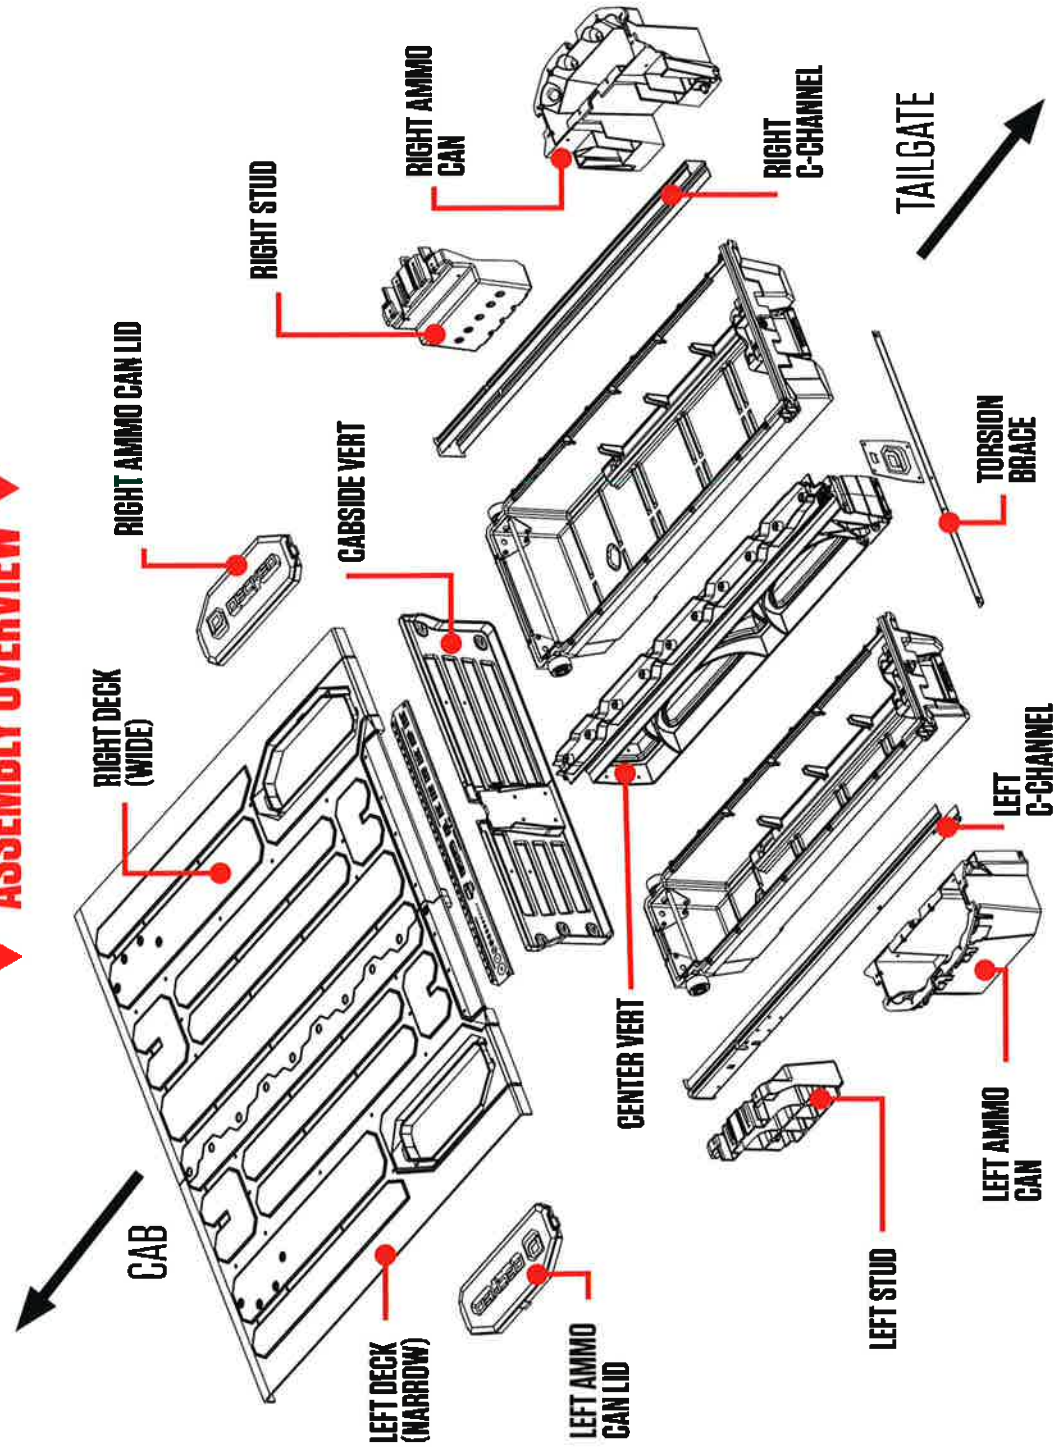

Need Help? Watch our installation videos or email us. We're happy to help!

SERVICE@DECKED.COM | DECKED.COM/VIDEO

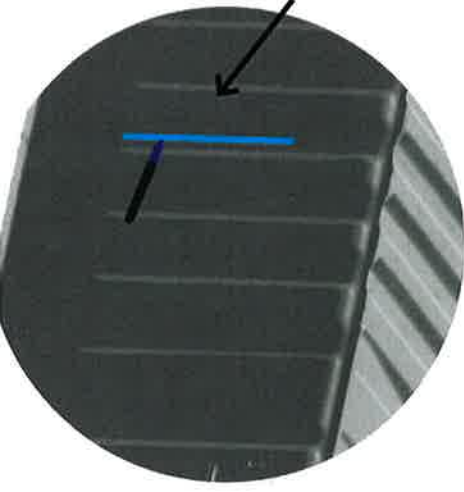


MAKE SURE MARK SITS AT LEAST
14" HIGH (SO YOU CAN SEE IT)




DETAIL A

Align wide shim to channel in floor as shown 165mm from rear edge of bed (red).
Repeat on the right side of bed.

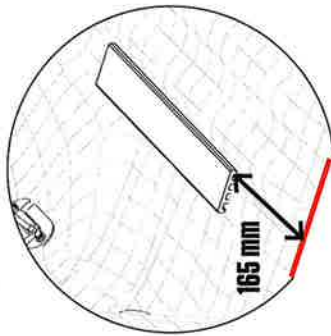


DETAIL C

Align narrow shim to channel in floor as shown 89mm from cabside panel of bed (red).
Repeat on the right side of bed.

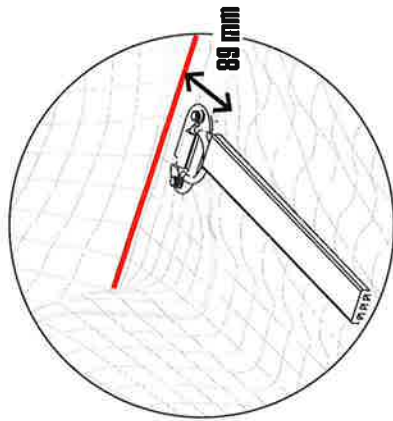



DETAIL D



Align two narrow shims to channels in floor as shown 83mm from cabside panel of bed (red).

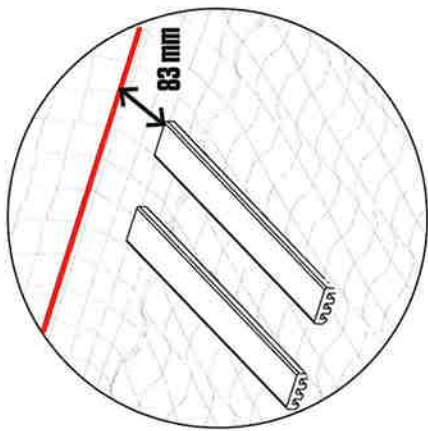

DETAIL B

Align two narrow shims to channels in floor as shown 146mm from rear edge of bed (red).

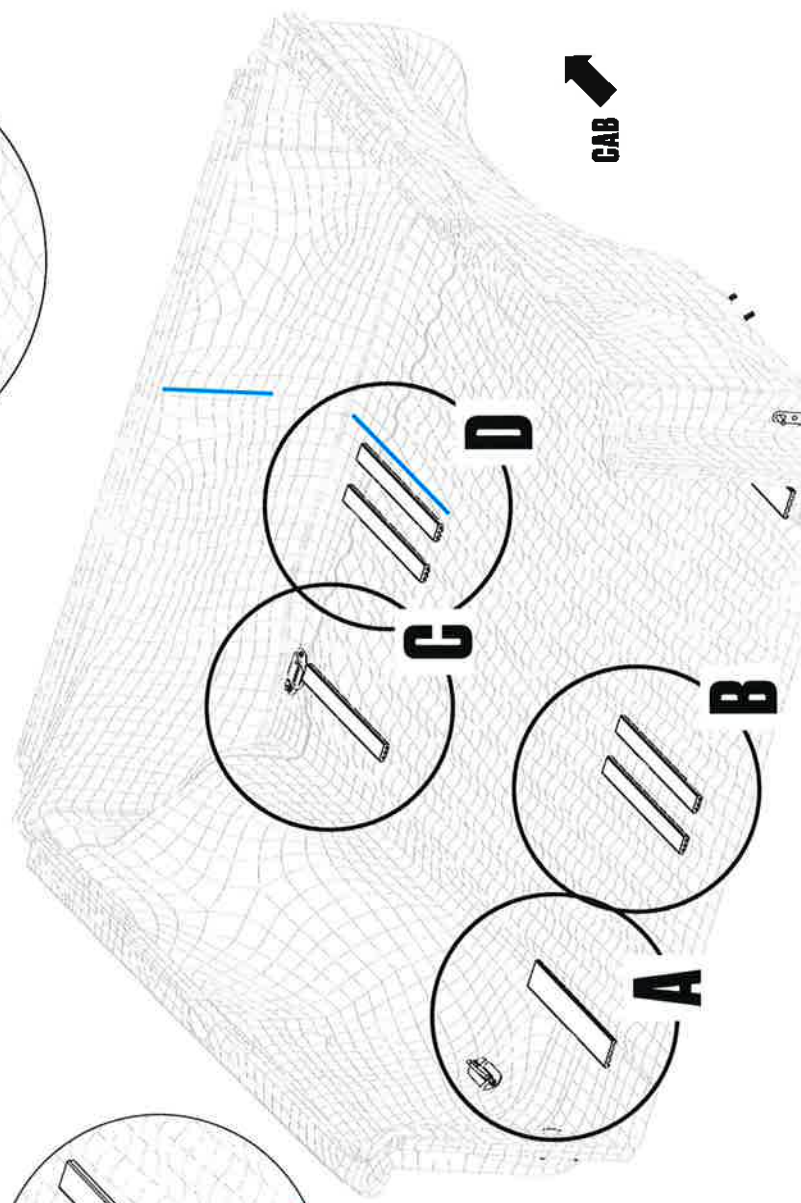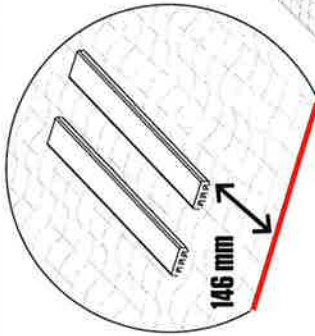

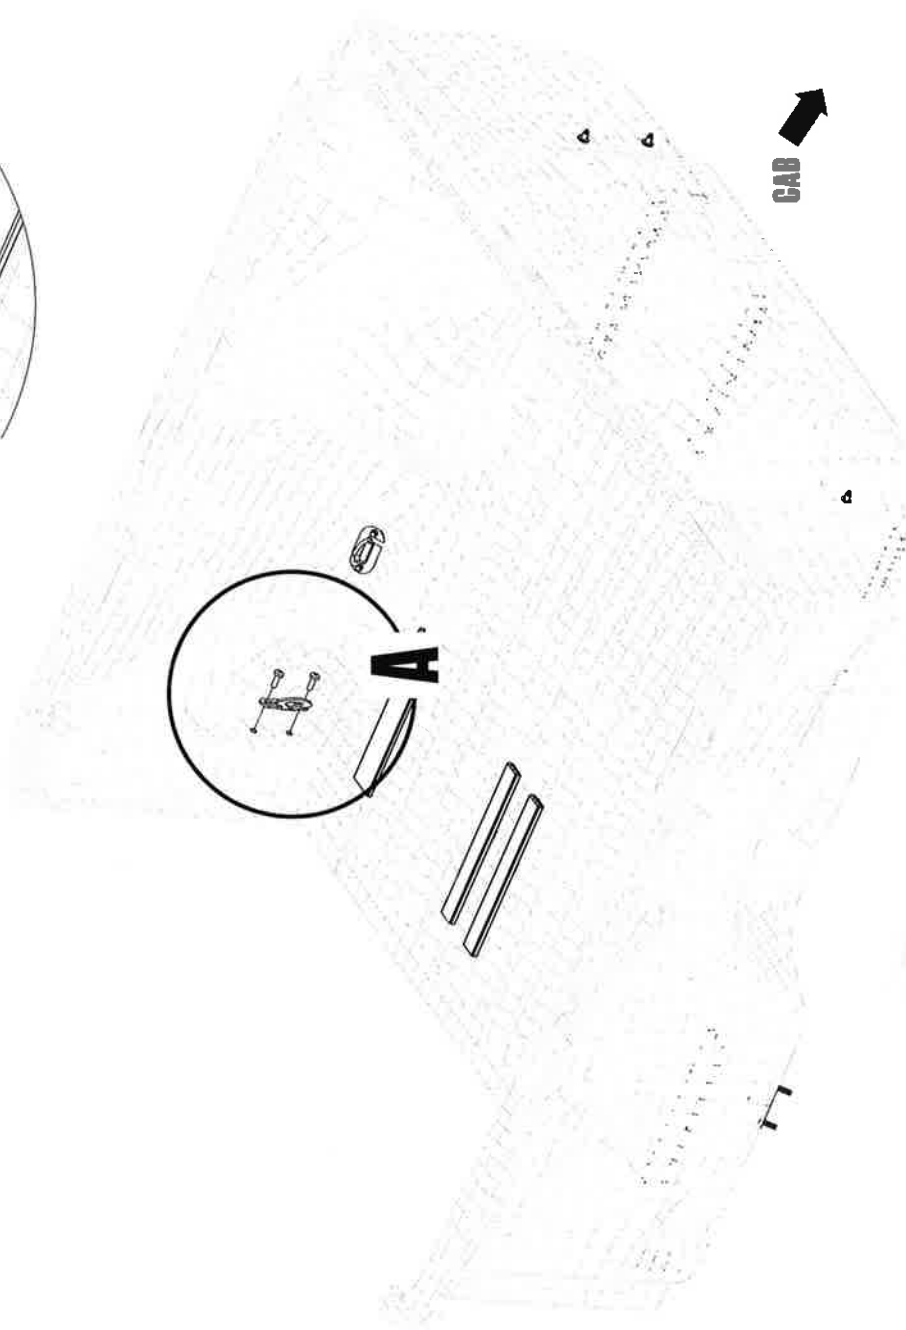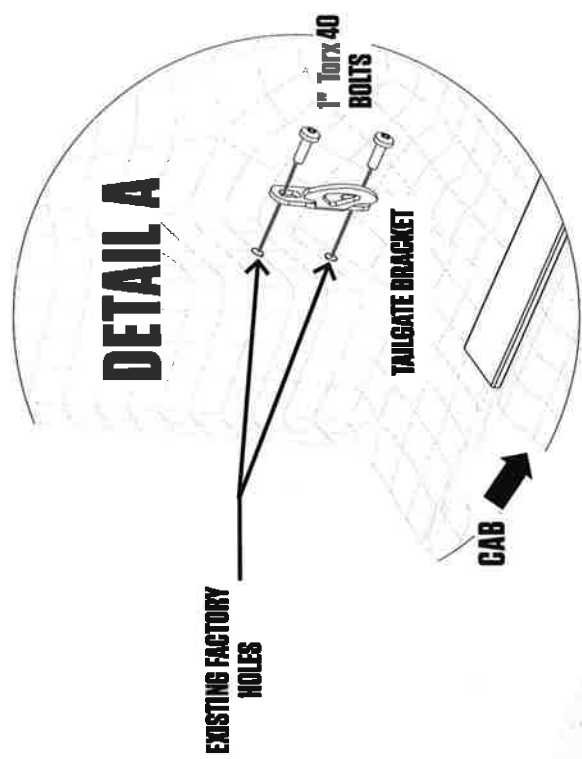


• **DETAIL A:** Push caulk/pracker against caulk/wall and mark two hole locations as shown.



• **DETAIL B:** Repeat steps.

• Remove both left and right cabside brackets and save factory bolts.

DETAIL A

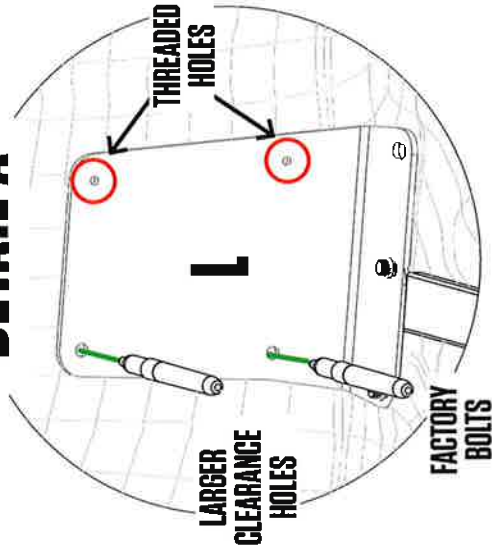


DETAIL B

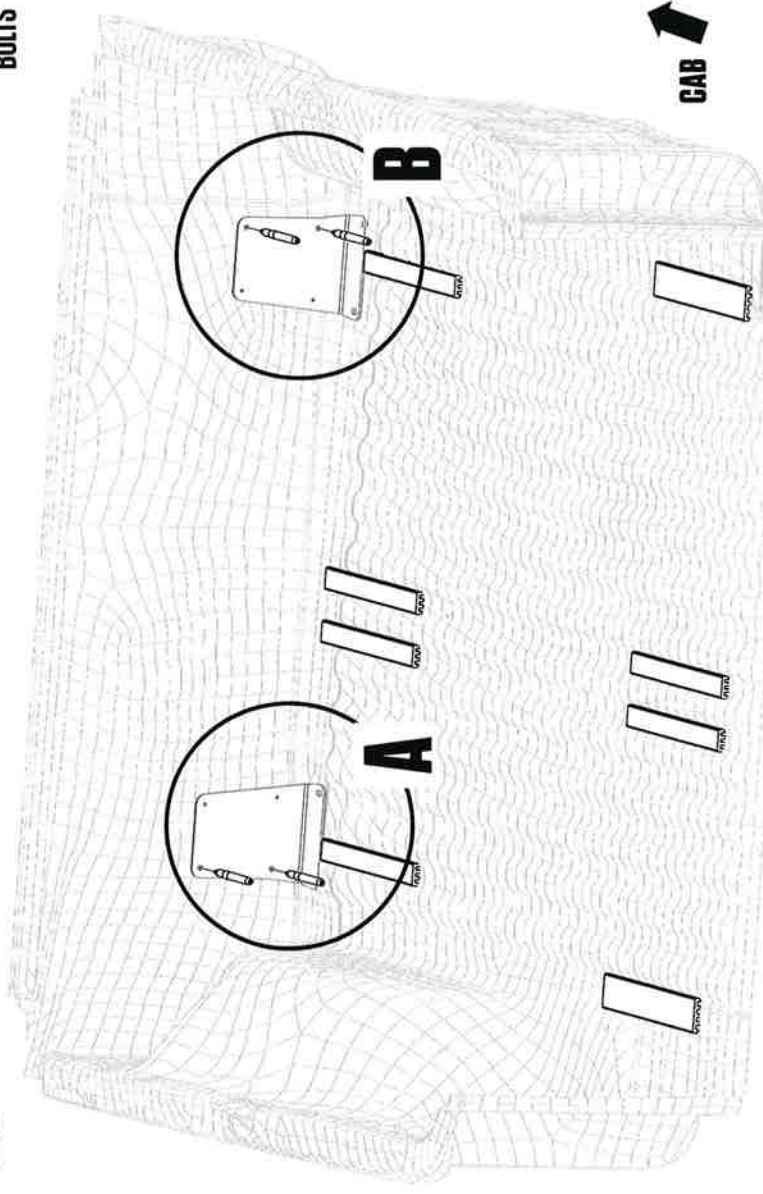
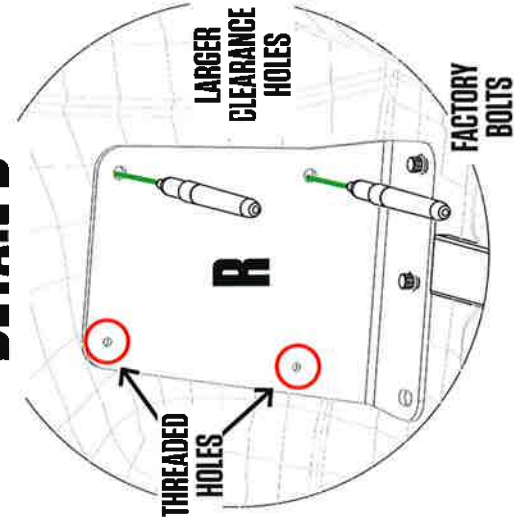


is fully crimped. Remove bolt.


- Repeat on the remaining three holes.

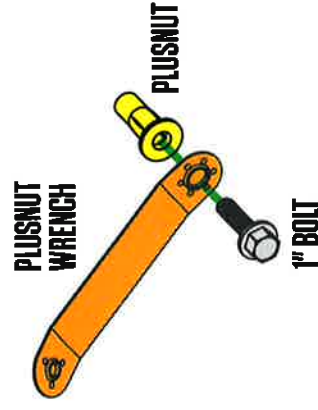



DETAIL A

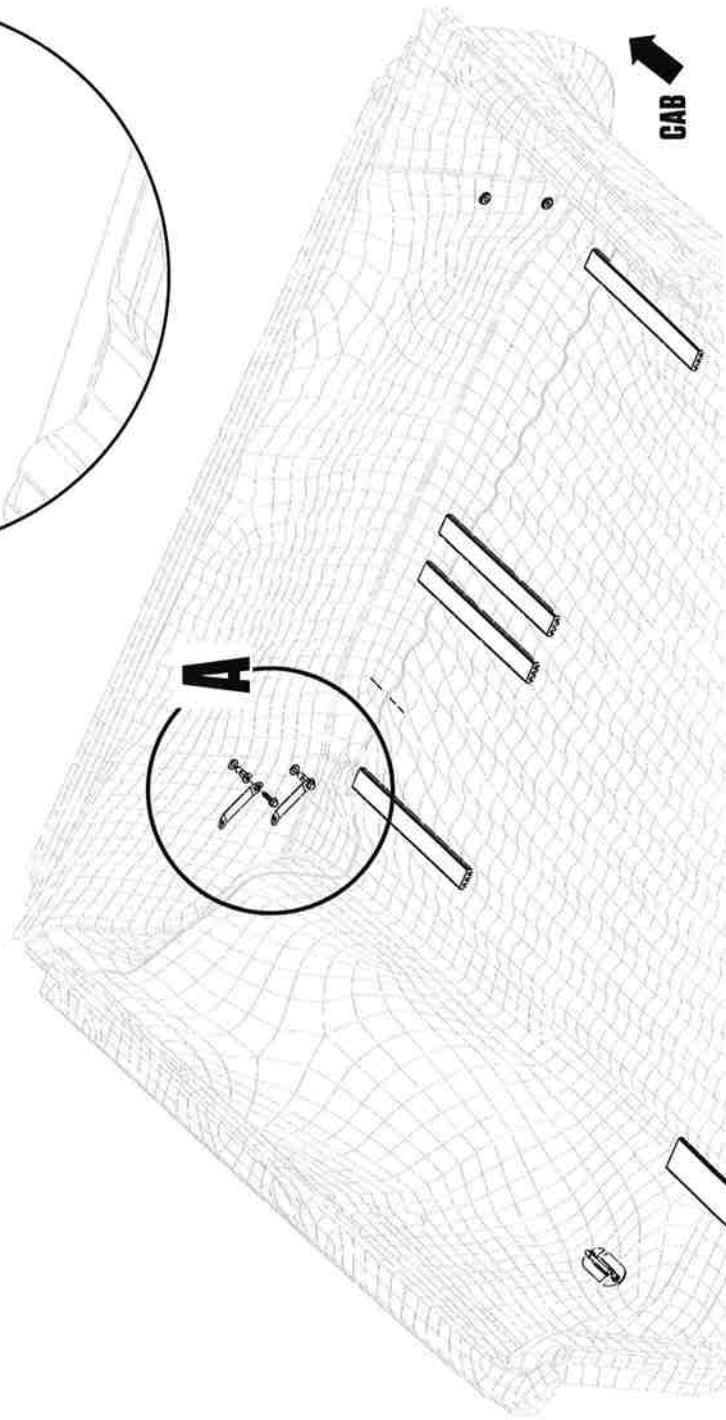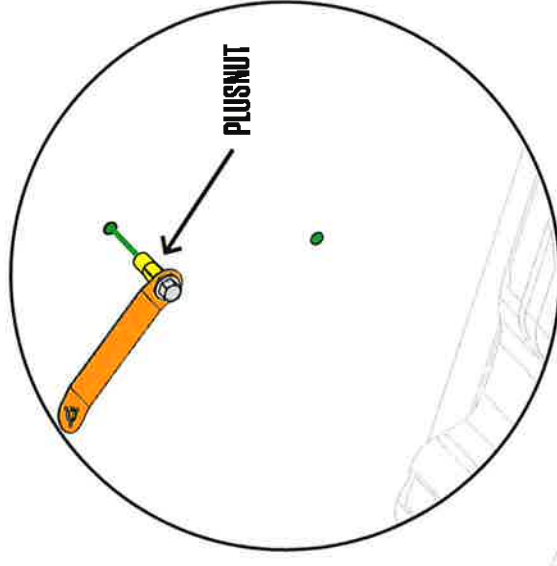




DETAIL A

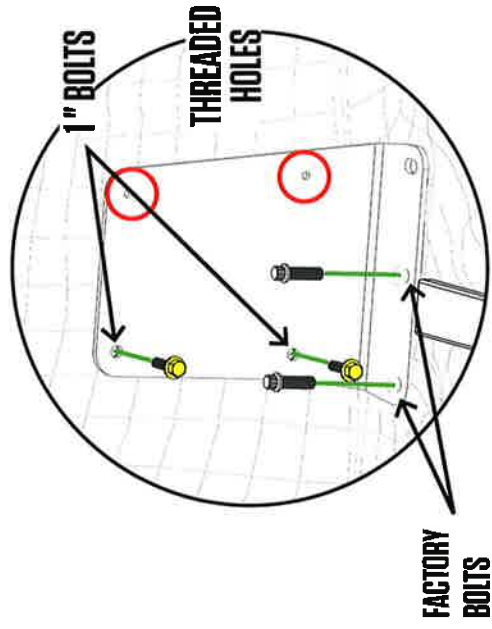

DETAIL B

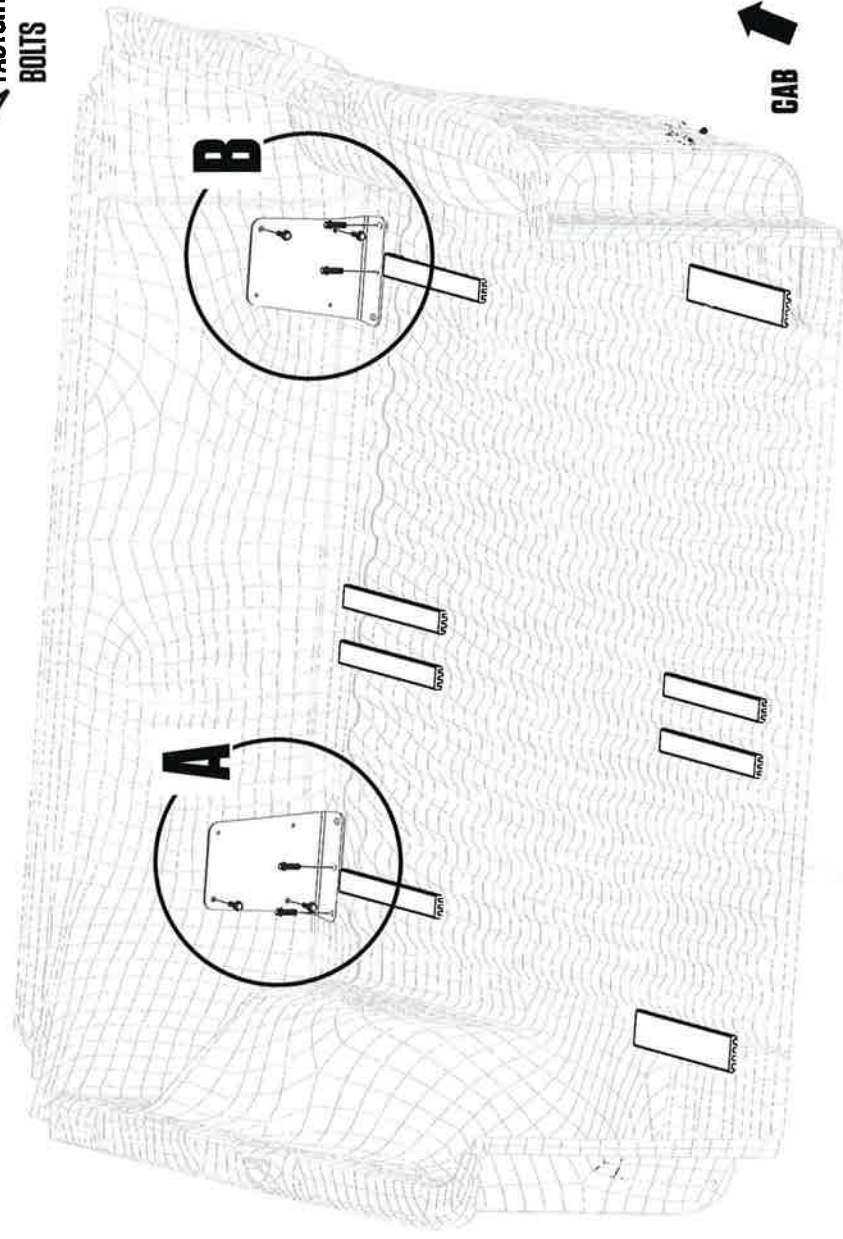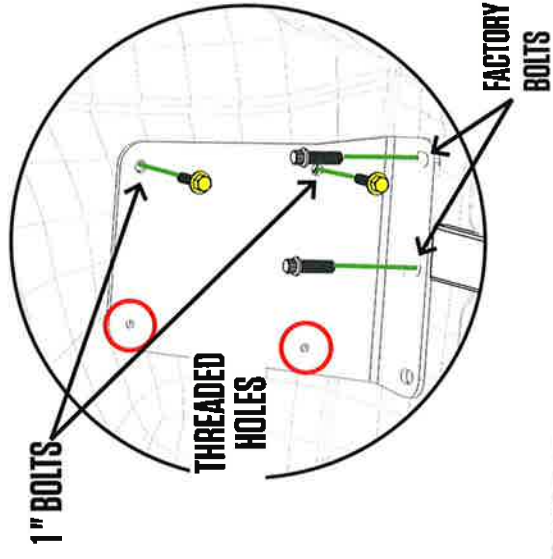


PLACE HOOK ON CENTER VERT
OVER NOTCH IN CABSIDE VERT

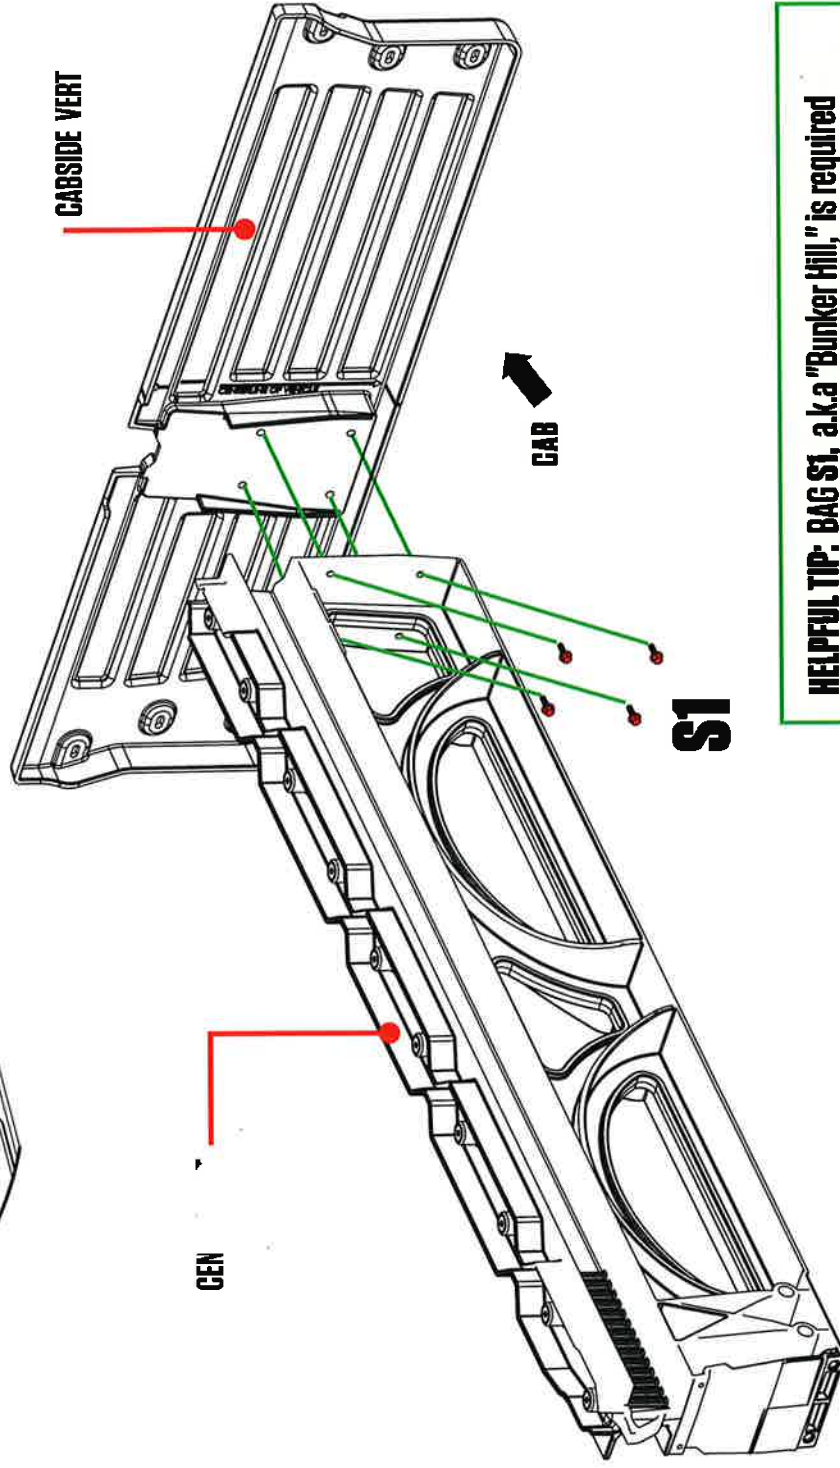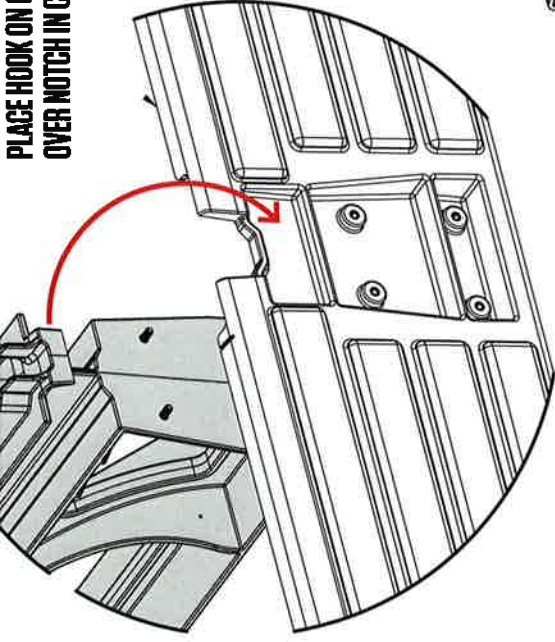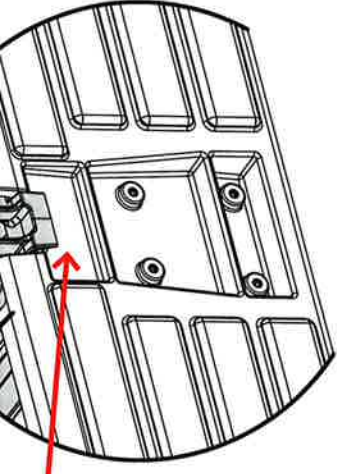


S1



HELPFUL TIP: BAG S1, a.k.a "Bunker Hill," is required for most of the steps, so keep it close! These bolts are highlighted throughout instructions in **RED**.

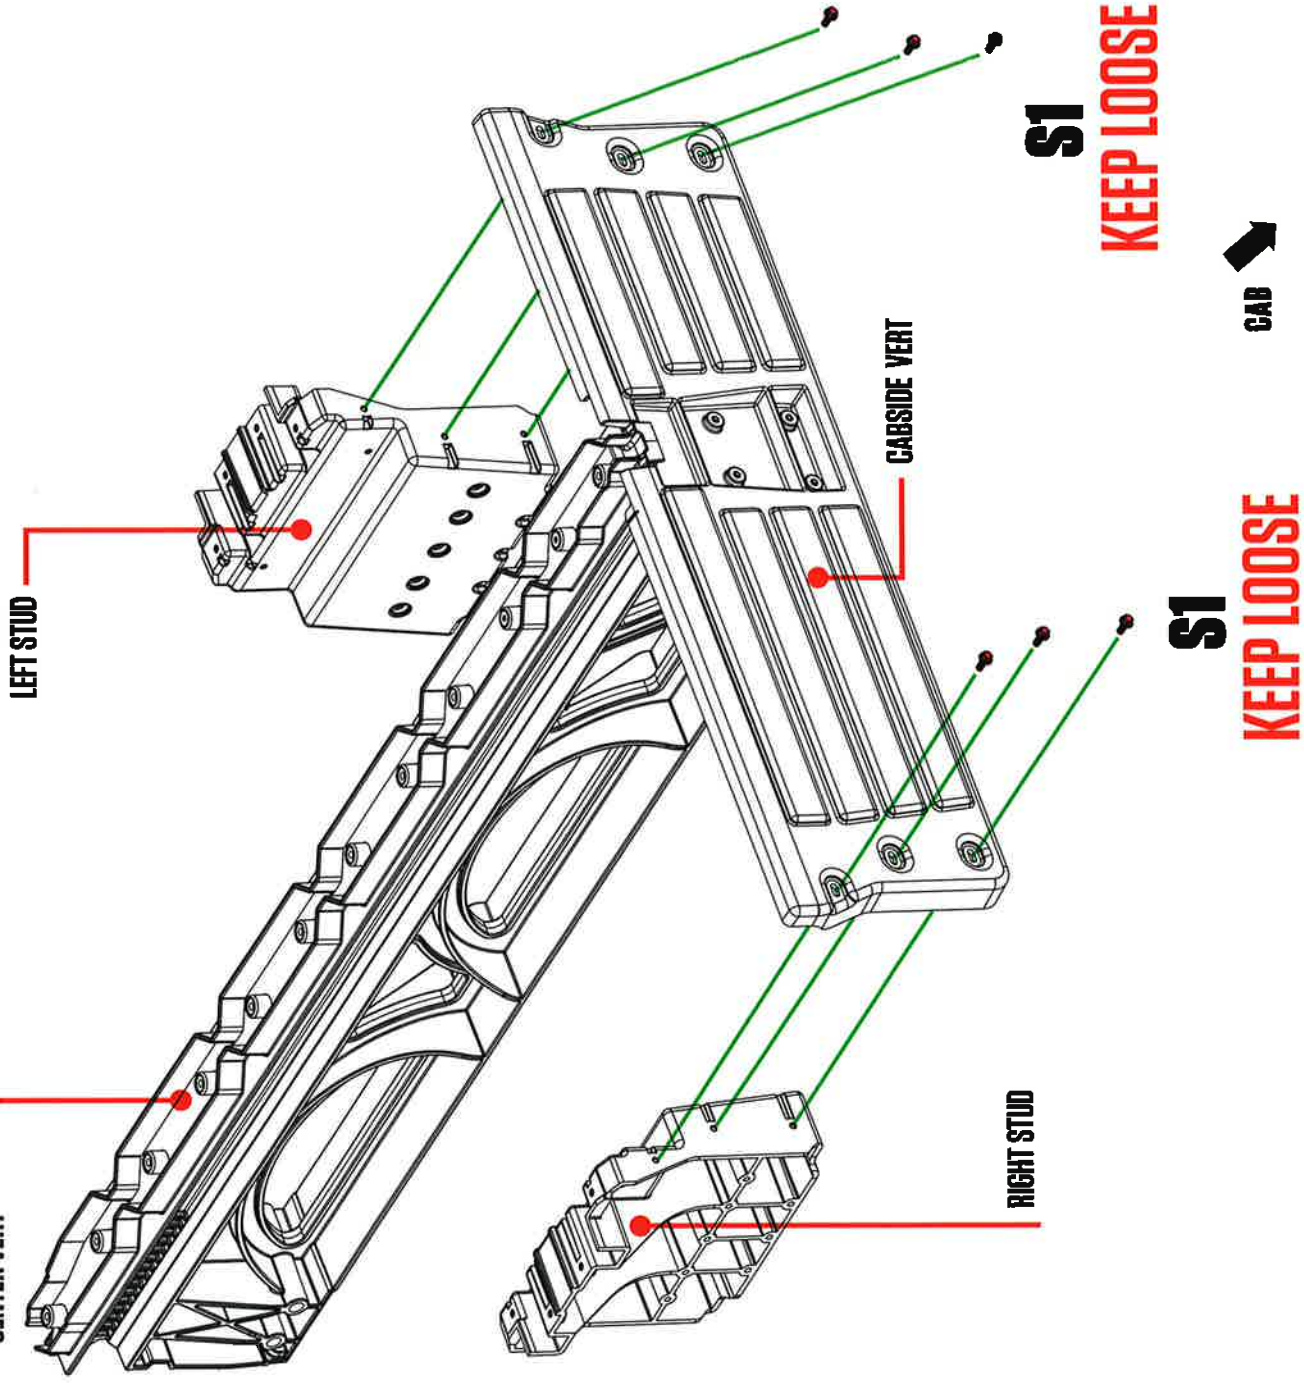

- Now you can securely tighten the bolts that hold the studs to the cabside vert.
- Unbolt deck from studs, remove deck panels, save bolts, remove ammo cans and set aside for later assembly.

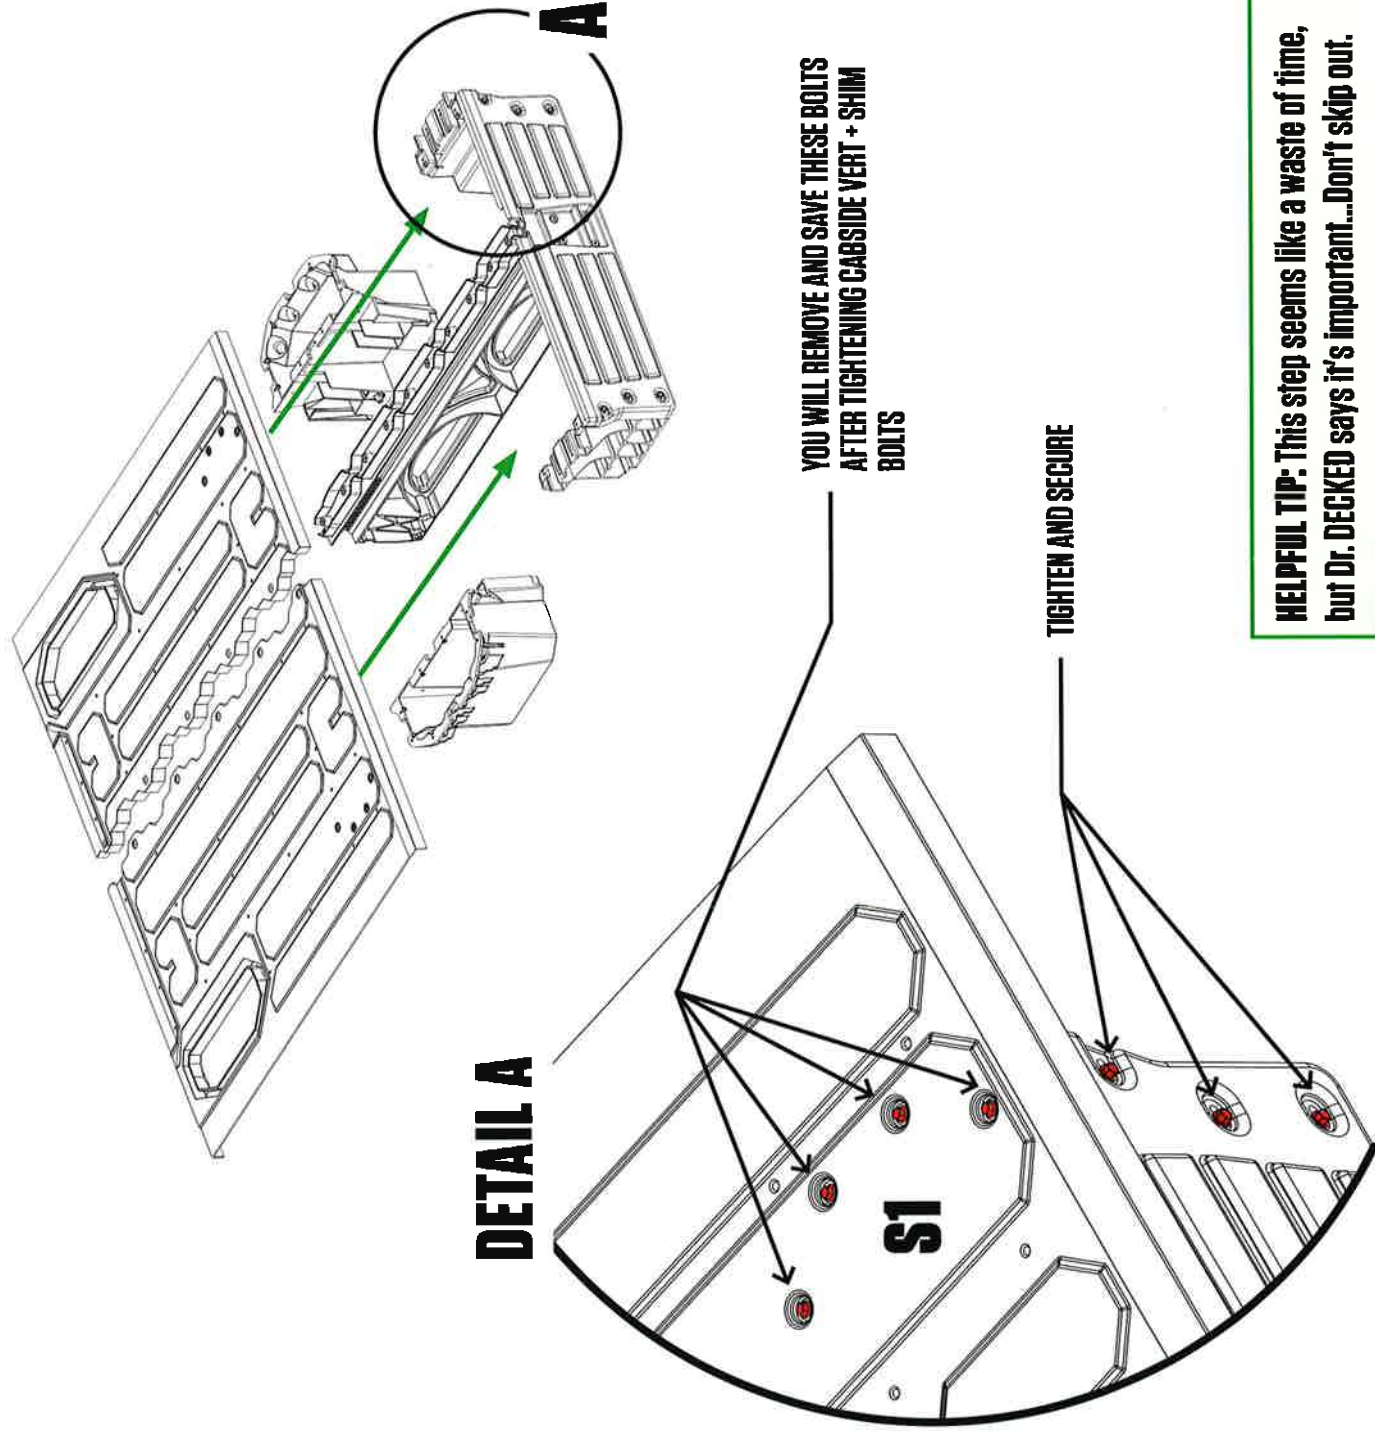


HELPFUL TIP: This step seems like a waste of time, but Dr. DECKED says it's important...Don't skip out.

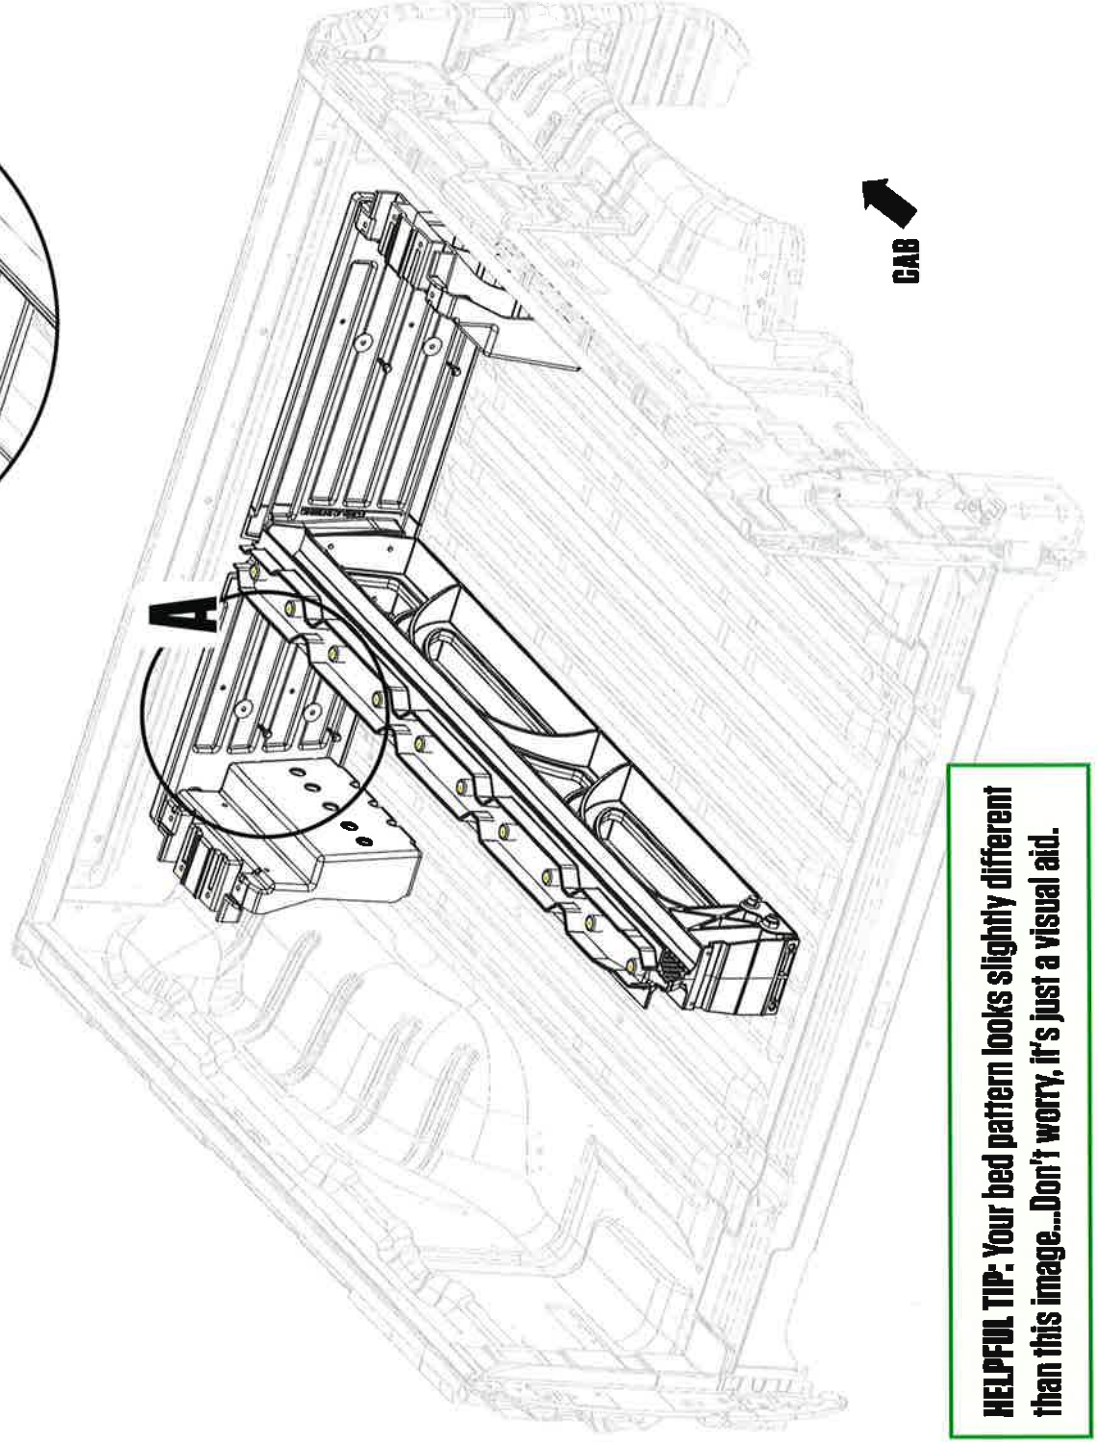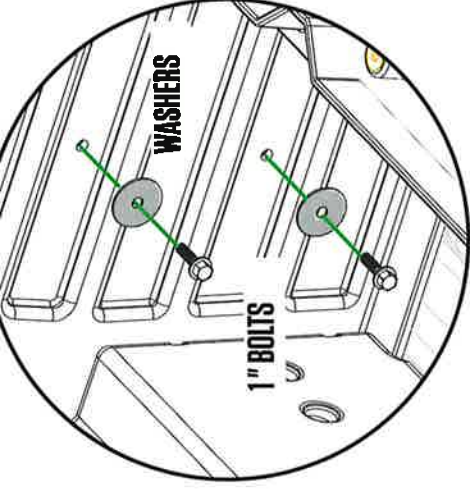



HELPFUL TIP: Your bed pattern looks slightly different than this image...Don't worry, it's just a visual aid.

• Repeat right side.

DETAIL A KEEP LOOSE

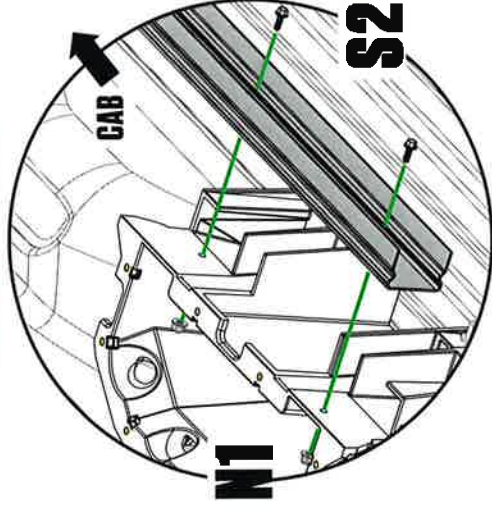

DETAIL B TIGHTEN

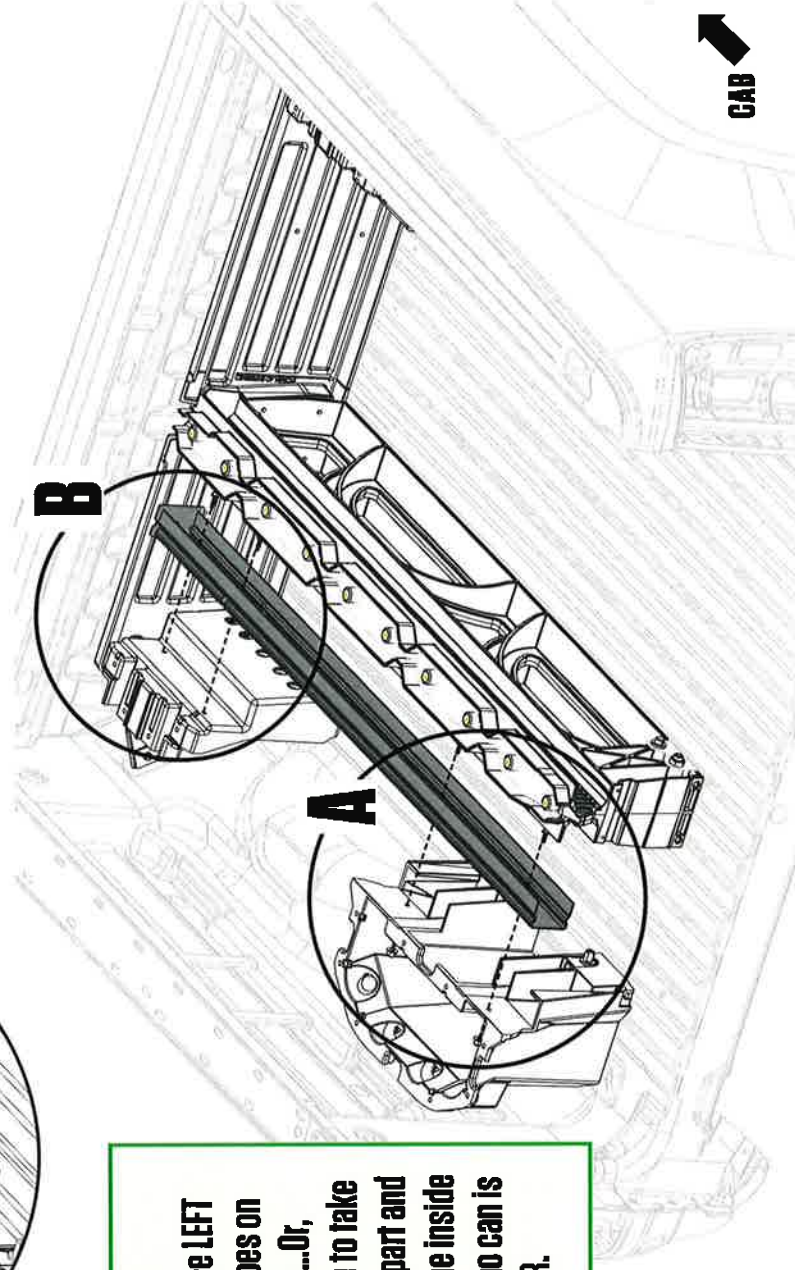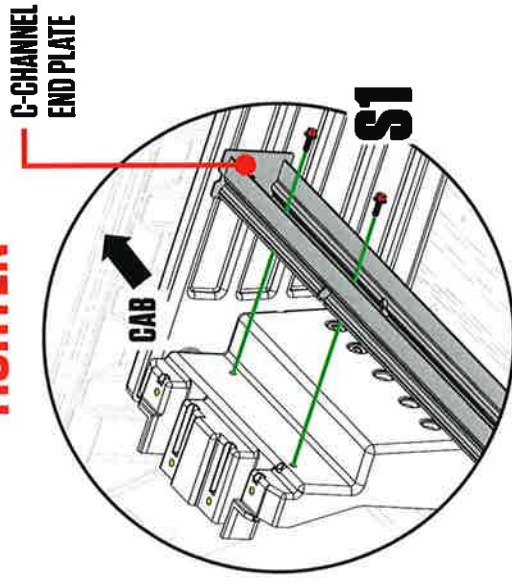

HELPFUL TIP:

Make sure the LEFT ammo can goes on the LEFT side...Or, you will have to take everything apart and start over. The inside of each ammo can is marked L or R.

CAB


• Eight bolts with U-rings through deck panel into ammo can; BAG S1, BAG U-RINGS.


• Tighten all S1 bolts.

• **Securely tighten C-Channel/ammo can nuts and bolts.**


• Repeat other side (make sure you don't forget to securely tighten C-Channel/ammo can nuts and bolts).

S1


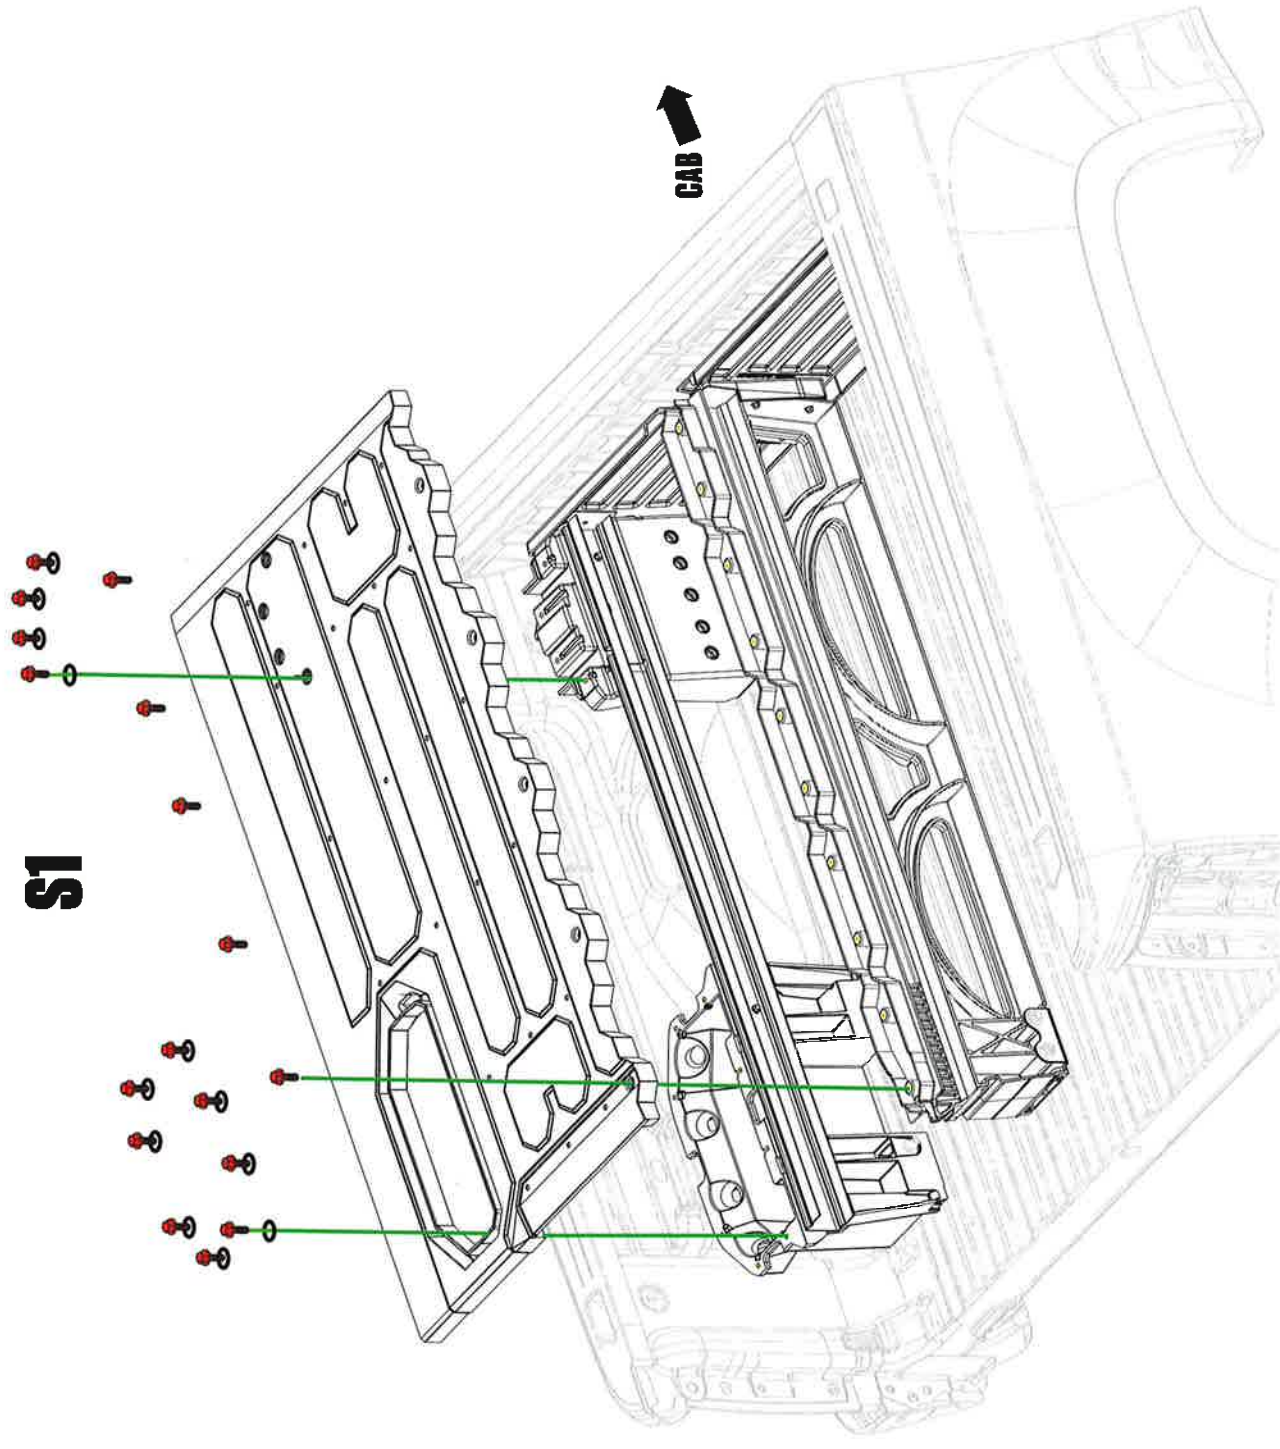


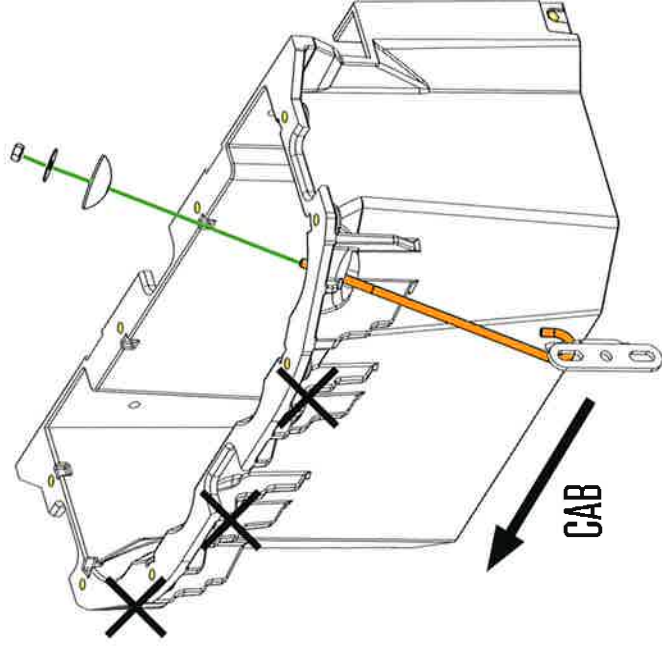


LEFT AMMO CAN
KEEP LOOSE

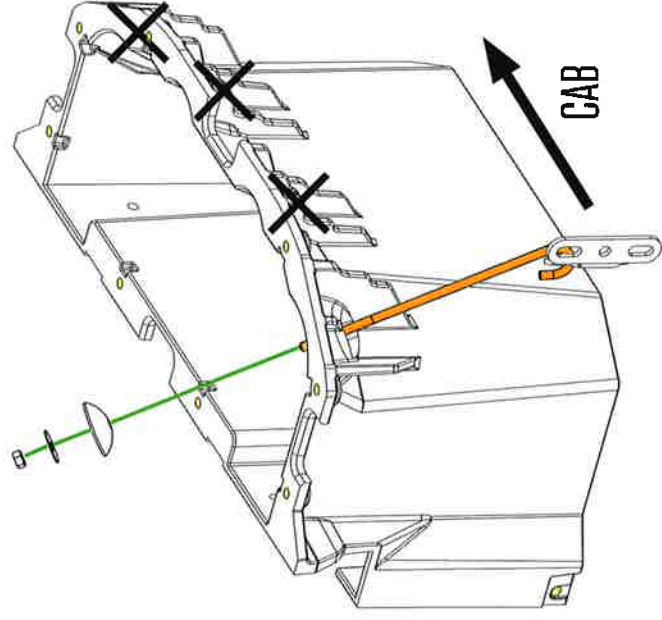

RIGHT AMMO CAN
KEEP LOOSE

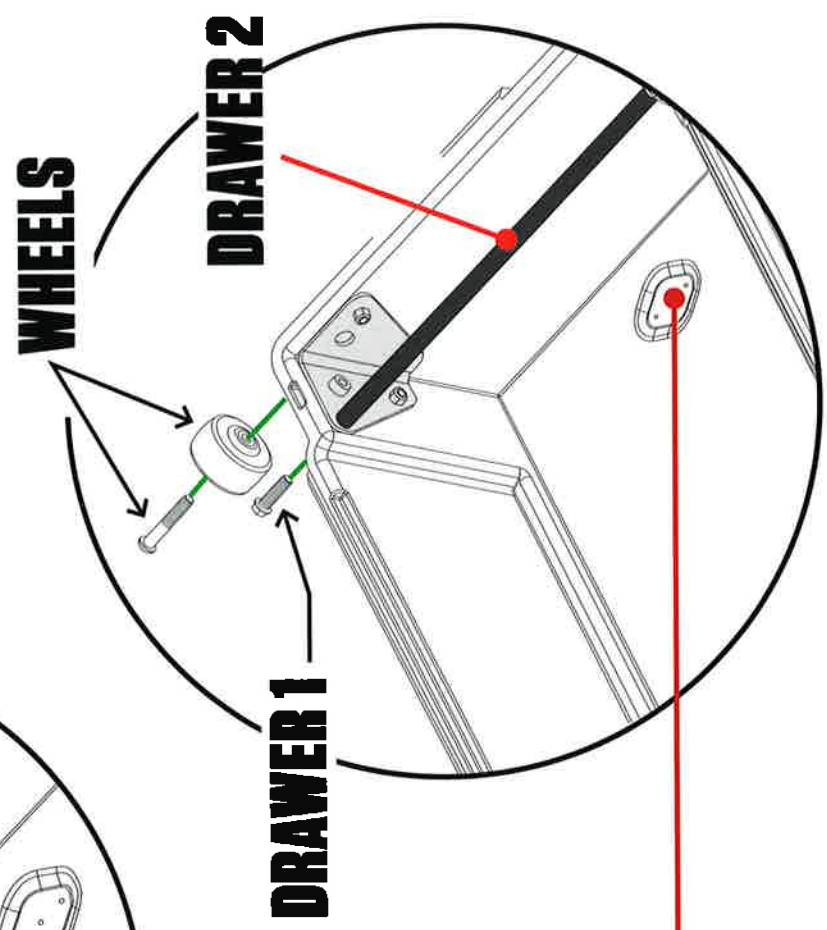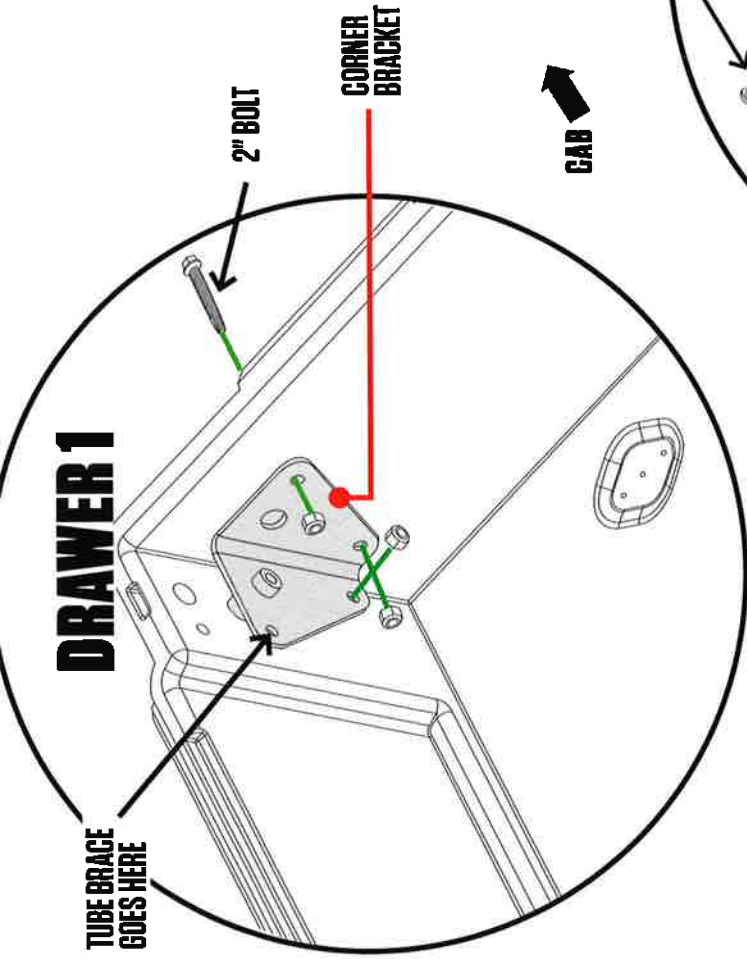


HELPFUL TIP: If you purchased drain plugs, install now (instructions are included with drain plugs).

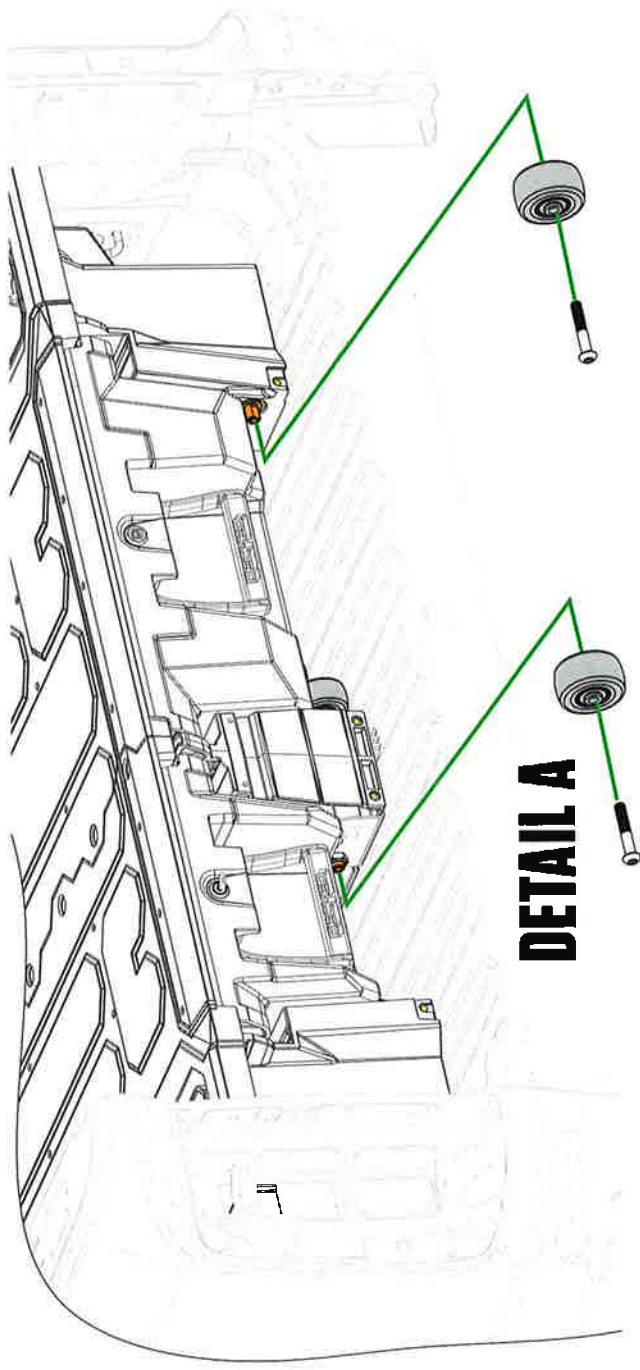


DETAIL A

HELPFUL TIP: To make this step easier, jam a 2" piece of material under drawer, or get your pal to pinch the drawer up to the deck to give you better leverage.


HELPFUL TIP: Cut weatherstrips if they overhang.

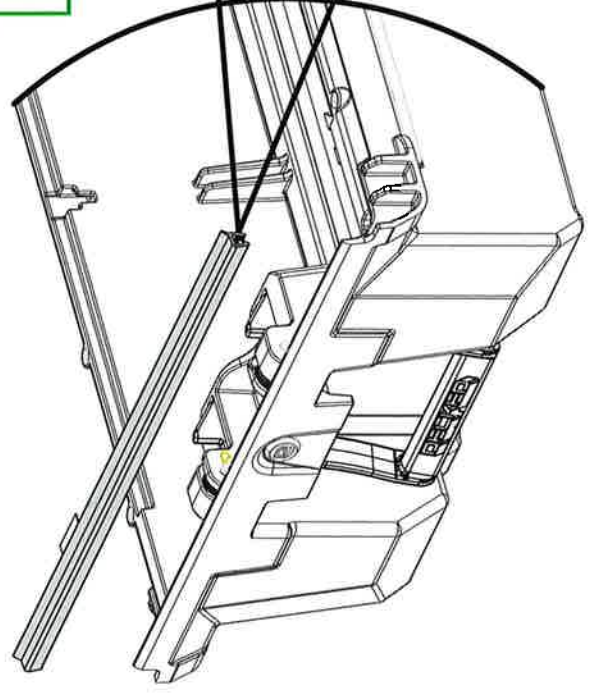

DETAIL B

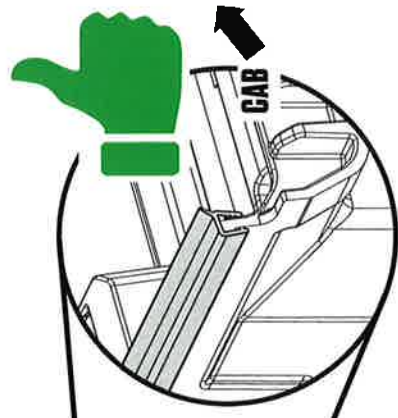

- Two bolts through the end holes in torsion brace into ammo cans; BAG **SL**.
- Two bolts through the bottom bottle opener holes and torsion brace into center vert; BAG **SL**.
- Two 1/2" length bolts through upper holes in bottle opener into center vert; BAG **FINAL MID**.
- Align bottle opener to edges of center vert and tighten four bottle opener bolts.
- Tighten end bolts into tailgate ammo cans.
- **Finally.....Tighten the J-hooks! DO NOT OVER TIGHTEN, just make snug. Make sure the gap between the sidewall of the bed and the deck is equal on both sides.**

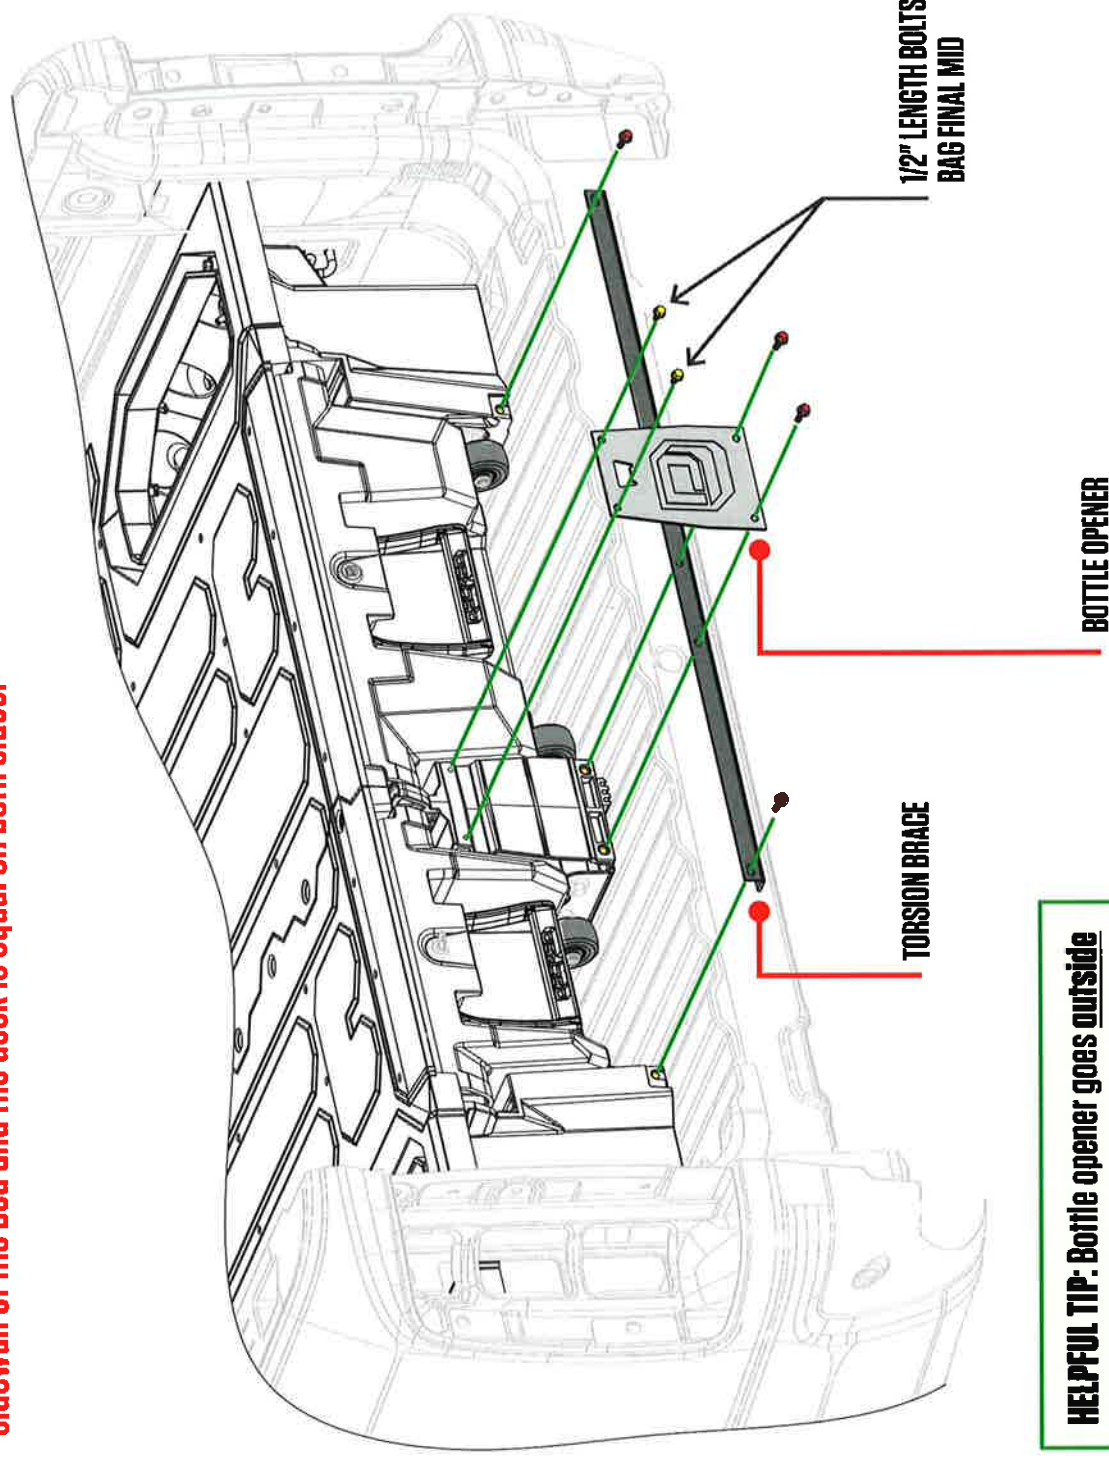


HELPFUL TIP: Bottle opener goes outside of torsion brace.

IMPORTANT: Only drill through TOP of steel tube; DO NOT drill through BOTTOM of tube, otherwise you will funnel water into your drawers; BAD!

- Screw three 3/4" length Phillips screws into the cabside ruler holes you just drilled; BAG FINAL MID.

STEEL TUBE RUNS Laterally UNDER THESE 3 RULER HOLES. THEY TAKE THE 3/4" SCREWS.

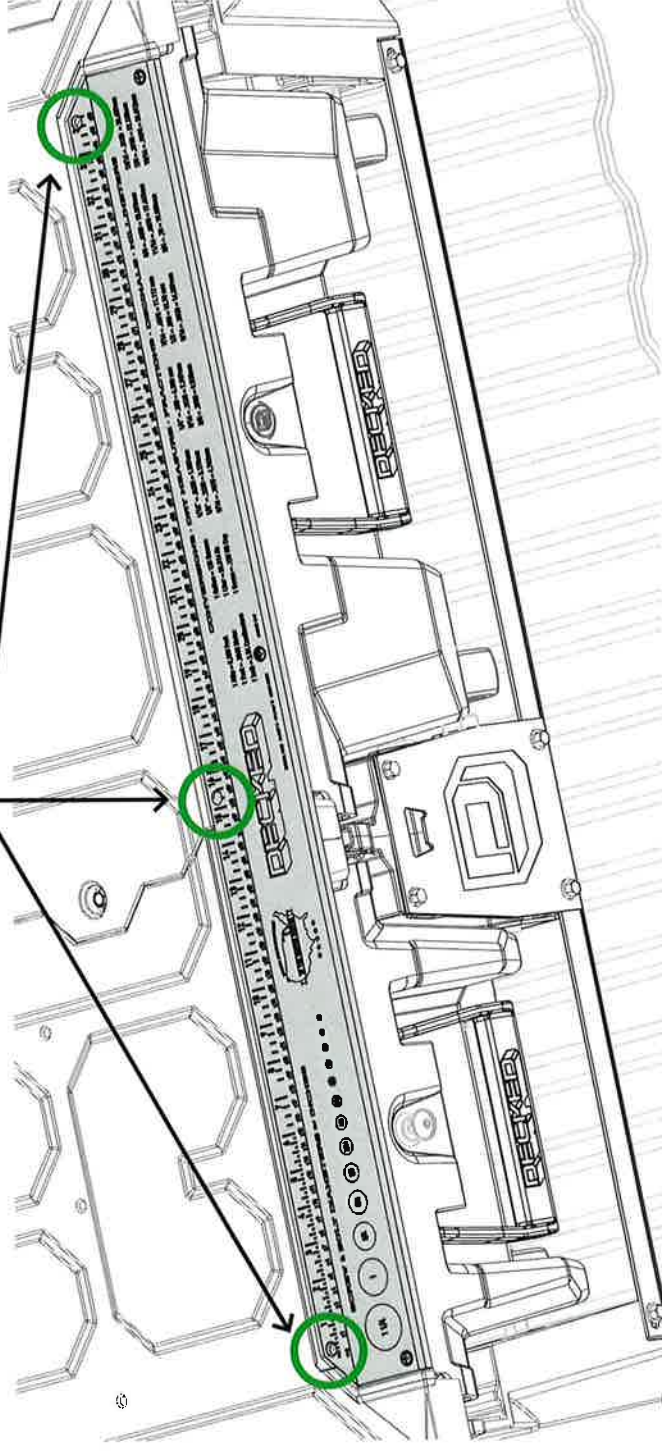


UNDERSIDE VIEW OF DECK




DO: Drill through the top of steel tube ONLY.

DO NOT: Drill through both sides of steel tube.

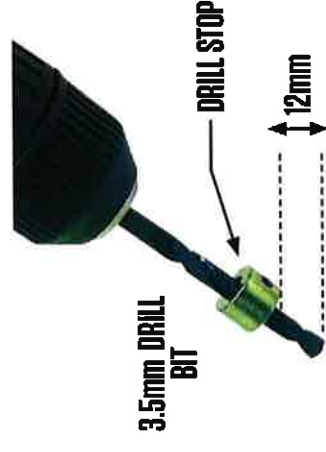


IMPURITANT: Grab your favorite beverage, crack it open in the bottle opener and consist this ship:
You did it. Immediately post a photo of your significant other, child or canine (in no order of significance)
appreciating your accomplishment. Add hashtag **#DECKEDUSA** | **@DECKEDUSA**.

DETAIL A

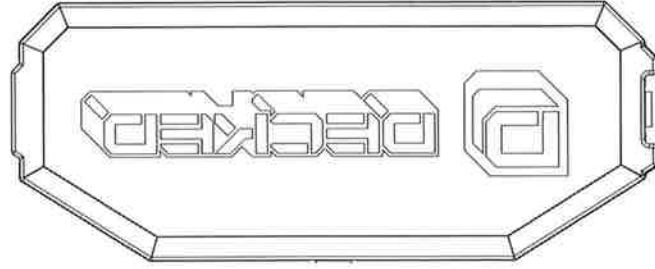


LEFT AMMO
CAN LID

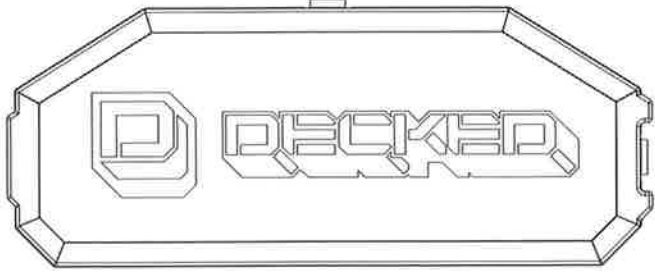

RIGHT AMMO
CAN LID

DETAIL B

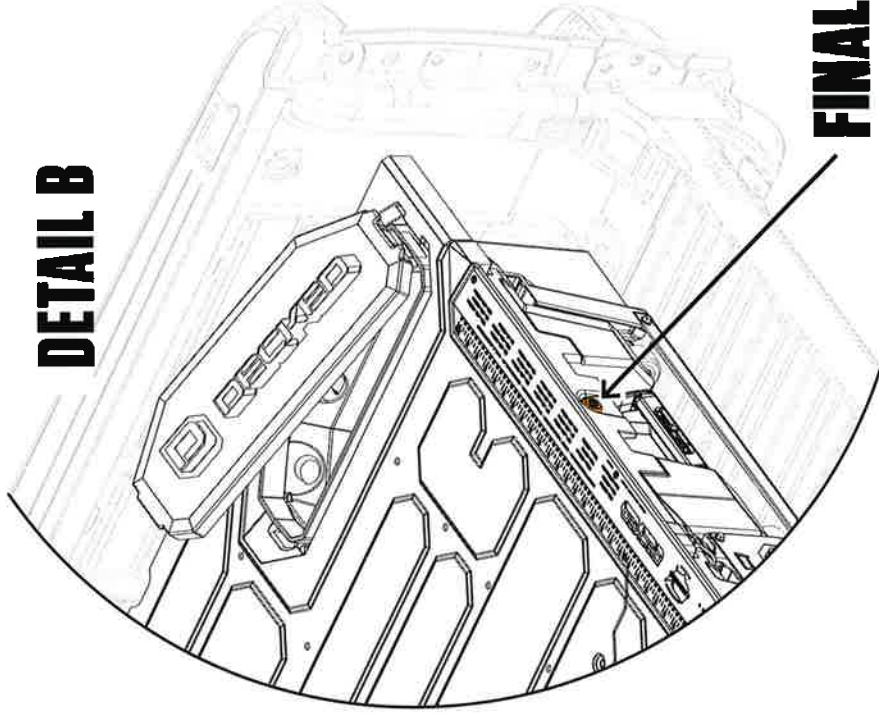

FINAL MID

#DECKEDUSA | **@DECKEDUSA**

The original purchaser must contact the DECKED LLC customer service team and provide a description of the defective part, including digital pictures if requested, with the original purchase documentation as validation of warranty coverage or have previously activated their warranty online.

This warranty DOES NOT cover or apply to:

- Damage to the product due to misuse, mishandling and abuse.
- Products not used in accordance with the manufacturer's instructions or recommendations.
- Product not assembled or installed according to manufacturer's instructions.
- Normal wear and tear.
- Undeclared damage to the system during shipping, acts of God. In addition, consequential damage and incidental damages (including lost time) such as damage to persons or property are not covered under this warranty.

REGISTER YOUR PRODUCT FOR ANY FUTURE WARRANTY NEEDS AS WELL AS TO BE INFORMED OF PRODUCT IMPROVEMENTS, ISSUES OR SOLUTIONS SPECIFIC TO YOUR MODEL [**DECKED.COM/REGISTER**](https://www.decked.com/register)

DECKED.COM | SERVICE@DECKED.COM | 1-208-806-0251
#DECKEDUSA | @DECKEDUSA