

LUXURY TOPS

MITSUBISHI
L200 MK6 & LONG BED

2nd EDITION

TRUCKMAN
FITTING INSTRUCTIONS



**Auto
Styling**
TRUCKMAN

www.autostylinguk.com

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 0845 6444704 or email fitting@autostylinguk.com.

Failure to comply with these instructions may affect any warranty considerations

Kit Contents



1 x Truckman Hardtop



6 x Clamp Locks



2 x Roof Bars




1 x Wiring Loom



1 x 10mm M6 Bolt



5 x Scotch Locks



1 x 20A Fuse



1 x Protective Tape (Roll)



1 x VHB Wipe

Tools Required

- Allen Keys
- 17 mm Wrench / Socket
(Use a Torque Wrench if possible)
- Silicon Sealant & Pump
- Drill Driver
- Pair of Pliers
- Multimeter (Recommended)

- Also includes:
- 1 x Touch Up Paint
 - 2 x Backup Keys




Preparation



3 Temporarily open the pop out windows to remove the foam protection.

4 If fitted, remove the screw at the top of the rubber seals.

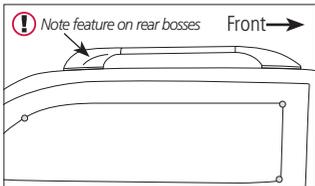

7 Tape the hardtop wire temporarily to the roof bars.

8 Thoroughly clean the rear window of the pickup and the hardtop's bulkhead window.



- 1** Remove the cardboard packaging from around the top. Keep the packaging intact.
- 2** Remove the fitting kit & roof bars and close the bulkhead window.



- 5** Assemble roof bars and fit to bosses.
- 6** In the fitting kit, remove the bolt caps from the clamp locks and completely unscrew each of them.





- 9 Wipe down the top of the vehicle bed.
- 10 Seal the front corners with silicon sealant. Use clear or black, depending on the vehicle colour.



OVERRAIL BEDLINERS can cause the hardtop to leak due to an uneven surface. Therefore Auto Styling highly recommends converting to or replacing with an underrail bedliner. For instructions, visit our website at www.autostylinguk.com/info/fitting-instructions/

Fitting

- 8 Lift the hardtop onto the bed, passing the cable through the ladder rack.



- 9 Loosely fit the clamps in between the gaps in the black rubber strip.



- 10 Align the top centrally on the bed. Ensure there is a gap between the hardtop and the vehicle cab, and that the seal under the hardtop door is just touching the tailgate or bedliner.



IMPORTANT: Door and tailgate **MUST** be closed for step 11.

- 11 Tighten the clamps to 10Nm Torque using the 17mm wrench (Start with the middle clamps).
- 12 Replace the bolt caps onto the clamps.



(Just more than hand tight / 10Nm Torque)



NEED ADVICE?

Call our experts on 0845 6444704 or email fitting@autostylinguk.com

Electrics




! Vehicle wire colours are listed as a guide. Please check with a multi-meter before fitting the harness.

- 1** Ensure the ignition is off. Remove door sill trim and kick plate from the passenger's side.
- 2** Take the wiring loom from the fitting kit and pass the '5-wire' leg through this grommet (under the rear passenger's seat), into the cab.

Vehicle wire colours are listed as a guide only. It is imperative that you check with a multi-meter them before connecting the wiring harness.

- 3** In the door sill, expose the wires and locate the brake wire, the central locking wires, and the door switch wire. The heated rear screen wire is located in the 2nd connector down, behind the kick plate.
- 4** Using the scotch locks, fix the loom as shown.

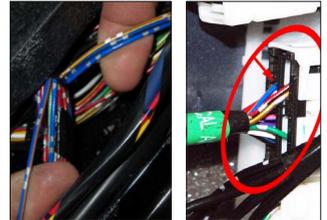

HARDTOP COLOURS

- BLUE
- YELLOW
- GREY
- BROWN
- GREEN

CONNECTED TO THE VEHICLE'S




- BRAKE
- CENTRAL LOCKING (LOCK)
- CENTRAL LOCKING (UNLOCK)
- DOOR SWITCH
- HEATED SCREEN

EXPECTED VEHICLE COLOURS

- BLUE ORANGE
- BLUE BLACK
- BLUE PURPLE
- BROWN YELLOW
- BLUE ORANGE *

NOTES


Wiring has not been checked recently
 12V when brake pedal depressed
 Door switch needs to be held down, but these wires flash 12V using the remote
 Use continuity checker with earth
 12V when the heated screen is on

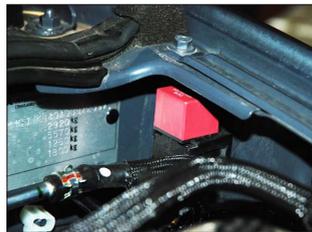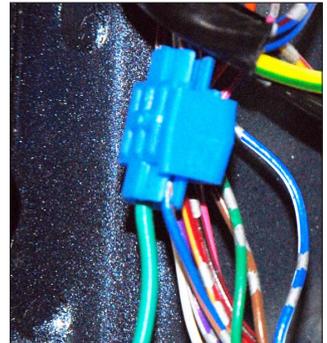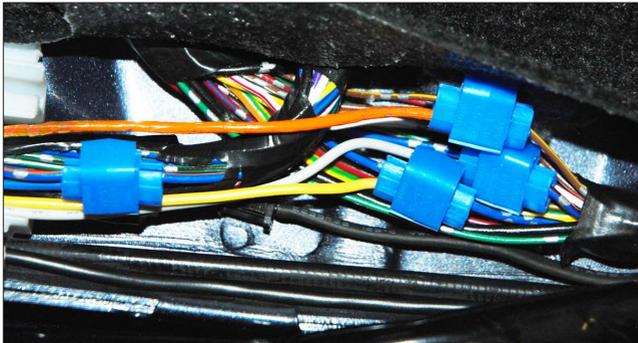

- 5** Bring the other leg of wires (including relay) under the vehicle, into the engine compartment.
- 6** Attach the relay (with the included bolt) to the side of the engine compartment.

* The heated rear screen wire is located in 2nd connector down, behind the kick plate.

- 7** Attach the **BLACK** wire to the earth post on the battery and the **RED** wire to the live post on the battery.

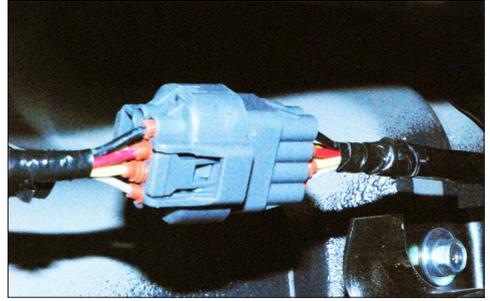


- 8** Insert the fuse into the fuse holder and connect the wiring loom to the hardtop.



- 9** Open the hardtop door. Ensure the light is set to "Door" and that the interior light is on. Close the door and check it switches off.

- 10** Press the brake pedal to check the brake light is on. Use reflective surfaces or a second person.

- 11** Use a multimeter (if available) to confirm a current across the heated rear window when on.

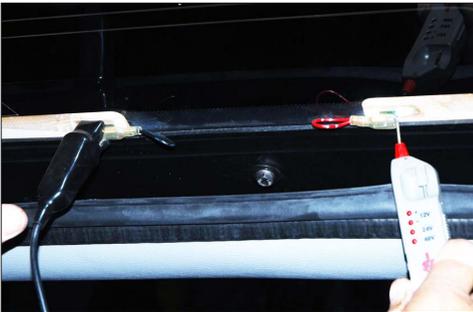

- 12** Check that the hardtop locks and unlocks with the vehicle's remote.



- 13** Clean the top edge of tail-board using the VHB wipe supplied or a good quality bodywipe.

- 14** Remove the roll of tape from the bag and cut one end square.

15 Partly remove the backing from the tape.



16 Apply it to the tailgate, rubbing outwards to remove any bubbles as you go.

17 Cut the other end square



18 Replace all door trim and cable tie all external wire to the chassis. Close all doors and the bonnet.



19 Repeat steps 9-12 to check everything still works.



NEED ADVICE?

Call our experts on 0845 6444704 or email fitting@autostylinguk.com

IMPORTANT NOTES



The hardtop is designed to rely on the vehicles central locking. It should open and lock with the vehicle's key fob. The included keys are intended to work as a backup, should the central locking fail.

The keys CANNOT be removed once turned 180° to ensure the vehicle is always locked with the vehicle.



Add that extra style and protection to your L200 with stunning stainless steel accessories, such as this A-Bar.

IMPORTANT NOTES

Bedliners **must** be underrail for a good fit.

Ensure the tailgate and side windows are closed when driving.

Do not place animals in the load area without adequate ventilation.

Do not exceed the load limit on the roof rails
(See sticker on the hardtop)

MAINTENANCE

Use a light oil to lubricate the lock and hinges.
Check the tightness of the fixing clamps / bolts.
(Just more than hand tight / 10Nm Torque)

CLEANING

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.

IMPORTANT NOTES



The hardtop is designed to rely on the vehicles central locking. It should open and lock with the vehicle's key fob. The included keys are intended to work as a backup, should the central locking fail.

The keys CANNOT be removed once turned 180° to ensure the vehicle is always locked with the vehicle.

Auto Styling
TRUCKMAN

Auto Styling UK Limited,

Unit 4 Narrowboat Way, Hurst Business Park, Brierley Hill, DY5 1UF, UK

Tel: 0845 6444704 Fax: 0845 64445014

Email: fitting@autostylinguk.com

www.autostylinguk.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations. For your safety, we recommend that any wiring is performed by qualified Auto Electricians.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at www.autostylinguk.com