

FIT1047

TRUCKMAN

THE UK'S LARGEST HARDTOP MANUFACTURER

LUXURY TOPS

FITTING INSTRUCTIONS



ISUZU D-MAX MK4-5

DOUBLE CAB

PART NUMBERS: 8HF2H2**ISDM5D
8HF2H2**RBISDM5D


8HF2H7IM**ISDM5D
8HF2H9TO**RBISDM5D

8HF2H9IM**ISDM5D
8H02H2IM**ISDM5D

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 01384 485405 or email fitting@truckman.com.

Failure to comply with these instructions may affect any warranty considerations


KIT CONTENTS

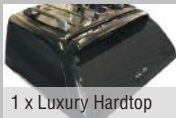

1 x Luxury Hardtop



1 x Protective Tape (Roll)

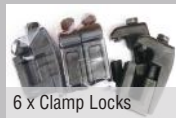

6 x Clamp Locks



1 x Touch-up paint



1 x Wiring harness kit

Also included:
Hardtop Keys

Tools Required:
17mm Spanner/socket
Philips screwdriver
10mm spanner(x2)
Torque Wrench
Drill/driver
Knife
Multimeter
Silicone sealant
Drill bits and driver

PREPARATION




1. Remove the cardboard packaging and set aside. Keep intact.



Carefully remove the protective wrapping. (On Grand, open the side windows to release.)



2. Open the bulkhead window and retrieve the fitting kit.

OVER RAIL BED LINERS can cause the hardtop to leak due to an uneven surface. Therefore, Auto Styling Truckman highly recommends converting to or replacing with an under rail bed liner. 



3. Remove the bolt caps from the clamps and completely unscrew each of them.




4. The hardtop's keys are attached to the inside of the rear door. Remove these and retain.



5. Thoroughly clean the vehicle's rear window and the top surface of the bed rails.



6. Unscrew the vehicle's third brake light and pull it away from the bodywork.

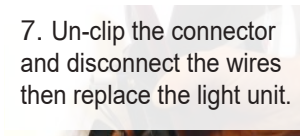

7. Un-clip the connector and disconnect the wires then replace the light unit.



8. Fill the joint between the front and side rails of the vehicle's bed with silicone. (Black or Clear)

HEAVY LIFTING: We recommend the use of 4 people to lift the hard top. Do not lift the canopy using the rear door



- 9. Before mounting the canopy, check that the rear door is fully shut.
- 10. With the tailgate closed, lift the canopy on to the vehicle.
- 11. Adjust the position of the canopy so that the seal-



under the rear door should be just in contact with the vehicle's tailgate.



12. Check that the top and vehicle bed line up at the front and does not overhang.



13. Centralise the bottom of the rear door to the tailgate.



14. Then centralise the canopy at the front end.



15. Assemble the clamps loosely in position on the side rails.



16. Tighten the clamps to 8Nm. Check the torque again after 30 mins.



17. Ensure the rear door fully latches when closed firmly (the seal under the door should now be half compressed).



18. Small adjustments can be made by re-positioning the striker plates.

19. Check the position again and repeat steps 13-20 if necessary. Replace the clamp bolt caps.



A strip of clear protection tape is supplied in the kit to prevent abrasion to the paint on the rear of the tailgate. It is cut to length for the Toyota Hilux tailgate and must be positioned so that it protects the area where the rubber seal on the bottom of the hardtop door touches.




1. Thoroughly clean the top of vehicle's tailgate and apply a fine spray of water.



2. Use a blade to partly remove the backing film. Avoid touching the adhesive with your fingers.



3. Apply the tape approx. 2-3mm from the edge of the tailgate.

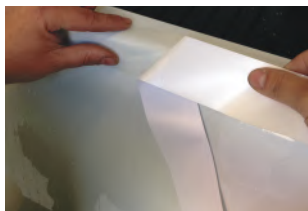

4. Peel the backing away whilst laying the tape in position.



5. Make any adjustments to the position then use a squeegee to remove the water and any air bubbles.



6. Dry the area whilst making sure the position of the tape is not disturbed.

Caution: Auto electrics should only be carried out by a competent person. Vehicle wire colours are listed as a guide and may vary on some models.




The function of each wire should be checked before any connections are made.

Ensure the ignition is switched off and the battery -Ve terminal disconnected before connecting any wires. All wires should be secured with cable ties, away from moving parts and heat sources. Refer to workshop procedures.


WIRE COLOUR GUIDE

HARDTOP	FUNCTION	VEHICLE	NOTES - Checked on a '17 plate D-Max
BLUE	Brake light	RED	+12V When brake pedal depressed.
YELLOW	Central Locking (Lock)	BLUE/RED	Will momentary flash +12V when remote
GREY	Central Locking (Unlock)	BLUE	-key used. (hold door switch).
BROWN	Not used		Cut back wire and insulate end.
GREEN	Heated screen	BLACK/RED	+12V when vehicle heated screen is operated.

Overview of RHD vehicle.

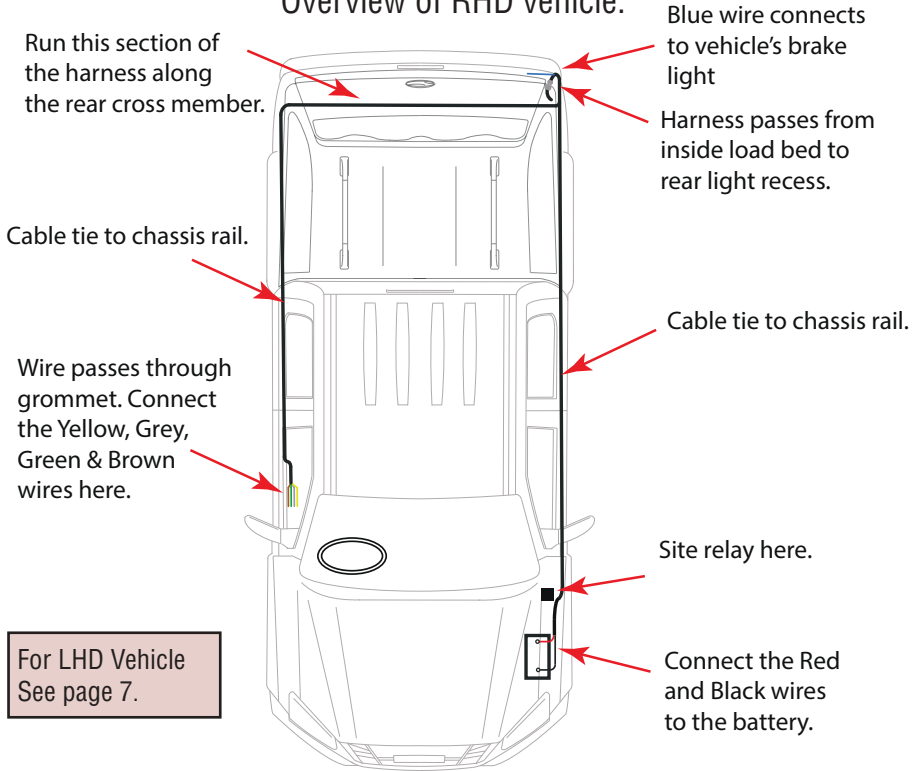

For LHD Vehicle
See page 7.

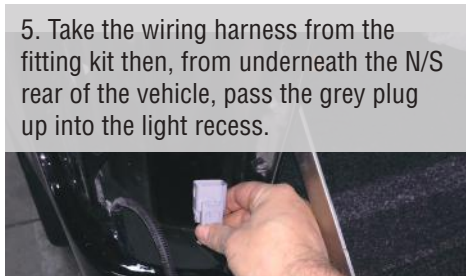

6. Draw the harness up through the light recess and connect it to the canopy plug.

7. Take the leg of the harness containing the Yellow, Grey, Green and Brown wires across the rear of the vehicle and forward along the O/S chassis rail to under the driver's seat.



8. Remove the driver's door sill cover.



9. Drill a hole in the floor, treat with rust inhibitor and fit a grommet.

10. Pass the harness through the grommet, into the interior of the vehicle.

11. Connect the wires according to the guide on page 4.



12. Solder the wires according to standard workshop practice.


13. Take the section of harness containing the relay, red and black wires forward along the chassis then up into the engine bay. Refer to the diagram on page 5.



14. Mount the relay as shown.

15. Connect the red and black wires to the battery using the guide on page 4.



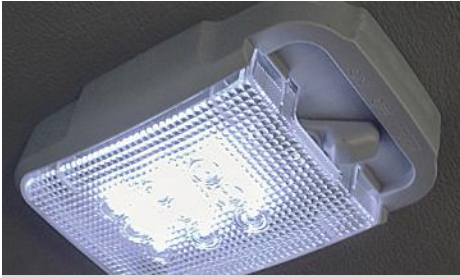


1. Switch the interior light to 'Door'. Check it goes out when the rear door is shut.



2. Push the small button on the left of the handle to open the key cover. Insert the key, ensure it is turned fully clockwise then remove it. This operation engages the keyless remote locking.




3. Close all of the doors and check that the canopy locks and unlocks with the vehicle's remote. Check that the canopy's heated screen operates with the vehicle's.

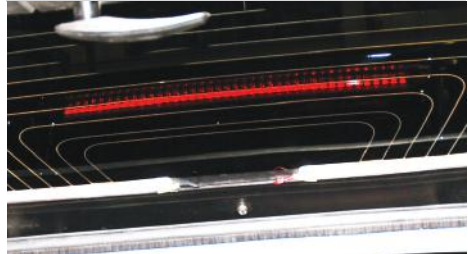

4. Test the operation of the brake light.

5. Replace the rear light and all of the interior trims. This completes the installation of the TRUCKMAN Luxury hardtop.

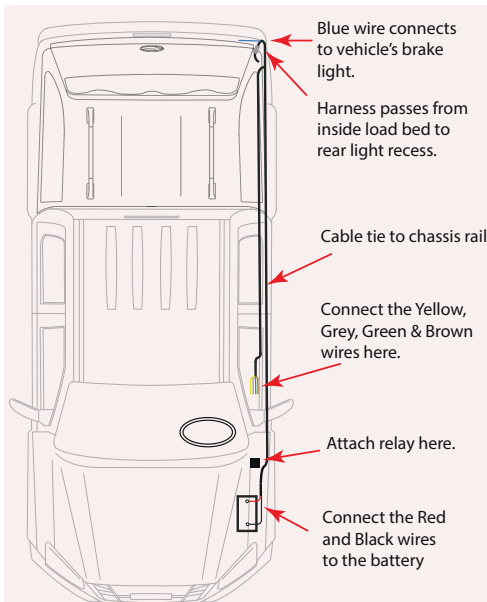

Follow the electrical installation instructions until step 7 on page 6.

The harness section containing the Yellow, Grey, Green and Brown wires should be run forward along with the section containing the red and black wires.

The procedure is then the same as for a right hand drive vehicle.

Refer to page 4 for wiring colours.

Cut back or secure any excess wire.

IMPORTANT NOTES

The Truckman Luxury hardtop is designed to rely on the vehicle's remote central locking. It should be locked and unlocked using the vehicle's key fob. The keys are provided as a back-up only.



Open the cover by pushing in the button on the left side of the handle.

Note: The key must be turned fully clockwise and removed in order for the remote locking to operate.

MODELS COVERED:

Truckman Luxury tops (Grand, GLS, S and L Series) for Isuzu D-Max Mk4 & 5 (2012-date) Double cab, all models.

These instructions are correct at time of publication only and may be amended without notice. For the latest version contact fitting@autostyling.com or call us on 01384 485405

IMPORTANT NOTES

Ensure the tailgate and side windows (if applicable) are closed when driving.

Do not place animals in the load area without adequate ventilation.

Do not exceed vehicle manufacturer's load limit when using roof rails.

Do not use a pressure-washer near the seals.

MAINTENANCE**AFTER THE INITIAL 300 MILES AND THEN EVERY 3000 MILES**

Check the tightness of the fixing clamp bolts (*8Nm Torque*)

3 MONTHLY Use a light oil to lubricate the lock and hinges.

CLEANING

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.

AutoStyling
TRUCKMAN

Auto Styling UK Limited,
Unit 14 Narrowboat Way,
Brierley Hill, DY2 0EZ, United Kingdom

Tel: 01384 485 405 **Fax:** 01384 485453

Email: fitting@autostylinguk.com

Web: www.autostylinguk.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at www.autostylinguk.com