

FIT 1045

TRUCKMAN

THE UK'S LARGEST HARDTOP MANUFACTURER

LUXURY TOPS

FITTING INSTRUCTIONS



TOYOTA HILUX MK8

DOUBLE CAB

PART NUMBERS:

8HF2H3**TOH8D

8HF2H7**TOH8D

8HF2H8**TOH8D

8HF2H9**TOH8D

1ST EDITION

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 01384 485405 or email fitting@autostylinguk.com.

Failure to comply with these instructions may affect any warranty considerations

KIT CONTENTS



1 x Luxury Hardtop



1 x Protective Tape (Roll)



6 x Clamp Locks



1 x Wiring harness kit



1 x Touch-up paint

Tools Required:

- 17mm Spanner/socket
- 10mm Spanner/socket(x2)
- Torque Wrench
- Circuit tester/Multimeter
- Silicone sealant.
- Water spray and squeegee.
- Trimming knife.
- Pliers/Wire cutters.

Also included:

- Hardtop Keys

PREPARATION



1. Remove the cardboard packaging and set aside. Keep intact.



2. Carefully remove the protective wrapping. (On Grand, open the side windows to release.)



3. Open the bulkhead window and retrieve the fitting kit.

OVER RAIL BED LINERS can cause the hardtop to leak due to an uneven surface. Therefore, Auto Styling Truckman highly recommends converting to or replacing with an under rail bed liner.



4. Remove the bolt caps from the clamps and completely unscrew each of them.



5. Remove the hardtop keys from the handle on the inside of the rear door.







6. Thoroughly clean the vehicle's rear window and the top surface of the load bed rails.



7. Just before fitting the canopy, fill any gaps between the front and side rails with sealant.



8. Close the vehicle's tailgate and ensure the canopy rear door is fully shut before fitting.

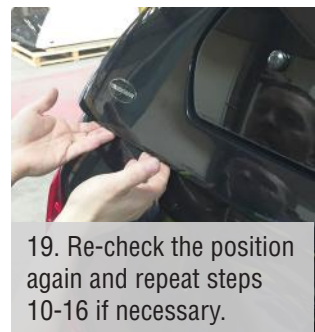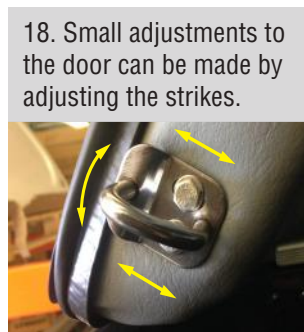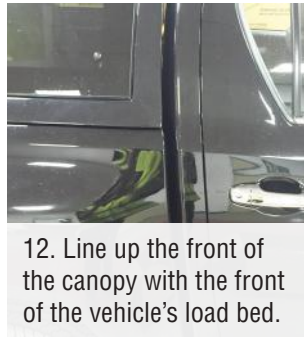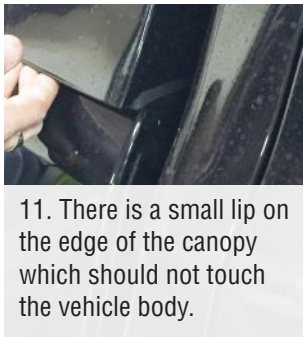



A strip of clear protection tape is supplied in the kit to prevent abrasion to the paint on the rear of the tailgate. It is cut to length for the Toyota Hilux tailgate and must be positioned so that it protects the area where the rubber seal on the bottom of the hardtop door touches.




1. Thoroughly clean the top of vehicle's tailgate and apply a fine spray of water.



2. Use a blade to partly remove the backing film. Avoid touching the adhesive with your fingers.



3. Apply the tape approx. 2-3mm from the edge of the tailgate.

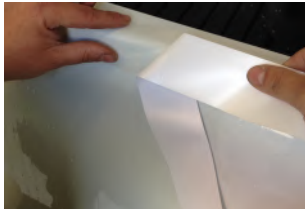

4. Peel the backing away whilst laying the tape in position.




5. Make any adjustments to the position then use a squeegee to remove the water and any air bubbles.



6. Dry the area whilst making sure the position of the tape is not disturbed.

Insallation overview

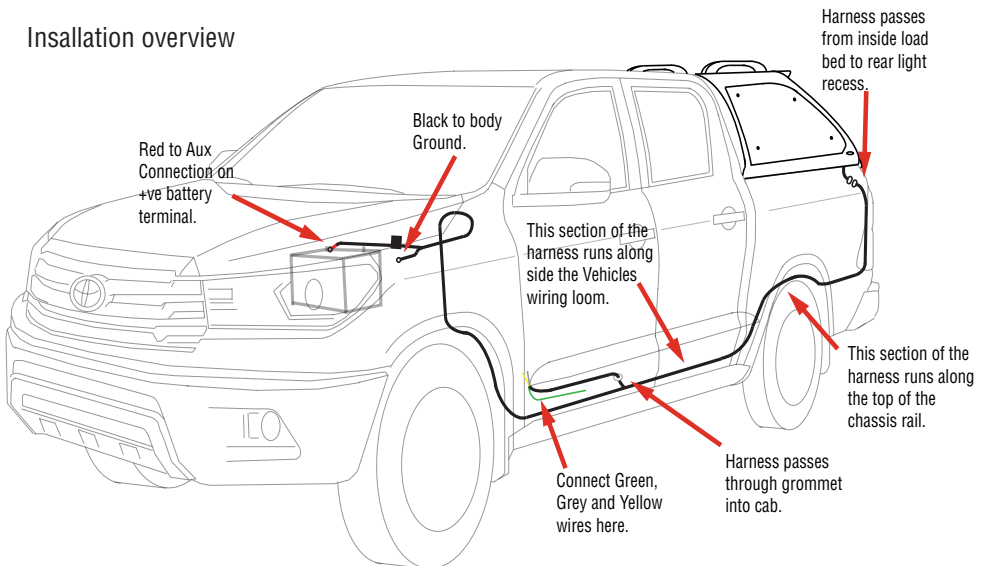




Caution: Auto electrics should only be carried out by a competent person. Vehicle wire colours are listed as a guide and may vary on some models. **The function of each wire should be checked before any connections are made.**


Ensure the ignition is switched off and the battery -Ve terminal disconnected before connecting any wires.

WIRE COLOUR GUIDE

HARDTOP	FUNCTION	VEHICLE	NOTES
YELLOW	Central Locking (Lock)	BLACK	- Checked on a '16 plate Hilux Will momentarily flash +12V when remote -key used. (hold door switch). Cut back wire and insulate end. +12V when vehicle heated screen is operated.
GREY	Central Locking (Unlock)	WHITE	
BROWN	Not used	—	
GREEN	Heated screen	BLACK	

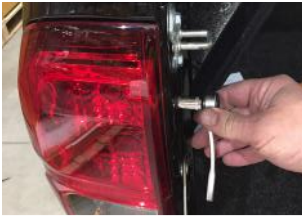

1. Remove the screws from the N/S/R light cluster.

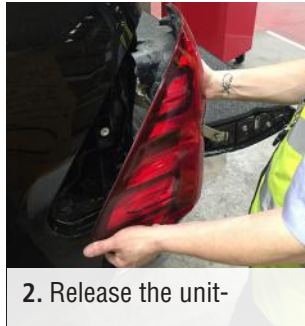

2. Release the unit-



3. -disconnect it and set aside.



4. Take the wiring harness from the fitting kit then, from underneath the N/S rear of the vehicle, pass the grey plug up through this hole, into the light recess.



5. Draw the harness up through the light recess.



6. Pass the plug through the gap at the top-



7. -into the load bed.



8. Connect the harness to the canopy plug.



9. Take the other end of the harness forward, along the top of the N/S chassis rail.



10. locate this grommet below the N/S front door.



11. Remove the sill trim just inside the front passenger door.



12. Unclip and remove the cover panel forward of the door.



13. Underneath. make a small hole in the grommet and pass the section of harness containing the grey and yellow wire through into the passenger compartment.



14. Reach under the carpet and lining to locate the wires.




15. Draw the wires through and take them forward through the white clips.




16. In the connectors forward of the door, locate and test the Black and White wires for the remote locking.

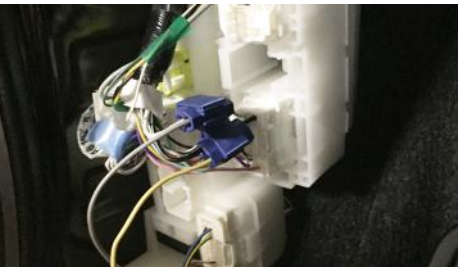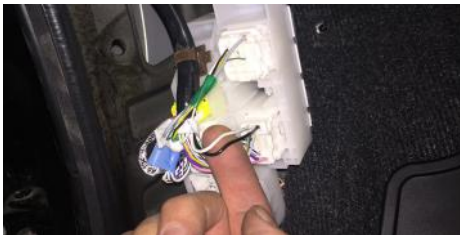


17. Attach the yellow and Grey wires using the connectors provided.

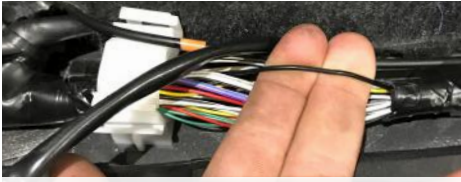

18. Connect the green wire to the heated screen wire in the sill. Refer to the colour guide and check the functionality carefully before connection as there may be several wires of the same colour.

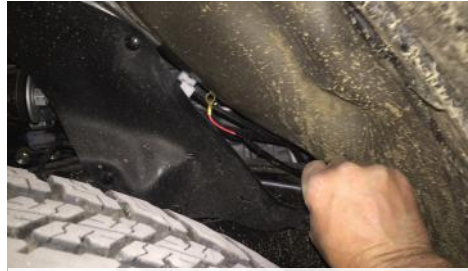

19. Run the other section of the harness forward to the front wheel arch.

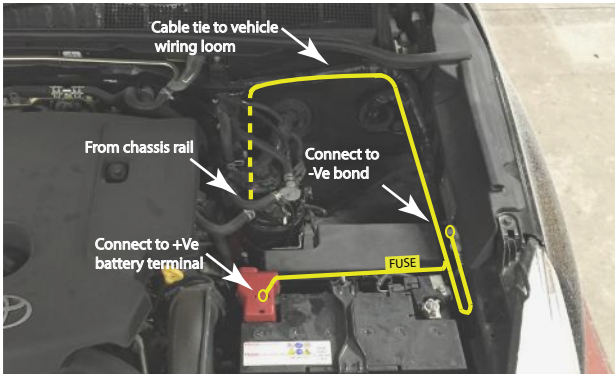

20. Take the harness up into the engine bay. Use the cable ties provided to route it as shown left.

21. Connect the Red wire to the battery auxilliary terminal and the Black wire to the body grounding bond. Do not connect to the battery -Ve terminal.




22. Battery +Ve connection.



23. -Ve connection.

24. Ensure the relay and any excess wire is secured and the harness is cable tied away from heat sources or moving parts.

25. Re-connect the battery before testing.

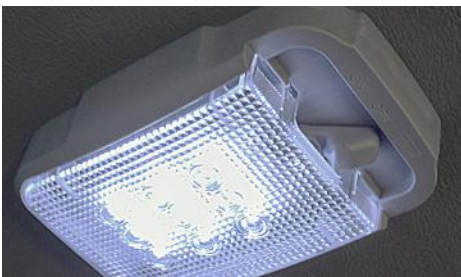

1. Switch the interior light to 'Door'. Check it goes out when the rear door is shut.



2. Push the small button on the left of the handle to open the key cover. Insert the key, ensure it is turned fully clockwise then remove it. This operation engages the keyless remote locking.



3. Close all of the doors and check that the canopy locks and unlocks with the vehicle's remote. Check that the canopy's heated screen operates with the vehicle's



4. Replace the rear light and all of the interior trims.

5. This completes the installation of the **TRUCKMAN** Luxury hardtop.

The Truckman Luxury hardtop is designed to rely on the vehicle's central locking. It should lock and unlock with the vehicle's key fob. The keys are provided for use as a back-up only. Ensure the key has been turned fully clockwise and removed in order for the remote locking to operate.

MODELS COVERED:

Truckman Luxury tops (Grand, GLS, S and L Series) for Toyota Hilux Mk8 (2016-date) Double cab.

These instructions are correct at time of publication only and may be amended without notice. For the latest version contact fitting@autostyling.com or call us on 01384 485405

IMPORTANT NOTES

Ensure the tailgate and side windows (if applicable) are closed when driving.

Do not place animals in the load area without adequate ventilation.

Do not exceed vehicle manufacturer's load limit when using roof rails.

Do not use a pressure-washer near the seals.

MAINTENANCE

AFTER THE INITIAL 300 MILES AND THEN EVERY 3000 MILES

Check the tightness of the fixing clamp bolts (*8Nm Torque*)

3 MONTHLY Use a light oil to lubricate the lock and hinges.

CLEANING

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.



Auto Styling UK Limited,
Unit 14 Narrowboat Way,
Brierley Hill, DY2 0EZ, United Kingdom

Tel: 01384 485 405 **Fax:** 01384 485453

Email: fitting@autostylinguk.com

Web: www.autostylinguk.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at www.autostylinguk.com