

### Spoiler removal and re-fitting

Instructions for removal of the spoiler on the Truckman Luxury range of hardtops to gain access to the electrical connections within.




#### Tools needed:


10mm spanner or socket.  
Scissors.

#### Materials required:


300mm x 4mm Neoprene.

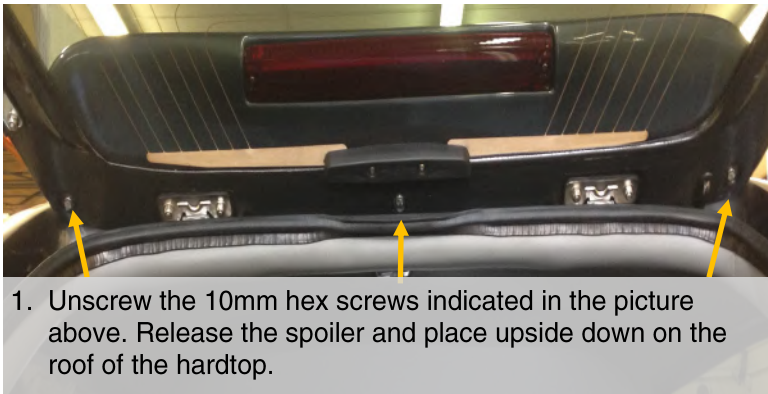

1. Unscrew the 10mm hex screws indicated in the picture above. Release the spoiler and place upside down on the roof of the hardtop.

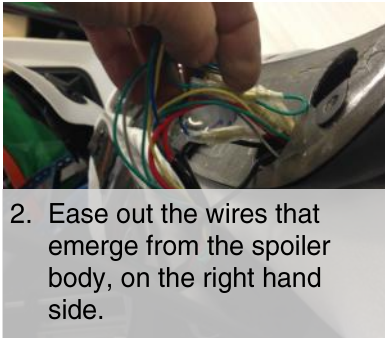


2. Ease out the wires that emerge from the spoiler body, on the right hand side.

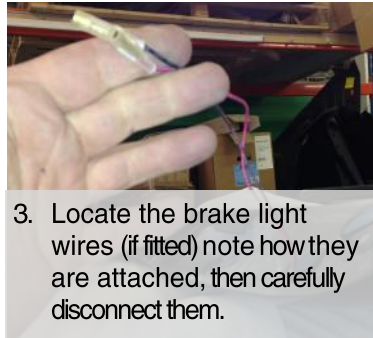

3. Locate the brake light wires (if fitted) note how they are attached, then carefully disconnect them.


4. If the spoiler needs to be stabilised, then apply 4mm self adhesive Neoprene as shown below.

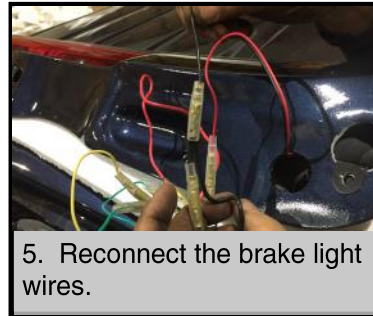


5. Reconnect the brake light wires.



6. Re-install the rest of the cables into the spoiler.

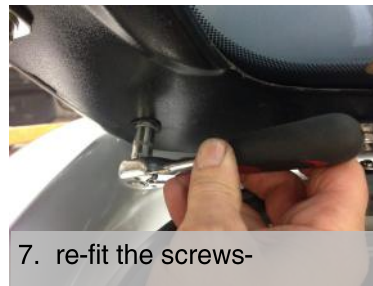

7. re-fit the screws-

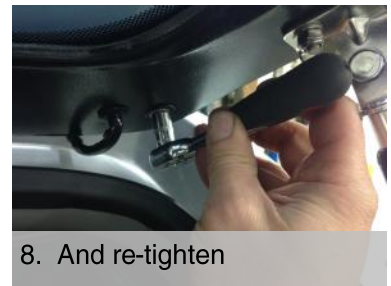

8. And re-tighten



9. Check the spoiler is secure.