


CANOPY INSTALLATION INSTRUCTIONS

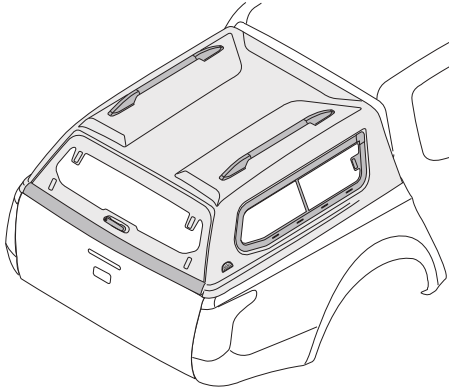

Before Installation


Please read these instructions carefully. If you have any questions regarding the fitting of this item **call: 0845 6444704** or **email: fitting@autostylinguk.com**

Precautions

1. Ensure working area is clear from obstructions.
2. Any loose items of clothing or jewelry should be removed.


Product name : CANOPYIII FBL
(REAR GLASS DOOR) (CENTRAL LOCK)
Model name : MITSUBISHI TRITON DBC 2014
Inst. number : L04-0284

Component parts








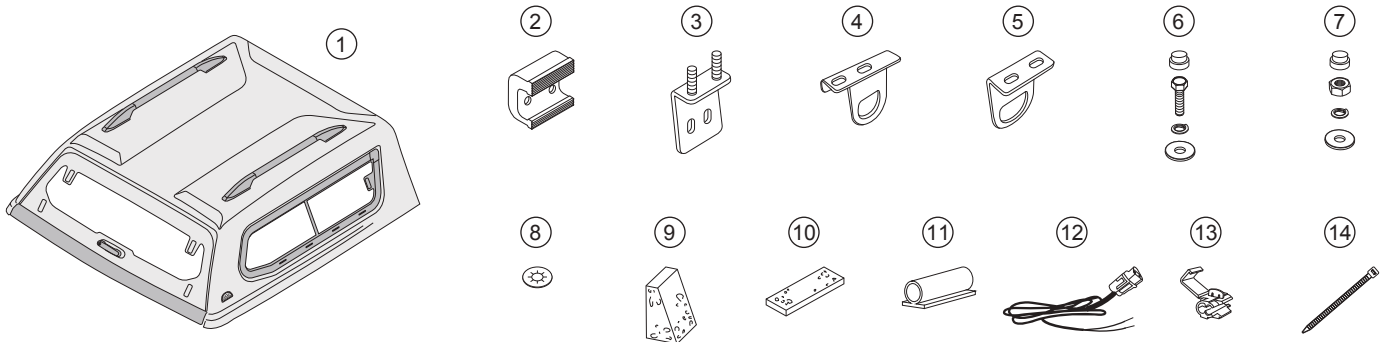


No.	Part name	Q'ty
1.	Canopy shell set	1 Set
2.	Clamp lock FB	4 Pcs.
3.	Plate rail lock FB	4 Pcs.
4.	Plate rail lock front FL (RH/LH)	1 Set
5.	Plate rail lock rear FL (RH/LH)	1 Set
6.	Bolt set M8x40	8 Sets
7.	Fastener M8 set	8 Sets
8.	Plastic washer	8 Pcs.
9.	Sponge FB	2 Pcs.
10.	Sponge FL	2 Pcs.
11.	Seal rubber pick up	2 Pcs.
12.	Cabin cord set	1 Set
13.	Tab	2 Pcs.
14.	Cable tie 8"	6 Pcs.









Tools used

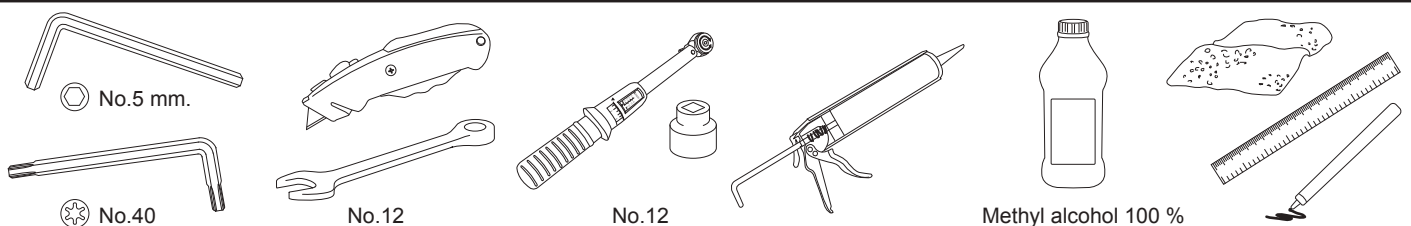



Instruction procedure (without bedliner)

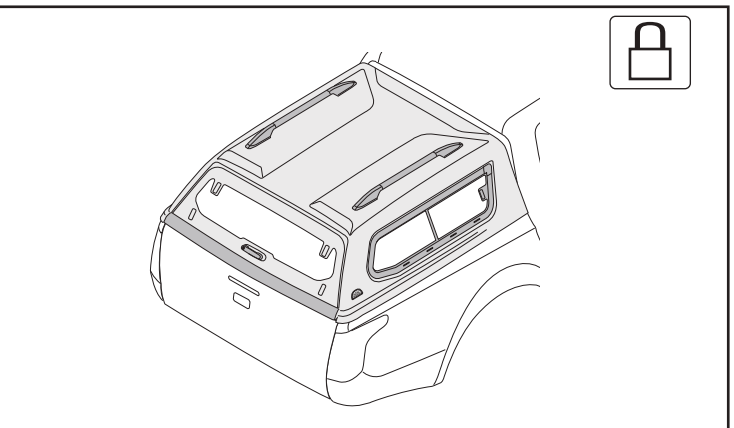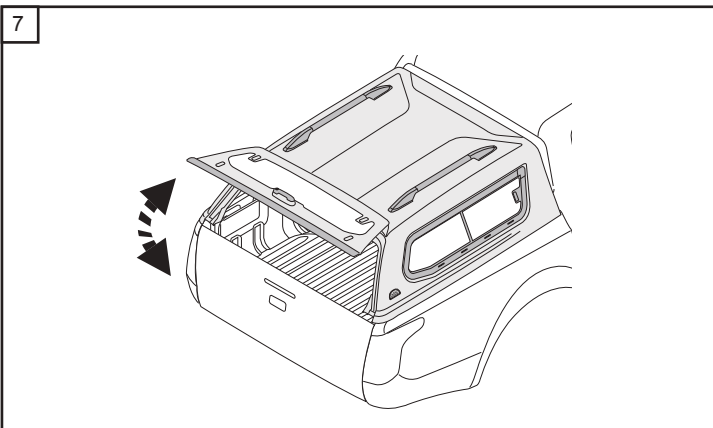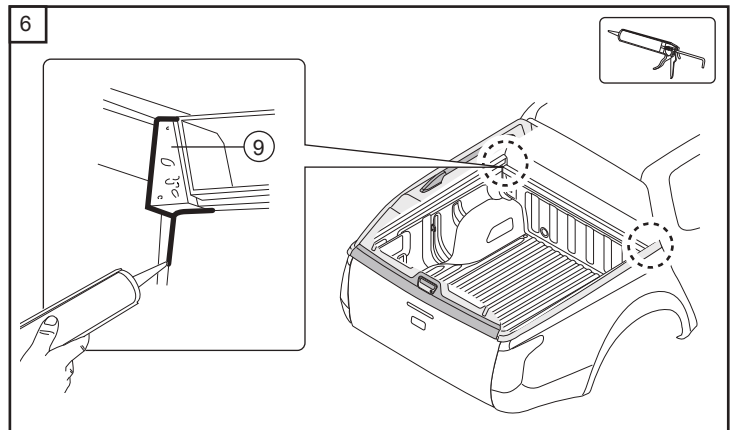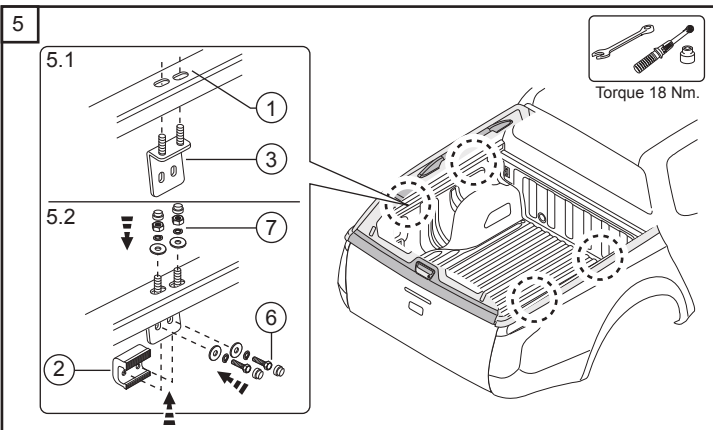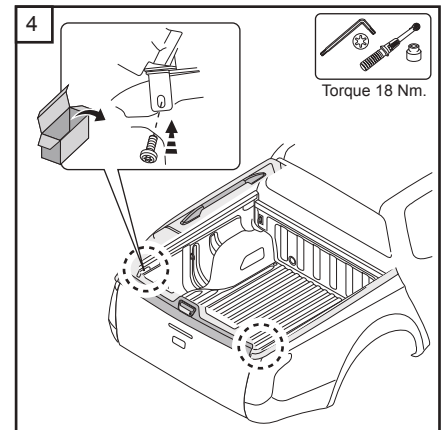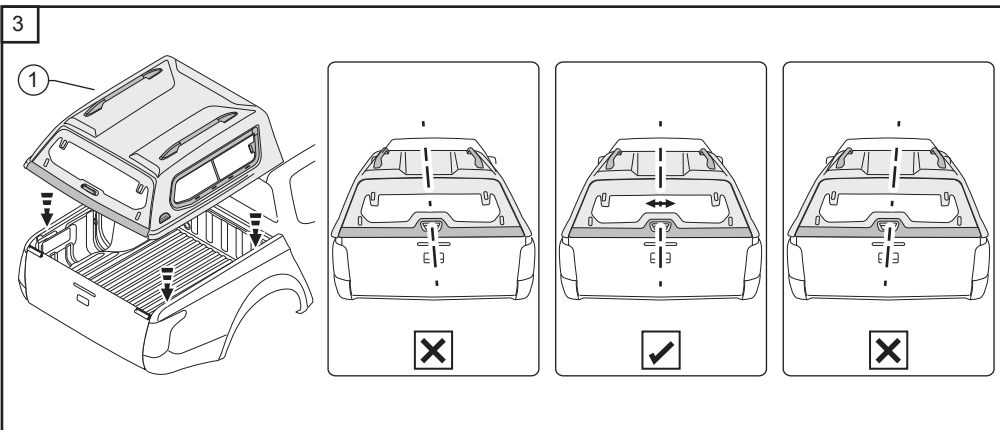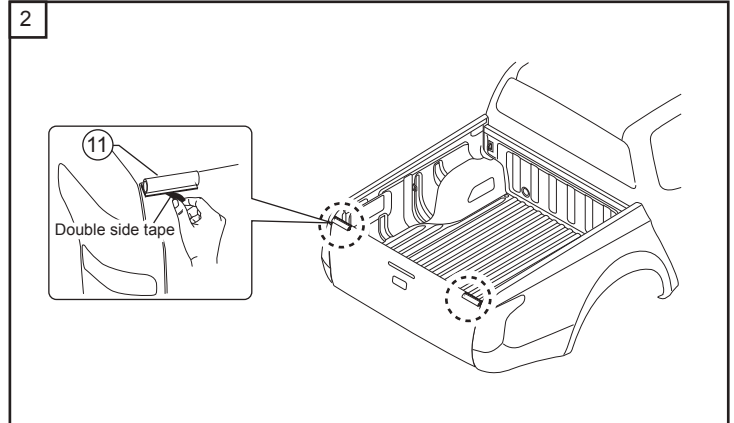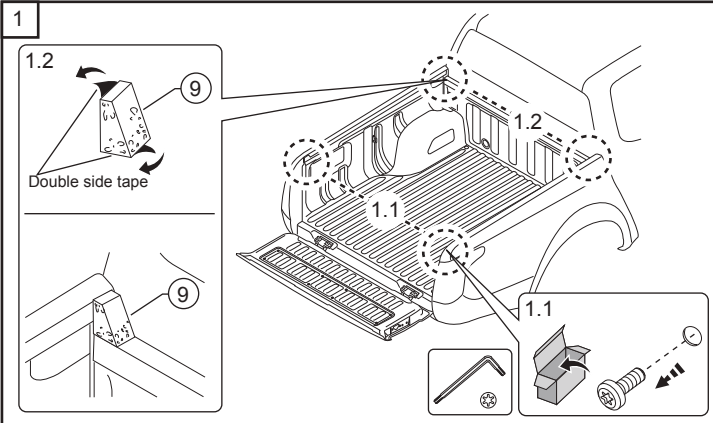


Instruction procedure (with bedliner)

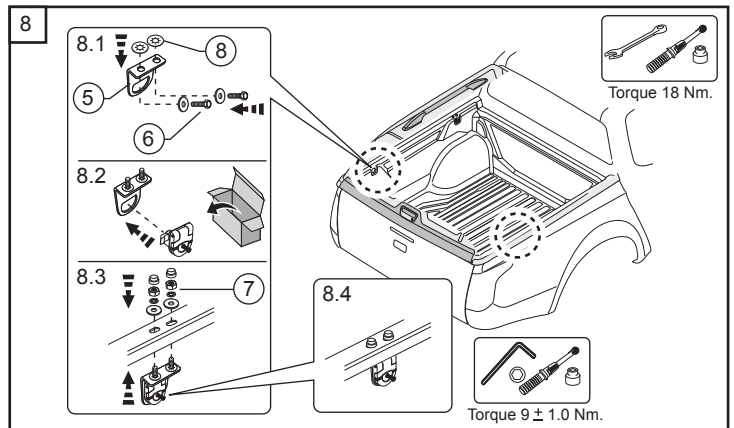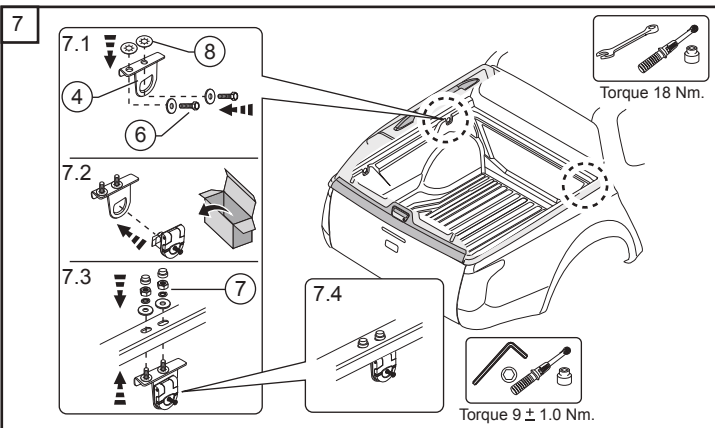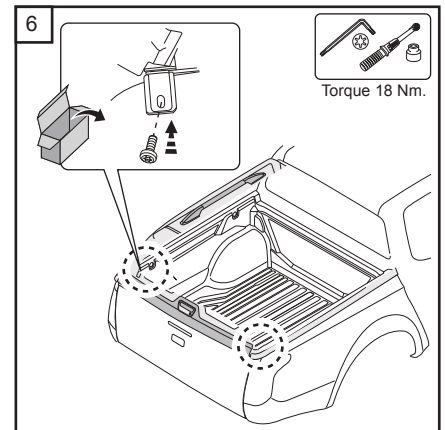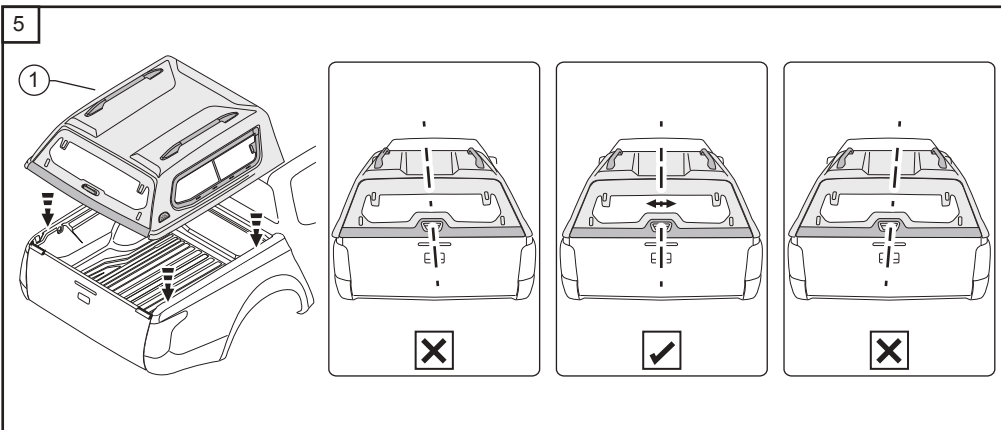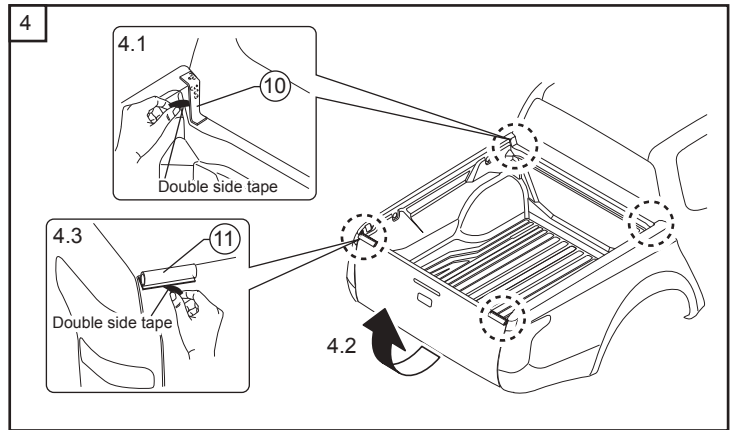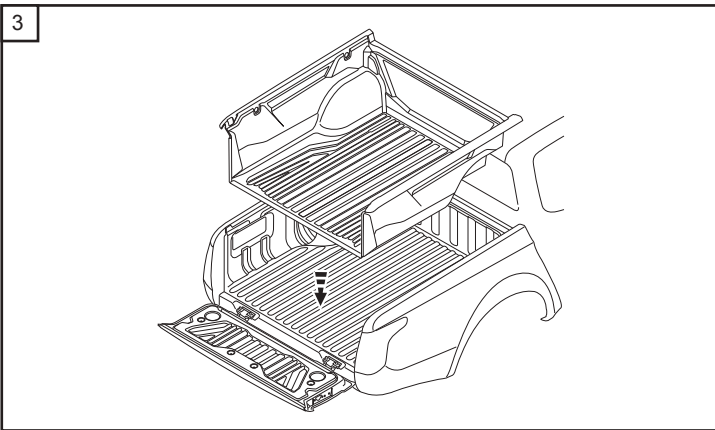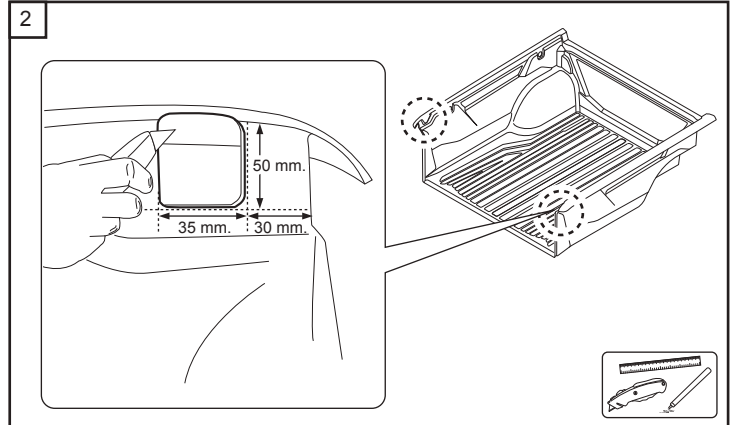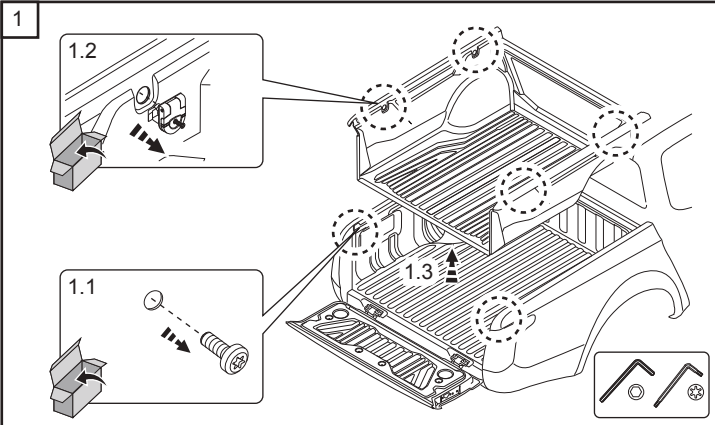

Instruction procedure (with bedliner)

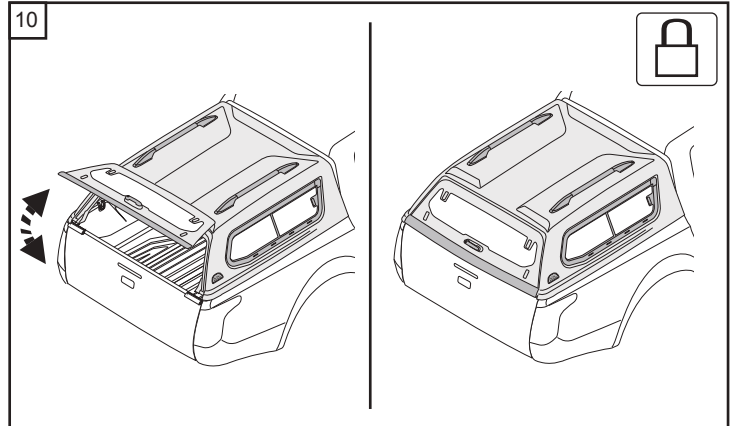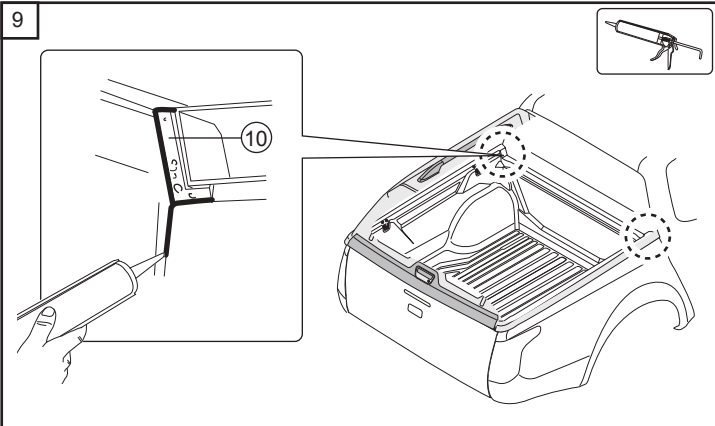

NOTE : ROOM LAMP

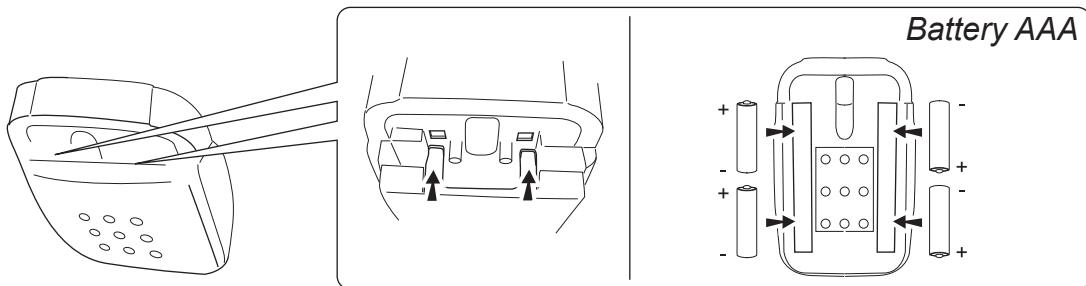

Instruction procedure (Cord set)

