

FIT 1090

TRUCKMAN
THE UK'S LARGEST HARDTOP MANUFACTURER

WATER DEFENCE KIT
FITTING INSTRUCTIONS



TOYOTA HILUX MK8

SINGLE CAB

TRUCKMAN PART NUMBER: 8HMWDKFCTOH8S

1ST EDITION

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 01384 485405 or email fitting@truckman.com.

Failure to comply with these instructions may affect any warranty considerations

KIT CONTENTS

				<p>Tools Required: Pozi #2 Driver. 10mm Spanner/socket Drill/driver+ 6mm bit. Pencil (For liner) Jigsaw/Hacksaw Trimming knife</p>
1 x Set of mouldings (L & R)	8 x 6mm Washers.	4 x 6mm x 16mm Screws.	4 x 6mm Locking Nuts.	

1. Before fitting commences and, if possible, with the hardtop in place, offer-up the units to the vehicle and check the clearance at the top. Remove the hardtop and any liner before fitting the kit.


(The water defense kit is designed to fit the Truckman Classic and Utility hardtops but could be trimmed down to fit with other products such as tonneaus)

The plastic can be trimmed with a hacksaw or a jigsaw fitted with a fine blade. Round off any sharp edges with a file before fitting.

FITTING



3. Locate and remove the rear light cluster retaining screws

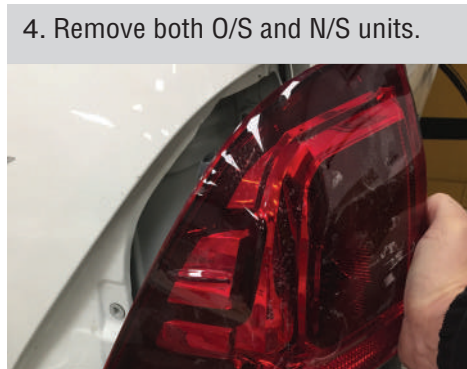

4. Remove both O/S and N/S units.



5. With liner removed, offer up the units to the vehicle as shown.



6. On the reverse, mark through the pre-drilled holes on to the vehicle body.




7. Drill 6mm holes, in the positions marked, through the vehicle body. Treat cut edges with rust inhibitor.

8. Insert the 6mm x 16mm screws, with a washer fitted, through the moulding from the inside of the load bed. Fit another washer and a locking nut on to each one inside the light recess.



9. The Truckman Classic or Utility hardtop can now be fitted (or re-fitted).

IF A LINER IS TO BE FITTED TO THE VEHICLE THIS WILL NEED TO BE TRIMMED AS IN THE ILLUSTRATIONS BELOW. THE LINER SHOULD BE MARKED OUT AND REMOVED BEFORE TRIMMING WITH A SHARP KNIFE OR A SAW (AIR SAW OR JIGSAW) ANY ROUGH EDGES OR BURRS SHOULD BE REMOVED.

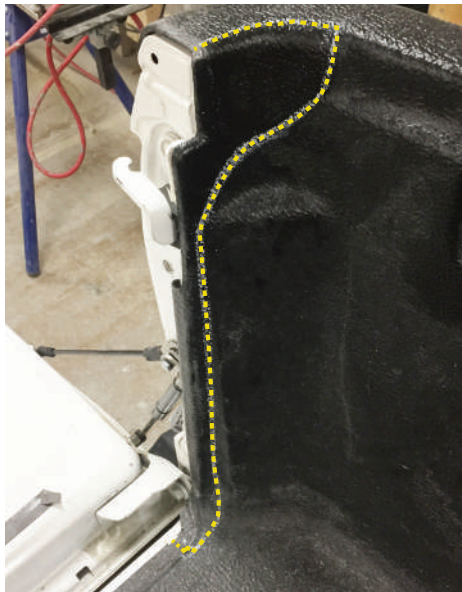

MODELS COVERED:

Truckman Water defence kit for:
Toyota Hilux Mk8 (2016-date) Single Cab.

These instructions are correct at time of publication only and may be amended without notice. For the latest version contact fitting@truckman.com or call us on 01384 485405



Auto Styling Truckman Group Limited,
Unit 14 Narrowboat Way,
Brierley Hill, DY2 0EZ, United Kingdom

Tel: 01384 485 405 **Fax:** 01384 485453

Email: fitting@truckman.com

Web: www.truckman.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at www.truckman.com