

FIT 1053

TRUCKMAN
THE UK'S LARGEST HARDTOP MANUFACTURER

WATER DEFENCE KIT FITTING INSTRUCTIONS



TOYOTA HILUX MK8

DOUBLE CAB
& EXTRA CAB

TRUCKMAN PART NUMBER: 8HMWDKFTOH8

1ST EDITION

TOYOTA HILUX MK8

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 01384 485405 or email fitting@truckman.com.

Failure to comply with these instructions may affect any warranty considerations

KIT CONTENTS



1 x Set of mouldings
(L & R)



8 x 6mm Washers.



4 x 6mm x 16mm
Screws.



4 x 6mm Locking
Nuts.

Tools Required:

Pozi #2 Driver.
10mm Spanner/socket
Drill/driver+ 6mm bit.
Jigsaw/Hacksaw
Trimming knife
Pencil
Measure.

1. Before fitting commences and, if possible, with the hardtop tonneau cover or other accessory in place, offer-up the units to the vehicle and check the clearance of the cup at the top.

(The water defense kit is designed to fit with most canopies but may be trimmed down to suit other products such as tonneaus)

The plastic can be trimmed with a hacksaw or a jigsaw fitted with a fine blade.

Round off any sharp edges with a file before fitting.



LINER

IF A LINER IS TO BE FITTED TO THE VEHICLE THIS WILL NEED TO BE TRIMMED AS IN THE ILLUSTRATIONS BELOW. THE LINER SHOULD BE MARKED OUT AND REMOVED BEFORE TRIMMING WITH A SHARP KNIFE OR A SAW (AIR SAW OR JIGSAW) ANY ROUGH EDGES OR BURRS SHOULD BE REMOVED.



3. Remove both O/S and N/S units.



2. Locate and remove the rear light cluster retaining screws



4. With liner removed, offer up the units to the vehicle as shown.



5. On the reverse, mark through the pre-drilled holes on to the vehicle body.



6. Drill 6mm holes, in the positions marked, through the vehicle body.



7. If a load bed liner is to be fitted, place it into the vehicle. Transfer the holes back through the liner from inside the rear light recess as shown.



8. Treat the raw edges of the holes in the vehicle body with rust inhibitor.

9. (Without liner) Insert the 6mm x 16mm screws, with a washer fitted, through the moulding from the inside of the load bed. Fit another washer and a locking nut on to each one inside the light recess.




WATER DEFENCE KIT

TRUCKMAN

10. (With Liner) Place the water defence kit in position and then re-fit the trimmed and pre-drilled liner.

11. Insert the screws with washers fitted through the holes in the liner then through the plastic mouldings and the vehicle body. Fit a washer and nut to each.

12. Tighten the fittings.

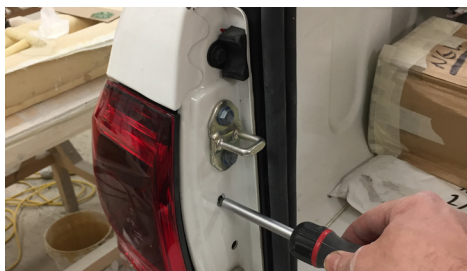

13. Refit the rear light units.

MODELS COVERED:

Truckman Water defence kit for:

Toyota Hilux Mk8 (2016-date) Double and extra cabs.

These instructions are correct at time of publication only and may be amended without notice. For the latest version contact fitting@truckman.com or call us on 01384 485405

Auto Styling
TRUCKMAN

Auto Styling UK Limited,
Unit 14 Narrowboat Way,
Brierley Hill, DY2 0EZ, United Kingdom

Tel: 01384 485 405 **Fax:** 01384 485453

Email: fitting@truckman.com

Web: www.truckman.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at www.truckman.com