

ASX HARDTOP

ISUZU
RODEO MK1-3

REVISION 1



FITTING INSTRUCTIONS



**Auto
Styling**
TRUCKMAN

www.autostylinguk.com

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 0845 6444704 or email fitting@autostylinguk.com.

Failure to comply with these instructions may affect any warranty considerations

Kit Contents



1 x ASX Hardtop



1 x Wiring Loom



1 x Touch Up Paint



6 x Clamp Locks

Tools Required



Medium Philips Screwdriver
17 mm Wrench / Socket
(Use a Torque Wrench if possible)

Preparation



- 1 Remove the cardboard packaging from around the top. Keep the packaging intact.
- 2 Remove the fitting kit and close the bulkhead window.

- 3 Open the pop out windows to remove the foam protection. Then close the windows.
- 4 Unscrew the screw at the top of the rubber seals.

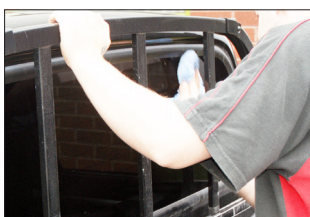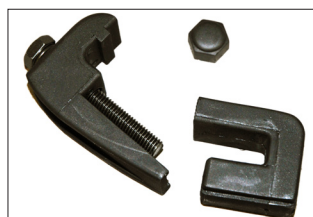

- 5 In the fitting kit, remove the bolt caps from the clamp locks and completely unscrew each of them.
- 6 Thoroughly clean the rear window of the pickup and the hardtop's bulkhead window.



NEED ADVICE?

Call our experts on 0845 6444704 or email fitting@autostylinguk.com

Failure to comply with these instructions may affect any warranty considerations

- 1 Remove the roll of tape from the bag.



2 Cut one end of the tape square.

3 Partly remove the backing from the tape.

4 Carefully apply it to the tailgate, rubbing outwards to remove any bubbles as you go.



5 Trim the tape square at the other end.



NEED ADVICE?

**Call our experts on 0845 6444704 or
email fitting@autostylinguk.com**



www.autostylinguk.com

Fitting instruction revisions may be found at www.autostylinguk.com

INSERT SHEET INSERT SHEET INSERT SHEET INSERT SHEET INSERT SHEET

Page Intentionally Left Blank

Page Intentionally Left Blank

Page Intentionally Left Blank

Page Intentionally Left Blank

Fitting

- 1 Lift the hardtop onto the bed.



HEAVY LIFTING
At least 3 people
required for lifting



- 2 Loosely fit the clamps in between the gaps in the black rubber strip.



- 3 Align the top centrally on the bed. Ensure there is a gap between the hardtop and the vehicle cab, and that the seal under the hardtop door is just touching the tailgate or bedliner.


- 4 With the door shut, tighten the clamps to 10Nm Torque using the 17mm wrench (Start with the middle clamps).



(Just more than hand tight / 10Nm Torque)



- 5 Replace the bolt caps onto the clamps.

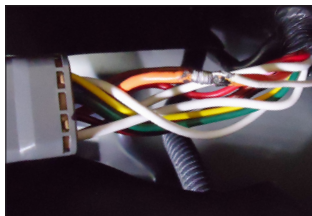



- 6 In the light cluster solder the **RED** (Brake) and **BLACK** (Earth) wires as shown.


- 7 Under the tailgate, solder the **GREY** (+12V) wire to the towbar electrics, as shown.

- 8 Solder the **GREEN** wire to the thin **BLACK WHITE** wire (Door Switch).

- 9 Solder the **YELLOW** wire to the **BLUE RED** wire (Central Locking - Lock)

- 10 Solder the **GREY** wire to the **PLAIN BLUE** wire (Central Locking - Unlock)

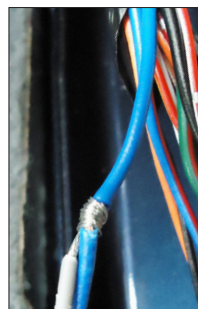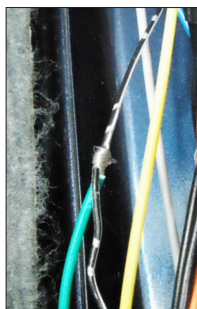

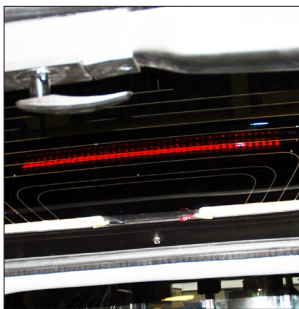

- 11 Open the hardtop door. Ensure the light is set to "Door" and that the interior light is on. Close the door and check it switches off.
- 12 Press the brake pedal to check the brake light is on. Use reflective surfaces or a second person.

- 13 Check that the hardtop locks and unlocks with the vehicle's remote.



- 14 Replace all door trim and cable tie all external wire to the chassis. Repeat steps 9-12 to check everything still works.



NEED ADVICE?

Call our experts on 0845 6444704 or email fitting@autostylinguk.com

IMPORTANT NOTES

Bedliners **must** be under rail for a good fit.
Ensure the tailgate and side windows are closed when driving.
Do not place animals in the load area without adequate ventilation.
Do not exceed the load limit on the roof rails
(See sticker on the hardtop)

MAINTENANCE

Use a light oil to lubricate the lock and hinges.
Check the tightness of the fixing clamps / bolts.
(Just more than hand tight / 10Nm Torque)

CLEANING

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.

Auto Styling
TRUCKMAN

Auto Styling UK Limited,
Unit 4 Narrowboat Way, Brierley Hill, West Midlands, DY5 1UF, UK
Tel: 0845 6444704 Fax: 0845 64445014
Email: fitting@autostylinguk.com

www.autostylinguk.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so.
Improper fitting may result in injury or death.
For your safety, wear your seat belt and do not drink and drive.
Electricity can cause fire or electrocution. Disconnect the battery before fitting.

Due to the complexity of the product, the manufacturer accepts no responsibility for damage to the vehicle or its components caused by the use of the product.

Fitting instruction revisions may be found at www.autostylinguk.com

