

FIT1018

# *Auto Styling* **TRUCKMAN**

CLASSIC & UTILITY HARDTOPS  
FITTING INSTRUCTIONS



FIAT FULLBACK (160n)

DOUBLE CAB

MITSUBISHI L200 SERIES 5 (150n)

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 01384 485 405 or email fitting@autostylinguk.com.

Failure to comply with these instructions may affect any warranty considerations

CONTENTS



1 x Classic or Utility Hardtop



1 x Protective Tape (Roll)



6 x Clamp Locks



1 x Bulkhead moulding

**Tools Required:**

- 14mm Spanner.
- Torque Wrench
- Silicone sealant
- Scissors
- Water spray (optional)
- Squeegee (optional)

PREPARATION

**OVER RAIL BED LINERS:** This canopy is not designed to be fitted with an over rail type liner. Therefore, Truckman highly recommends converting to or replacing with an under rail bed liner.



**1.** Remove the lid and sleeve of the cardboard packaging and set aside.



**2.** Take the canopy out of the box and open the rear door.



**3.** Unscrew the protective timbers from the base of the canopy.




**4.** Clean the front and side rails of the vehicle's bed.



**5.** Locate the bulkhead moulding in the box base and remove the backing from the adhesive tape.

**6.** Apply the plastic moulding to the vehicle's front rail and press it down firmly.

NOTE POSITION AND ORIENTATION OF MOULDING

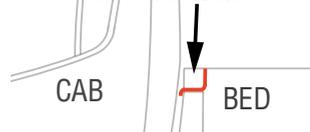

**7.** Seal the vertical joint between the moulding and the vehicle body. Continue the sealant down to fill the small gap in the vehicle bodywork below the moulding.



**8.** Completely unscrew each of the clamps.



**9.** Thoroughly clean the vehicle's rear window.

**10.** Shut the door of the canopy and the vehicle's tailgate.

**HEAVY LIFTING**

We recommend the use of 4 people to lift the hard top.



**11.** Lift the canopy on to the bed of the vehicle taking care that the front of the canopy is placed into the bulkhead moulding.



**12.** Line up the front edge of the canopy with the front edge of the vehicle's bed.



**13.** Carefully adjust the position of the canopy so that it lies centrally on the vehicle.



**14.** Close the rear door and check the lower seal is touching the tailgate.



**15.** Assemble the clamps, as shown, in the recesses of the side rails.




**16.** Tighten the clamps to approx 6Nm.




**17.** Re-check the position of the canopy and door. If necessary, slacken off the clamps, adjust the position and re-tighten them.



**18.** Thoroughly clean the top of the vehicle's tailgate

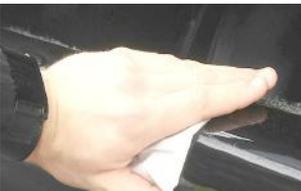

**19.** Unroll the protective tape and cut one end square.

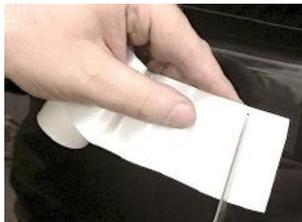

**20.** Peel away a little of the backing paper.



**TIP:** Apply a fine spray of water to the top of the tailgate before positioning the protective tape. This will allow a little 'adjustment' before the water dries and the adhesive fixes the tape into position.



21. Carefully apply the tape, where the door seal touches, removing any bubbles as you go. Use a squeegee if available.



22. Trim the tape square at the other end.

This completes fitting of the **TRUCKMAN** Classic or Utility hardtop.

THESE INSTRUCTIONS CONTAIN IMPORTANT INFORMATION REGARDING CARE AND MAINTENANCE OF THE PRODUCT. PLEASE RETAIN FOR REFERENCE.



### IMPORTANT NOTES

**Ensure** the tailgate and side windows (if applicable) are closed when driving.

**Do not** place animals in the load area without adequate ventilation.

**Do not** exceed load limit when using roof rails.

**Do not** use a pressure-washer near the seals.

### MAINTENANCE

**MONTHLY** Check the tightness of the fixing clamp bolts (*approx 6Nm Torque*)

**3 MONTHLY** Use a light oil to lubricate the lock and hinges.

### CLEANING

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.

### MODELS COVERED:

Truckman Classic (Solid sided) and Utility (Side access) Hardtop for:

Mitsubishi L200 Series 5 2015 - Onwards, Double Cab.

Fiat Fullback Double cab.

These instructions are correct at time of publication only and may be amended without notice. For the latest version contact [fitting@autostyling.com](mailto:fitting@autostyling.com) or call us on 01384 485405



**Auto Styling UK Limited,**  
Unit 14 Narrowboat Way,  
Dudley, DY2 0EZ, United Kingdom

**Tel:** 01384 485405 **Fax:** 01384 485453

**Email:** [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com)

**Web:** [www.autostylinguk.com](http://www.autostylinguk.com)

### Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at [www.autostylinguk.com](http://www.autostylinguk.com)