

TRUCKMAN

THE UK'S LARGEST HARDTOP MANUFACTURER

RS HARDTOP FITTING INSTRUCTIONS



FIAT FULLBACK (160n)

DOUBLE CAB

MITSUBISHI L200 SERIES 5 (150n)

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 01384 485 405 or email fitting@autostylinguk.com.

Failure to comply with these instructions may affect any warranty considerations

CONTENTS



1 x Hardtop



1 x Protective Tape (Roll)



6 x Clamp Locks



1 x Bulkhead moulding

Tools Required:

- 14mm Spanner.
- Torque Wrench
- Silicone sealant
- Scissors
- Water spray (optional)
- Squeegee (optional)

PREPARATION

OVER RAIL BED LINERS: This canopy is not designed to be fitted with an over rail type liner. Therefore, Truckman highly recommends converting to or replacing with an under rail bed liner.



1. Remove the lid and sleeve of the cardboard packaging and set aside.



2. Unwrap the canopy and remove the keys from the rear door.




3. Clean the front and side rails of the vehicle's bed.



4. Locate the bulkhead moulding in the box base and remove the backing from the adhesive tape.

5. Apply the plastic moulding to the vehicle's front rail and press it down firmly.

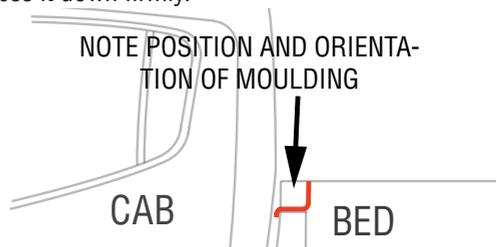

6. Seal the vertical joint between the moulding and the vehicle body. Continue the sealant down to fill the small gap in the vehicle bodywork below the moulding.



7. Completely unscrew each of the clamps.



8. Thoroughly clean the vehicle's rear window.

9. Shut the door of the canopy and the vehicle's tailgate.

HEAVY LIFTING: We recommend the use of 4 people to lift the hard top.




10. Lift the canopy on to the bed of the vehicle taking care that the front of the canopy is placed into the bulkhead moulding.



11. Line up the front edge of the canopy with the front edge of the vehicle's bed.



12. Carefully adjust the position of the canopy so that it lies centrally on the vehicle.

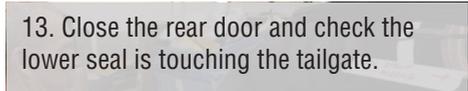

13. Close the rear door and check the lower seal is touching the tailgate.



14. Assemble the clamps, as shown, in the recesses of the side rails.




15. Tighten the clamps to approx 8Nm.

16. Re-check the position of the canopy and door. If necessary, slacken off the clamps, adjust the position and re-tighten them.

17. Check the clamps again after 30 mins.



18. Thoroughly clean the top of the vehicle's tailgate

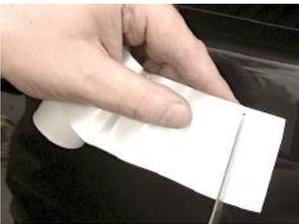

19. Unroll the protective tape and cut one end square.



20. Peel away a little of the backing paper.



TIP: Apply a fine spray of water to the top of the tailgate before positioning the protective tape. This will allow a little 'adjustment' before the water dries and the adhesive fixes the tape into position.



21. Carefully apply the tape, where the door seal touches, removing any bubbles as you go. Use a squeegee if available.



22. Trim the tape square at the other end.

STANDARD SPECIFICATION: The standard version of the RS canopy features a battery operated automatic interior light.



23. Switch the interior light to 'Door'. The unit will switch on and off automatically as the rear door is opened and closed.

NOTE: The light is powered by 4 x AAA batteries (included) which can be accessed by unclipping the lens.

This completes fitting of the **TRUCKMAN** RS hardtop.

OPTIONAL SPECIFICATION: The remote locking version of the RS canopy also features a 12V automatic interior light in addition to the standard brake light. A wiring harness kit is provided and this section describes how to connect it.

Caution: Auto electrics should only be carried out by a competent person. Vehicle wire colours are listed as a guide and may vary on some models.



The function of each wire should be checked before any connections are made.


Ensure the ignition is switched off and the battery -Ve terminal disconnected before connecting any wires.

WIRE COLOUR GUIDE

HARDTOP	FUNCTION	VEHICLE	NOTES - <i>Checked on a 2016 L200</i>
YELLOW	Central locking (Lock)	BLUE/BLACK	+Will momentarily flash +12v when vehicle's
GREY	Central locking (Unlock)	BLUE/RED	- remote is used. (hold in door switch)
BROWN	"Door open" Signal	BROWN/YELLOW	-ve when passenger door is opened.



1. Remove the N/S/R light cluster fixings.

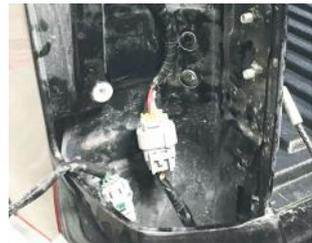


2. Locate the wiring harness in the fitting kit. From beneath the rear of the vehicle, pass the end up into the N/S/R light recess.



3. Pass the plug up into the rear of the loadbed and connect the two parts of the plug together.

4. Run the harness forward following the N/S chassis rail (cable ties are provided).

5. Underneath the vehicle, locate the large grommet directly below the passenger seat. Make a small hole to the side of the main cable and thread through the shorter 'leg' of the harness.

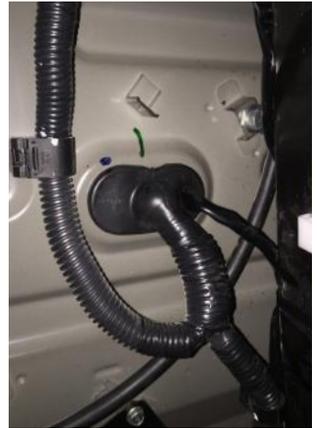


6. Remove the front passenger side sill trim-




7. -and pull away the lower section of the B post rubber seal.

8. Locate the harness wires beneath the carpet under the seat and draw them to the sill area.

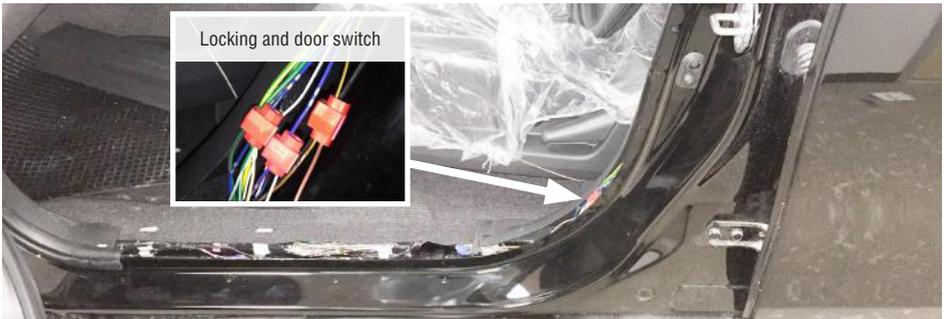

9. The connections can now be made using the guide on page 4. See picture above for wire locations.

10. Take the remaining part of the harness forward, along the chassis rail and up into the engine bay. Route the wires as shown in the photo (right). Connect the red wire to the battery +12V and the black wire to the vehicle body.

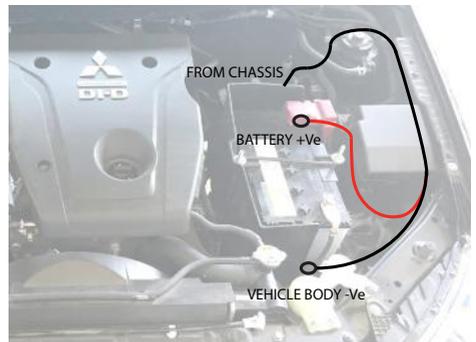



11. Switch the interior light to 'Door'. Check it goes out when the rear door is shut.

12. With all of the doors closed, check that the hardtop locks and unlocks with the vehicle's remote.

13. Lock the canopy with the remote then test the over-ride with the key. Re-lock with the key then ensure the keys are kept safe for use in an emergency.

14. Replace all of the trims and cable tie all wires securely away from moving parts or heat sources.



15. Close all doors and bonnet then repeat steps 11-13. This completes the installation of the RS hardtop.

IMPORTANT NOTES



The Truckman Luxury hardtop is designed to rely on the vehicle's central locking. It should lock and unlock with the vehicle's remote fob. The keys are provided as a back-up only. Should the keys be used, ensure they have been rotated fully clockwise and removed to enable the remote locking to operate.

THESE INSTRUCTIONS CONTAIN IMPORTANT INFORMATION REGARDING CARE AND MAINTENANCE OF THE PRODUCT. PLEASE RETAIN FOR REFERENCE.

IMPORTANT NOTES

Ensure the tailgate is closed when driving.

Do not place animals in the load area without adequate ventilation.

Do not exceed vehicle manufacturer's load limit when using roof rails.

Do not use a pressure-washer near the seals.

MAINTENANCE

AFTER THE INITIAL 300 MILES AND THEN EVERY 3000 MILES

Check the tightness of the fixing clamp bolts (*8Nm Torque*)

3 MONTHLY Use a light oil to lubricate the lock and hinges.

CLEANING

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.

MODELS COVERED:

Truckman RS Solid sided Hardtop for: Mitsubishi L200 Series 5 (2015-on) & Fiat Fullback (2016-on), Double Cab.

These instructions are correct at time of publication only and may be amended without notice. For the latest version contact fitting@autostyling.com or call us on 01384 485405



Auto Styling UK Limited,

Unit 14 Narrowboat Way,
Dudley, DY2 0EZ, United Kingdom

Tel: 01384 485405 **Fax:** 01384 485453

Email: fitting@autostylinguk.com

Web: www.autostylinguk.com

Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at www.autostylinguk.com