

# AEROTOP 3

MITSUBISHI  
L200 MK6

REVISION 1

**TRUCKMAN**  
FITTING INSTRUCTIONS



**Auto  
Styling**  
**TRUCKMAN**

[www.autostylinguk.com](http://www.autostylinguk.com)

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 0845 6444704 or email [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com).

Failure to comply with these instructions may affect any warranty considerations

Kit Contents			
			
1 x Truckman AeroTop Hardtop	6 x Clamp Locks	2 x Rear Door Keys	1 x Warranty Card
			<b>Tools Required</b> 14mm Spanner/Socket 1 x Drill 2 x Drill Bits (11mm + Pilot) 1 x Pair of Pliers
	1 x Protective Tape	1 x VHB Wipe	

### Hardtop Preparation

- 1 Coloured Top**  
Remove the nails and remove cardboard box. Remove the fitting kit from the pallet.



- 2 Gel Coat Top**  
Remove the shrink wrap packaging, retrieving the fitting kit before disposal.




- 2** In the fitting kit, remove the clamp locks and completely unscrew each of them.
- 3** Thoroughly clean the rear window of the pickup and the hardtop's bulkhead window.



### Overrail Bedliners

- !** Although, Auto Styling Truckman recommends replacing with or converting to an undertrail bedliner (see website, bottom of page 3), Truckman tops will fit with **overrail bedliners**. However, they require the bedliner's front lip to be removed and holes to be made for the clamps. See opposite for instructions.

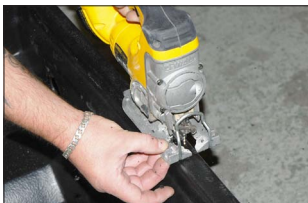

Remove the bedliner and cut the front lip off with a hand held jig-saw.

Drill 57mm Ø holes, 55-60mm down on both sides of the bedliner measured 200mm, 770mm and 1340mm from the front. Clean up all edges and replace the top.



- 4 Clean the top edge of tailboard using the VHB wipe supplied.
- 5 Apply the clear protective tape to the top edge of the tailboard, taking care to avoid bubbles and creases.

**Fitting**



- 1 Lift the top onto the bed (over the ladder-rack if fitted). This is best achieved with one person at the rear door end and two people guiding the front of the top. Keep the rear end slightly raised until the hardtop is in position.

**NOTE:** Do NOT force downwards as this may cause cracking.



- 2 Loosely fit the three clamps to the flange as shown, to both sides.



- 4 Align the top centrally on the bed. Ensure there is a gap between the hardtop and the cab, and that the lower door seal is hard up against the tailgate.

Please turn over for final step.



- 5 With the door shut, tighten the clamps to 10Nm Torque using the 14mm wrench.

Recheck the alignment of the top, and adjust if necessary.

### **NEED ADVICE?**



**Call our experts on 0845 6444704  
or email [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com)**

#### **IMPORTANT NOTES**

Bedliners **must** be underrail for a good fit.  
Ensure the tailgate and side windows (if applicable) are closed when driving.  
Do not place animals in the load area without adequate ventilation.  
Do not exceed the load limit on the roof rails (*See sticker on the hardtop*)

#### **MAINTENANCE**

Use a light oil to lubricate the lock and hinges.  
Check the tightness of the fixing clamps / bolts.  
(*Just more than hand tight / 10Nm Torque*)

#### **CLEANING**

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.

## **Truckman Security Grille**

**A great step up for the protection of your goods from opportunist thieves, available for AeroTops. Can be purchased and fitted to AeroTops after the original sale.**

**Auto Styling**  
**TRUCKMAN**

**Auto Styling UK Limited,**  
Unit 4 Narrowboat Way, Hurst Business Park, Brierley Hill, DY5 1UF, UK  
**Tel:** 0845 6444704 **Fax:** 0845 64445014  
**Email:** [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com)

[www.autostylinguk.com](http://www.autostylinguk.com)

#### **Notice**

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations. For your safety, we recommend that any wiring is performed by qualified Auto Electricians.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at [www.autostylinguk.com](http://www.autostylinguk.com)