

# AEROTOP 3

FORD RANGER MK3-4  
MAZDA BT-50 MK1

REVISION 2

**TRUCKMAN**  
FITTING INSTRUCTIONS



**Auto  
Styling**  
**TRUCKMAN**

[www.autostylinguk.com](http://www.autostylinguk.com)

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 0845 6444704 or email [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com).

Failure to comply with these instructions may affect any warranty considerations

Kit Contents		Tools Required	
			1 x 14mm Spanner/Socket 1 x Pair of Pliers
1 x Truckman AeroTop Hardtop	6 x Clamp Locks	2 x Rear Door Keys	
			
1 x Aluminium Extrusion	1 x Protective Tape	1 x VHB Wipe	
			
2 x Scotch Locks			

### Hardtop Preparation

- 1 Coloured Top**  
Carefully remove the cardboard packaging. Remove the fitting kit from the pallet.



- 2 Gel Coat Top**  
Remove the shrink wrap packaging, retrieving the fitting kit before disposal.





- 2** In the fitting kit, remove the clamp locks and completely unscrew each of them.
- 3** Thoroughly clean the rear window of the pickup and the hardtop's bulkhead window.



**!** Although, Auto Styling Truckman recommends replacing with or converting to an underrail bedliner (see website, top of page 3), Truckman tops will fit with **overall bedliners**. However, they require the bedliner's front lip to be removed and holes to be made for the clamps. See opposite for instructions.

***Overrail Bedliners***

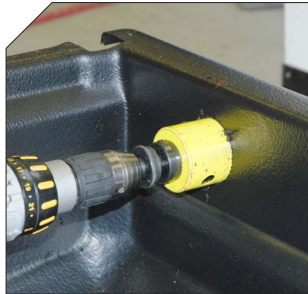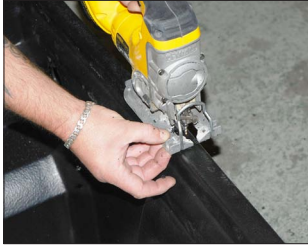



Remove the bedliner and cut the front lip off with a hand held jig-saw.

Drill 57mm Ø holes, 55-60mm down on both sides of the bedliner measured 200mm, 770mm and 1340mm from the front. Clean up all edges and replace the liner.



For instructions on how to convert an overrail bedliner to an underrail bedliner visit our website at: [www.autostylinguk.com/info/fitting-instructions/](http://www.autostylinguk.com/info/fitting-instructions/)

***Vehicle Preparation***

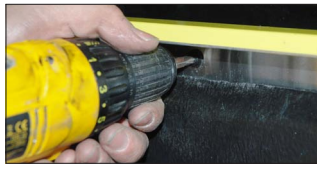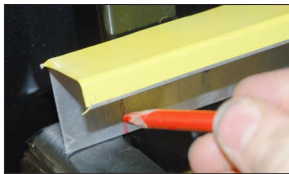


- 1 Lay the extrusion across the back of the bed and mark.
- 2 Cut the extrusion at this mark to fit between the rails.
- 3 Attach the extrusion to the backboard so that it is level with the side rails.
- 4 Fill any gaps with silicon to stop water.

- 5 Clean the top edge of tailboard using the VHB wipe supplied or a good quality bodywipe.



- 6 Apply the clear protective tape to the top edge of the tailboard, taking care to avoid bubbles and creases.

- 7 Check which side the wires exit the hardtop. Remove the vehicles rear light cluster from the same side.

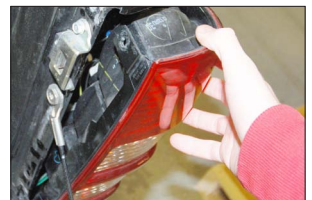

***NEED ADVICE?***

Call our experts on 0845 6444704 or email [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com)

## Fitting



### HEAVY LIFTING

At least 2 people required for lifting.




- 1 Lift the top onto the bed. This is best achieved with one person at the rear door and two guiding the front.
- 2 Align the top centrally on the bed with the seal under the hardtop door is touching the tailgate.

- 3 Loosely fit the three clamps to the flange as shown, to both sides.

- 4 With the door shut, tighten the clamps to 10Nm Torque using the 14mm wrench (Start with the middle clamps).



- 5 Push the rear light wires through the small hole under the loadbed rail.

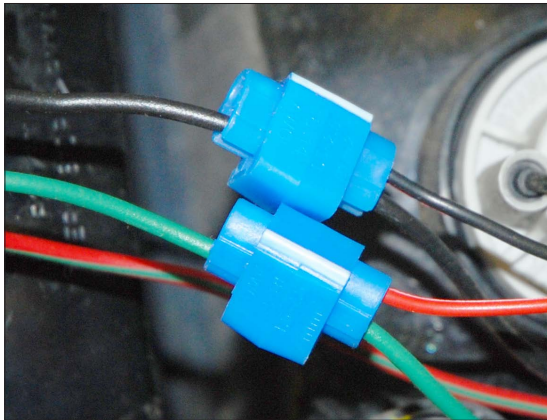

- 6 Use scotch locks to attach the hardtop's brake light (the **RED** and **BLACK** wire you pushed through earlier) to the vehicle's brake light.

HARDTOP	VEHICLE
<b>RED</b>	<b>PLAIN GREEN</b>
<b>BLACK</b>	<b>BLACK</b>

Test the brake light and replace the light cluster.

# Auto Styling

## TRUCKMAN

Auto Styling UK Limited,

Unit 4 Narrowboat Way, Hurst Business Park, Brierley Hill, DY5 1UF, UK

Tel: 0845 6444704 Fax: 0845 64445014

Email: fitting@autostylinguk.com

[www.autostylinguk.com](http://www.autostylinguk.com)

### Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations. For your safety, we recommend that any wiring is performed by qualified Auto Electricians.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at [www.autostylinguk.com](http://www.autostylinguk.com)