

# ***Auto Styling*** **TRUCKMAN**

## UTILITY TOP FITTING INSTRUCTIONS



ISUZU D-MAX MK4

EXTENDED CAB

Please read these instructions carefully. If you have any questions regarding the fitting of this item call 01384 485 405 or email [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com).

Failure to comply with these instructions may affect any warranty considerations



1 x Utility Hardtop



1 x Protective Tape (Roll)



6 x Clamps



3 x Set of Keys

Also includes:  
VHB Wipe

#### Tools Required

14mm Spanner or socket  
PH2 Screwdriver  
Silicone Sealant  
Scissors  
Water spray & Squeegee



#### 1. Gel Coat Top

Remove the shrink wrap packaging, retrieving the kit contents before disposal.




#### 1. Painted Top

Remove the cardboard packaging and the kit contents carefully from the pallet.




**NOTE:** The vehicle's third brake light must be disconnected to avoid glare in the rear view mirror.

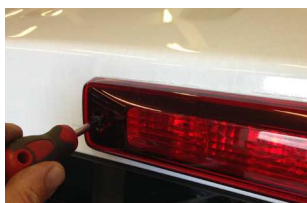

2. Unscrew the vehicle's third brake light and pull it away from the bodywork.

3. Un-clip the connector and disconnect the wires then replace the light unit.

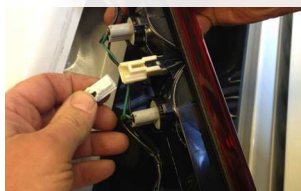

#### NOTE:


#### OVER RAIL BED LINERS

Due to the uneven surface, over rail bed liners can cause the hardtop to leak.

Auto Styling Truckman highly recommends converting to or replacing with an under rail bed liner.



4. Thoroughly clean the vehicle's rear window and the hardtop's bulkhead window (if fitted).

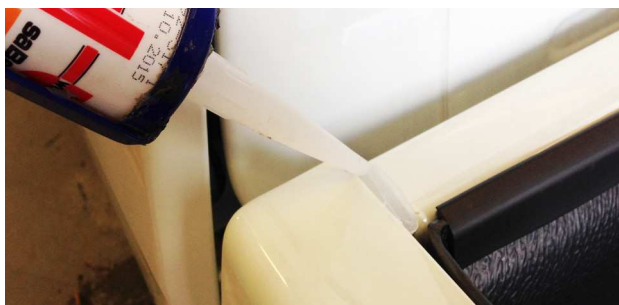

5. Fill the front corners of the bed with silicone sealant. (Where the side rails meet the front rail).



**6.** Lift the hardtop on to the vehicle.

**HEAVY LIFTING**

We recommend the use of 4 people to lift the hardtop.



**7.** With the top now on the vehicle, adjust the position so the front lines up with the vehicle body (as above), and the seal under the rear door is just touching the tailgate.



**8.** Align the top centrally on the vehicle bed.



**9.** Completely unscrew each of the clamps.



**10.** Assemble the clamps in position, on the side rails.



**11.** Tighten the clamps gradually to approx 6Nm.

**12.** Re-check the position of the canopy and, if necessary, slacken the clamps and adjust before re-tightening to 6Nm.

**NEED ADVICE?**  
Contact us on 01384 485 405  
or [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com)




**NOTE:**

**TAILGATE PROTECTION**


A roll of clear protection tape is provided to prevent particles of road dirt, trapped between the door seal and vehicle's tailgate, from damaging the paint work.



**13.** Thoroughly clean the top of vehicle's tailgate with the wipe provided.

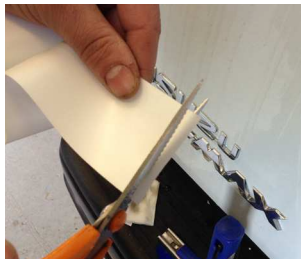


**14.** Unroll the protective tape and cut one end square.

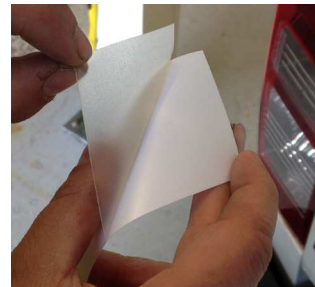

**15.** Partly remove the backing from the tape.



**TIP:** Apply a fine spray of water to the top of the tailgate before positioning the protective tape. This will allow a little 'adjustment' before the water dries and the adhesive fixes the tape into position.

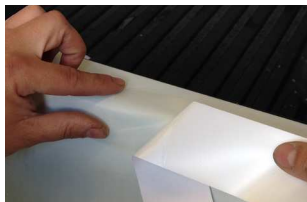

**16.** Carefully apply it to the tailgate where the canopy door seal touches, rubbing outwards to remove any bubbles as you go.



**17.** Using a squeegee will make removing any bubbles easier.



**18.** Trim the tape square at the other end.

#### NEED ADVICE?

Contact us on 01384 485 405  
or [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com)



#### MODELS COVERED:

Truckman Utility, semi-high roof hardtop with side access doors for Isuzu D-Max Mk4 (2012-date) Extended cab.

These instructions are correct at time of publication only and may be amended without notice. For the latest version contact [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com) or call us on **01384 485 405**



#### IMPORTANT NOTES

**Ensure** the tailgate and side windows (if applicable) are closed when driving.

**Do not** place animals in the load area without adequate ventilation.

**Do not** exceed load limit when using roof rails.

**Do not** use a pressure-washer near the seals.

#### MAINTENANCE

**MONTHLY** Check the tightness of the fixing clamp bolts (*approx 6Nm Torque*)

**3 MONTHLY** Use a light oil to lubricate the lock and hinges.

#### CLEANING

Use ordinary non-ammonia based car cleaning products and a soft or microfibre cloth.

**Auto Styling**  
**TRUCKMAN**

**Auto Styling UK Limited,**  
Unit 14 Narrowboat Way,  
Dudley, DY2 0EZ, United Kingdom

**Tel:** 01384 485 405 **Fax:** 01384 485 453

**Email:** [fitting@autostylinguk.com](mailto:fitting@autostylinguk.com)

**Web:** [www.autostylinguk.com](http://www.autostylinguk.com)

#### Notice

It is important that safety warnings in the instructions are adhered to.

Do not attempt to fit this product if you are not competent to do so. Improper fitting may affect your warranty considerations.

Due to tolerances of the vehicle fitting of this product may differ from the exact fitting specifications described in the instructions. It is the responsibility of the fitter that the product is installed correctly.

Fitting instruction revisions may be found at [www.autostylinguk.com](http://www.autostylinguk.com)