





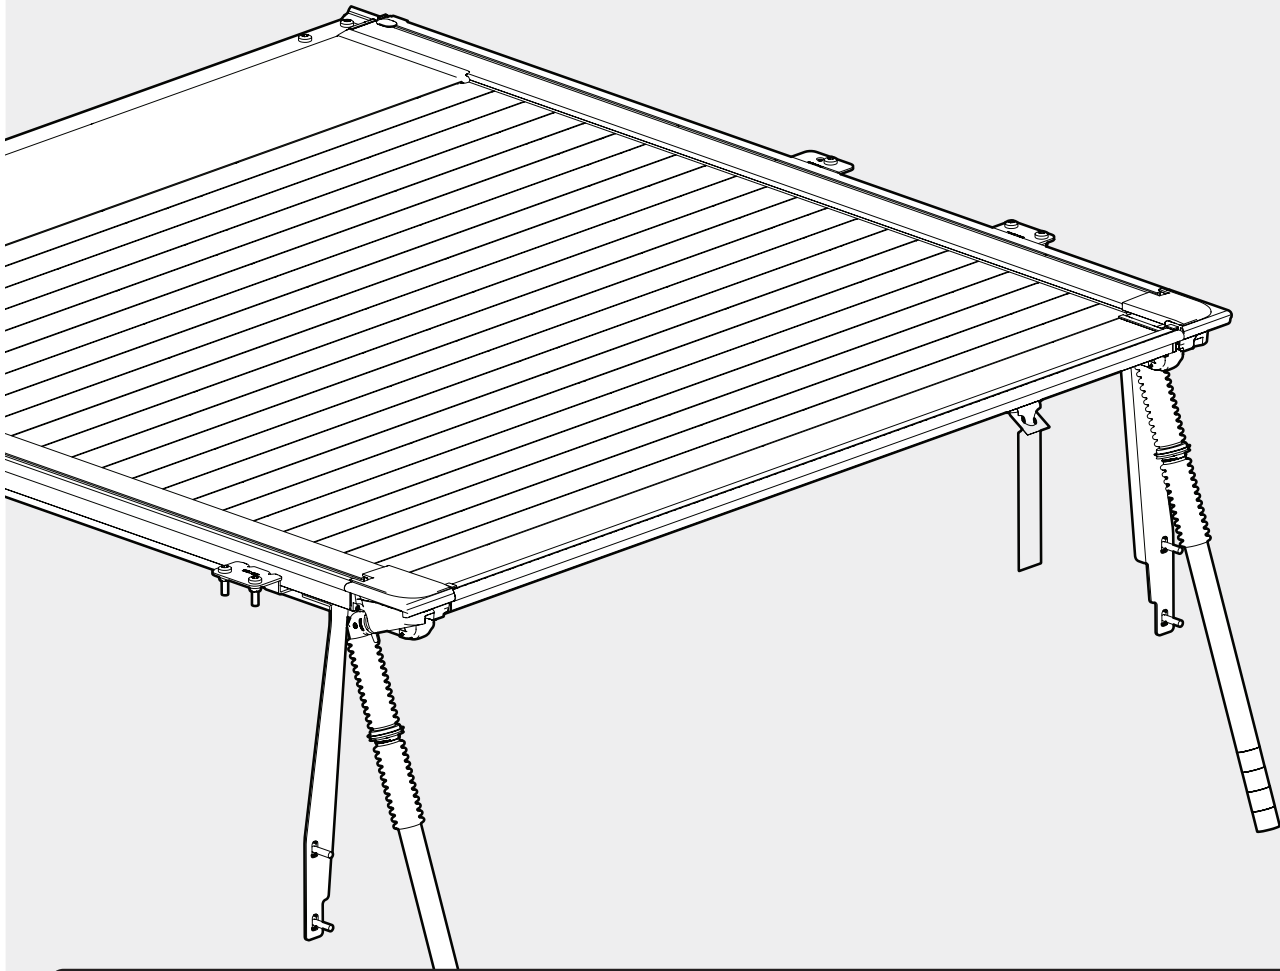


USE THIS MANUAL



MOUNTAIN TOP® EVOe

Field Fix manual











Parts


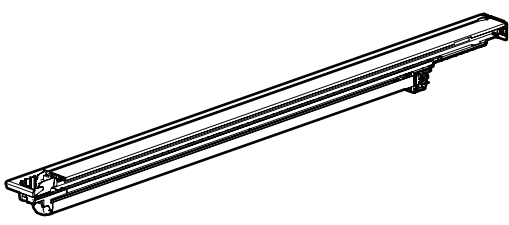
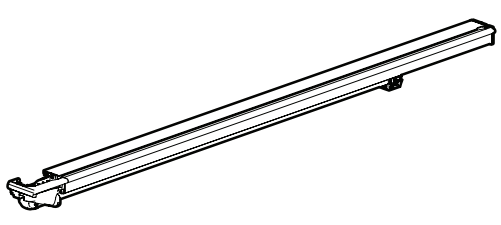
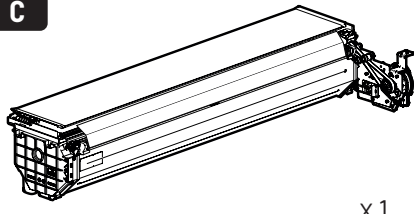
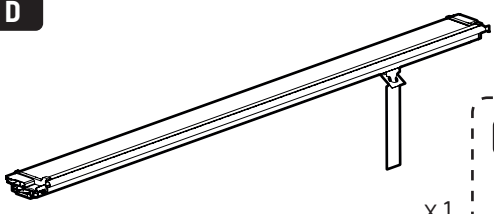
A  x1	B  x1
C  x1 X2  x2	D  x1 Y2  x1











Kit

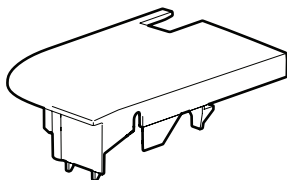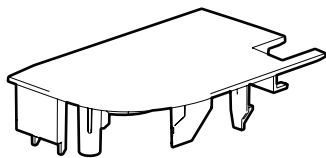
E  LEFT x1	F  RIGHT x1
---	---




Kit

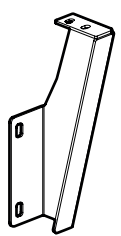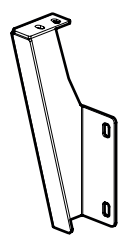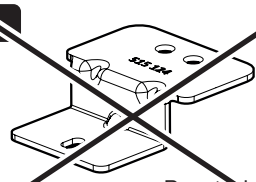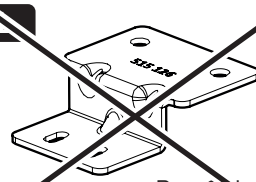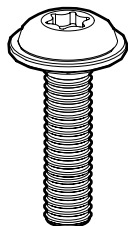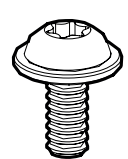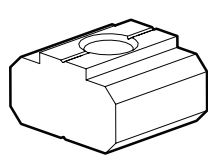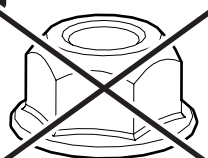
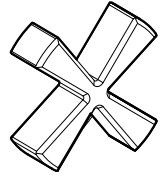
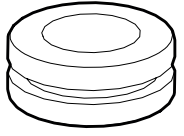
G  x1	H  x1	I  x1	J  x1
K  Rap Cab: x 0 Double Cab: x 2 	L  Rap Cab: x 4 Double Cab: x 2 	M  M8x30 x 18	N  M6x12 Rap Cab: x 16 Double Cab: x 14
O  x6	P  x 6 	Q  x2	R  x1

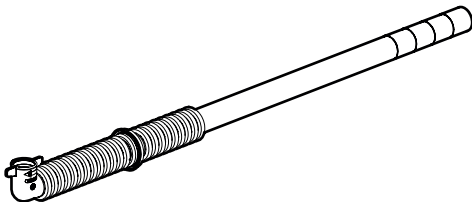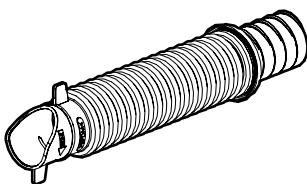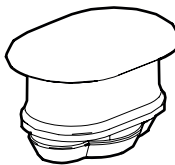
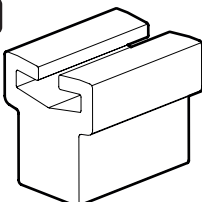
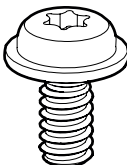
Kit					
S  x 2		T  x 2			
U  x 2	V M6x30  x 2	W  x 5	X M6x16  x 5		

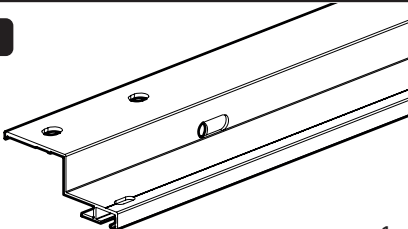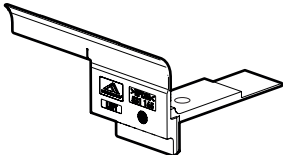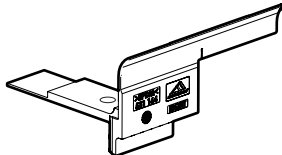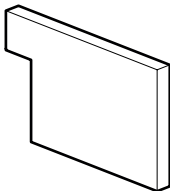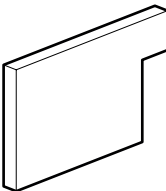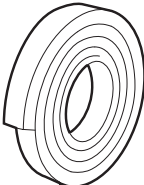
Kit			
A2  x1	B2  x1	C2  x1	
D2  x1	E2  x1	F2  x1	
G2  x1	H2  6x25mm x2	I2  6x10mm x1	J2  M5x14 x2

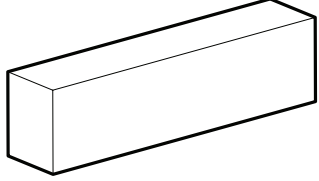
Kit
K2  20x25x100mm x 2

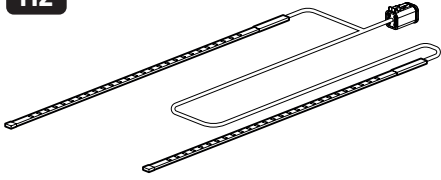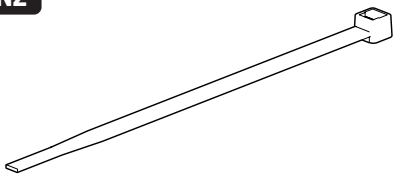
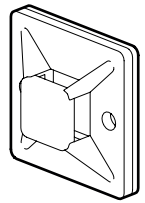
LED Kit		
M2  x1	N2  x6	O2  x6


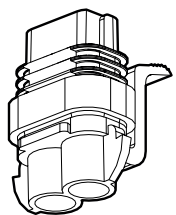
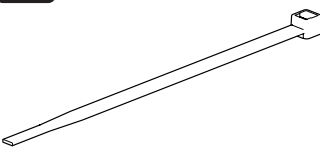
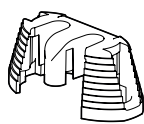
Power supply kit			
P2  x1	Q2  x1	R2  x6	S2  x1







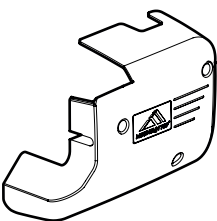

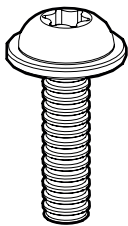
Kit						
T2		x1	U2		x3	
			M5x10			
				V2		x2
				M6x20		

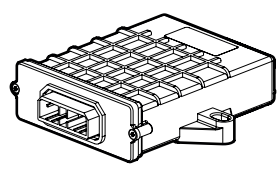Kit
W2  x1

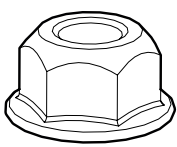
Kit	
Z2 M6	 x2
	Z3 x10

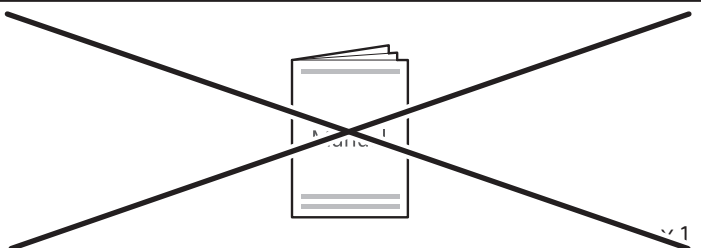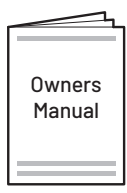Kit	
 x1	 x1

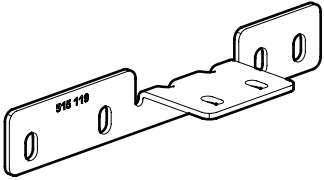
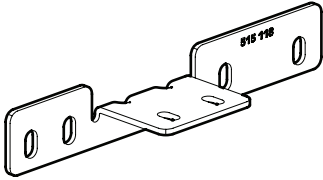
Kit				
A3  M6x16 x 8	B3  M6 x 8	C3  M6 x 8	D3  LEFT x 1	E3  RIGHT x 1

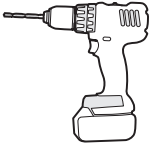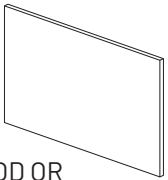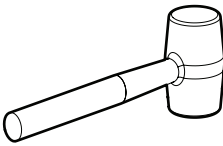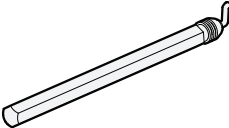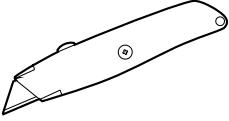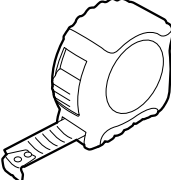Tools needed				
 Ø3.5 + Ø10 MM	1 - 25 Nm  10mm T20, T30, T40	 Rust protection Rostschutzmittel Anti-rouille Anti roest	 SUPER GLUE (CA)	 WOOD OR PLASTIC BOARD
				 H ₂ O
				 LOCTITE 243

Applying rust protection

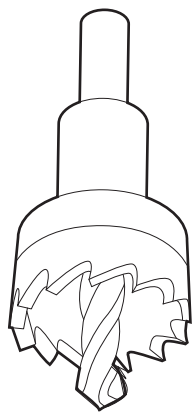

Ø18 / Ø30 / Ø40 mm

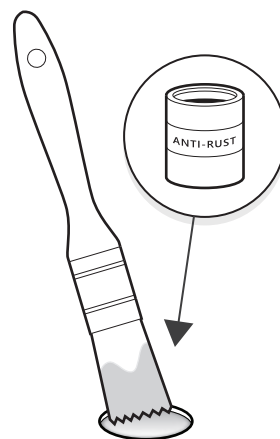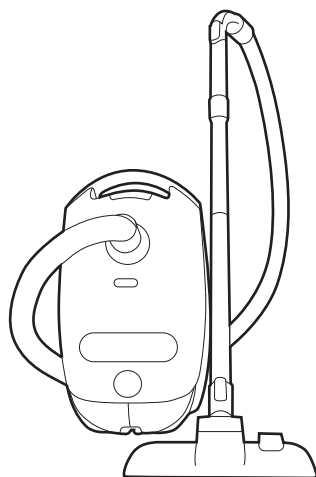




**If sheet metal is scratched during installation,
apply rust protection to damaged areas**




**Tie must not be attached to AC lines
(AC lines are the metal pipes in the engine bay)**











**Remove mass damper on tub
headboard prior to installing
Rollershutter (only applicable to
RAP CAB Variants)**

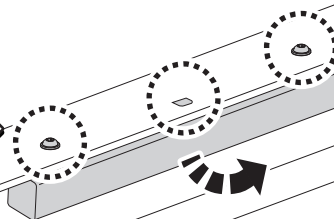

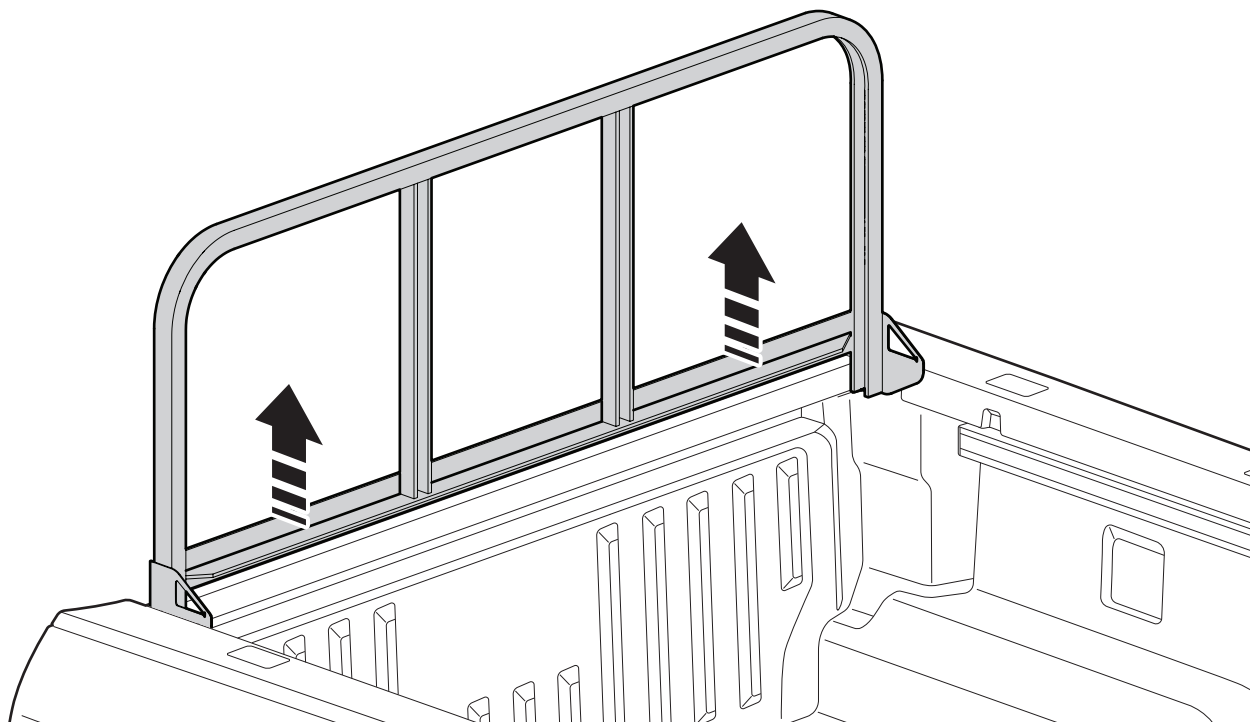

Rollershutter not compatible with load rest bar - part cannot be re-installed once Rollershutter have been installed (store parts)

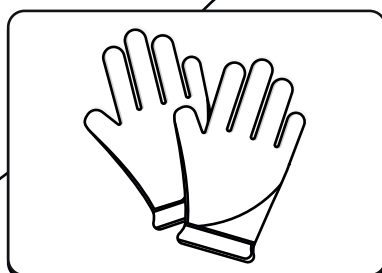

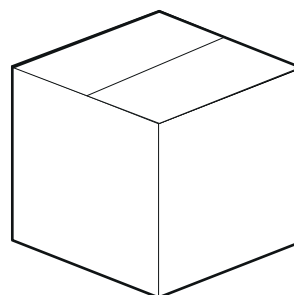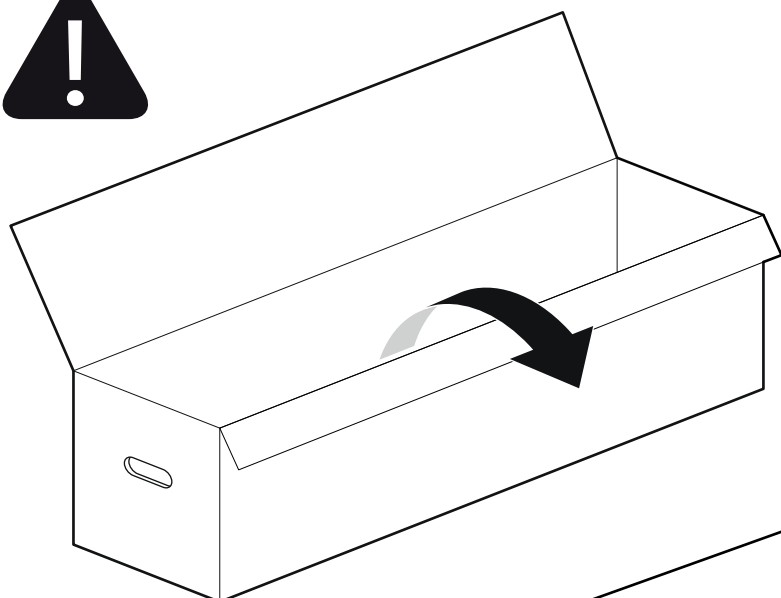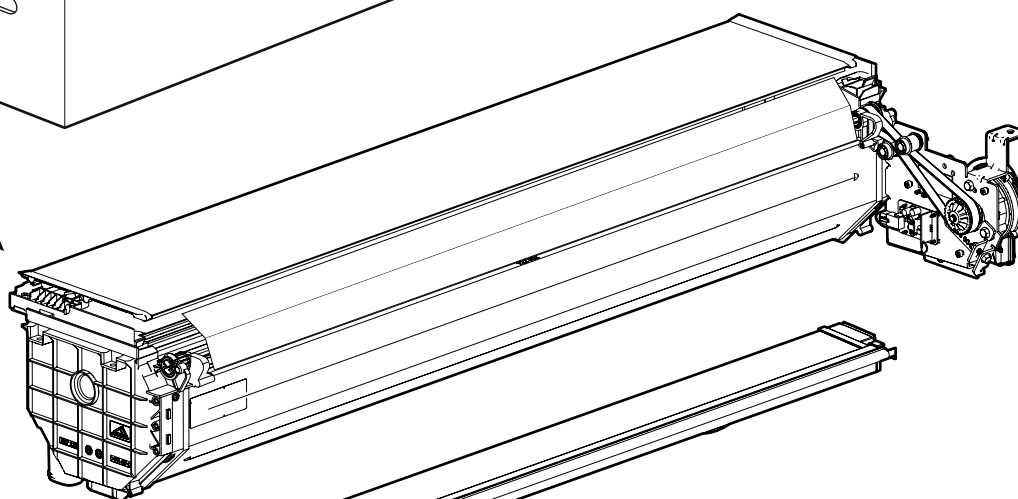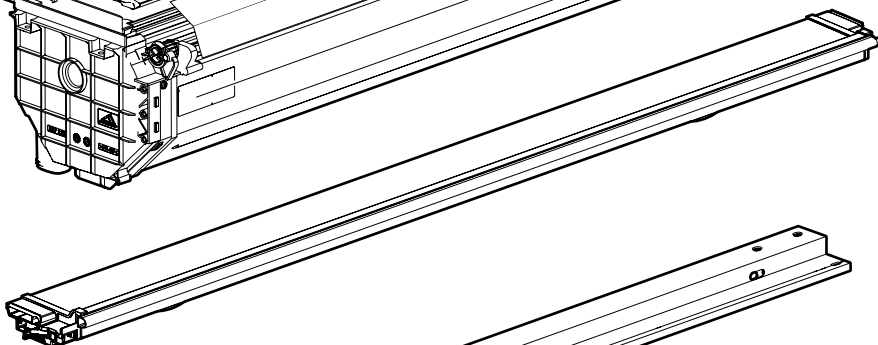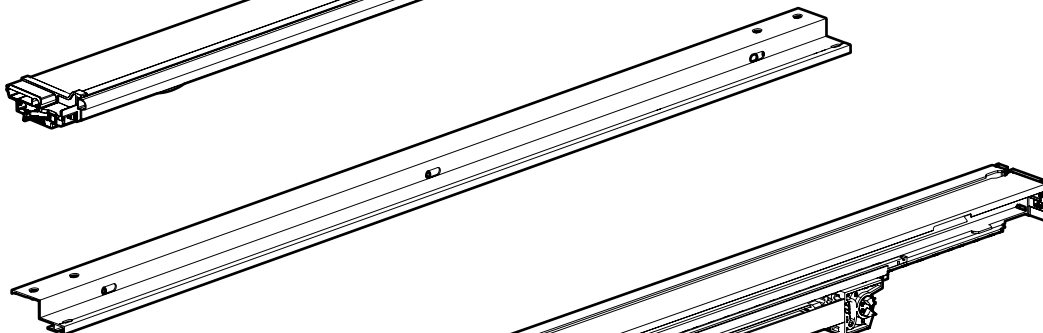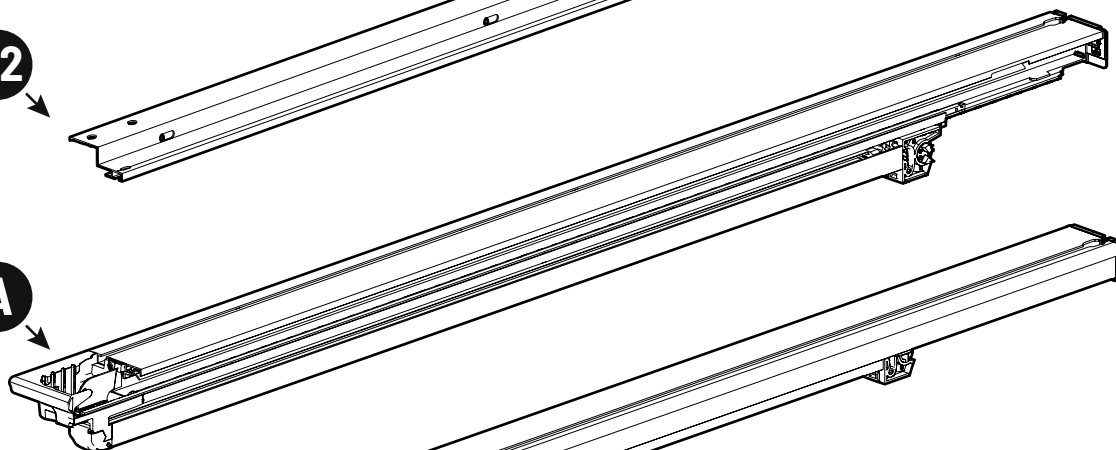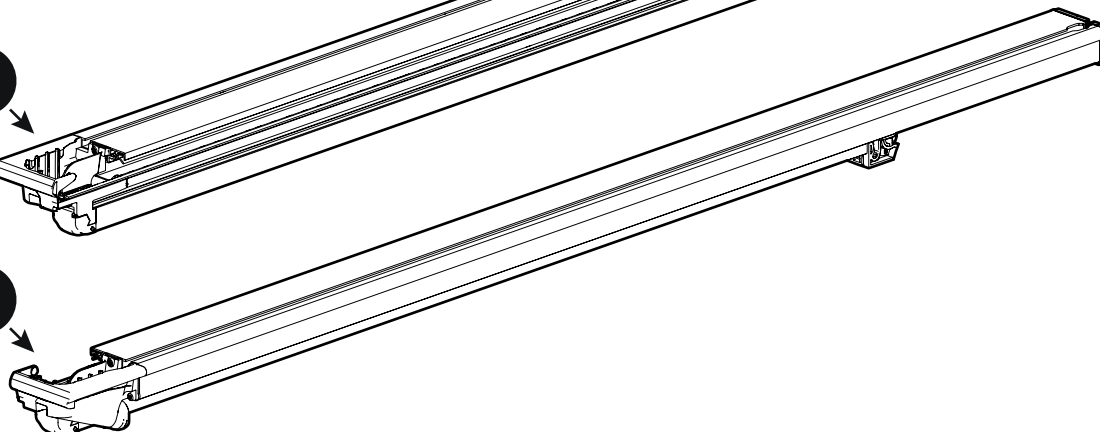
**C****D****A2****A****B**




Water & sponge



2

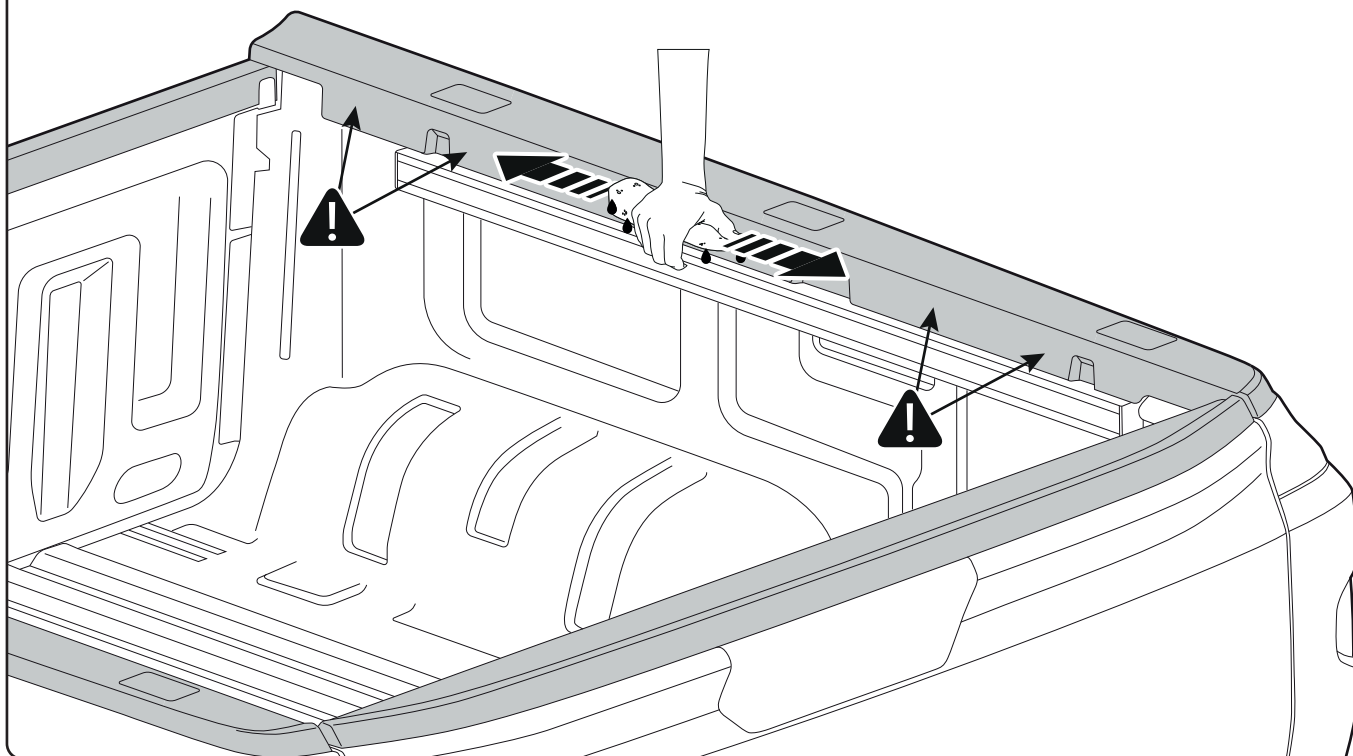


3

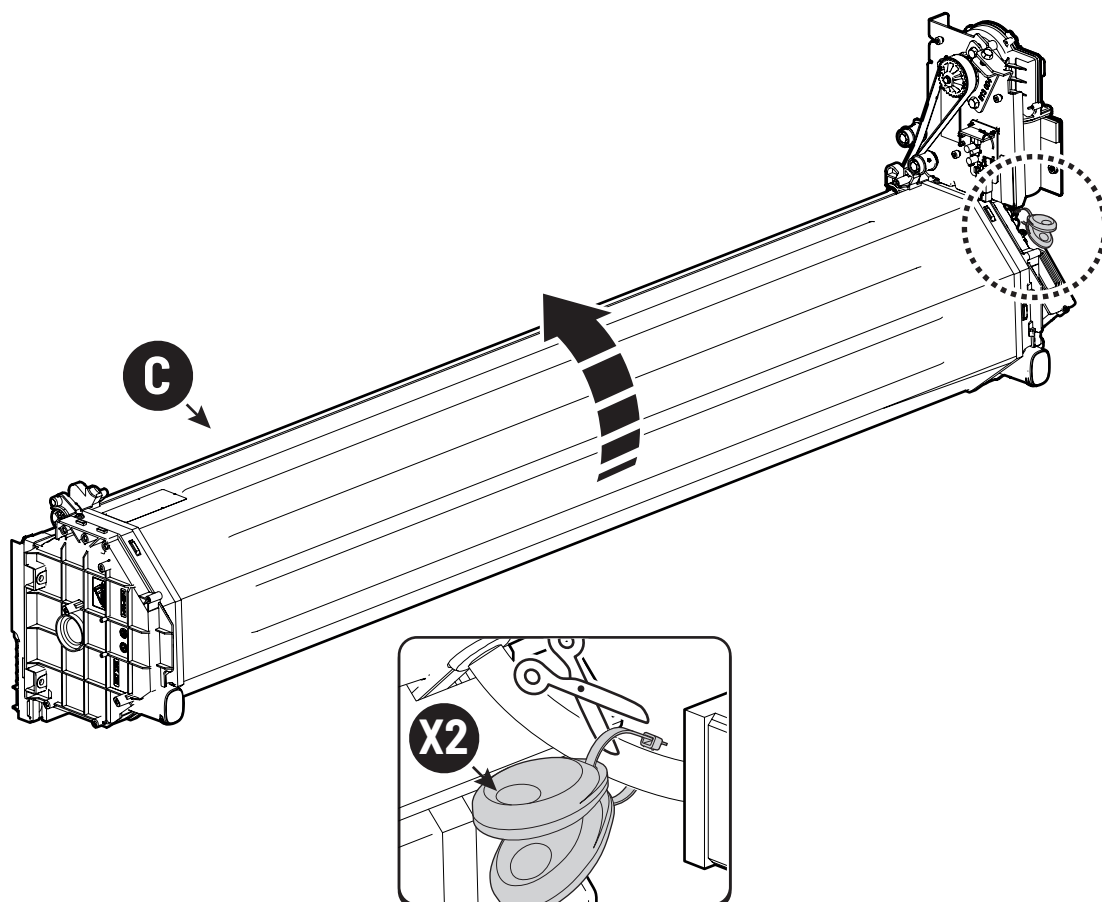

4


W2

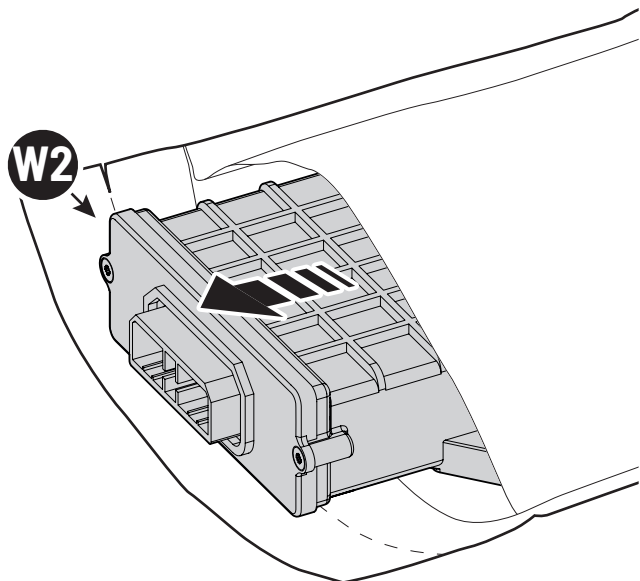

1

W2

C

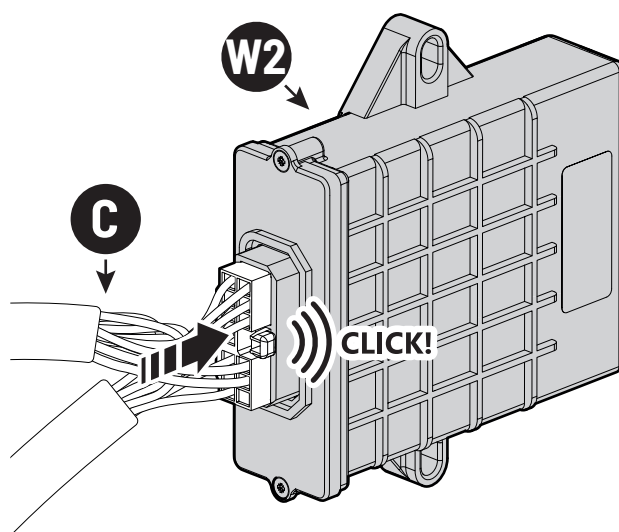

2

5






4mm



2,4Nm



T2




U2


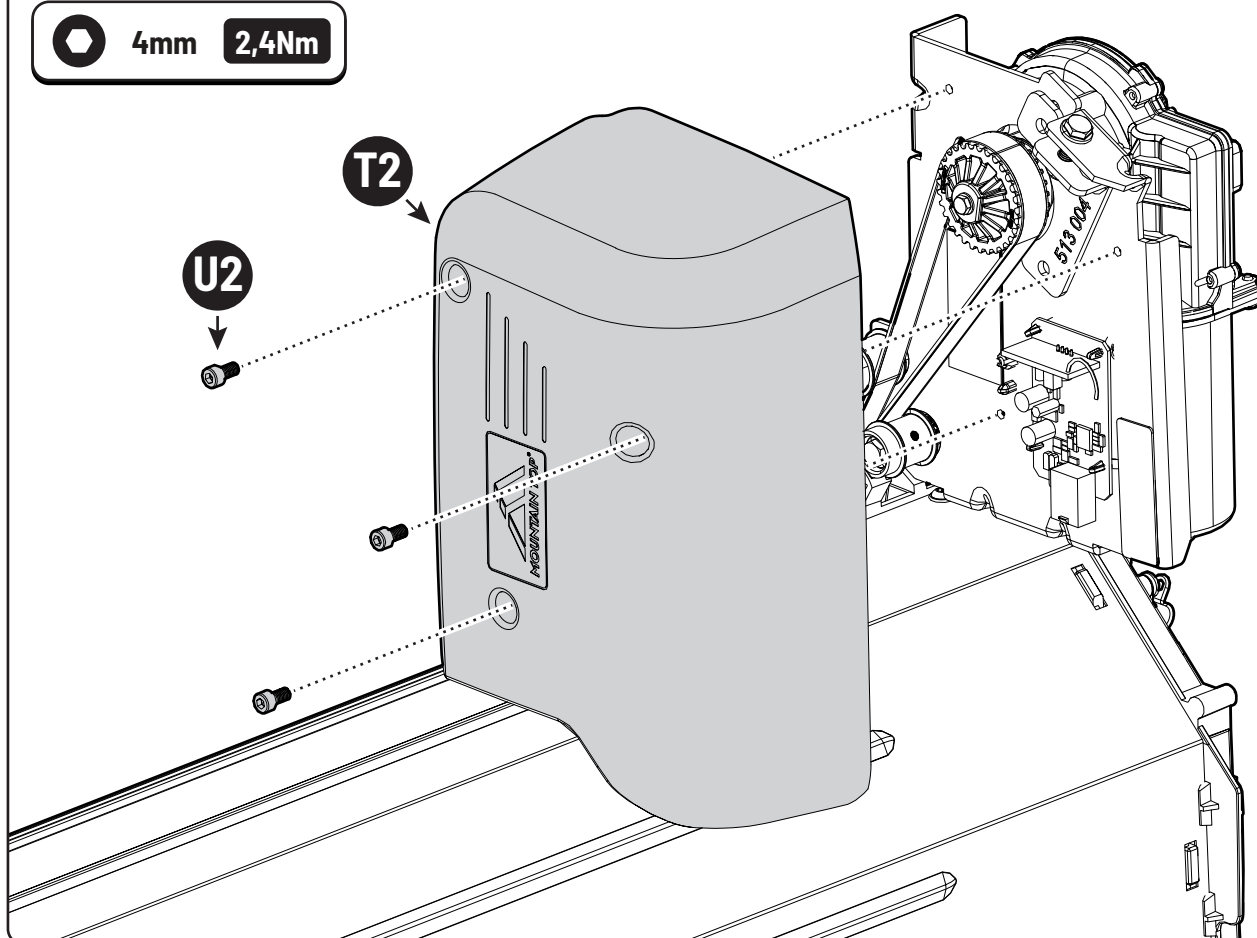


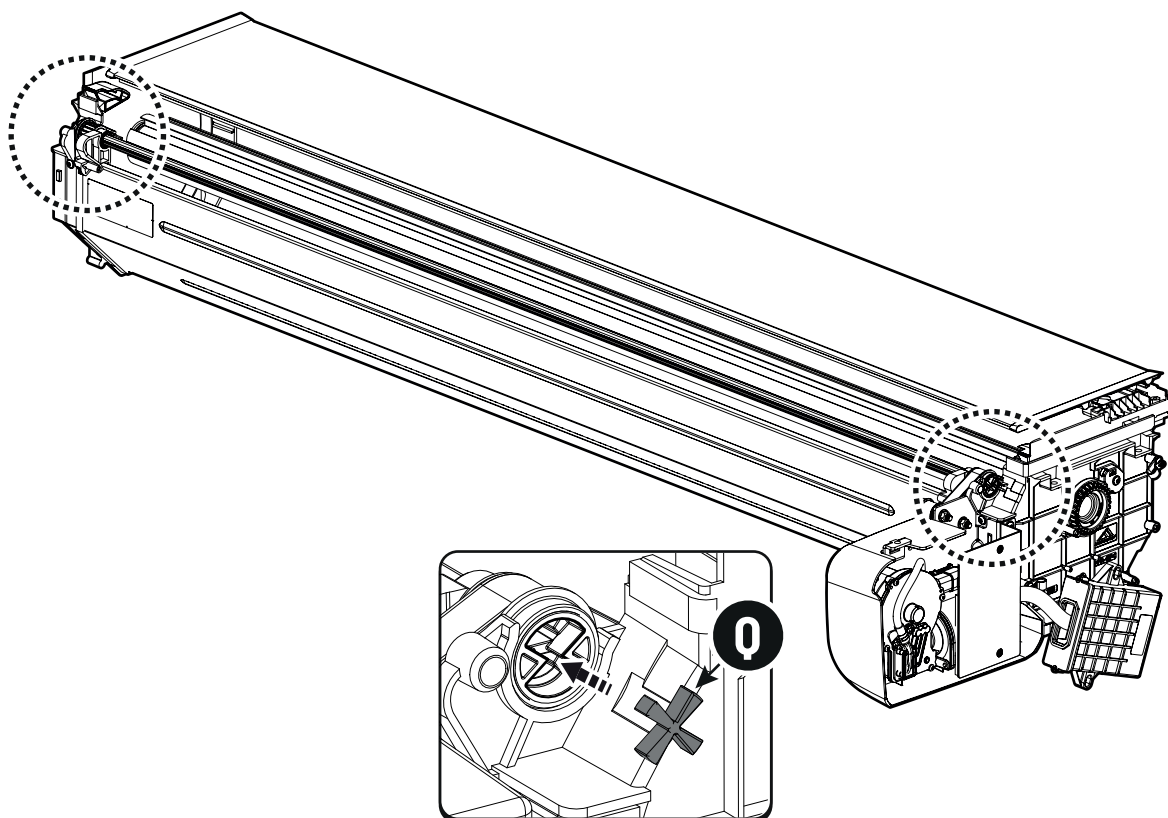
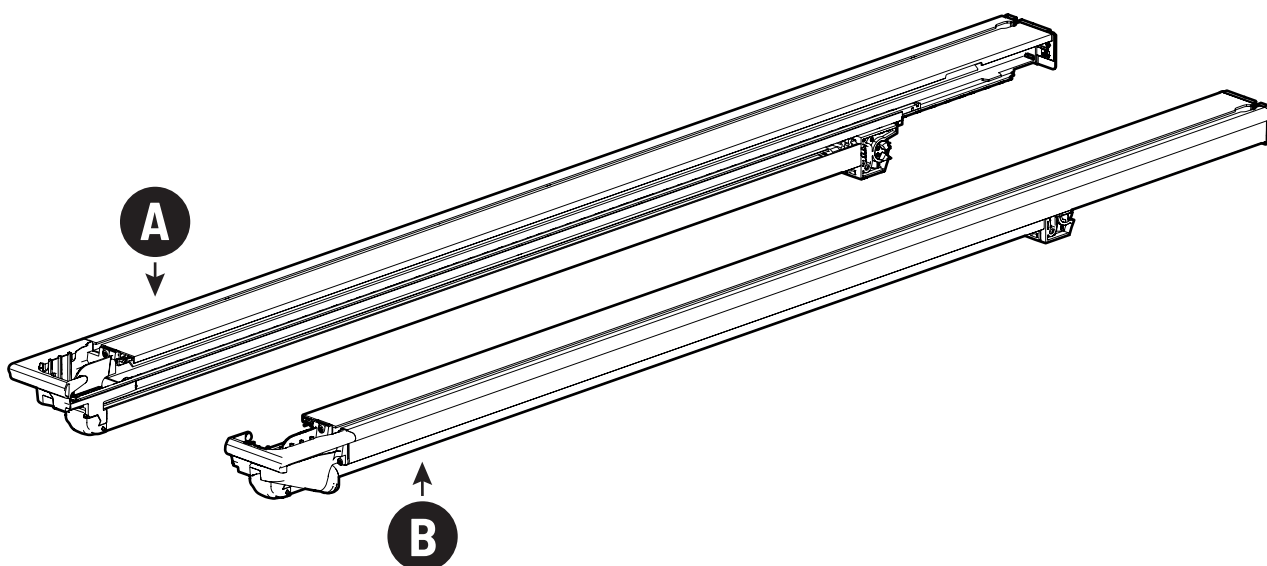
**x2**

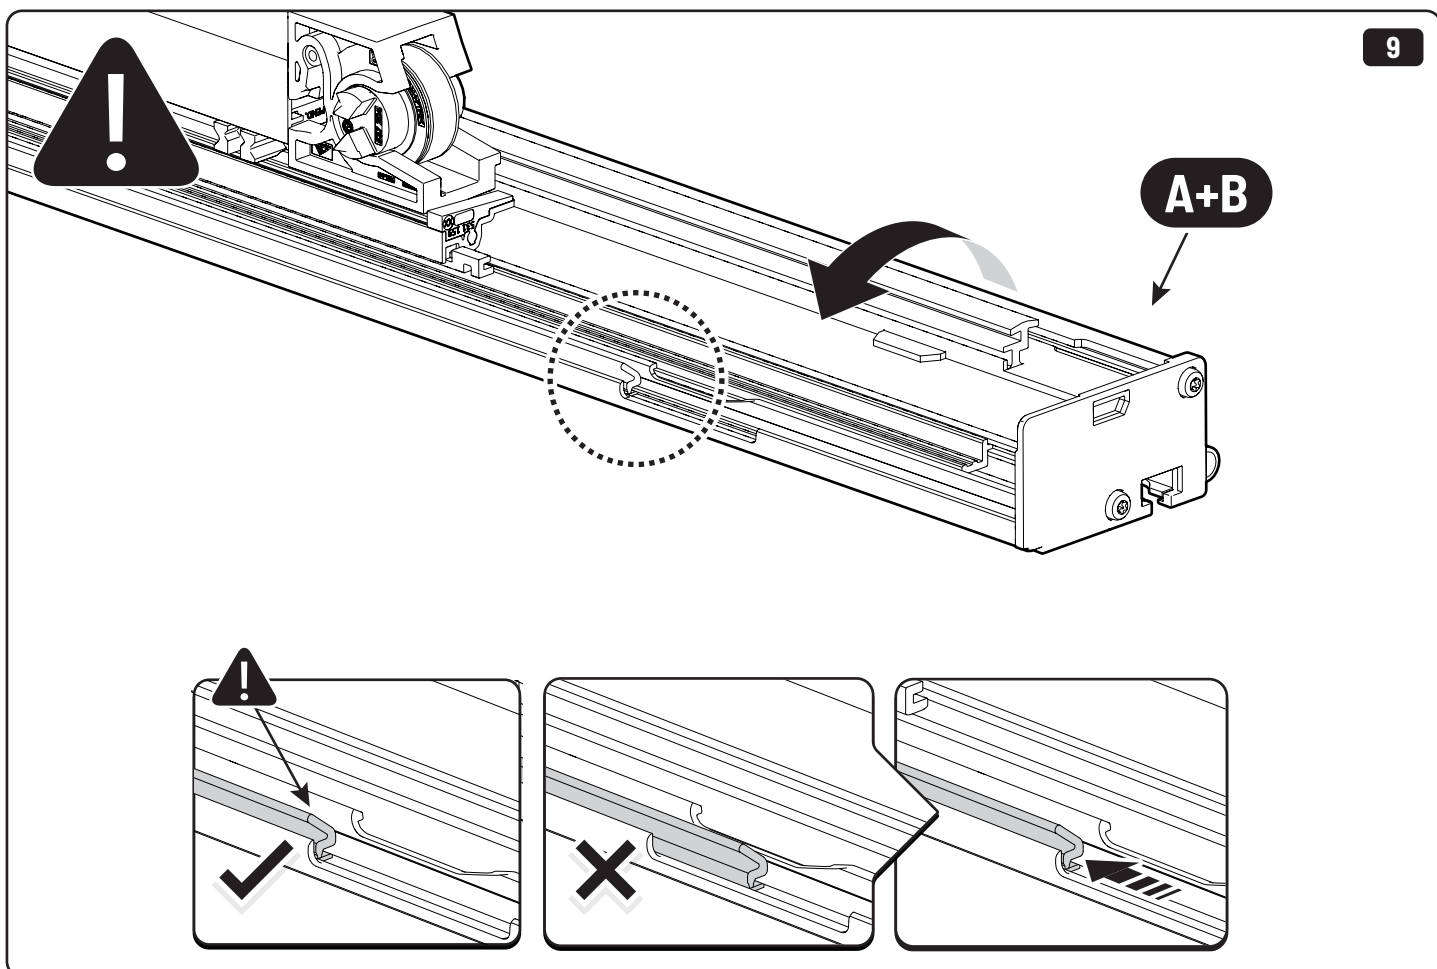
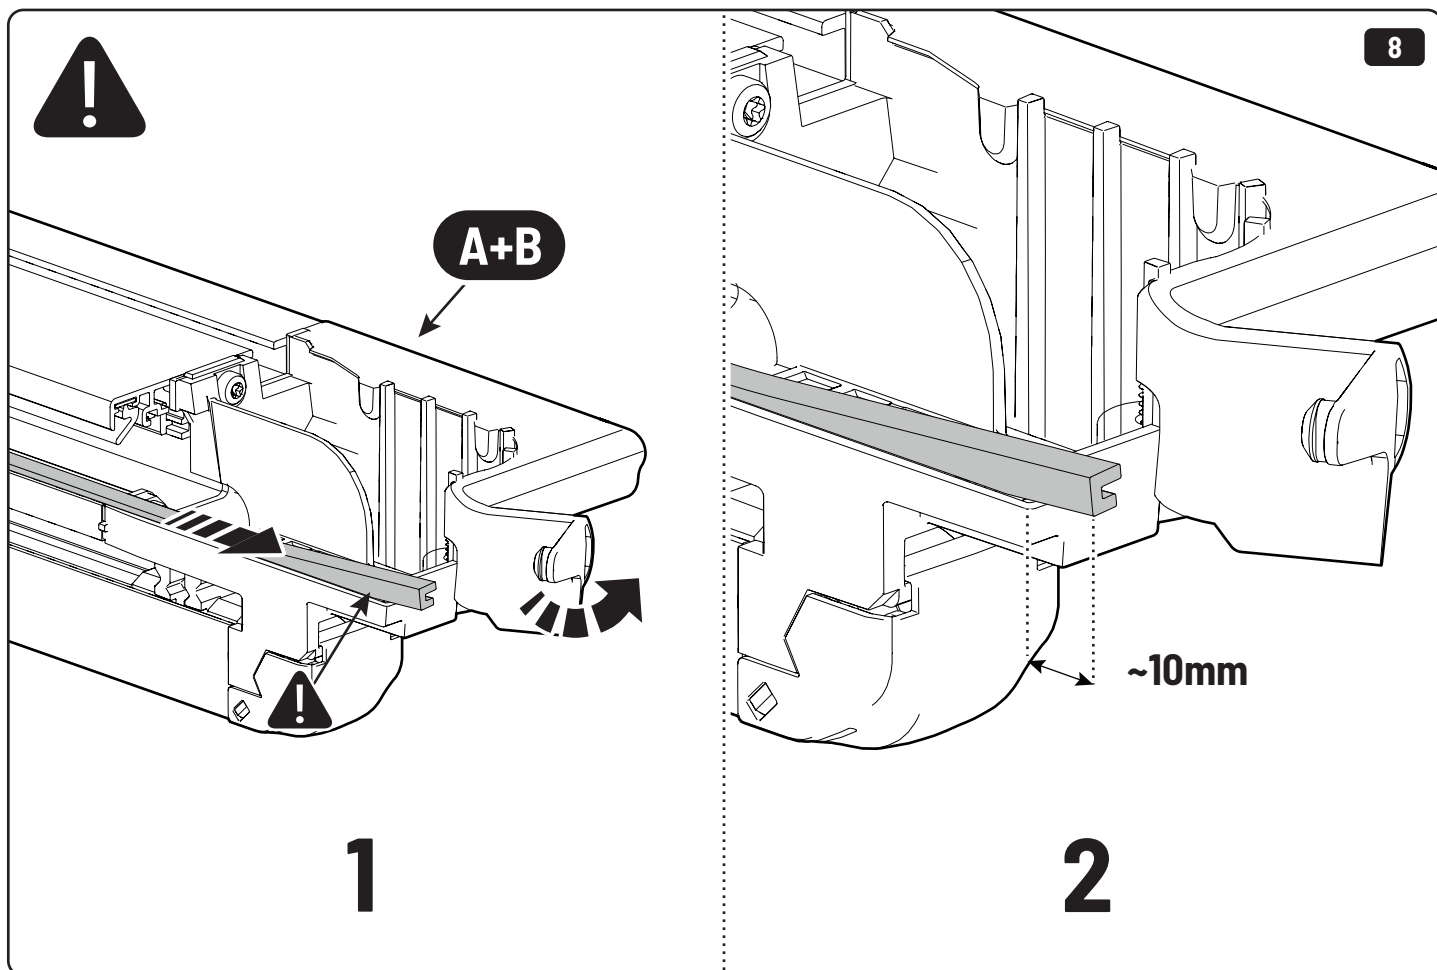


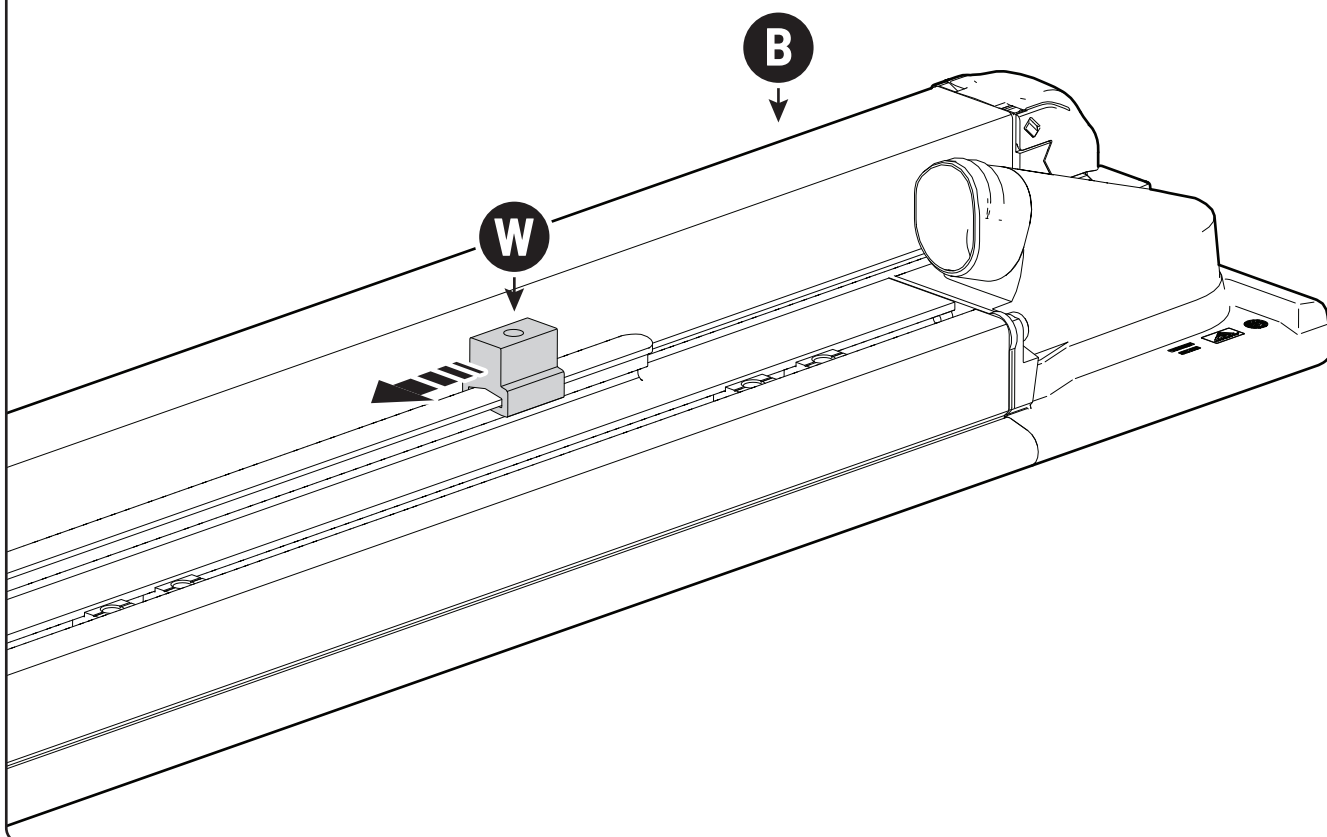
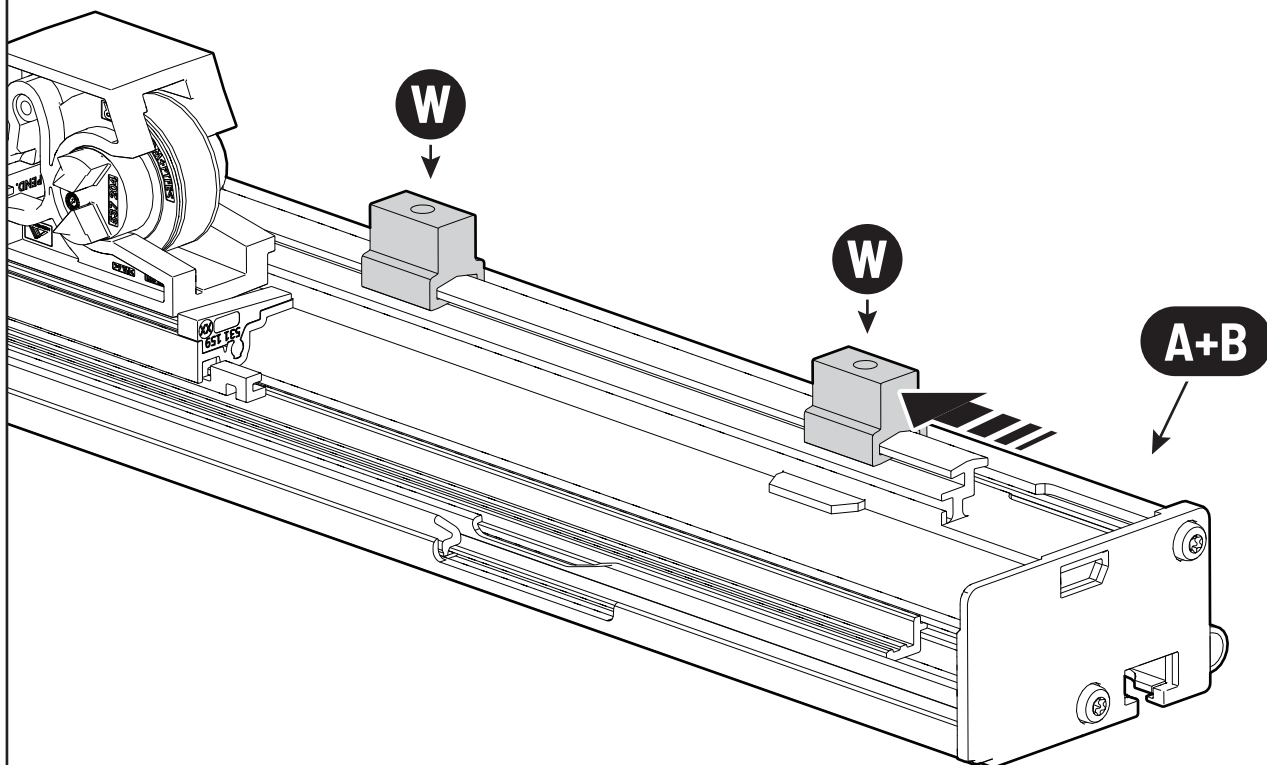


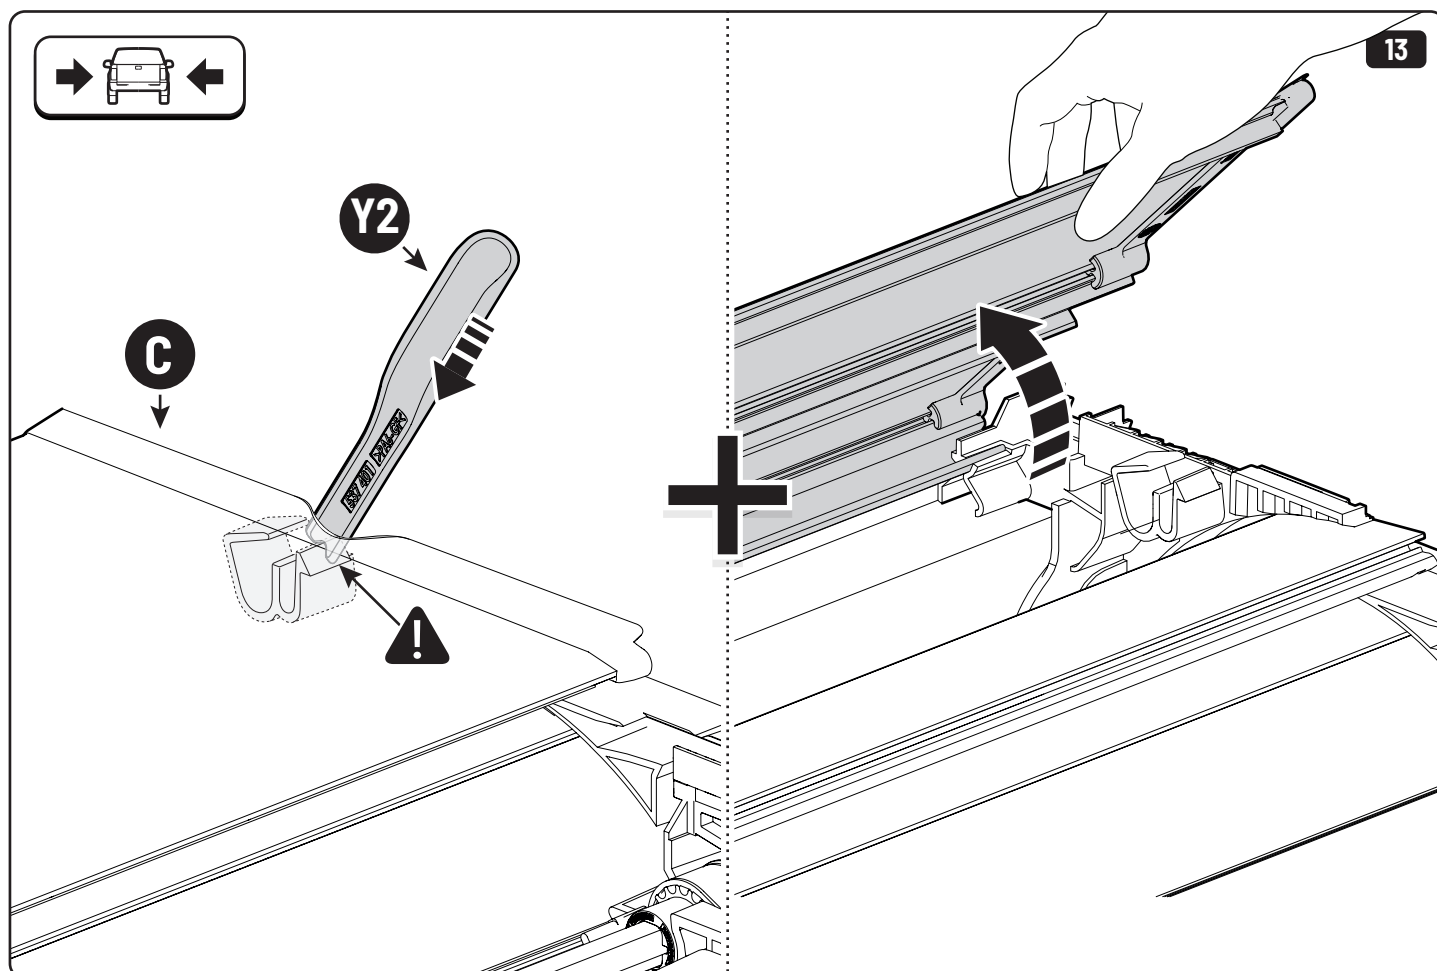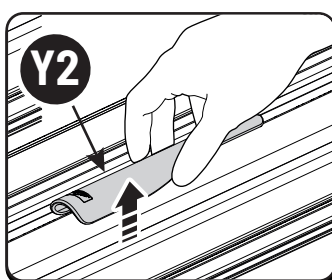
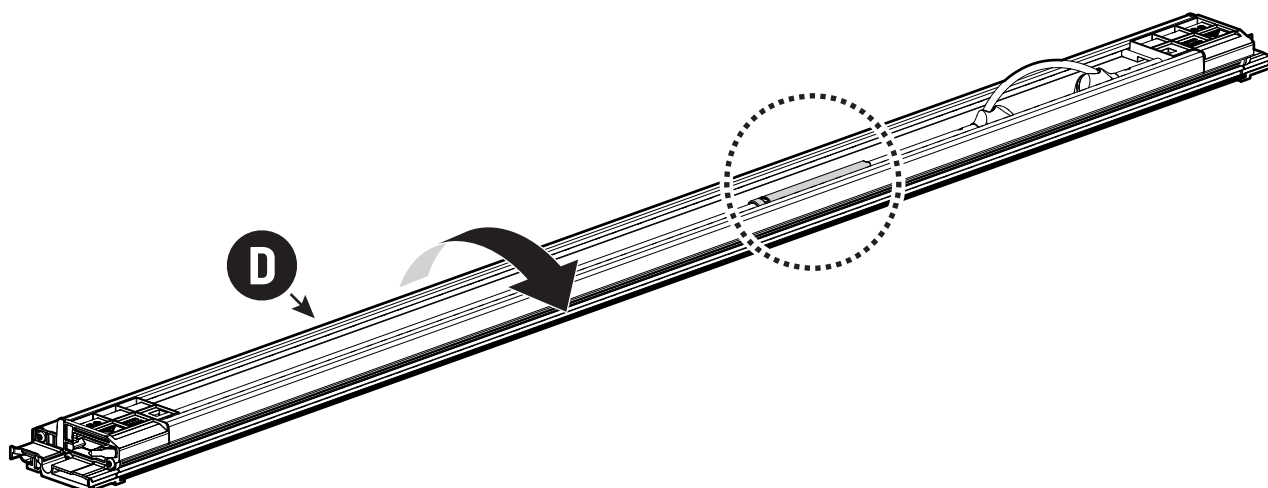


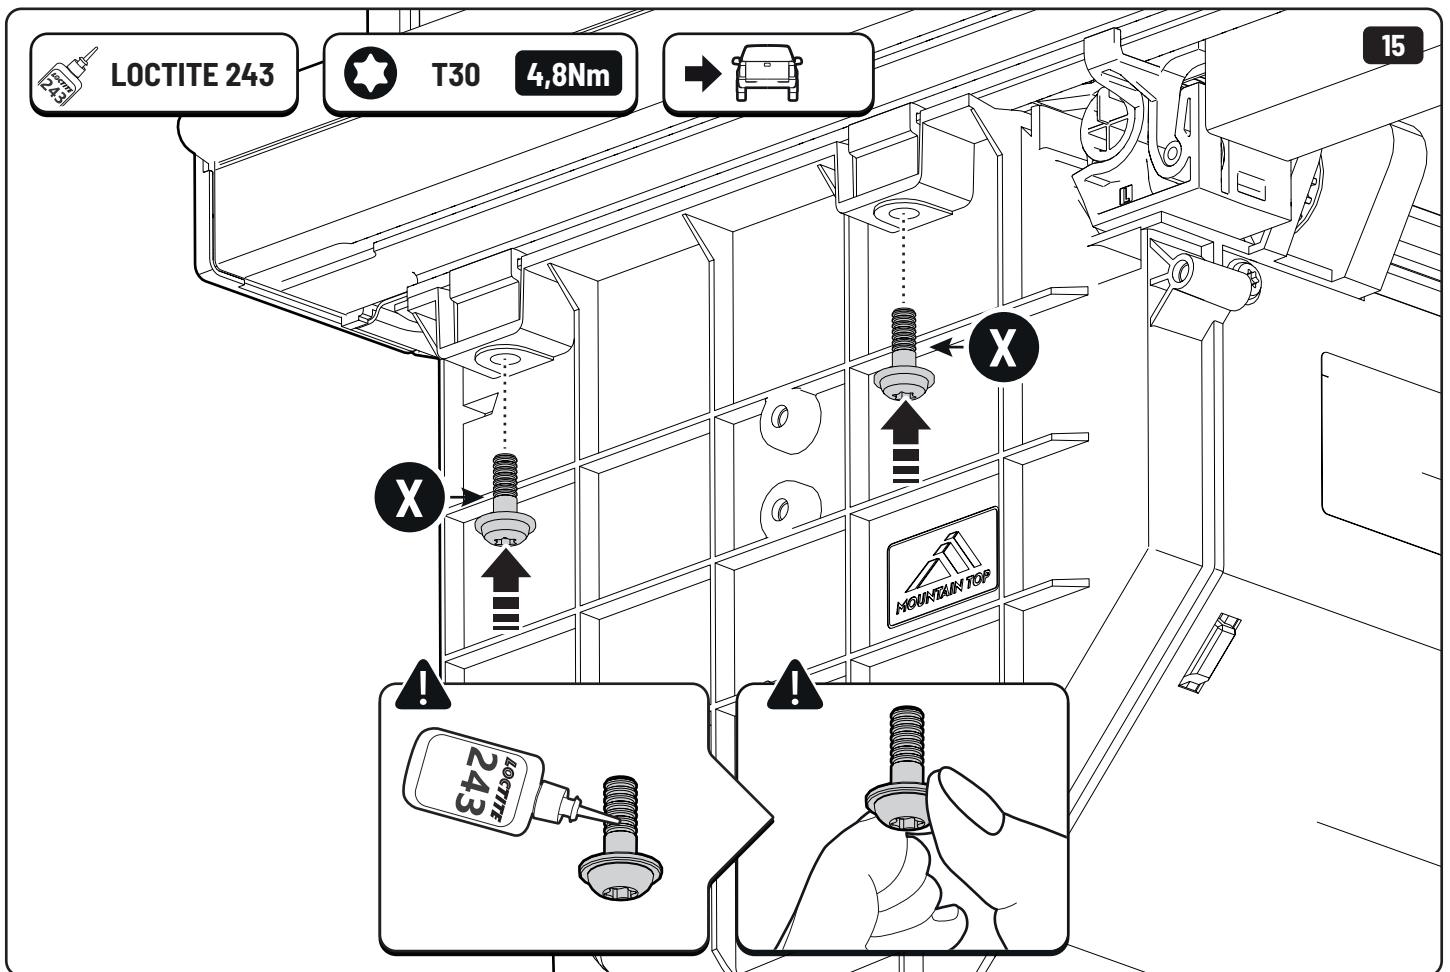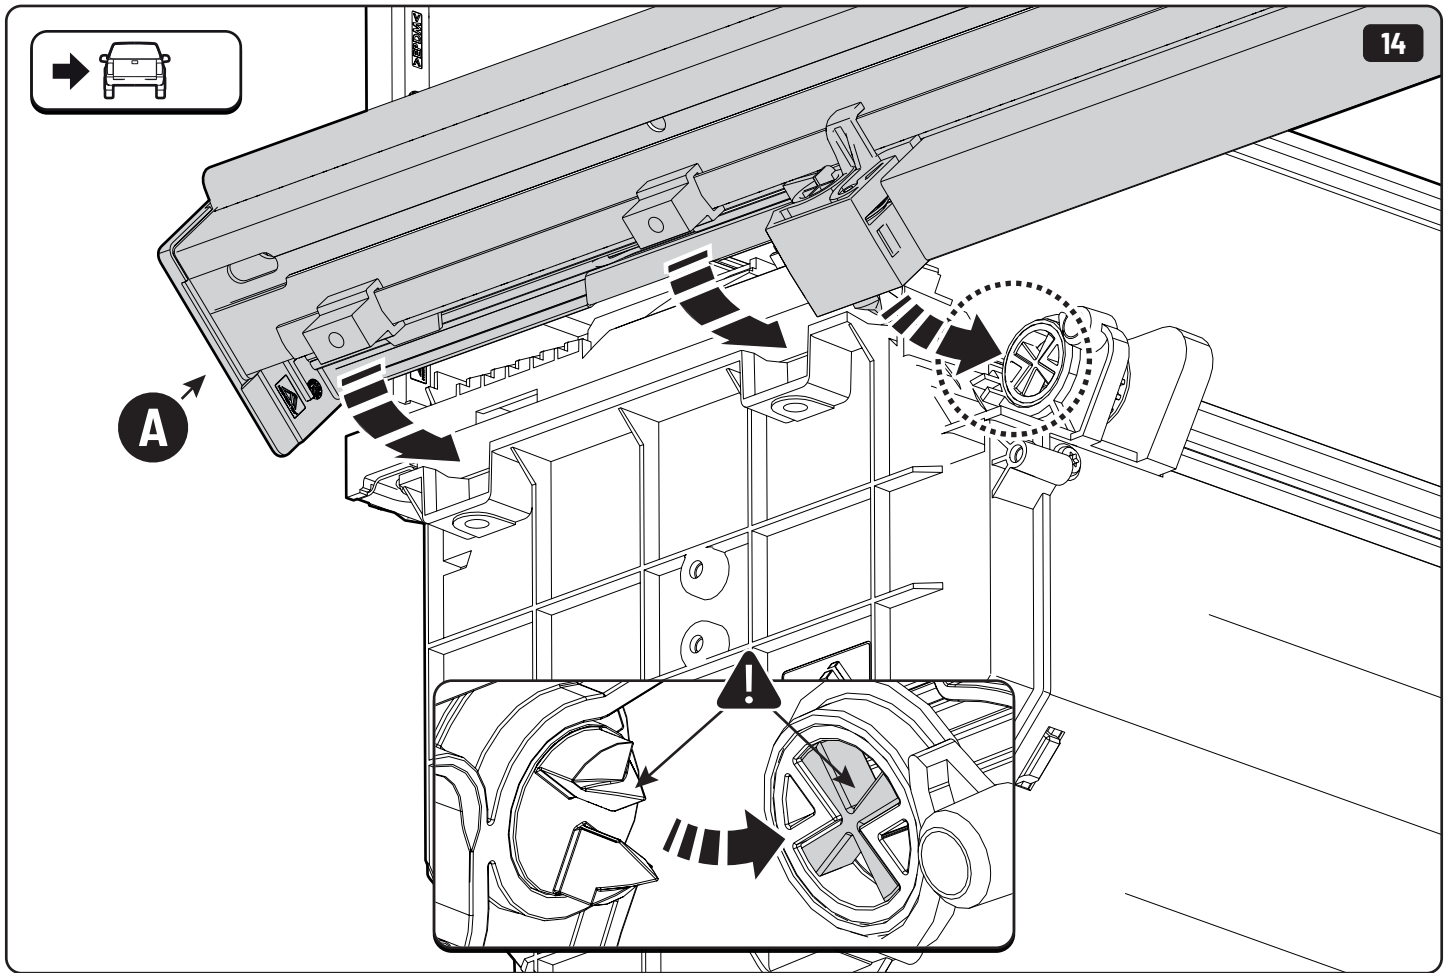

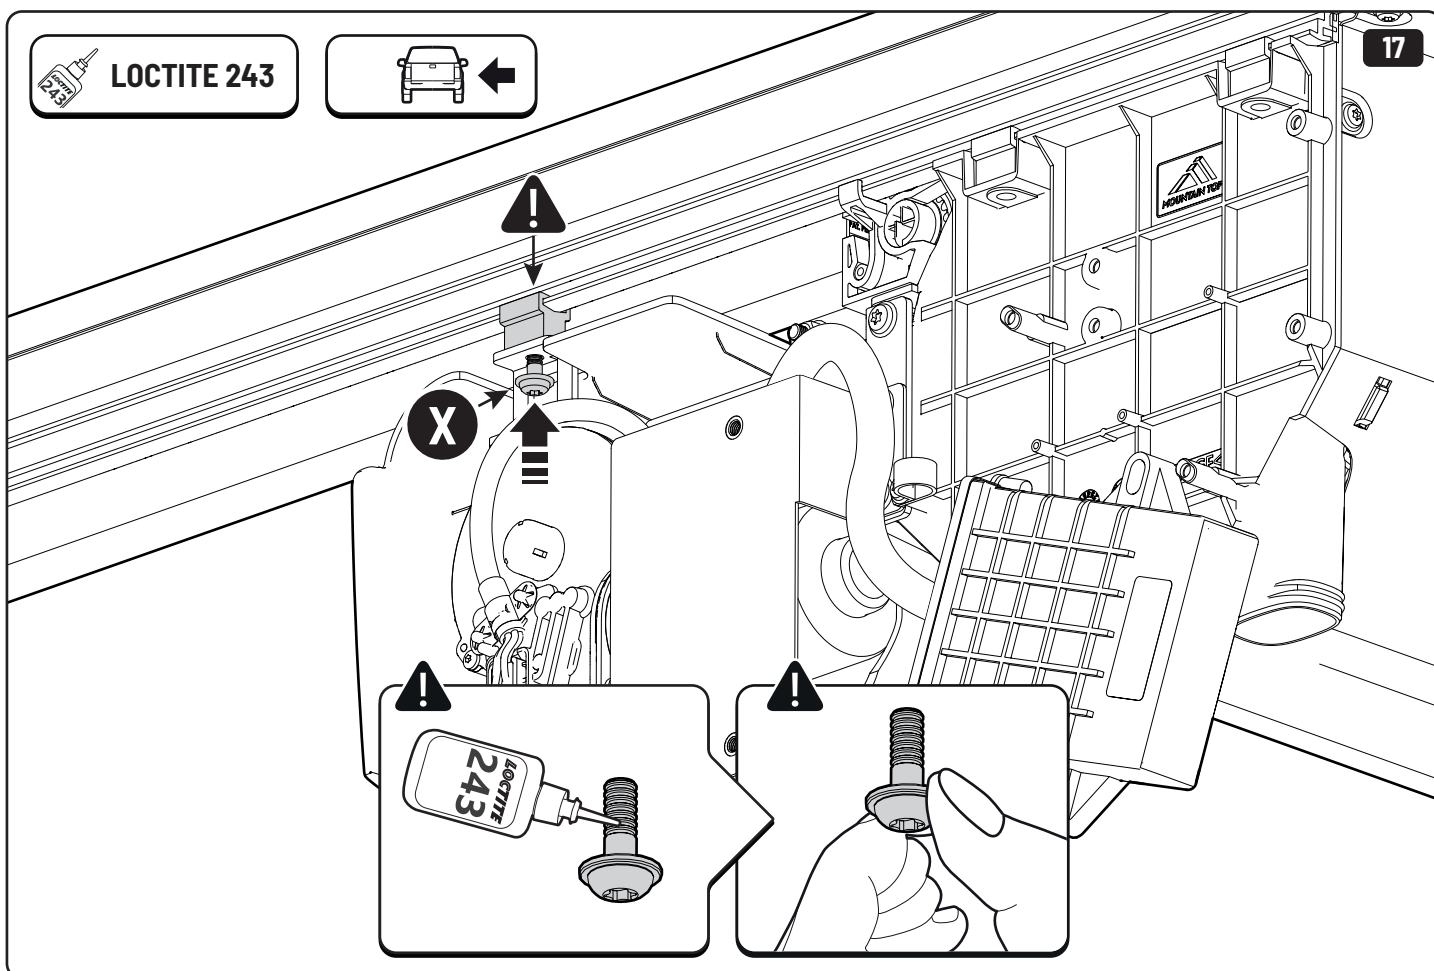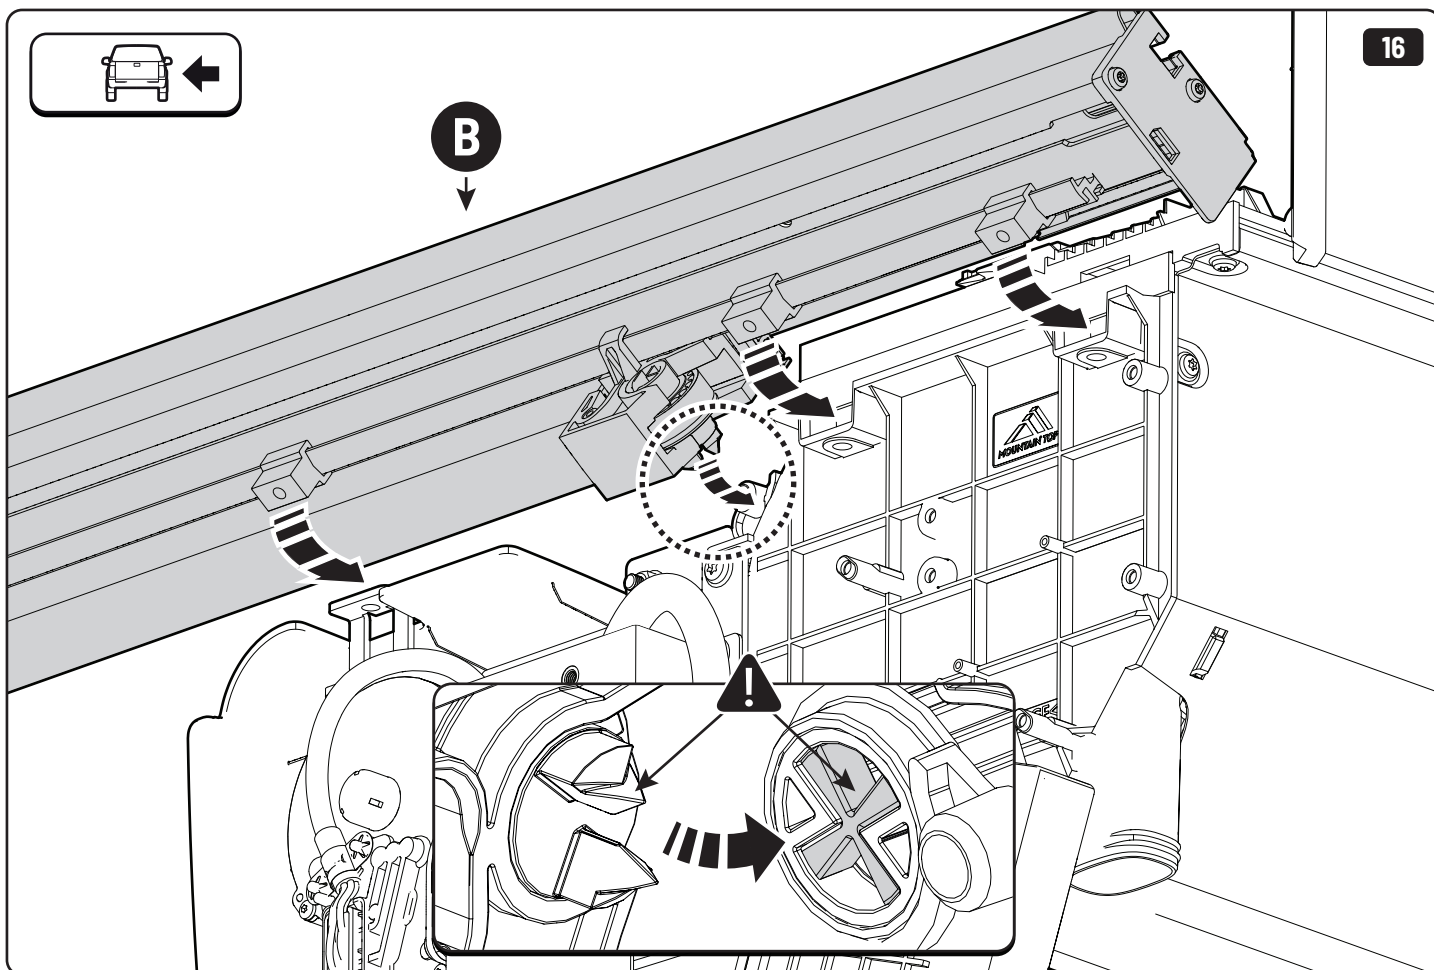

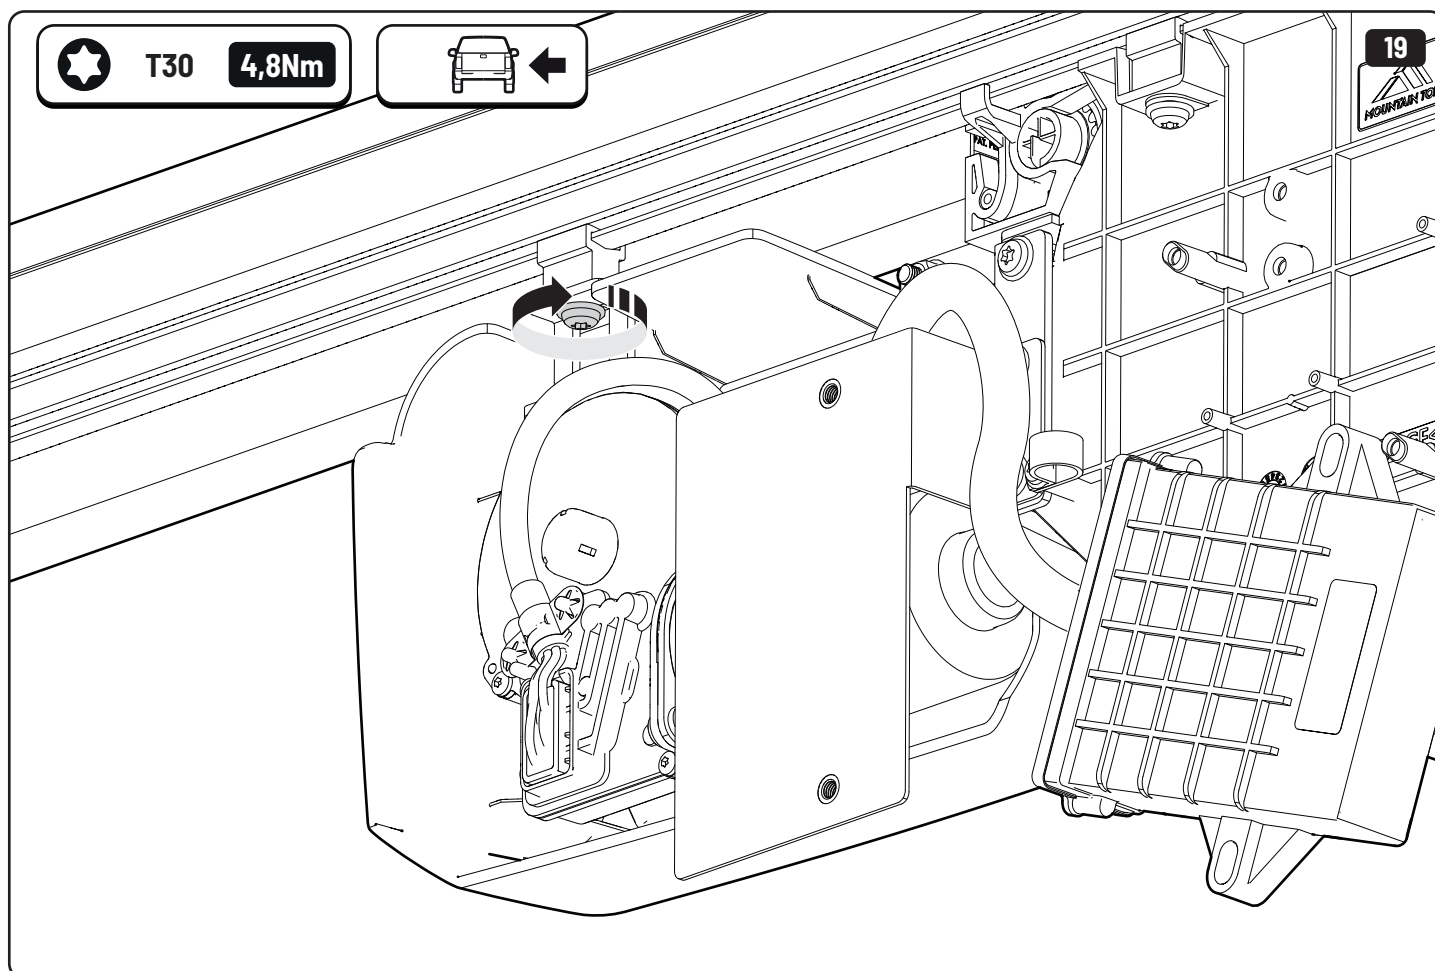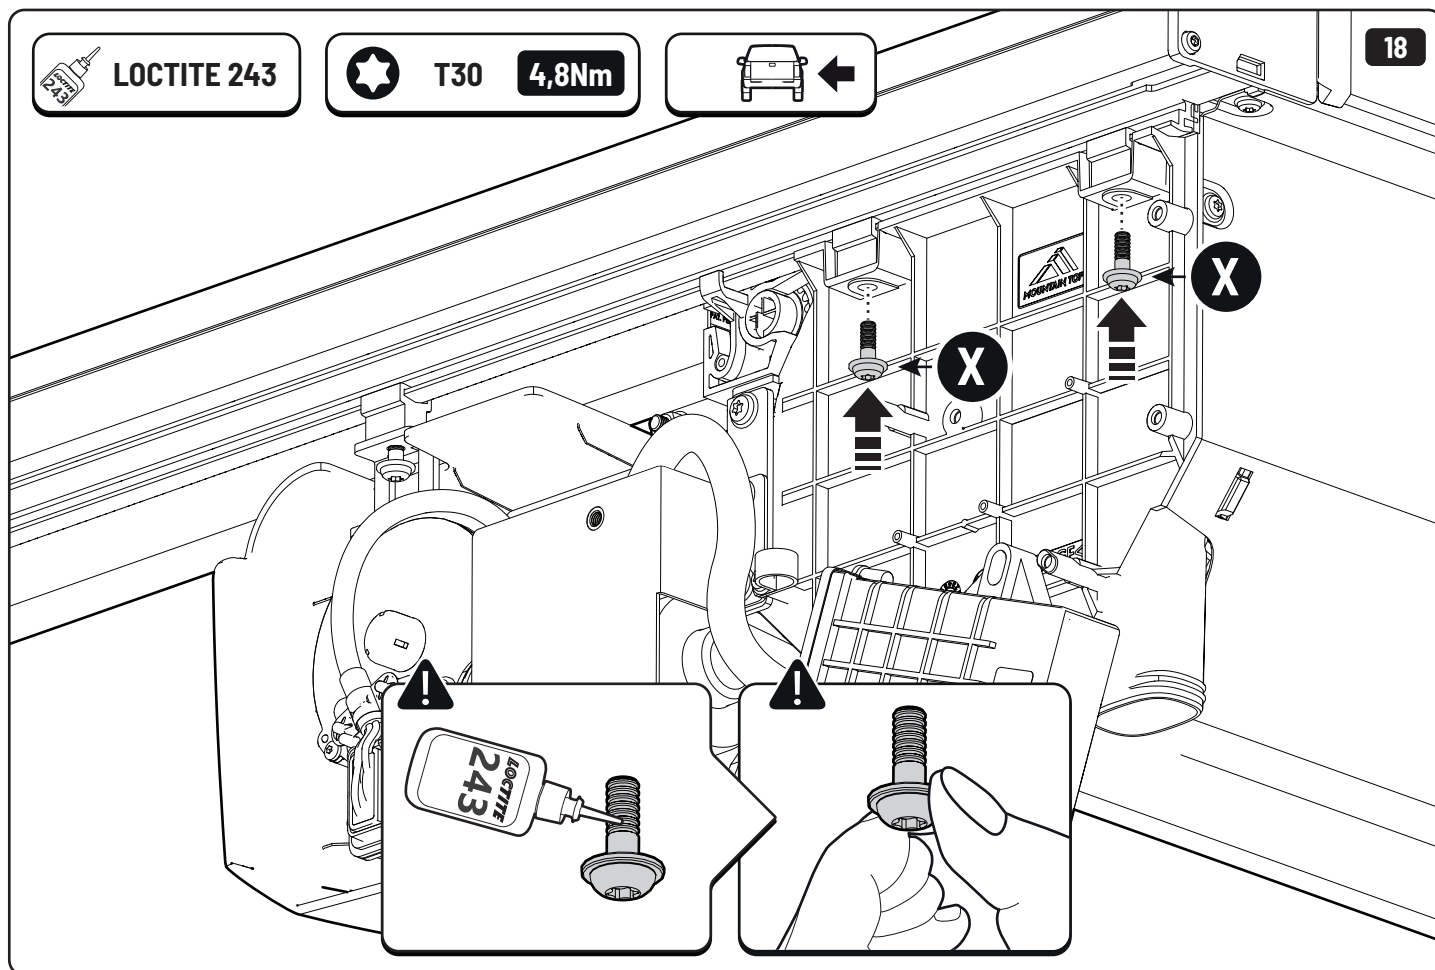

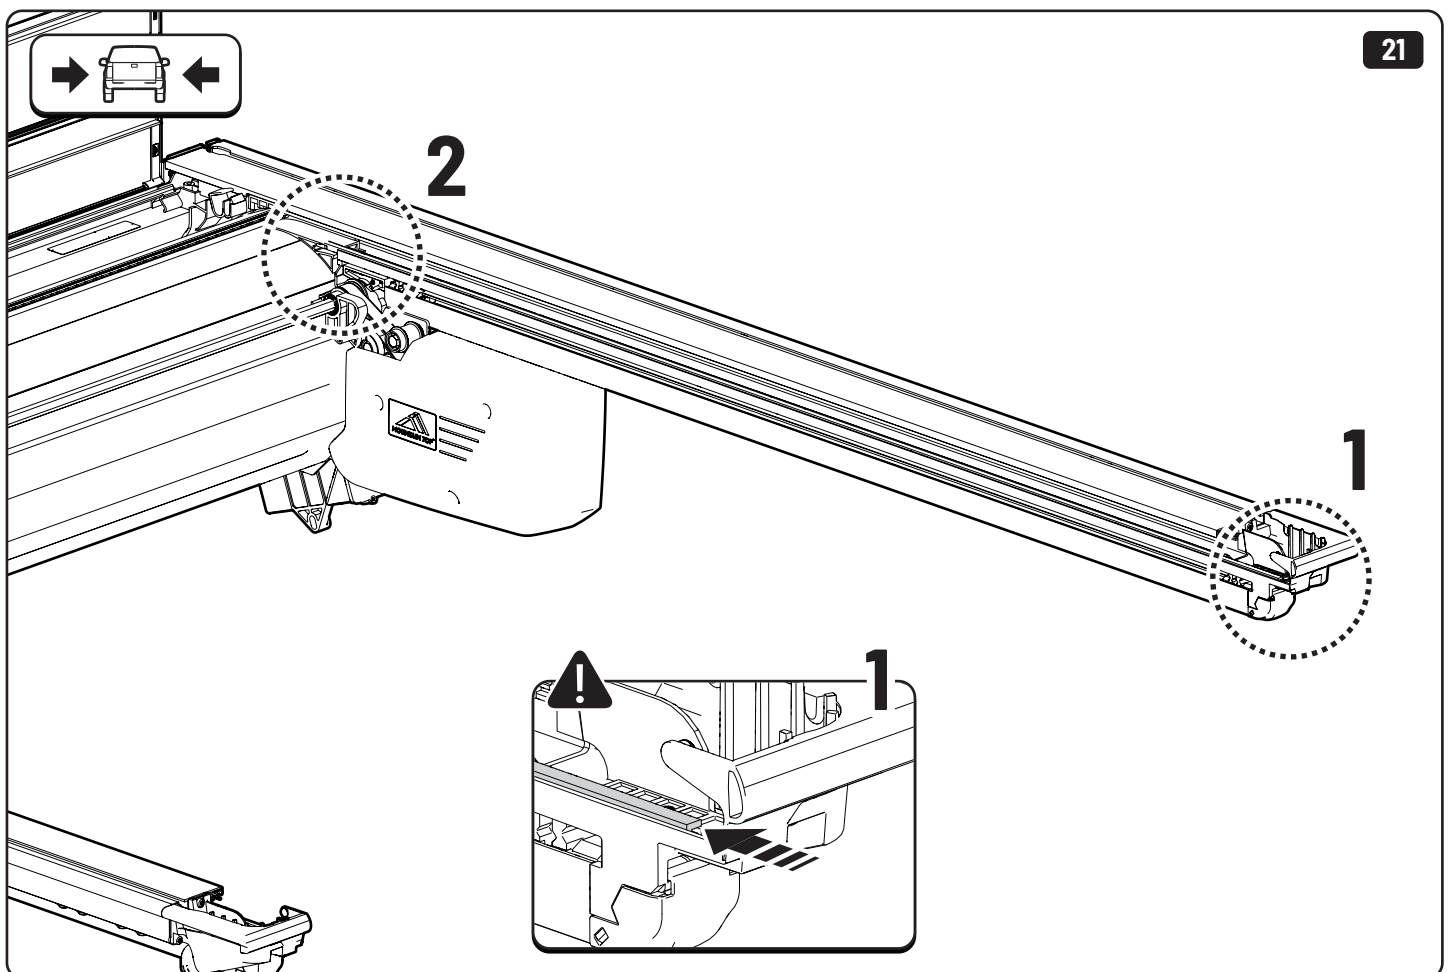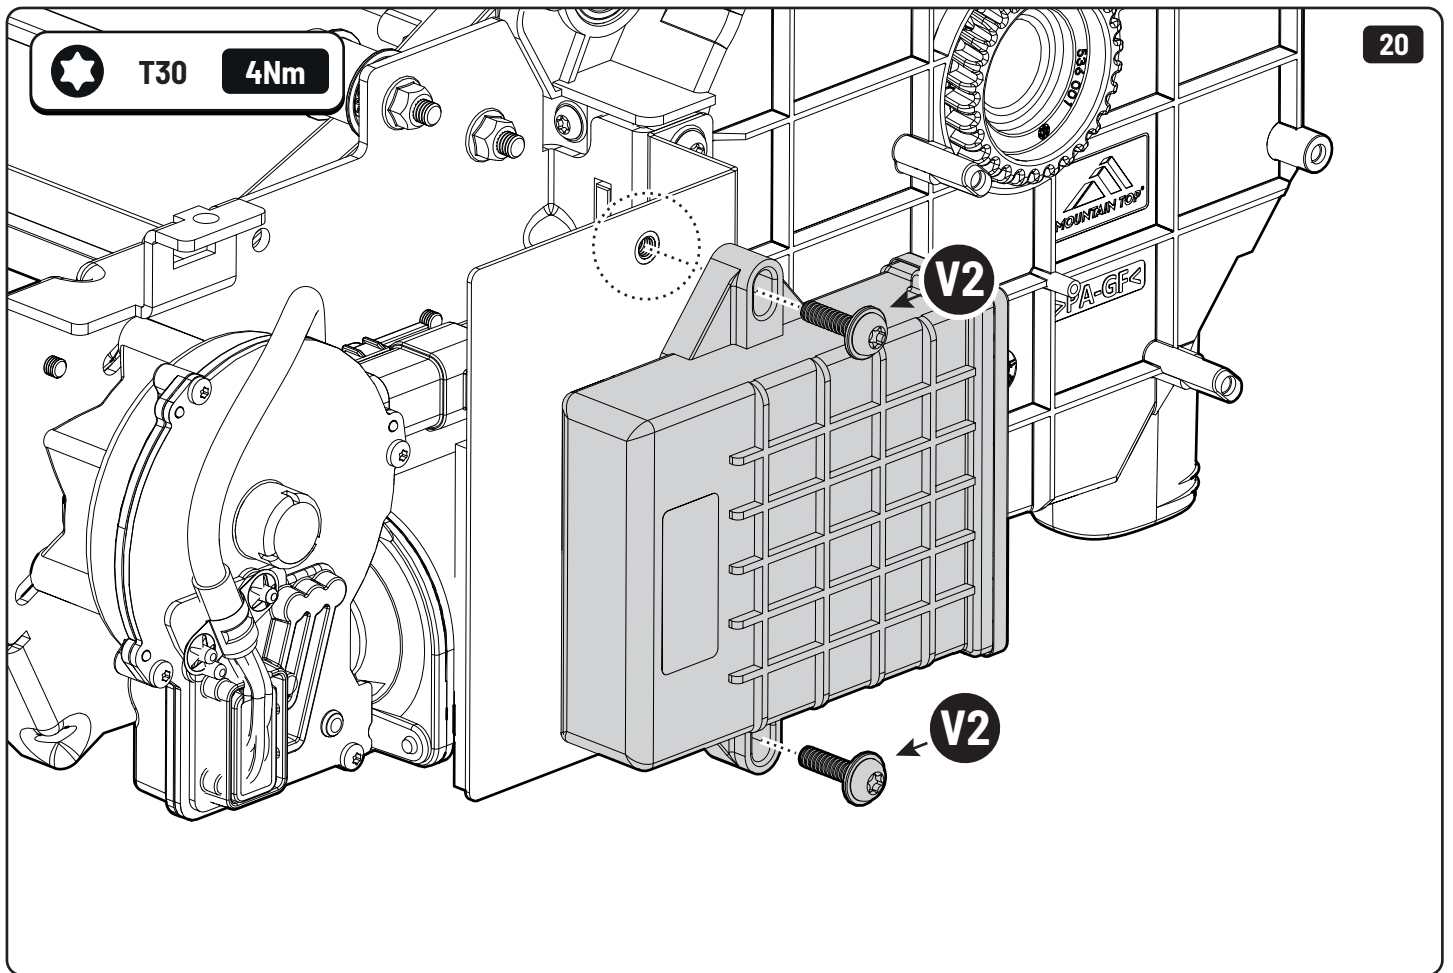


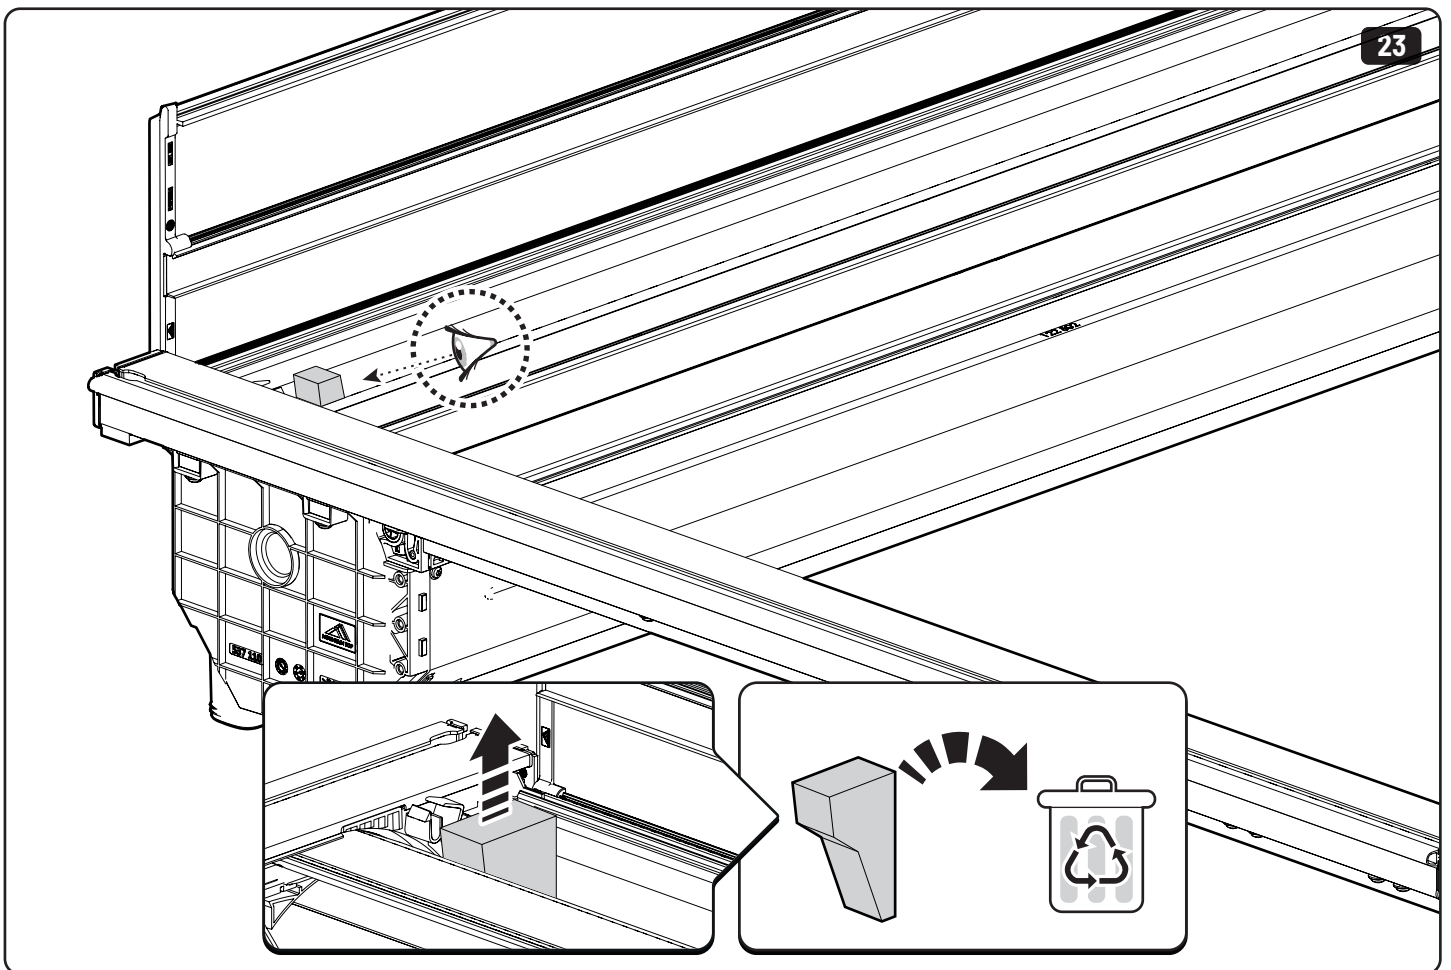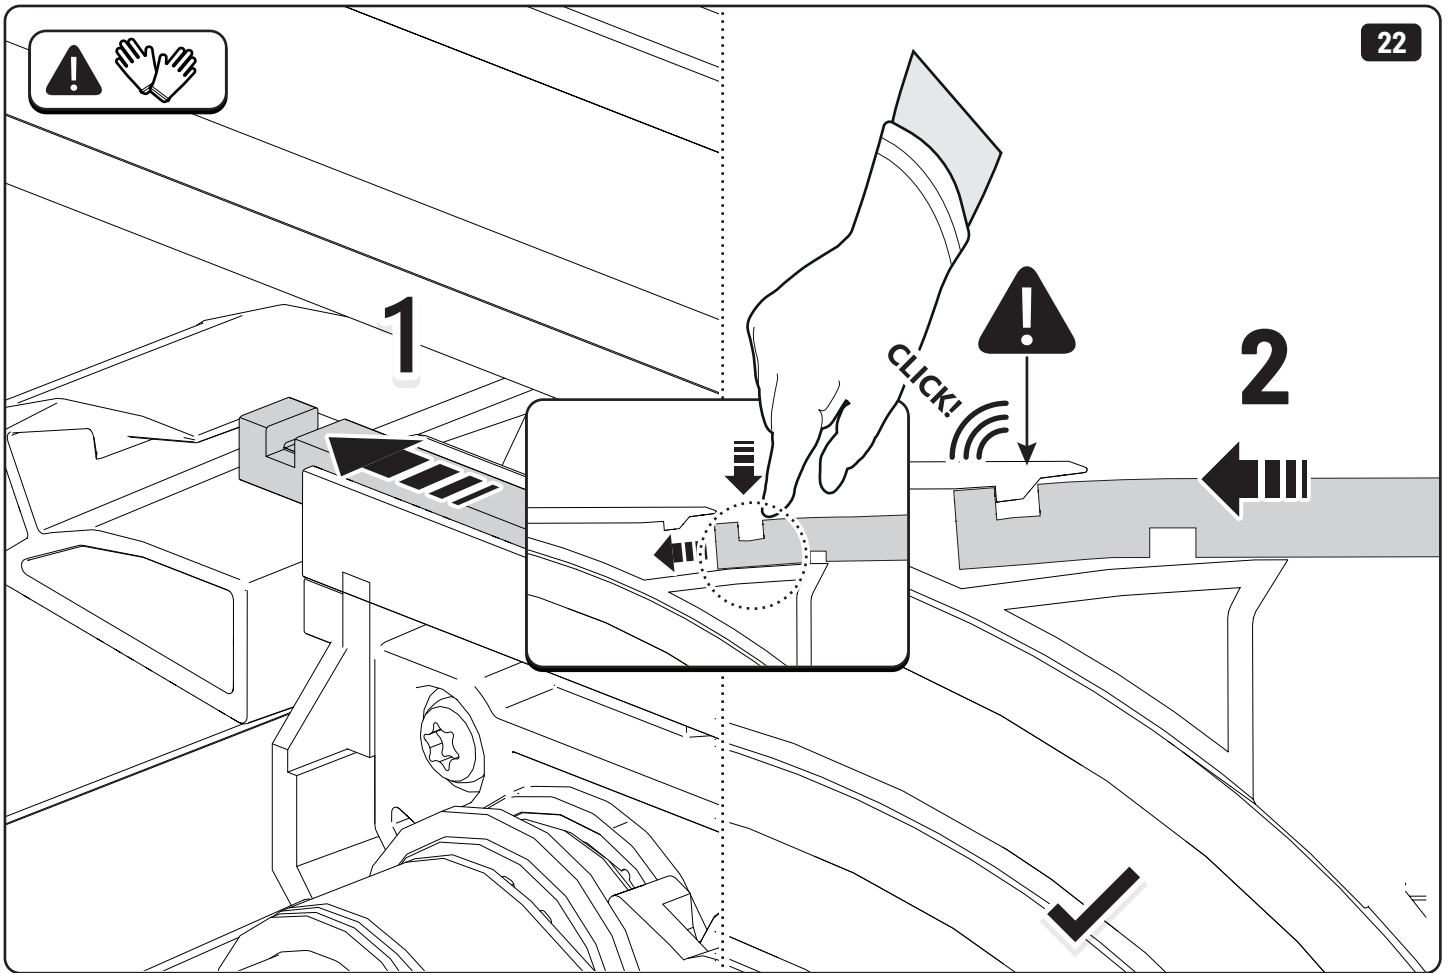






RAP CAB



24


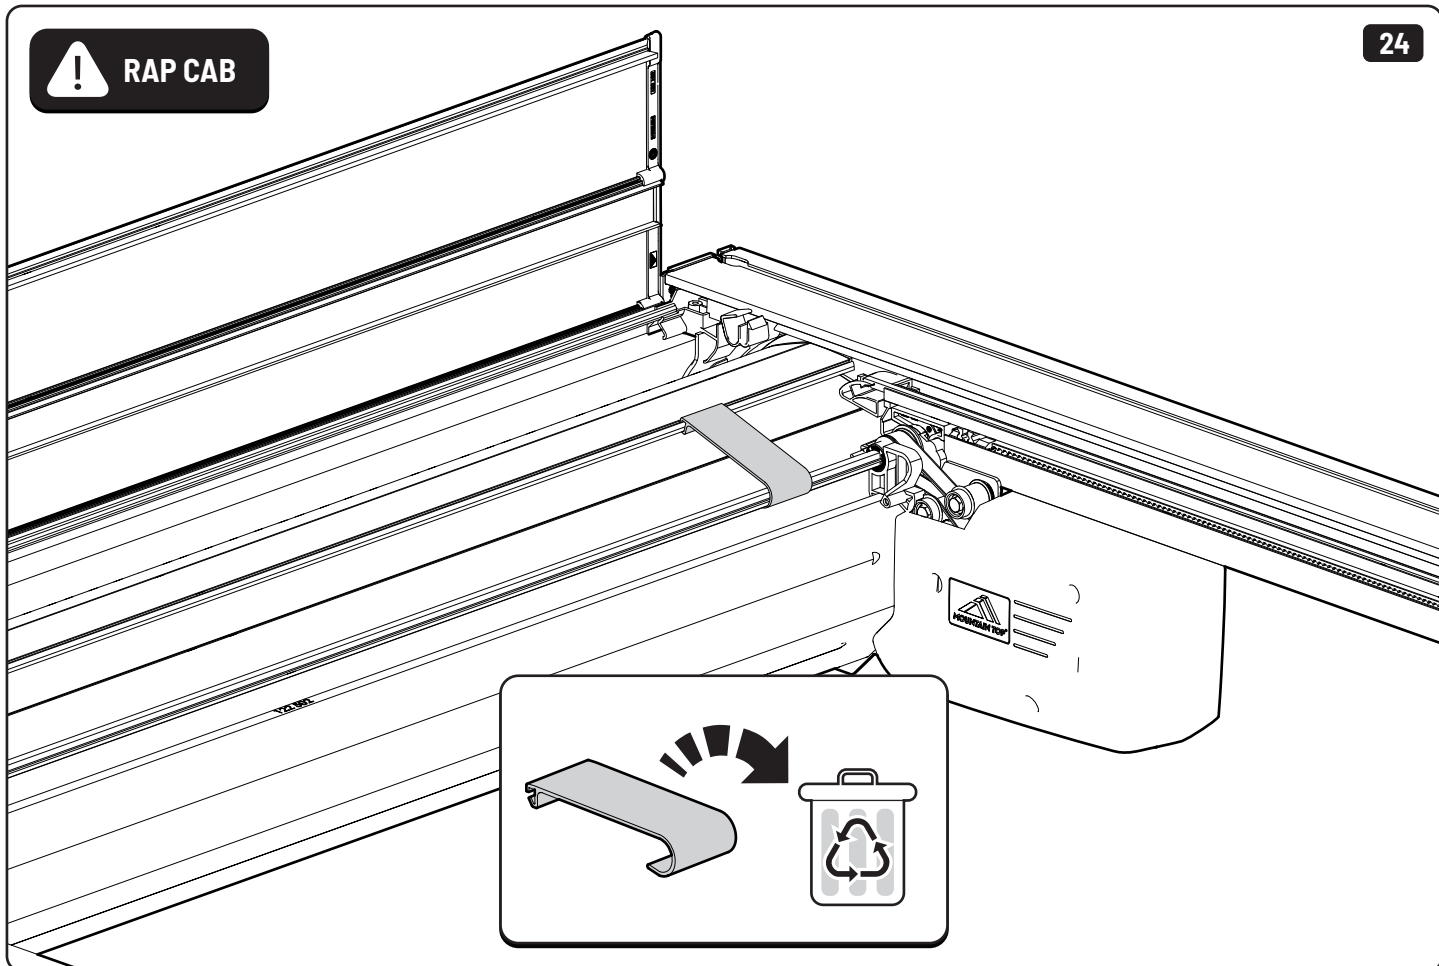




25

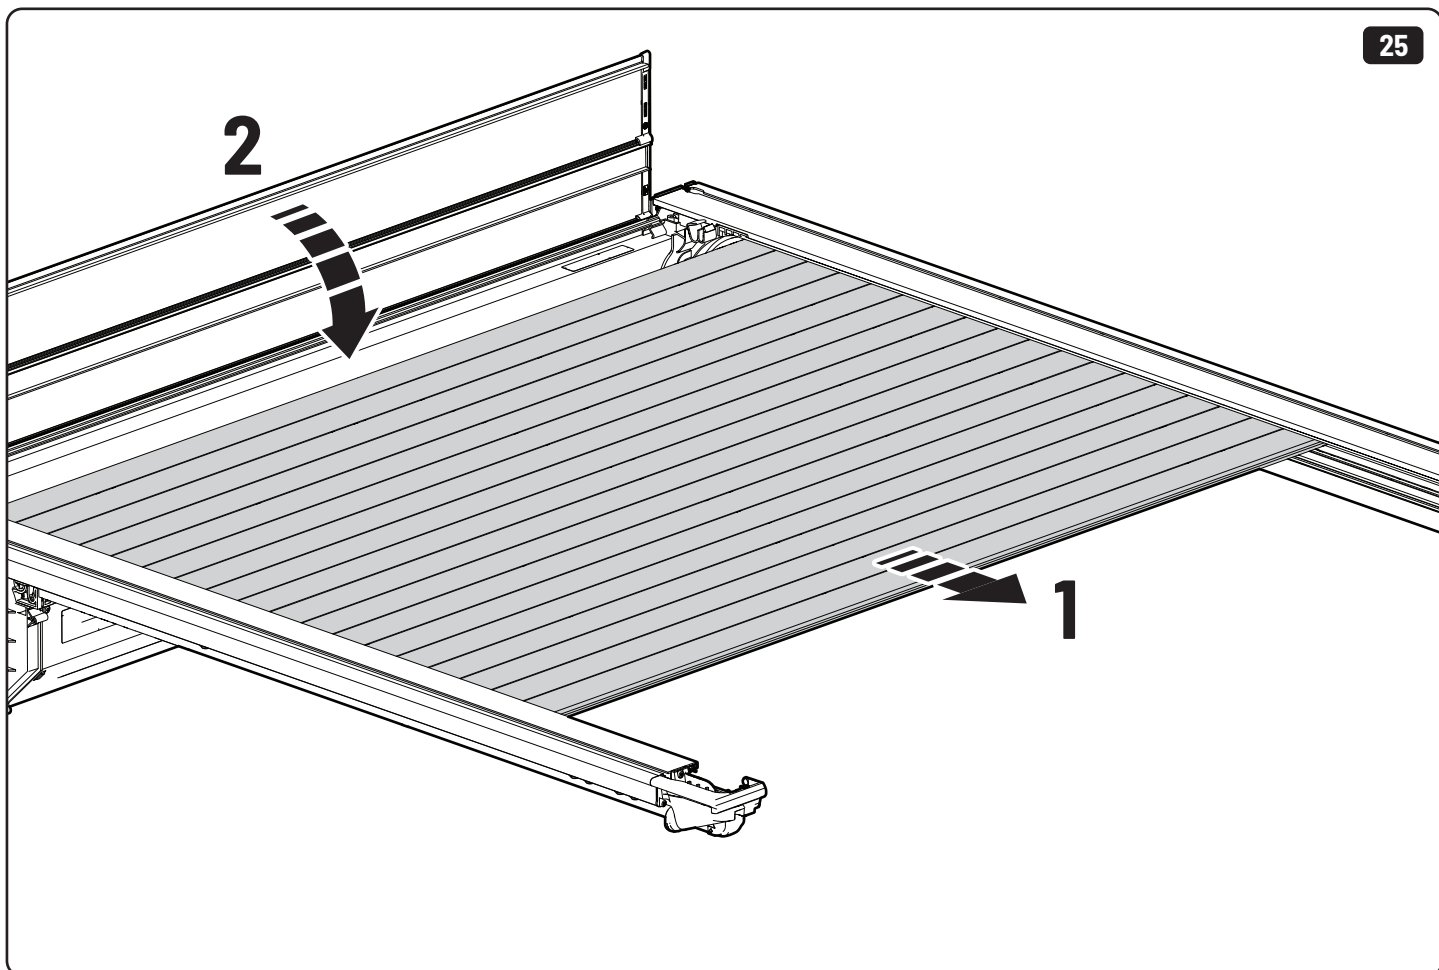

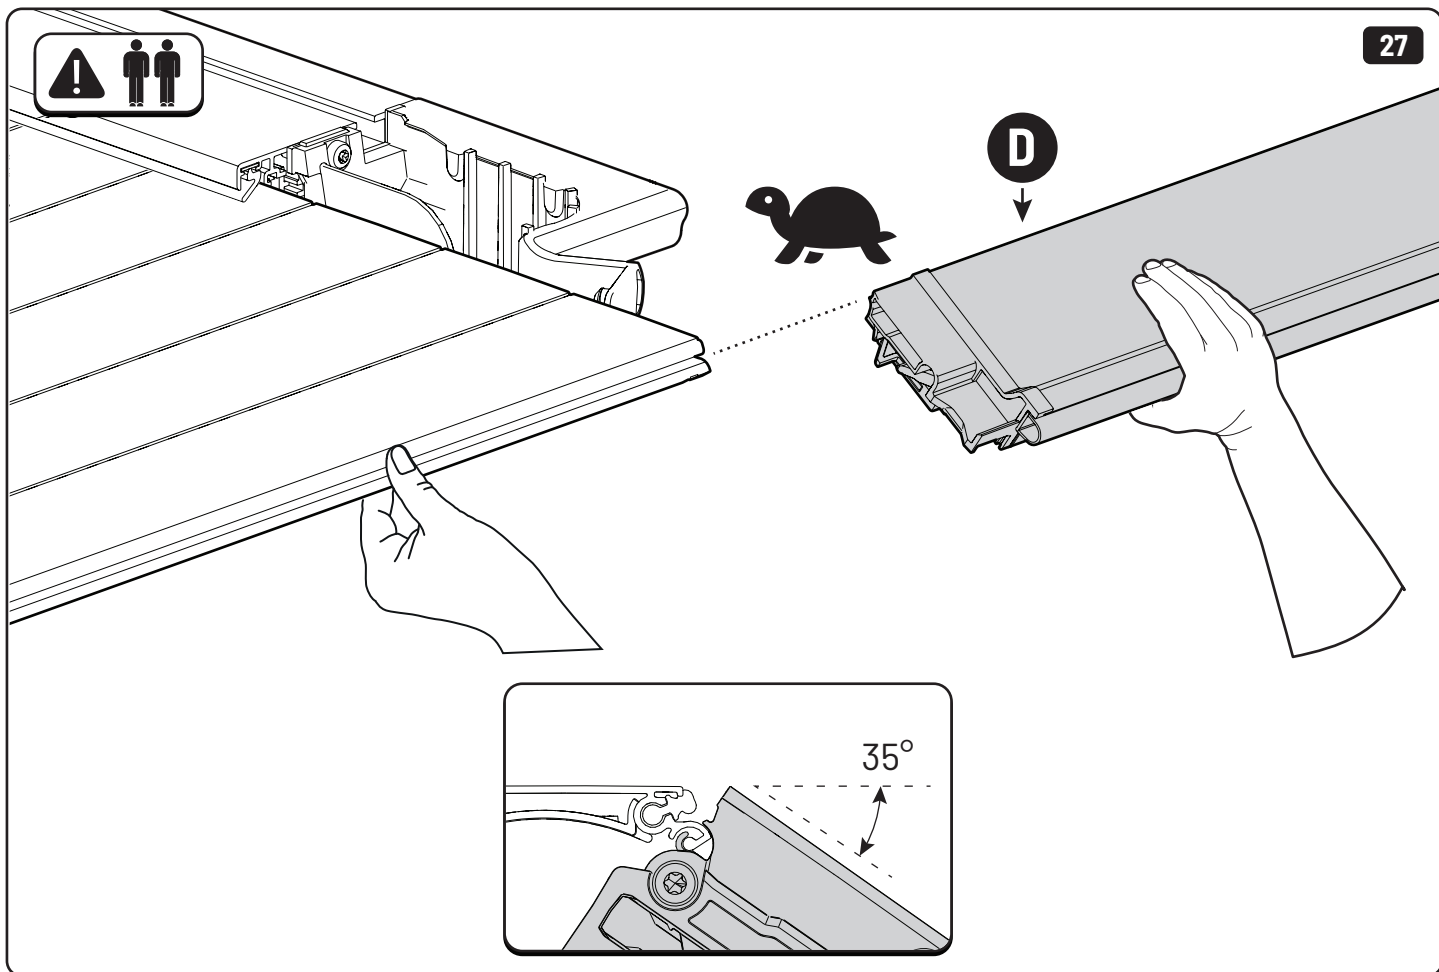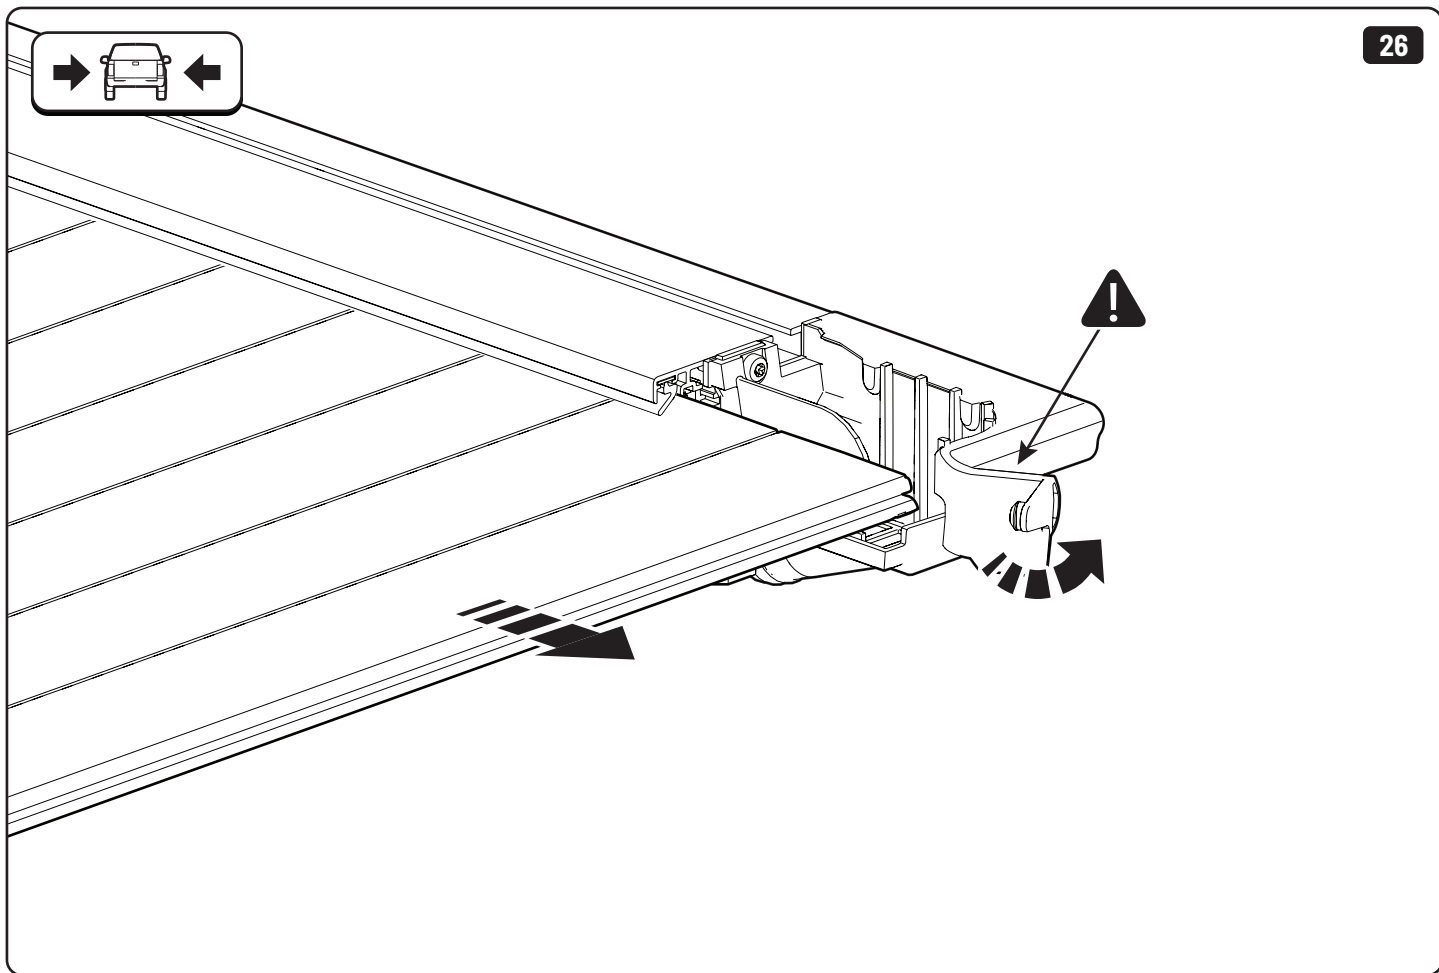


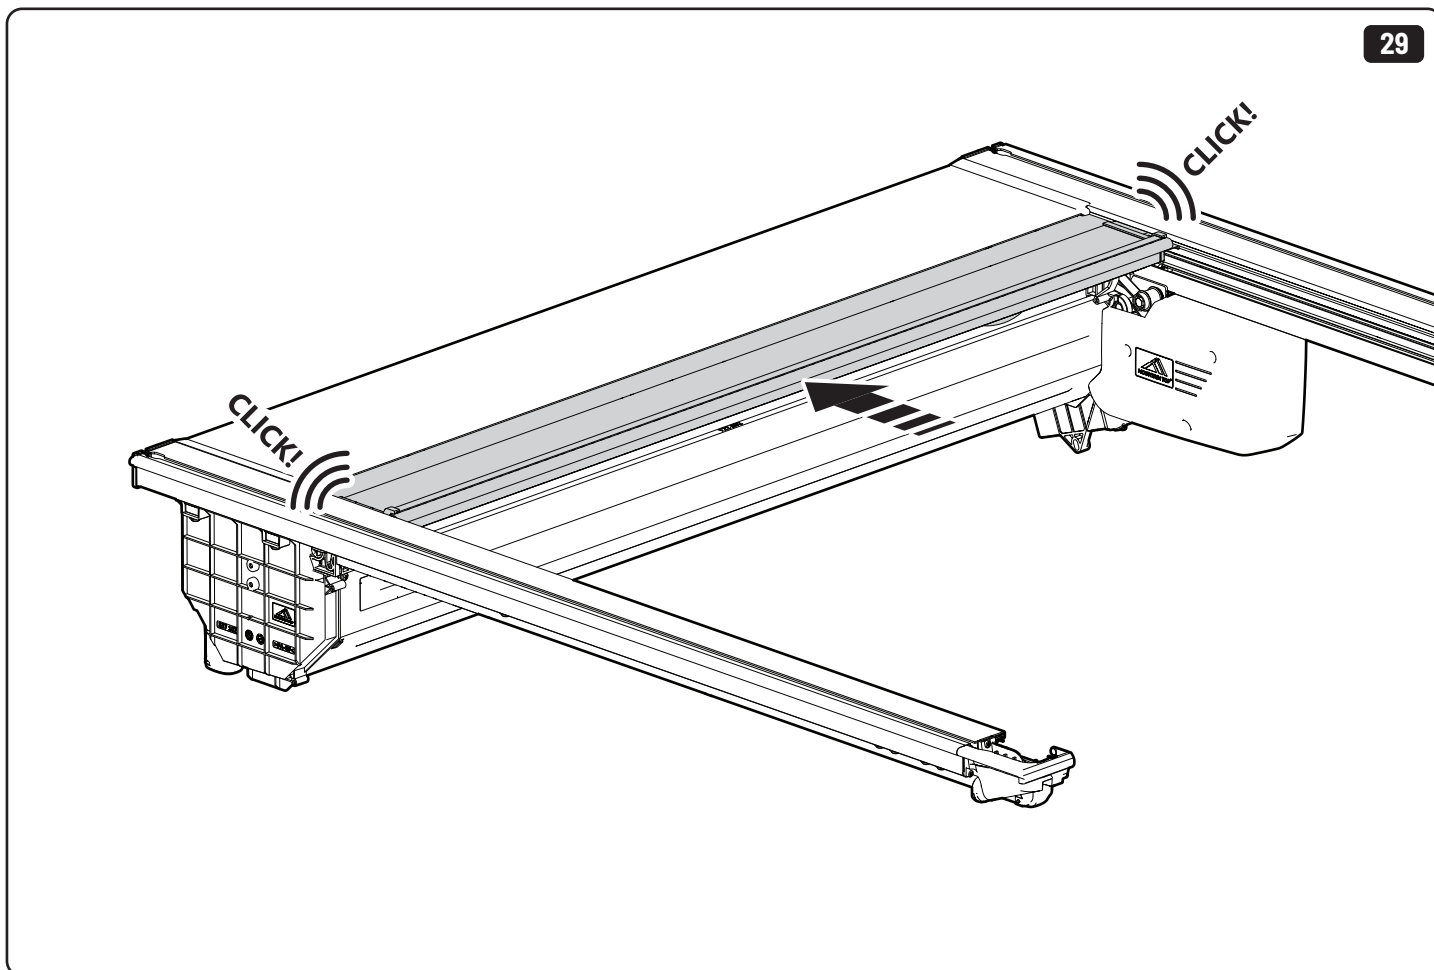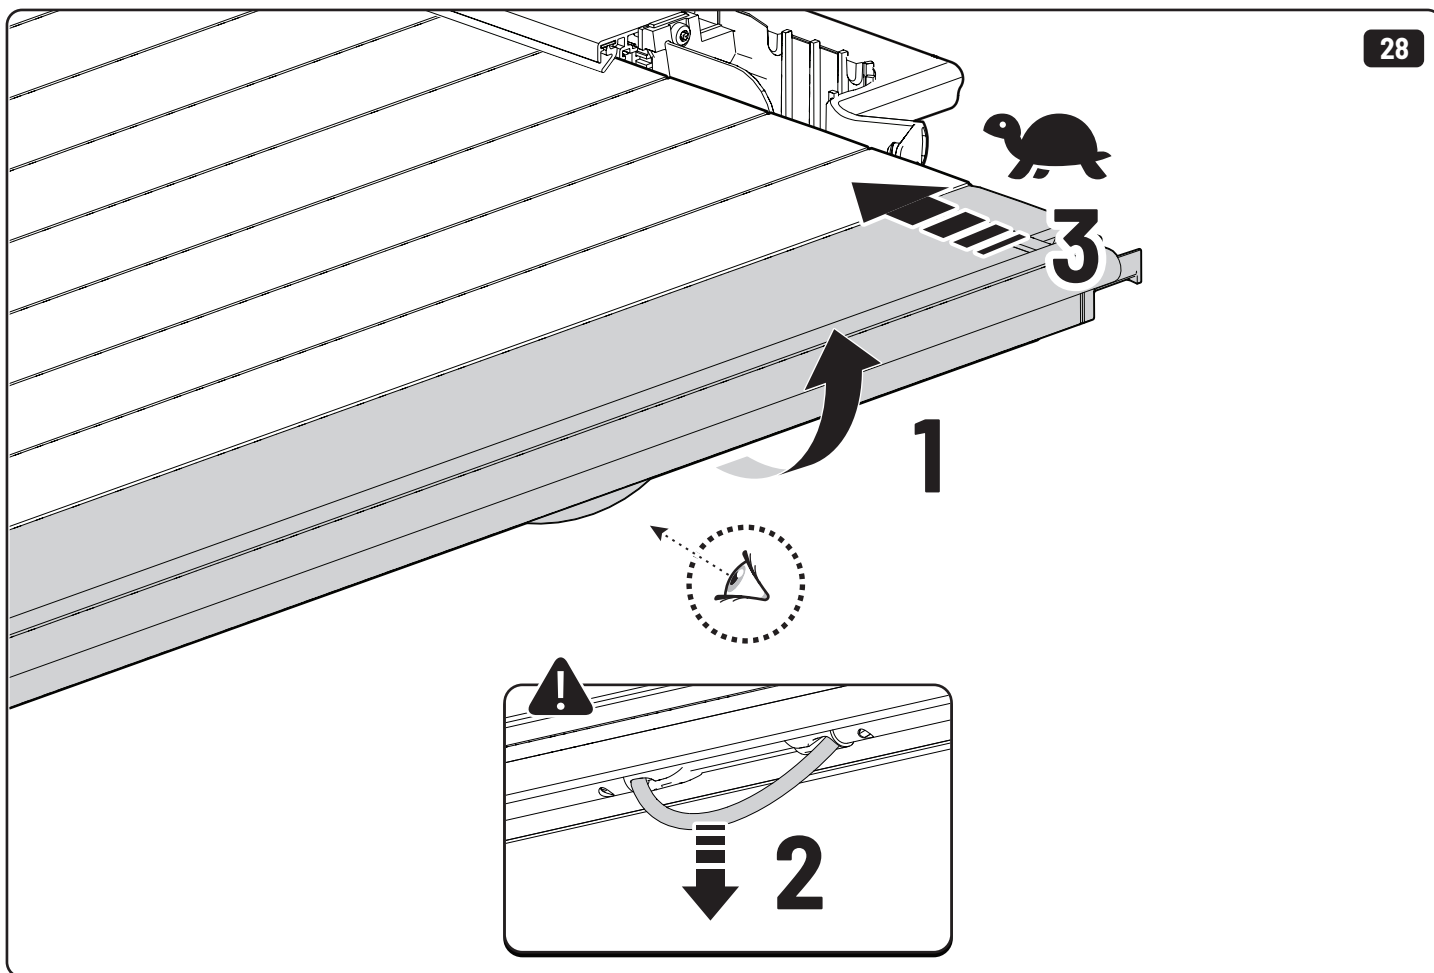

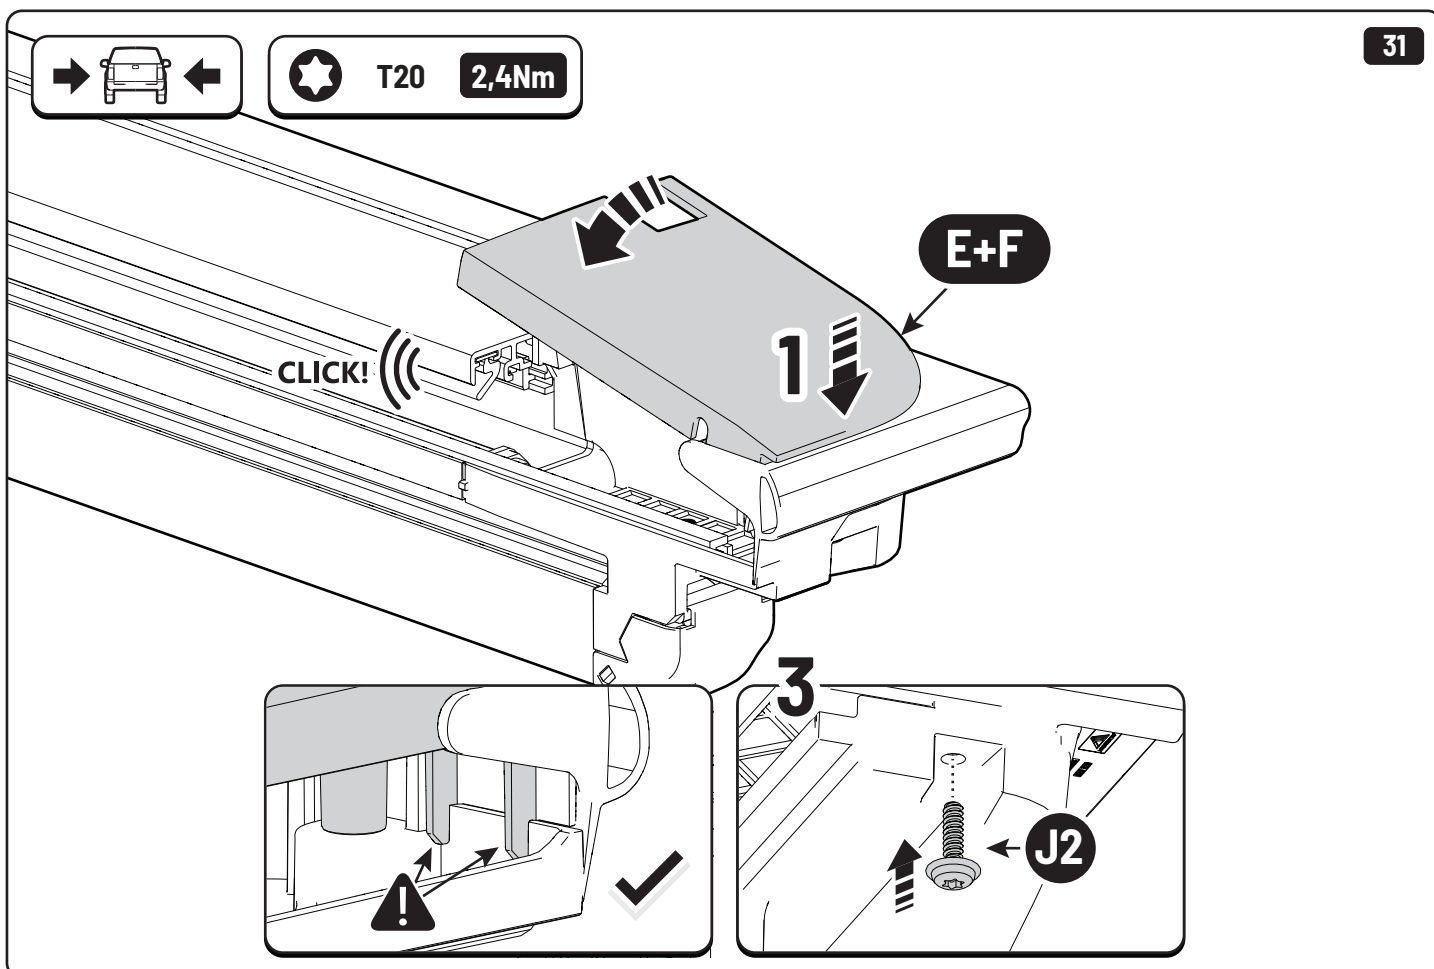
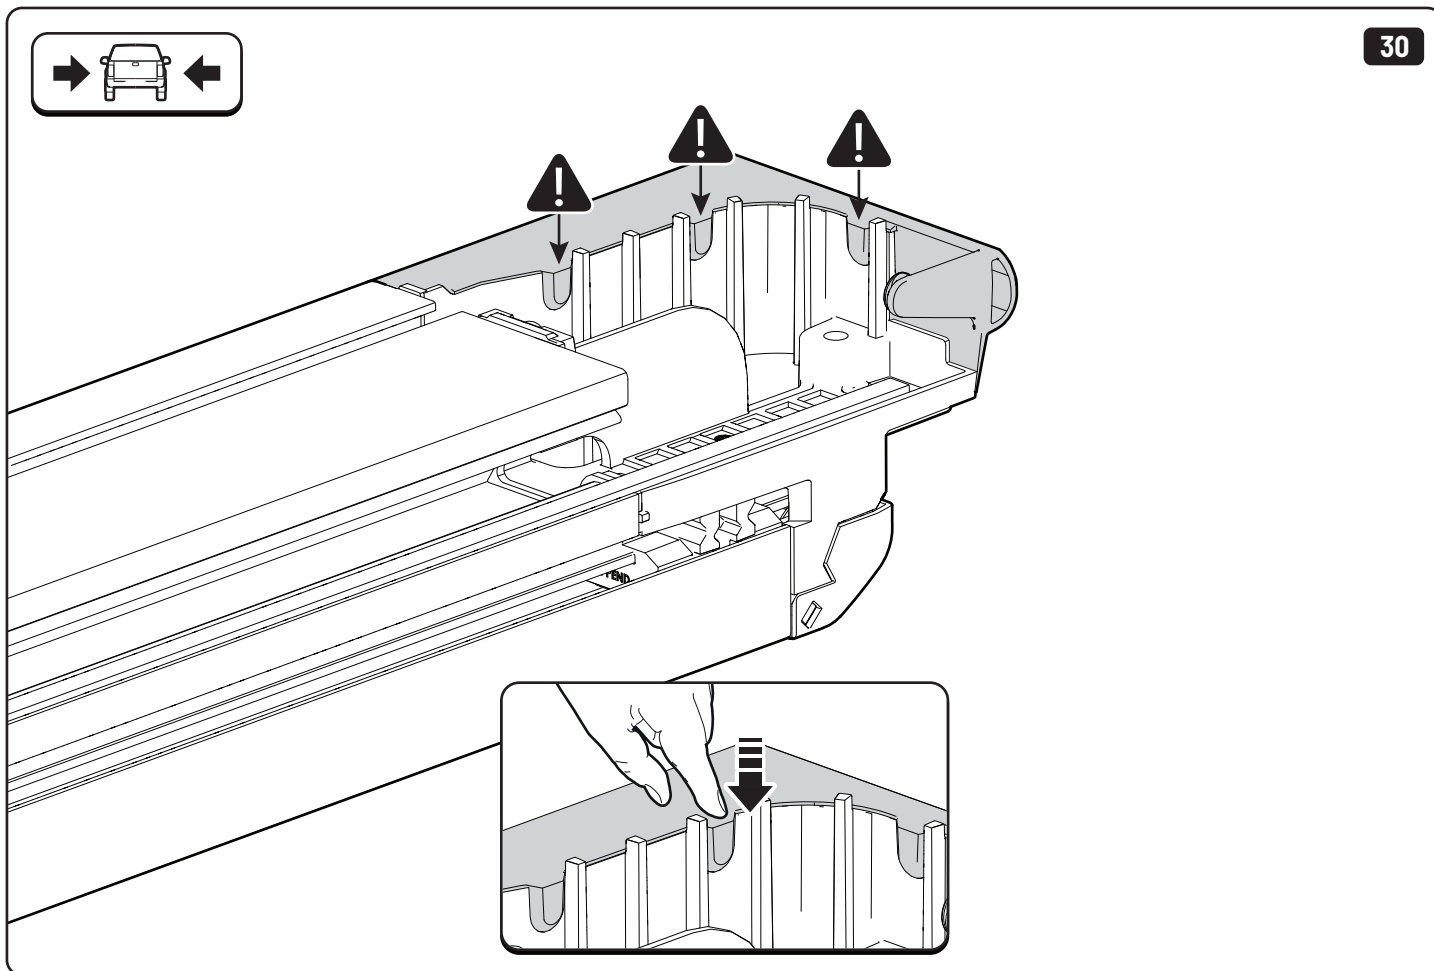


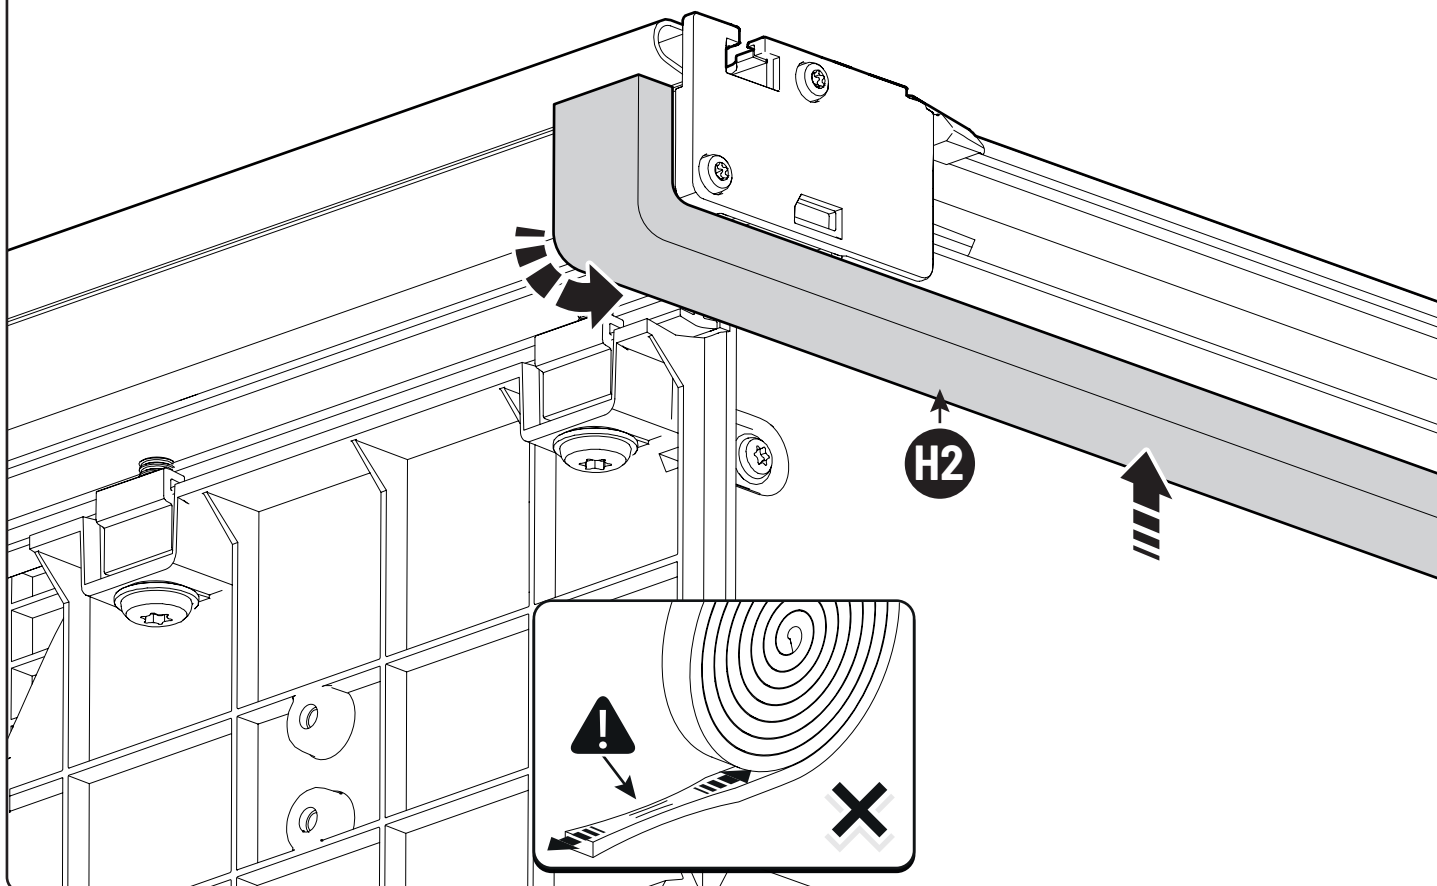
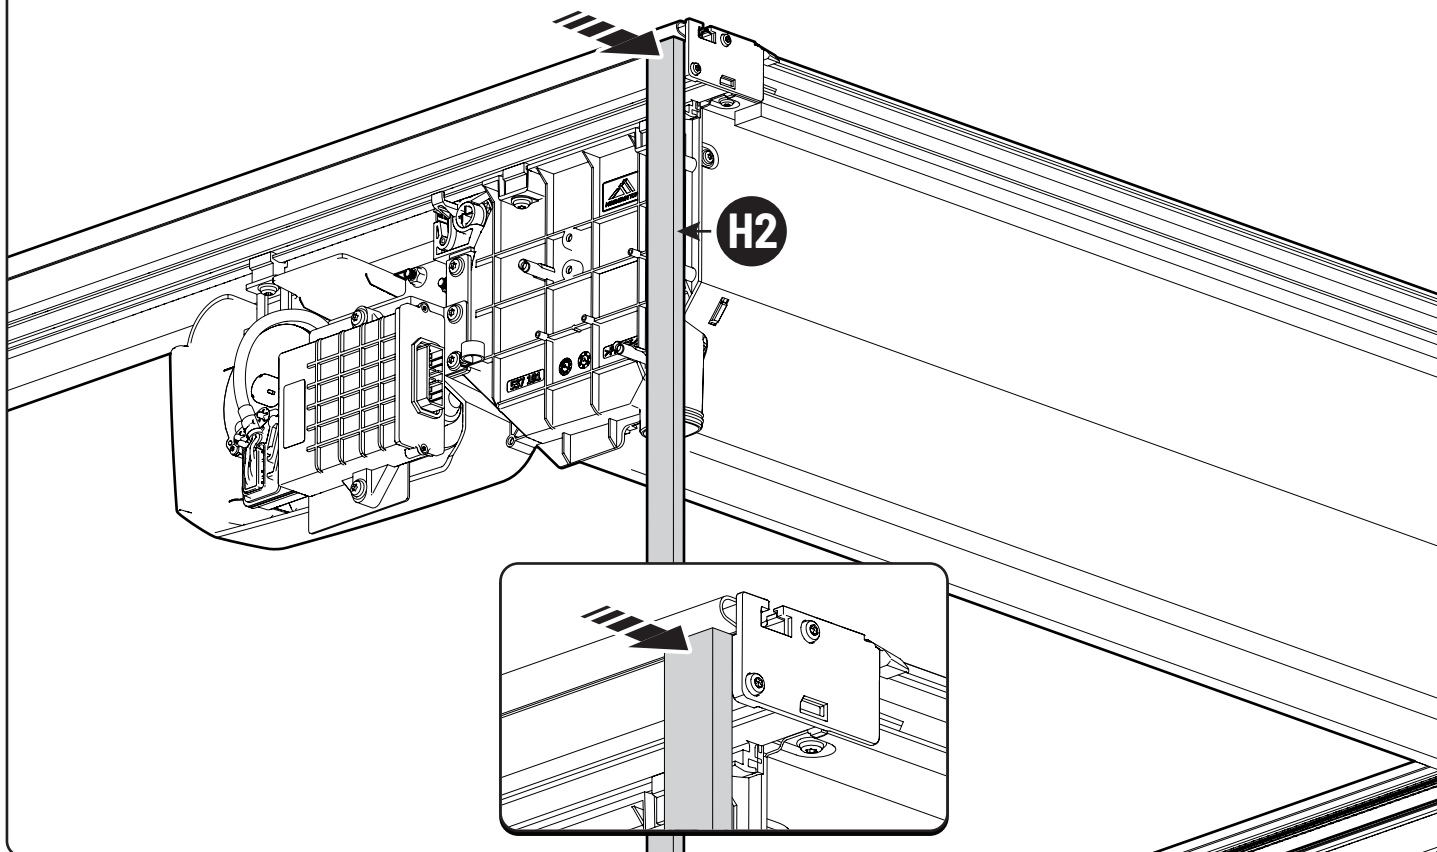





1


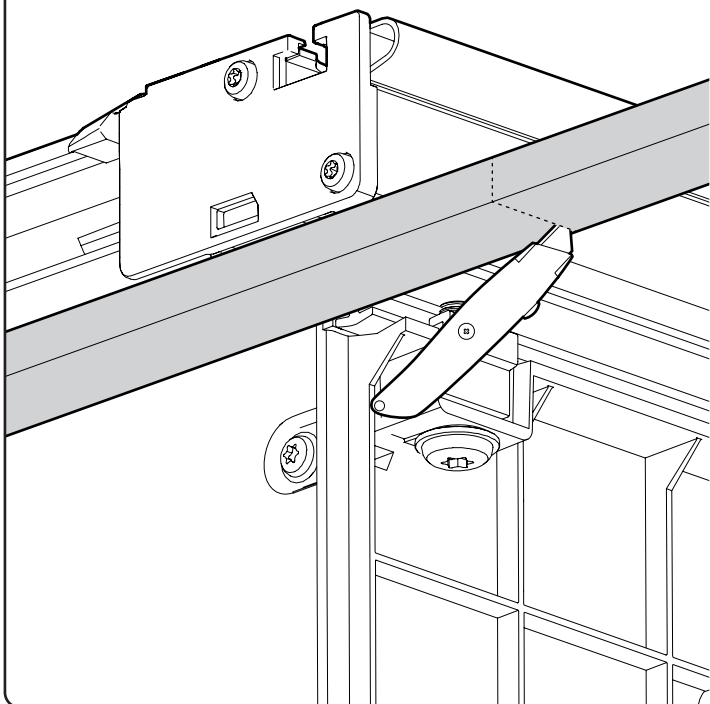




2

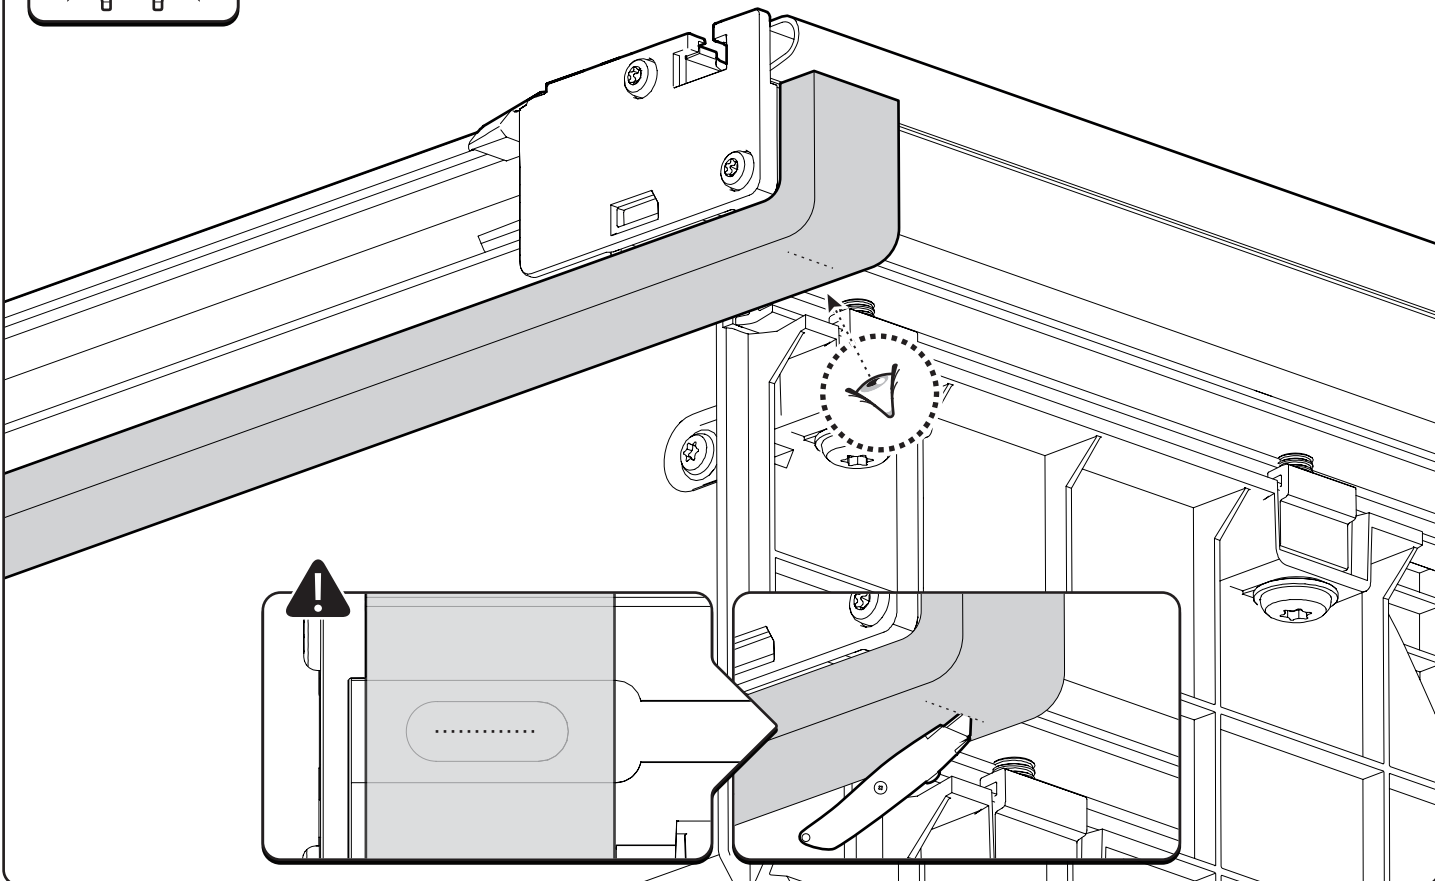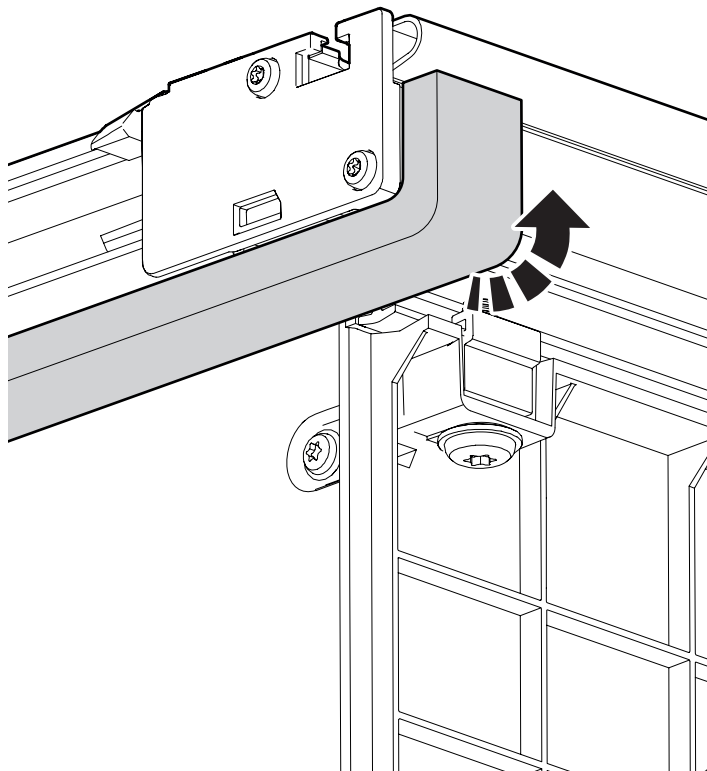


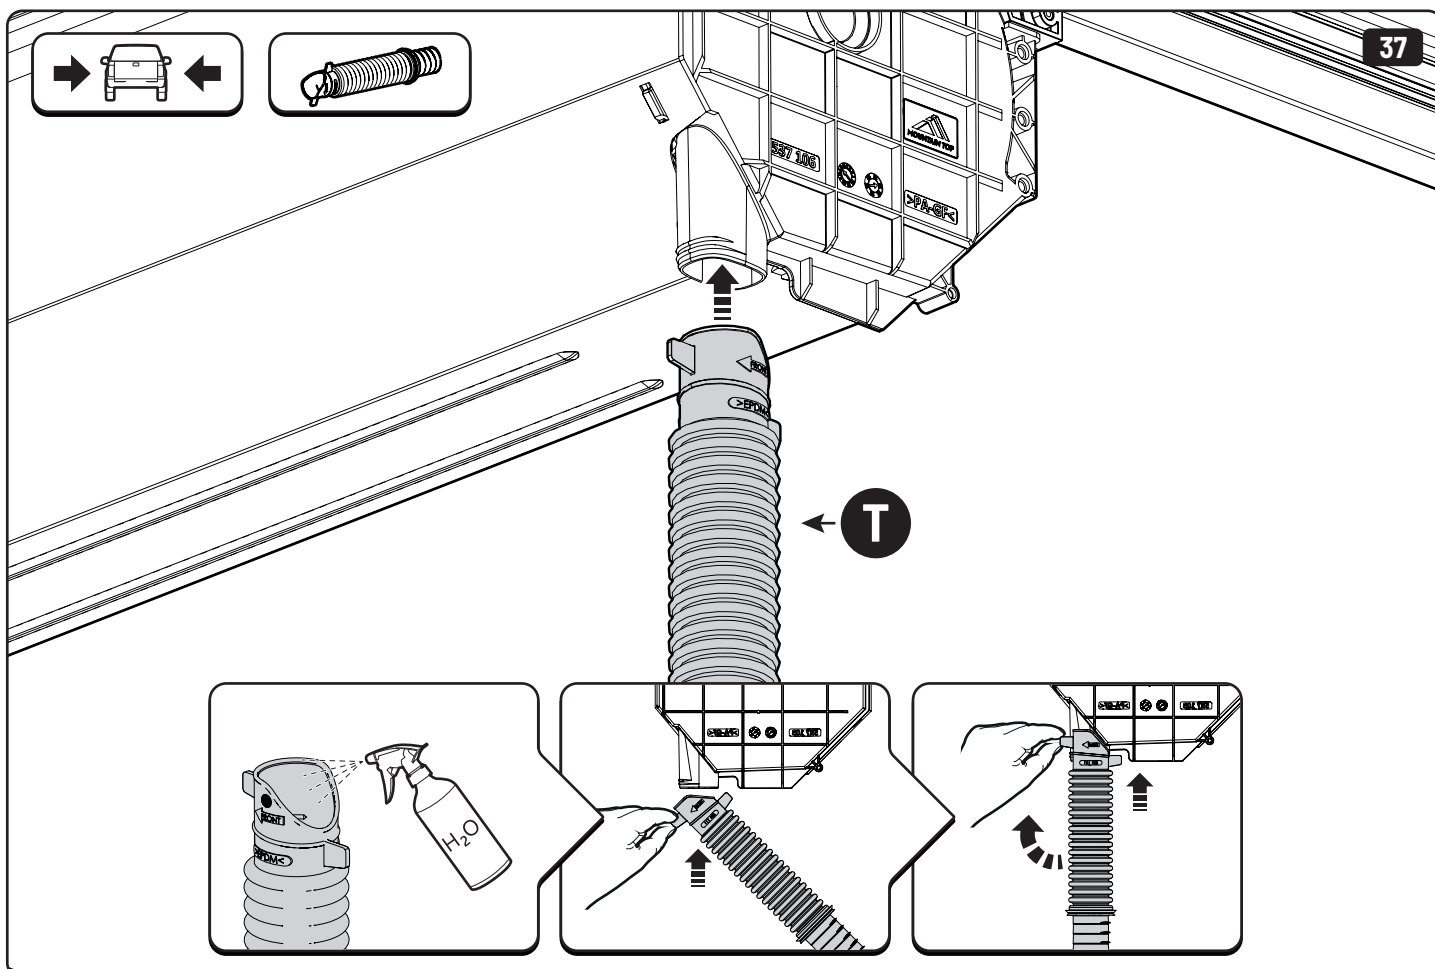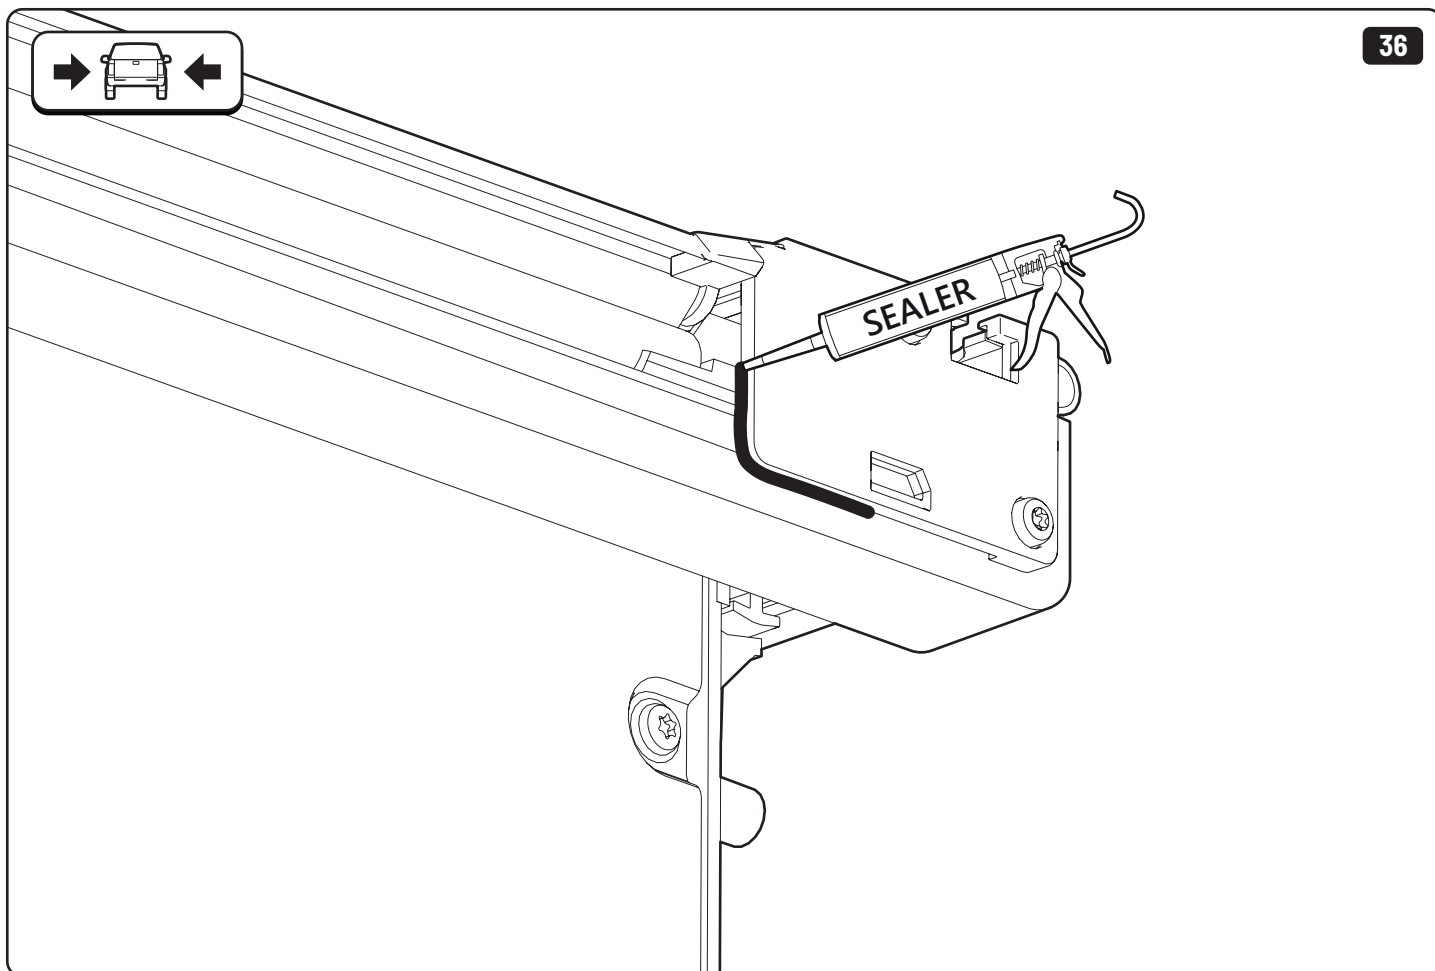


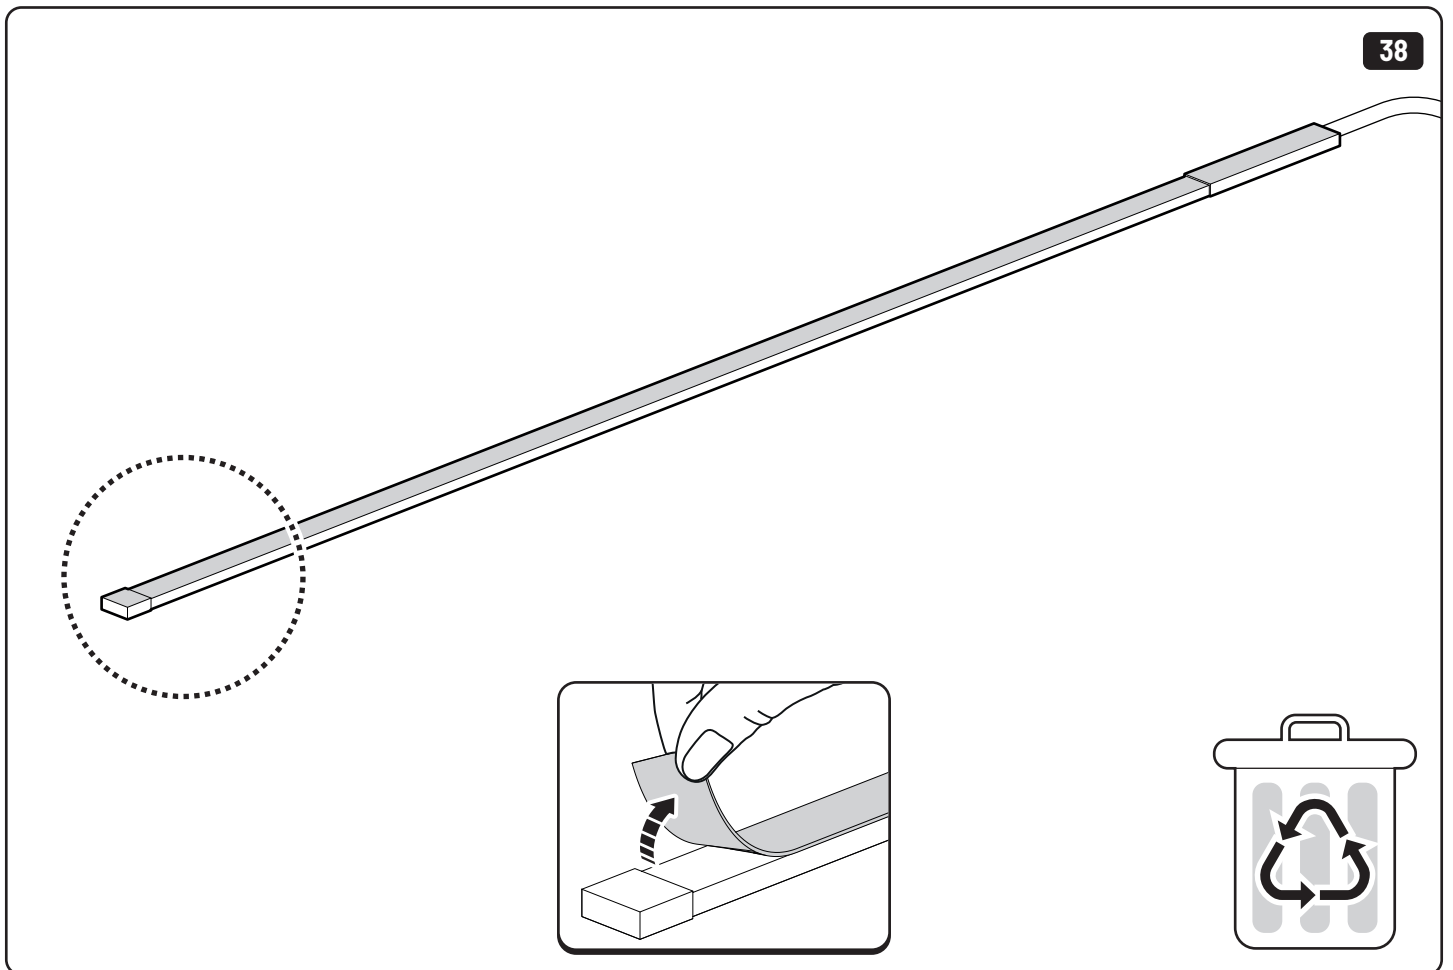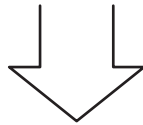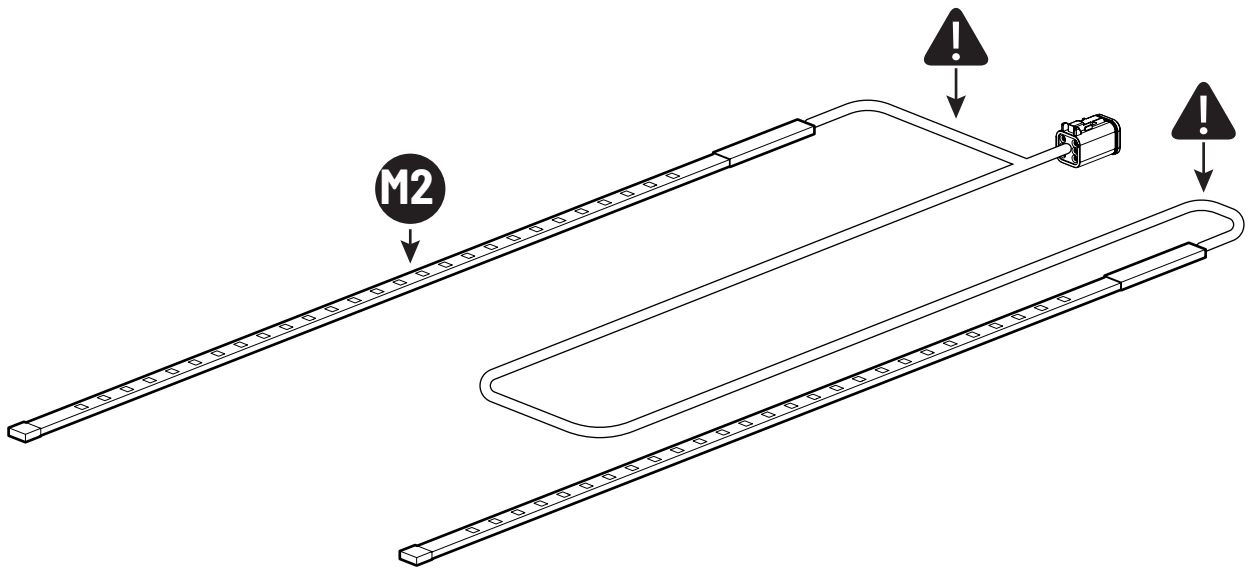

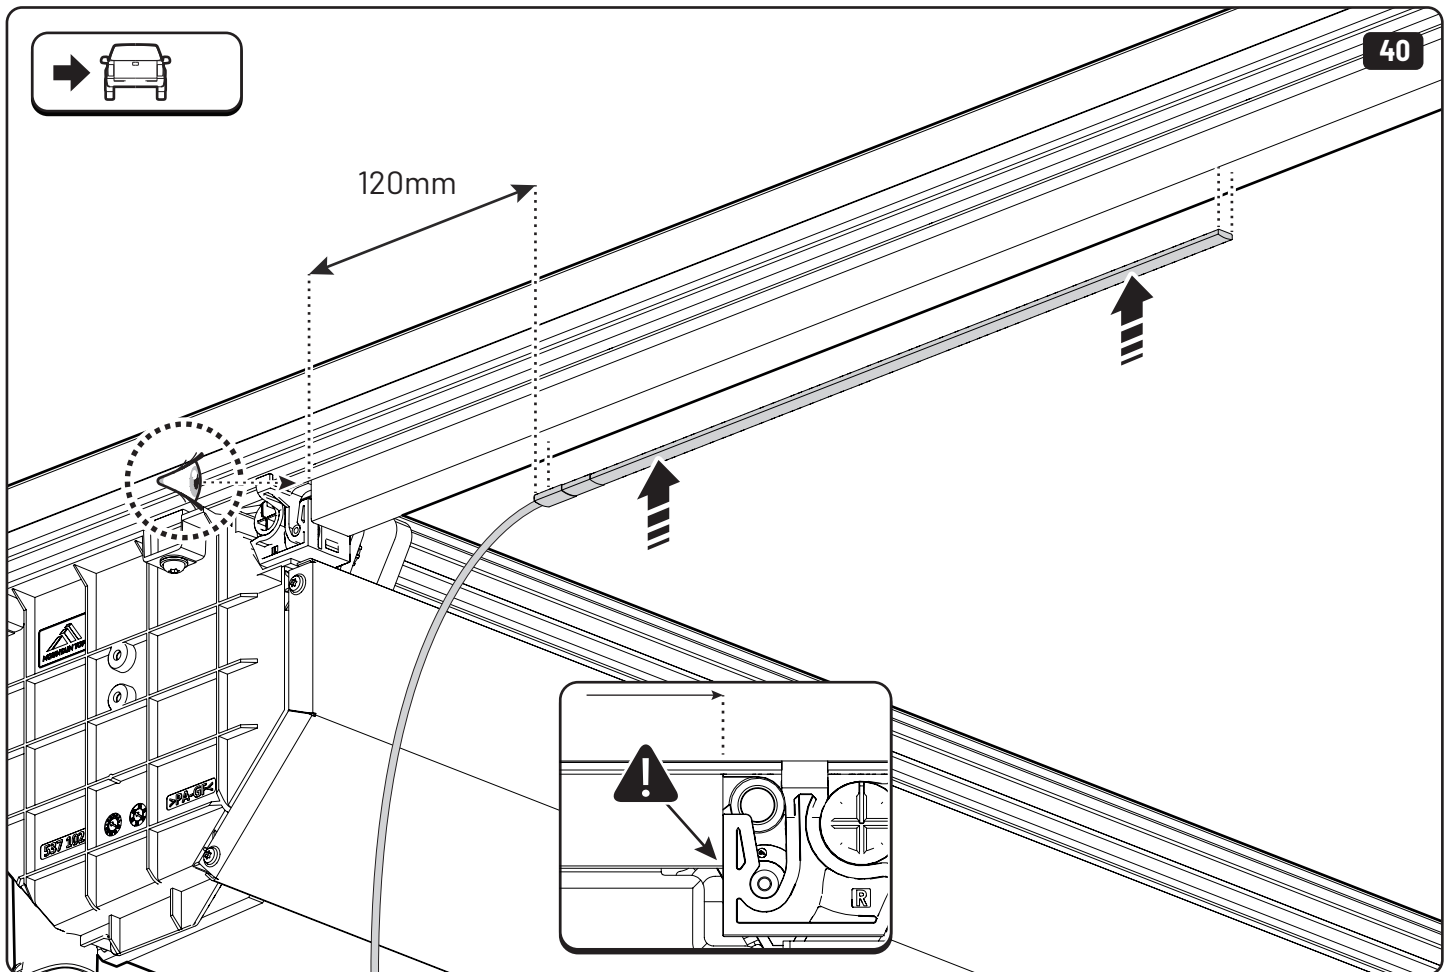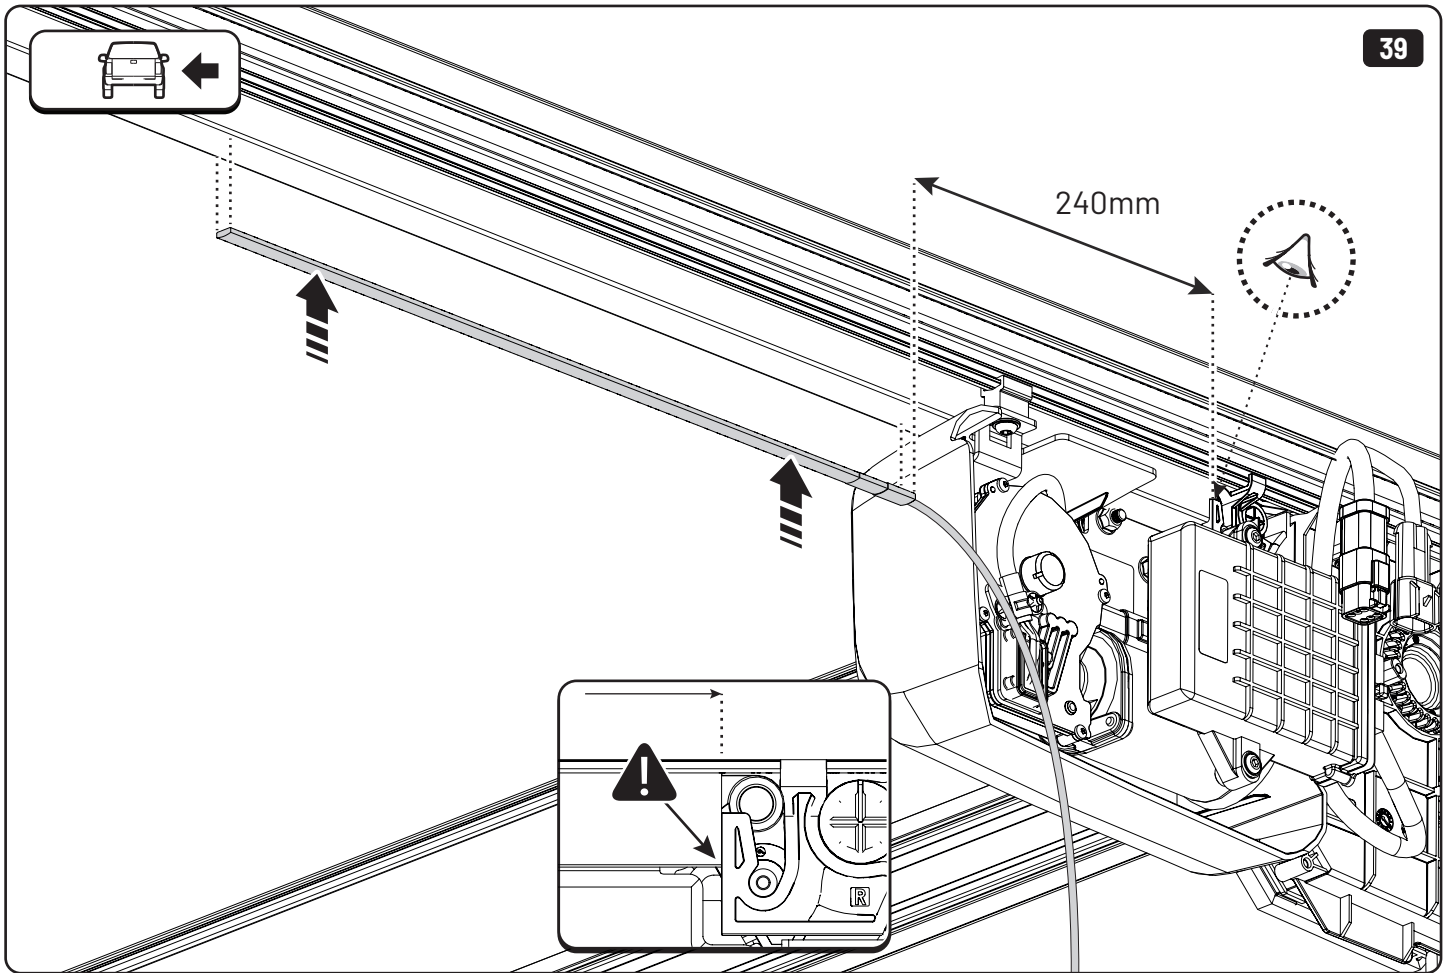

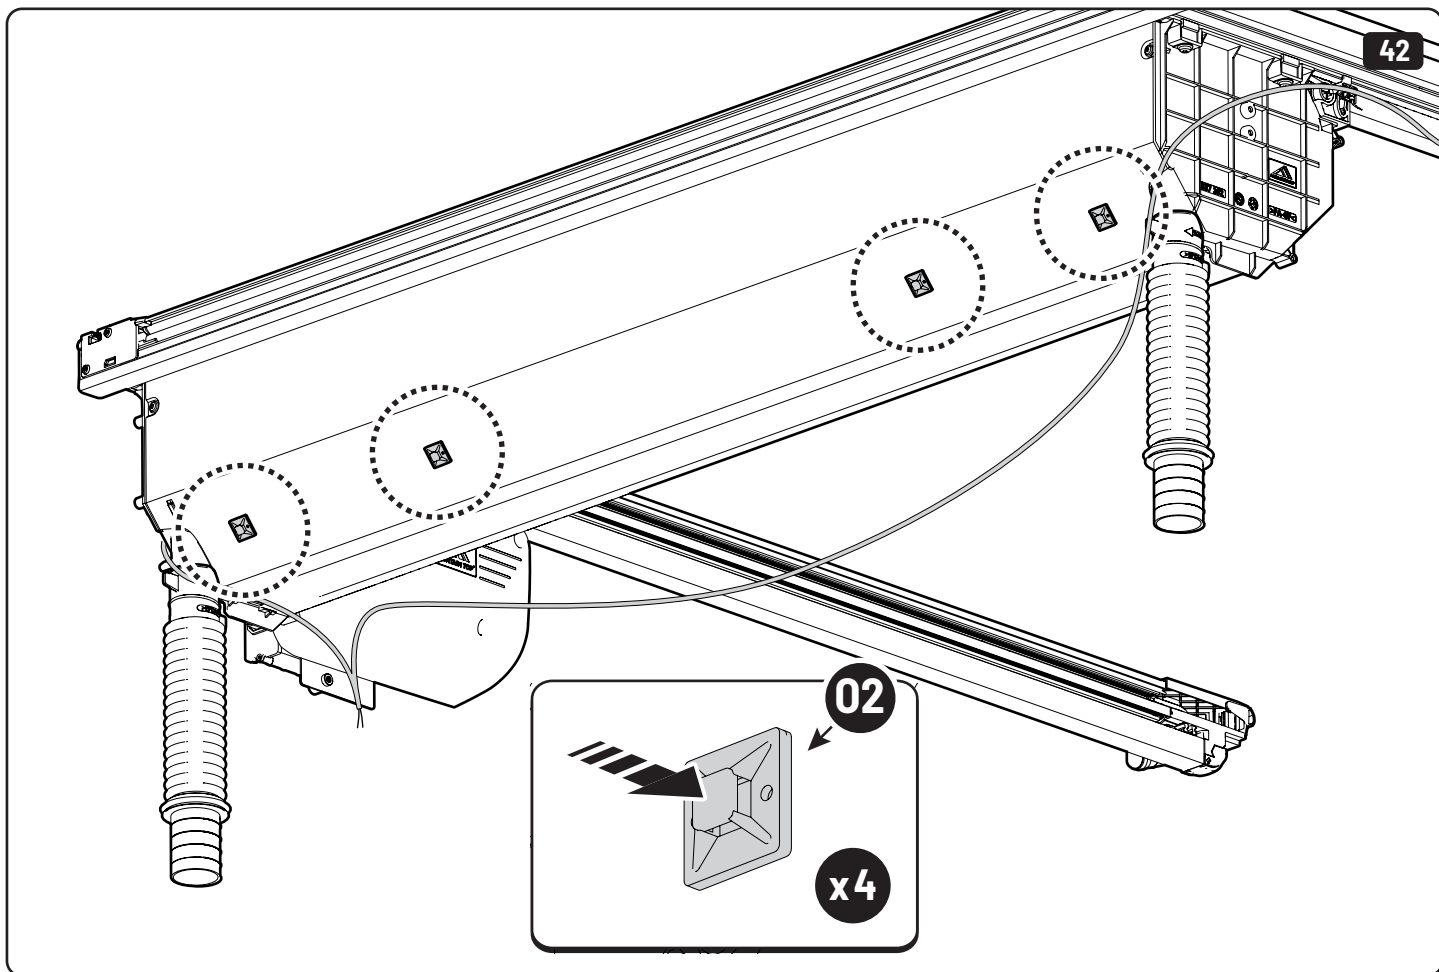
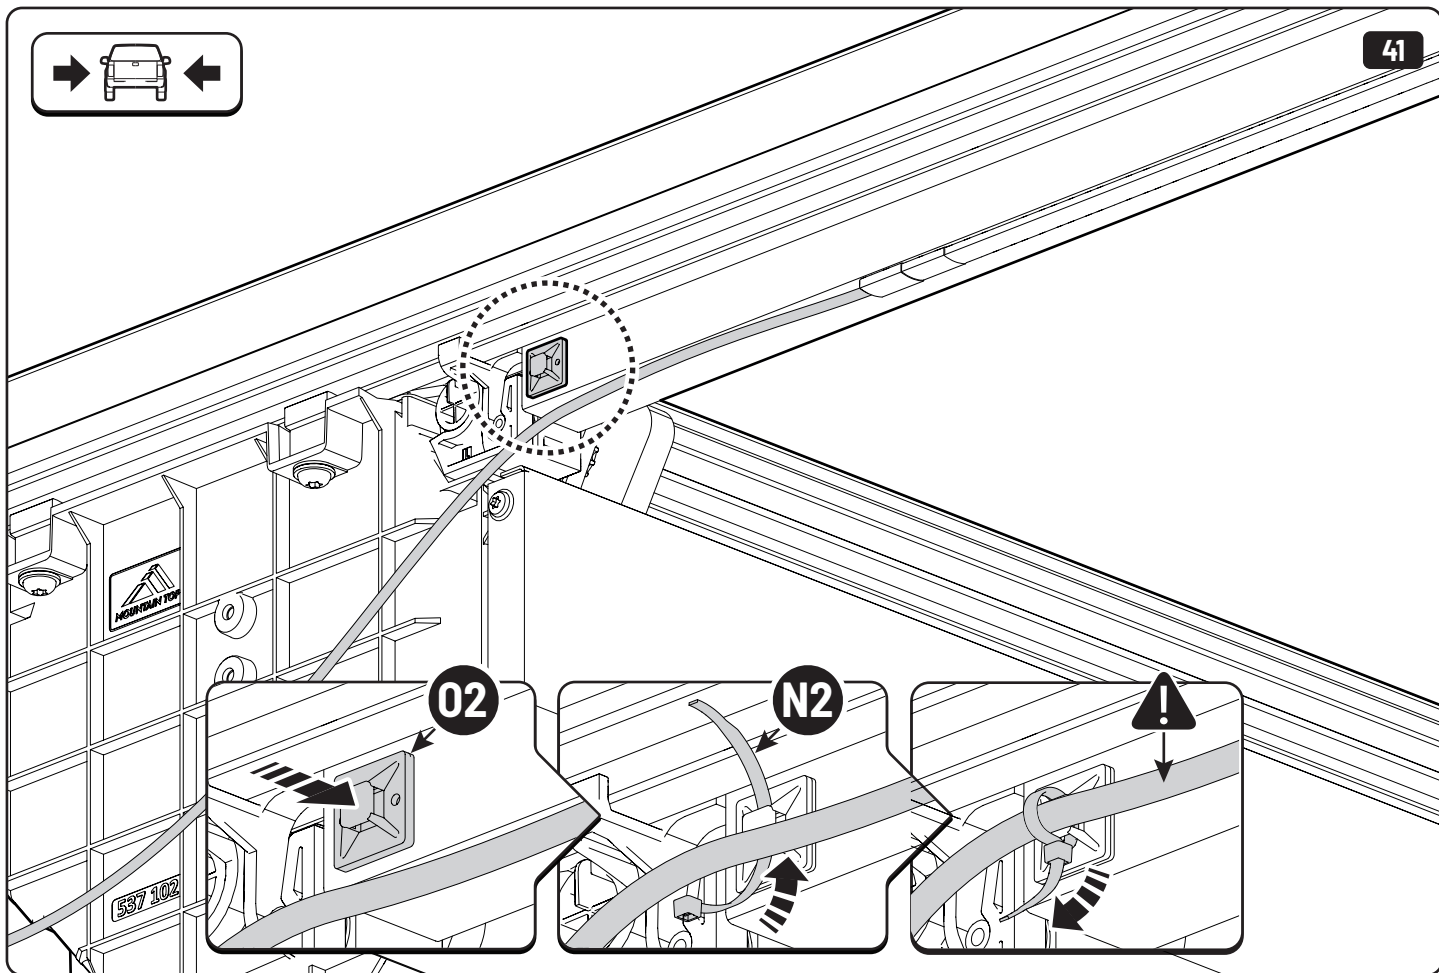


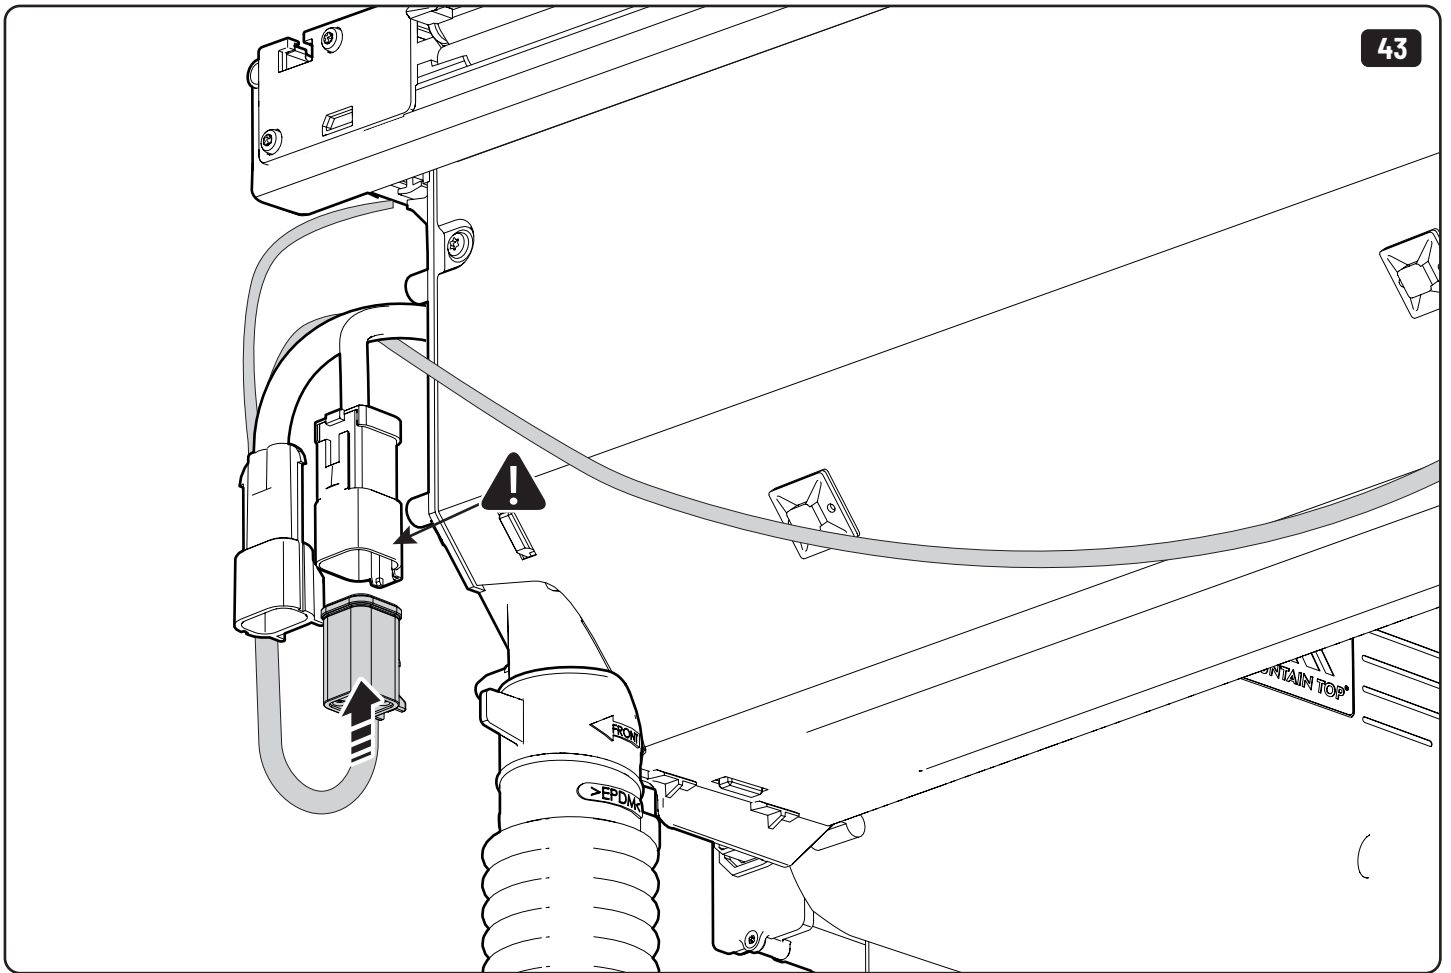

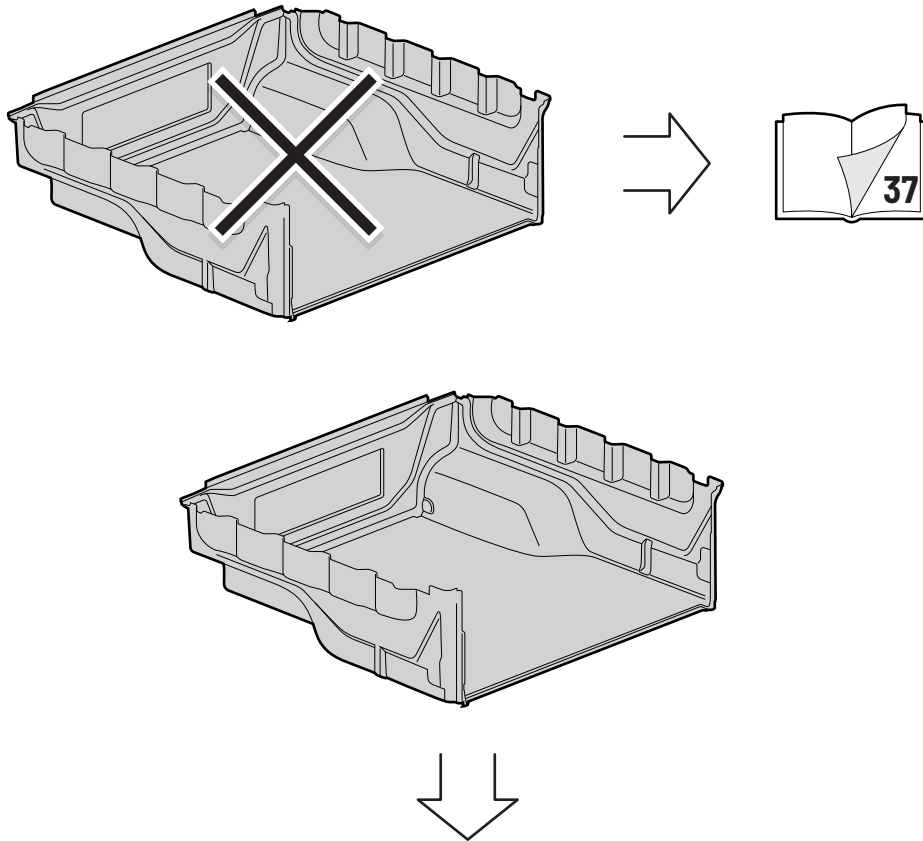



ONLY WITH LINER

44

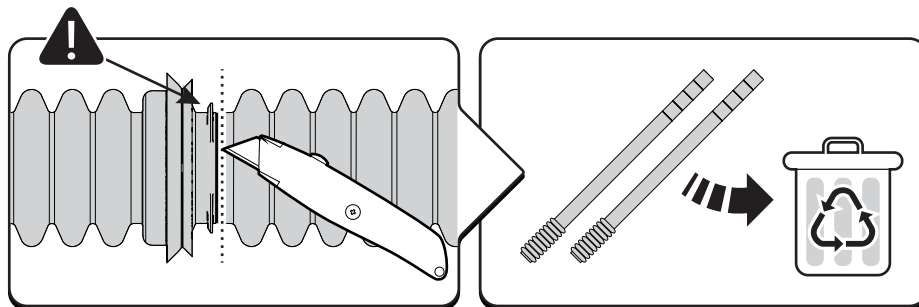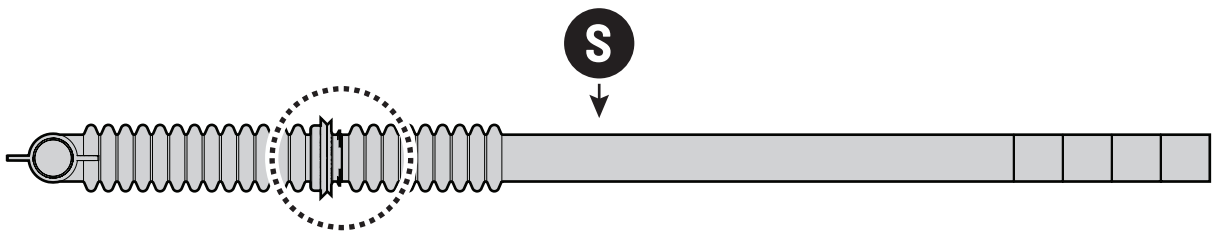



ONLY WITH LINER

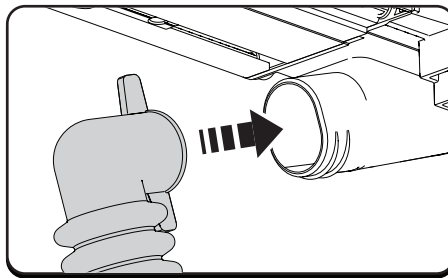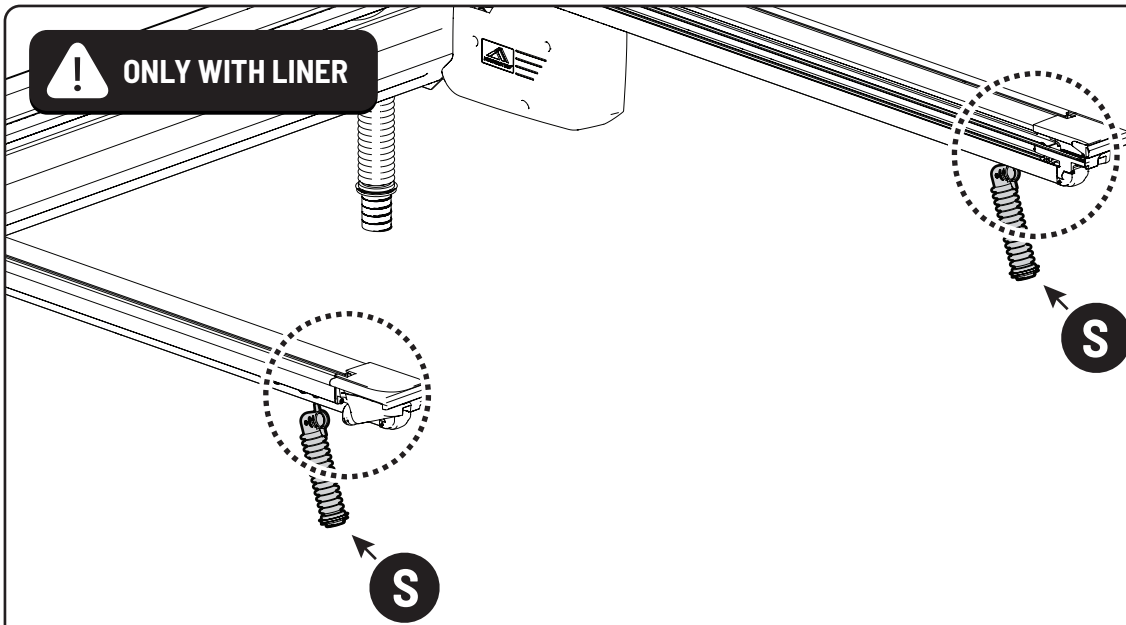




ONLY WITH LINER



EUROPEAN MODEL

X: 650 mm Y: 290 mm

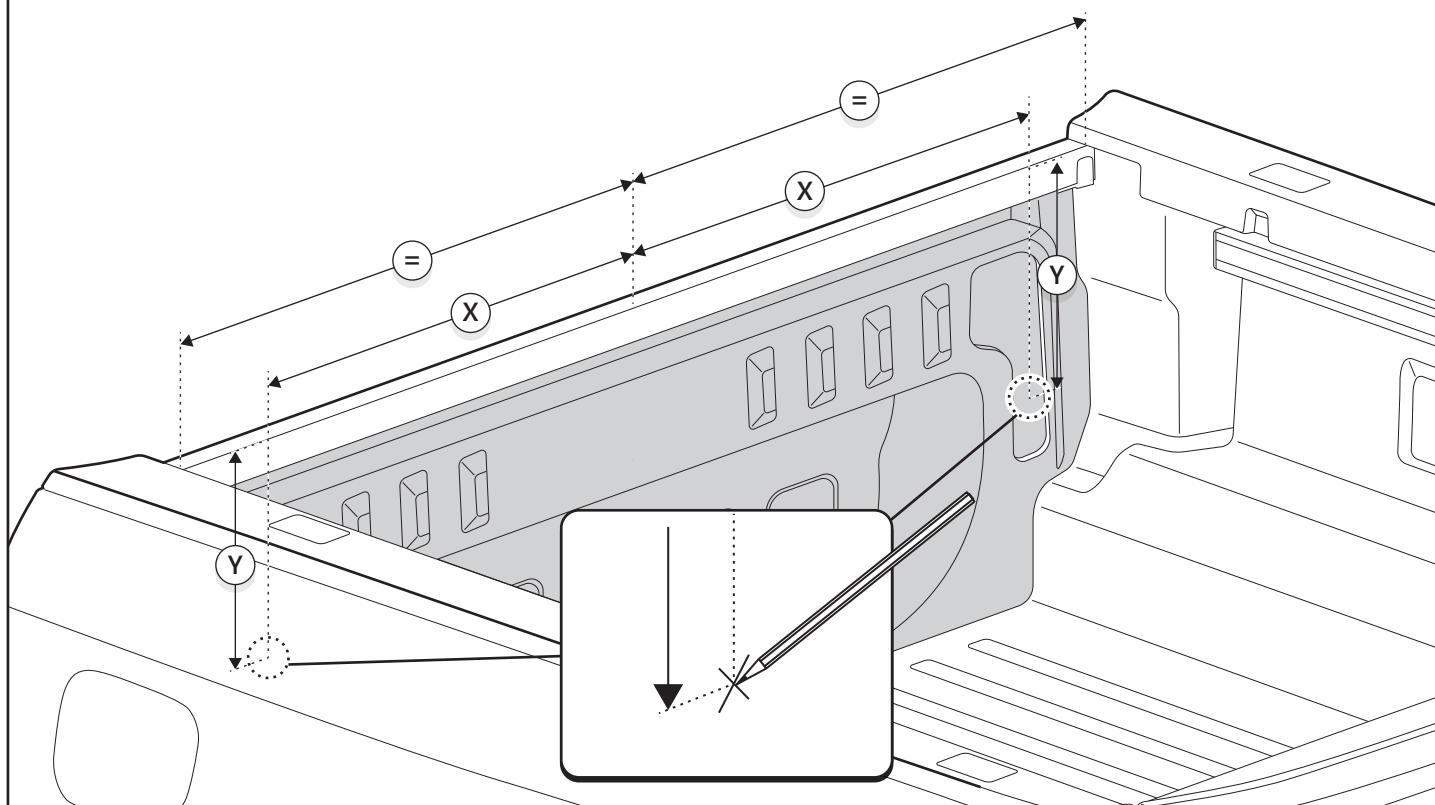




ONLY WITH LINER







OTHER MODELS




X: 560 mm Y: 330 mm

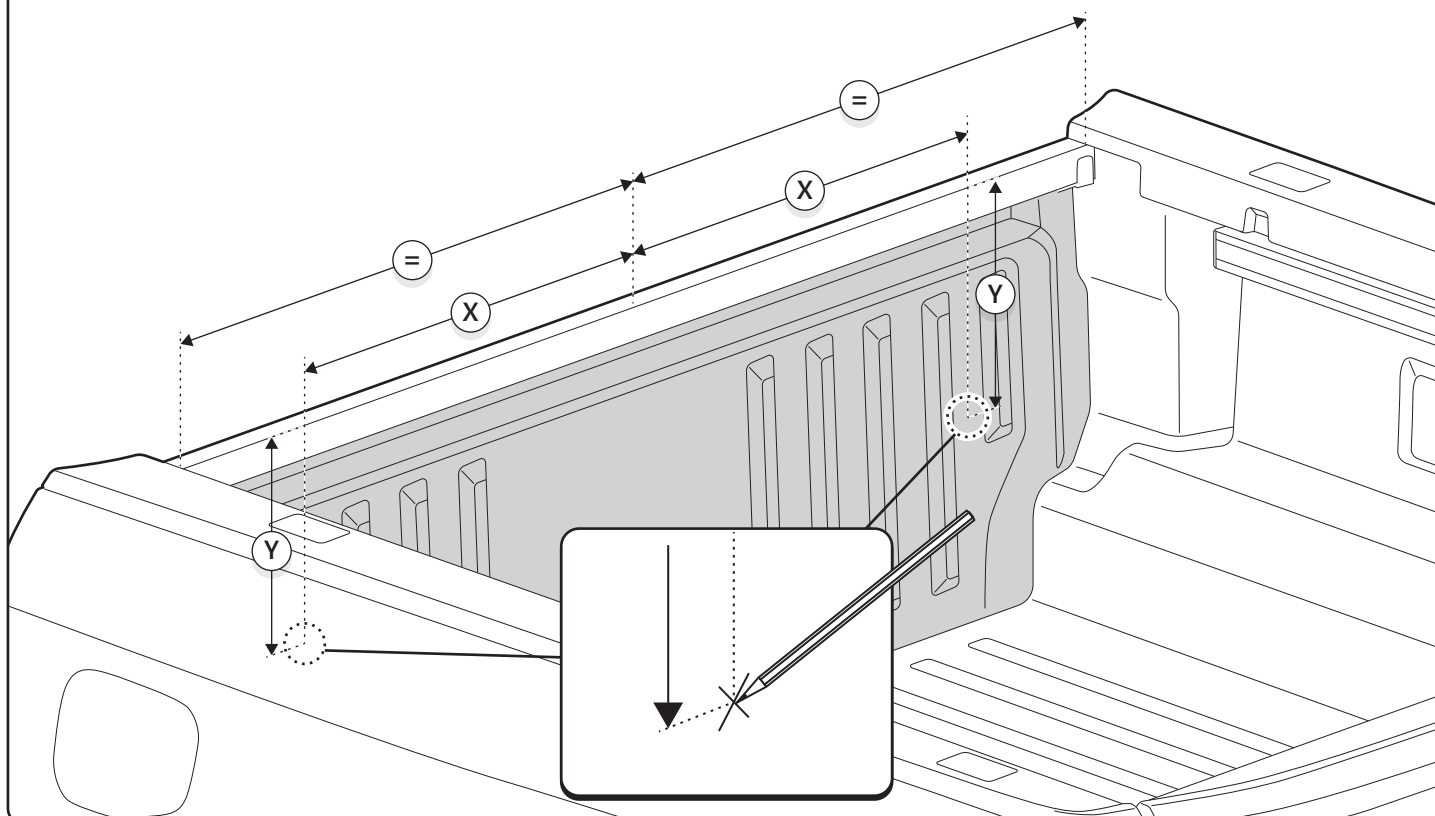

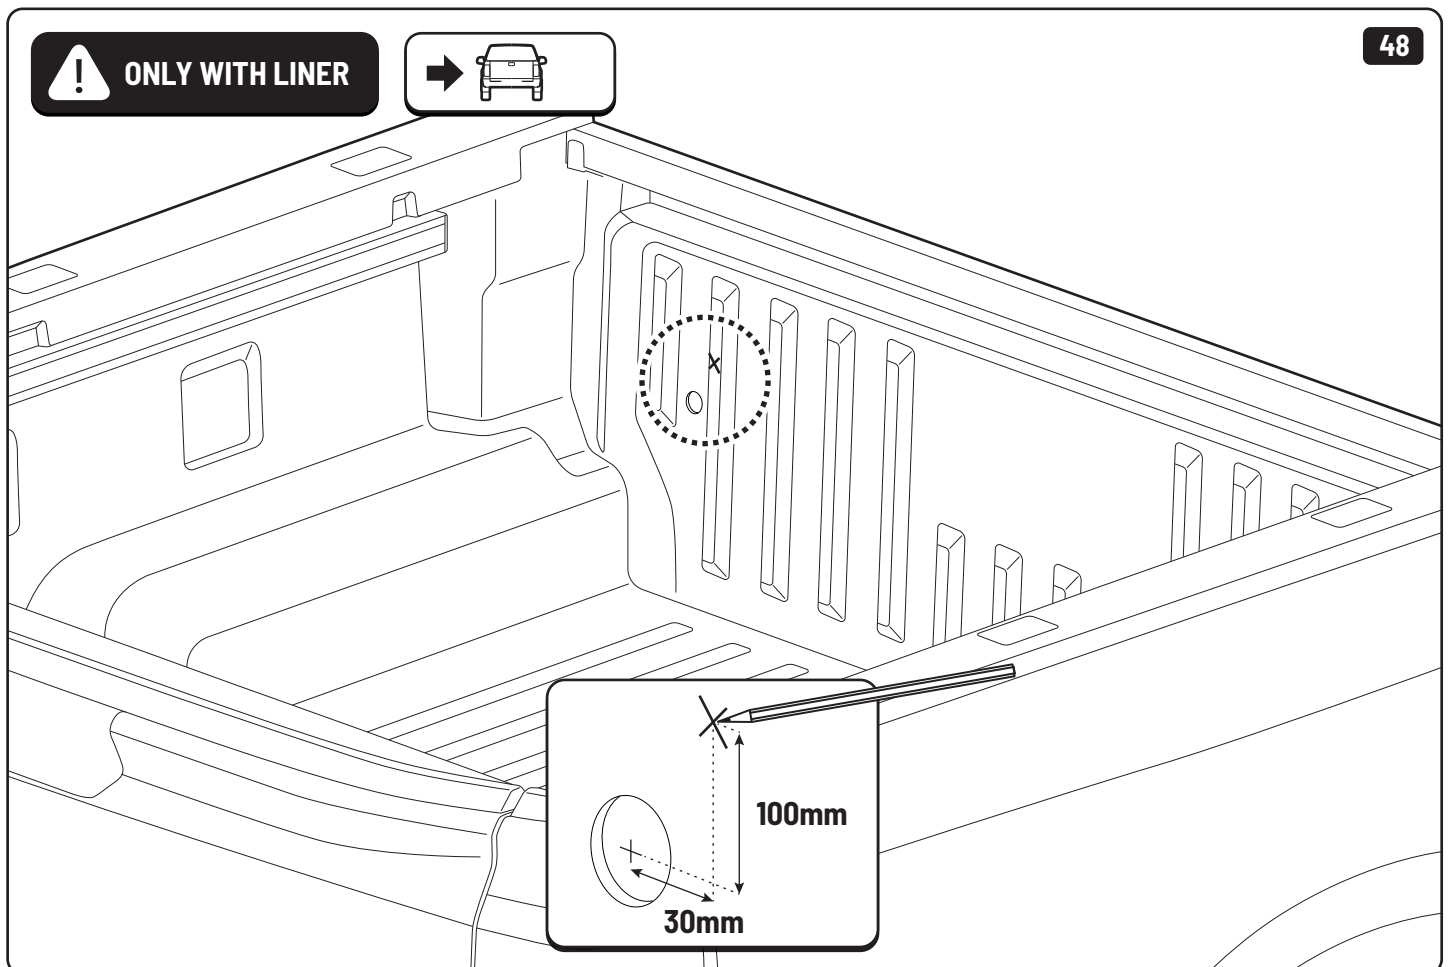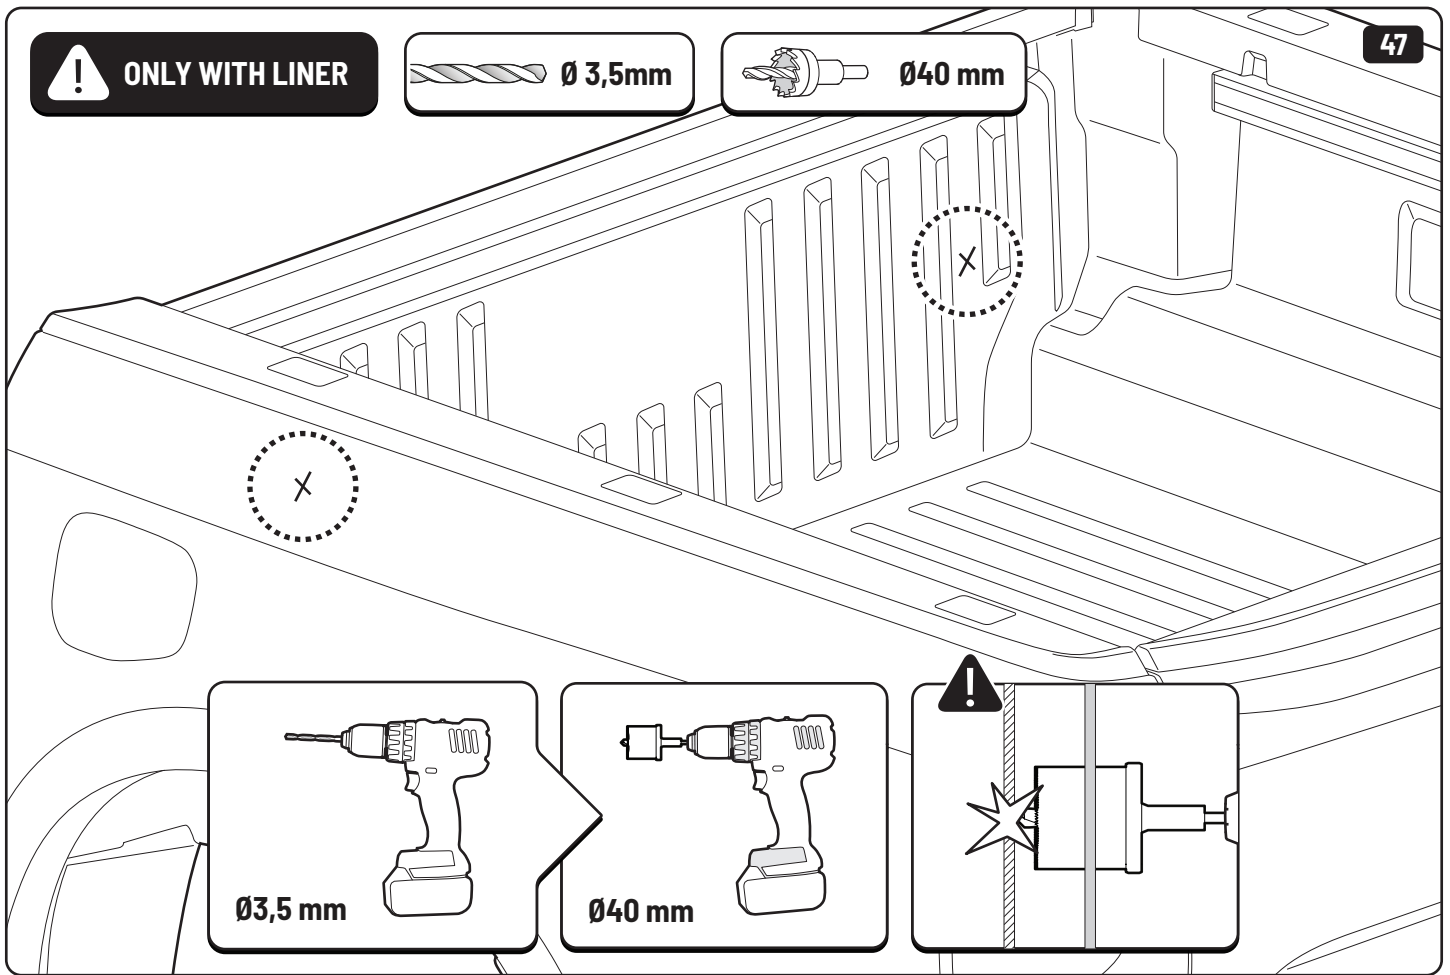

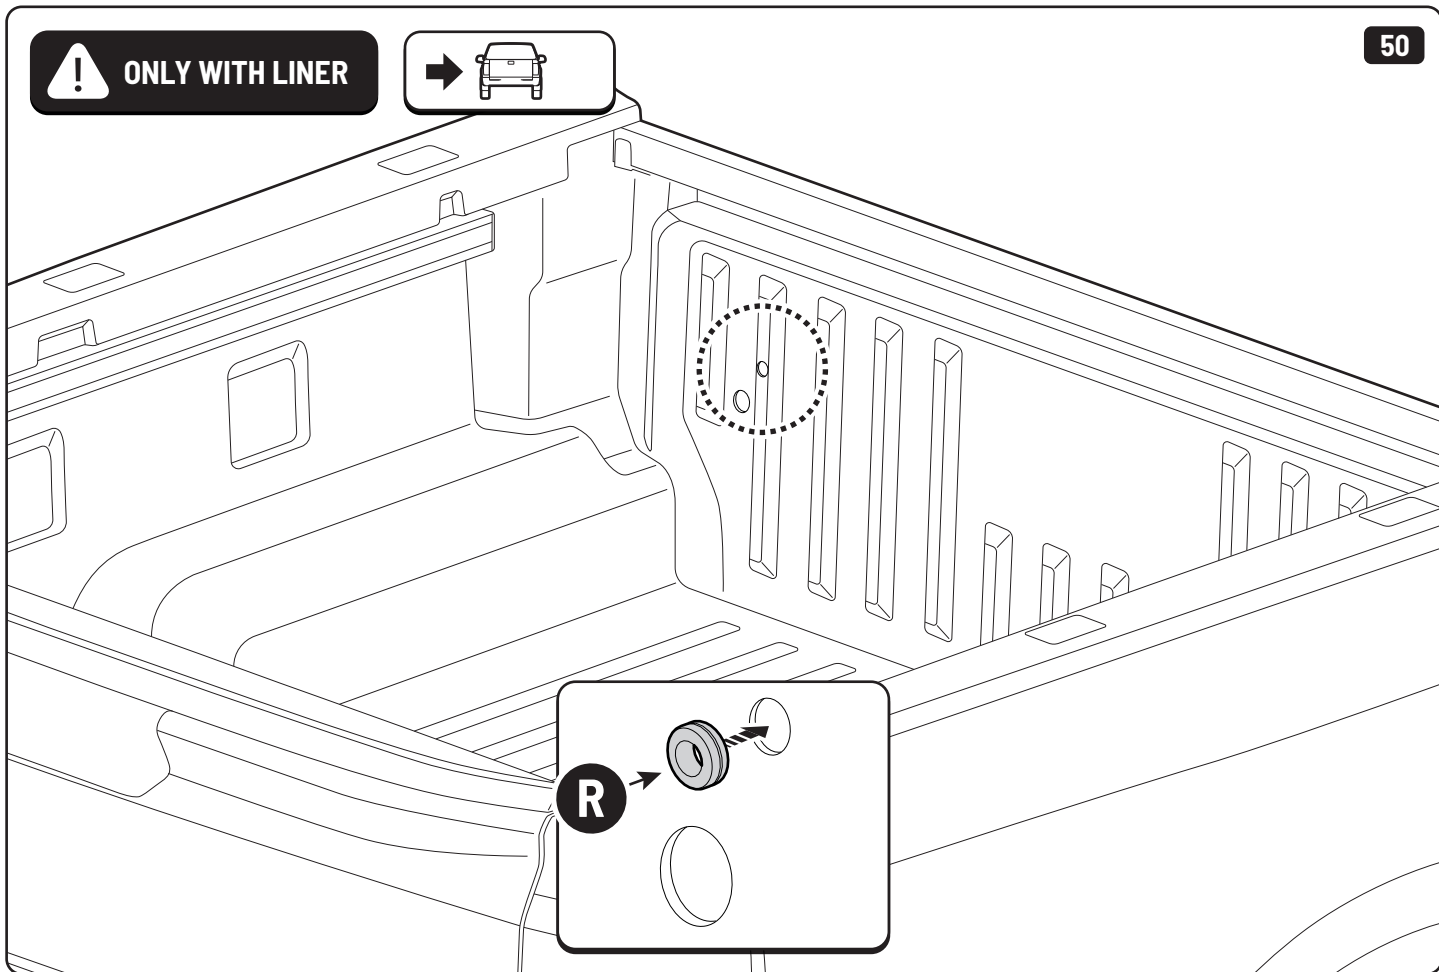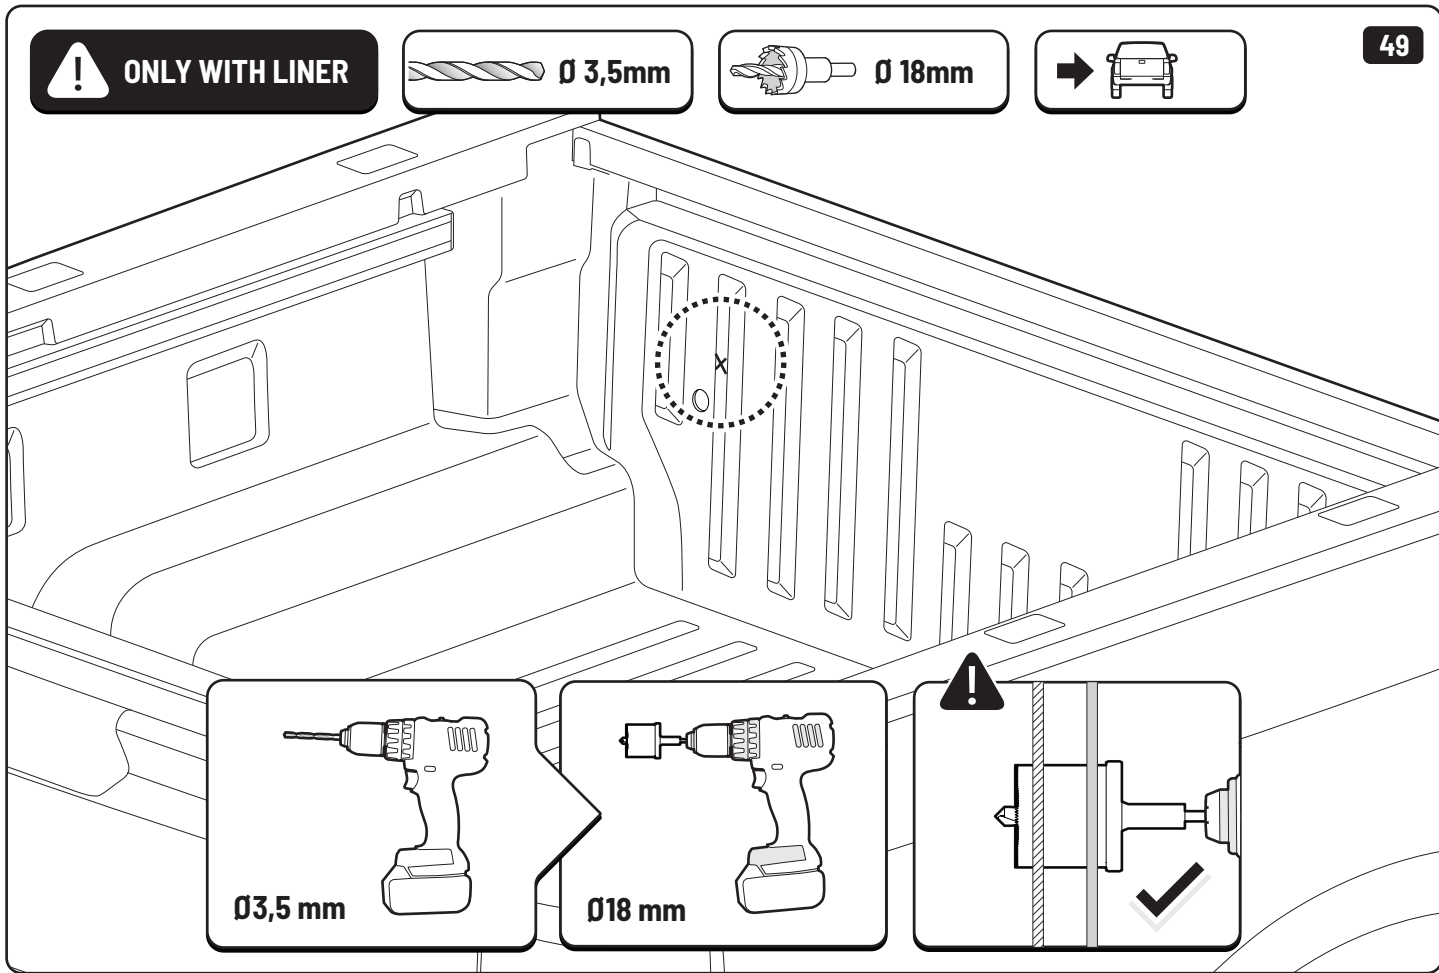

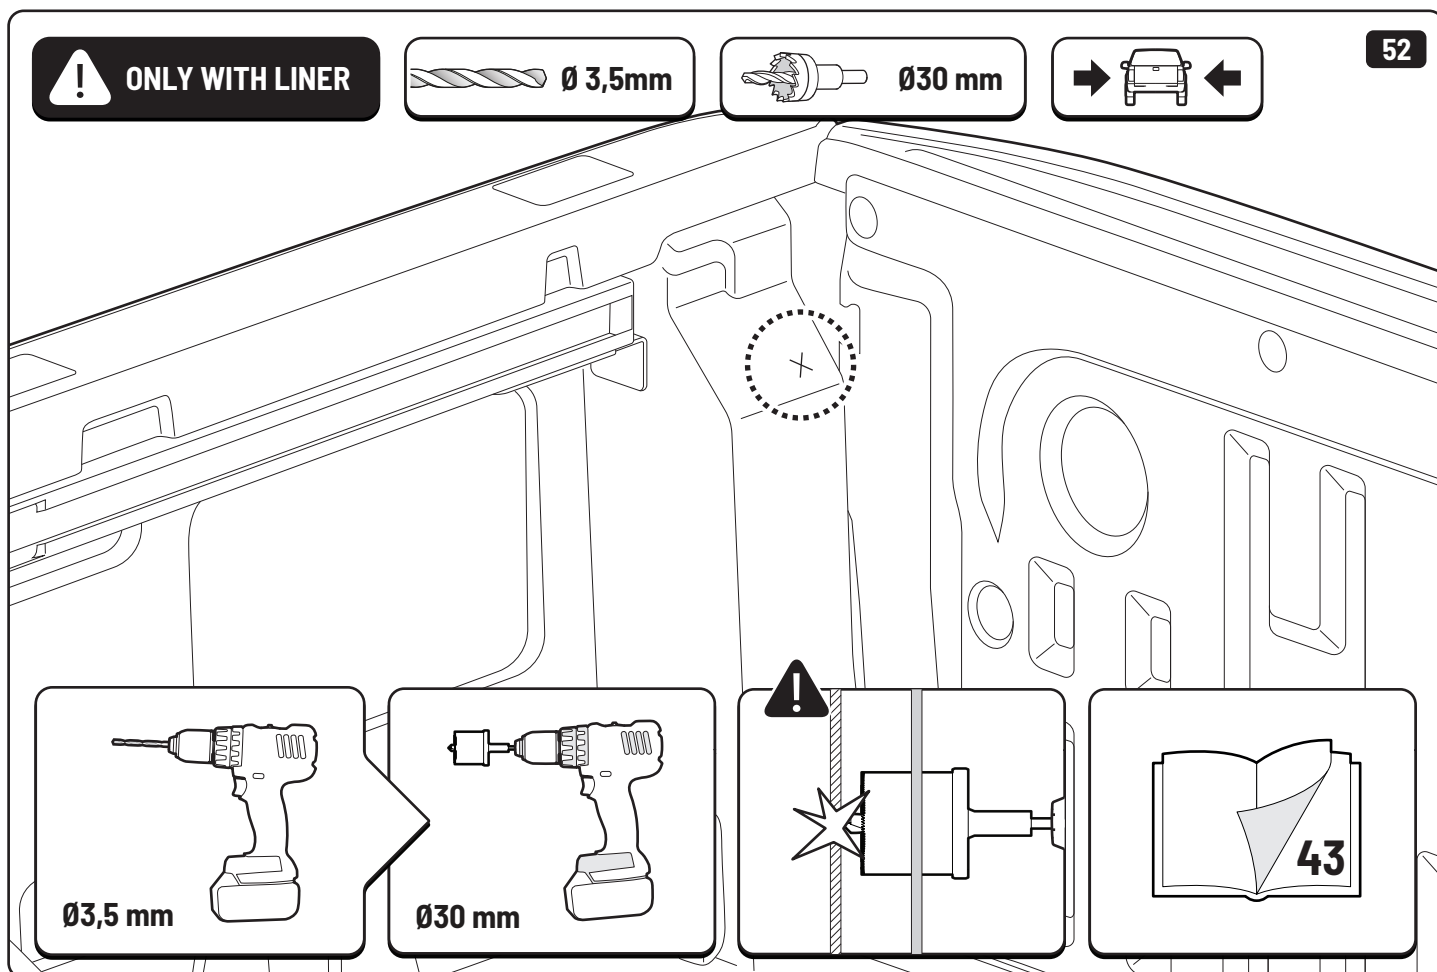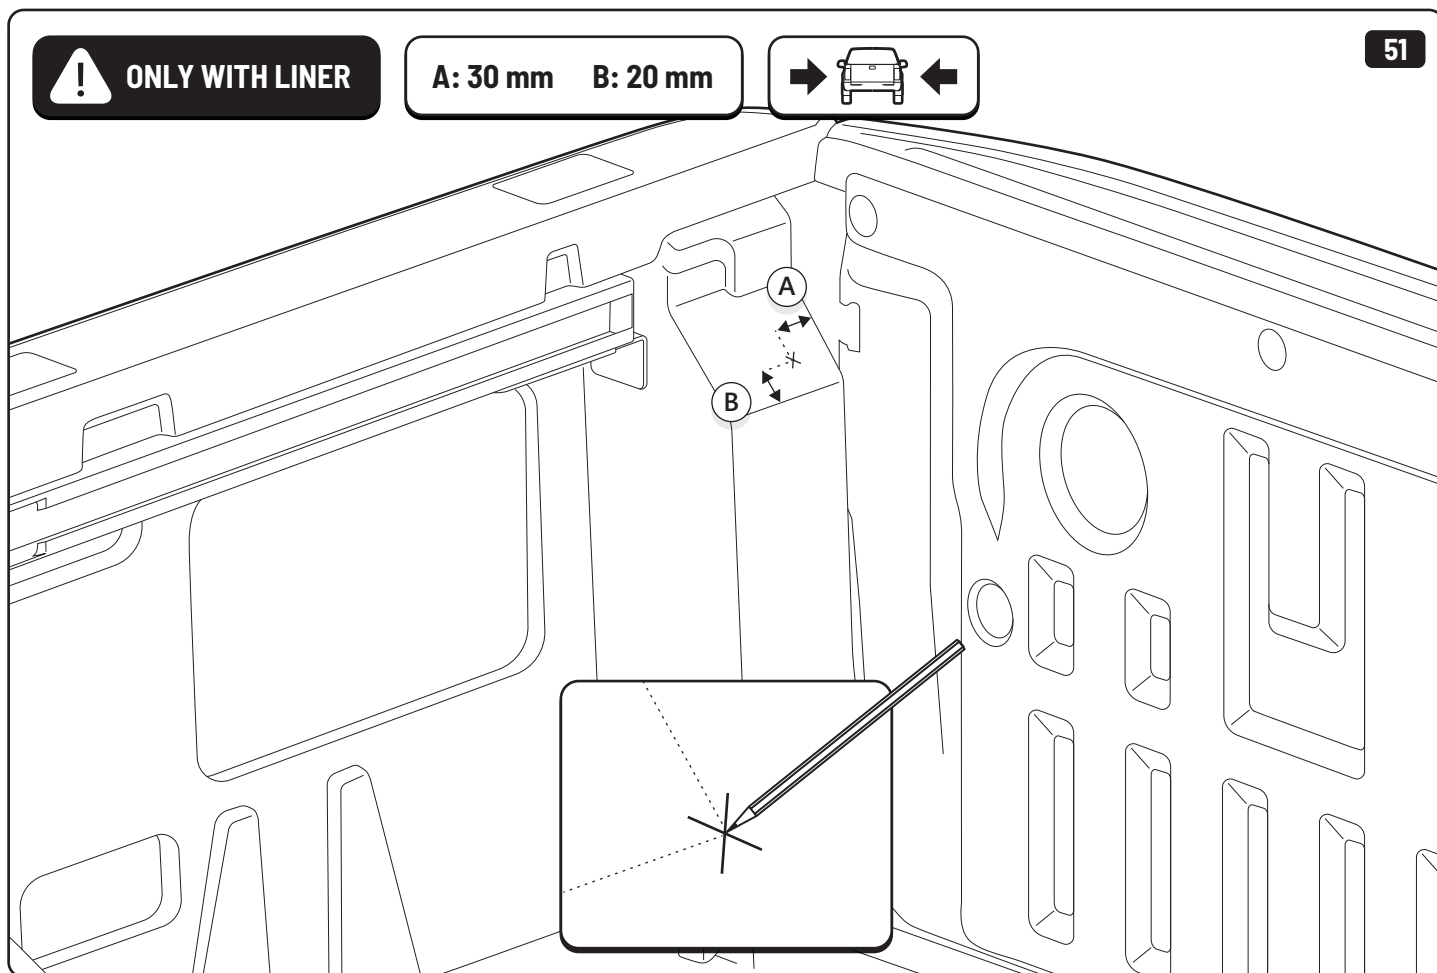

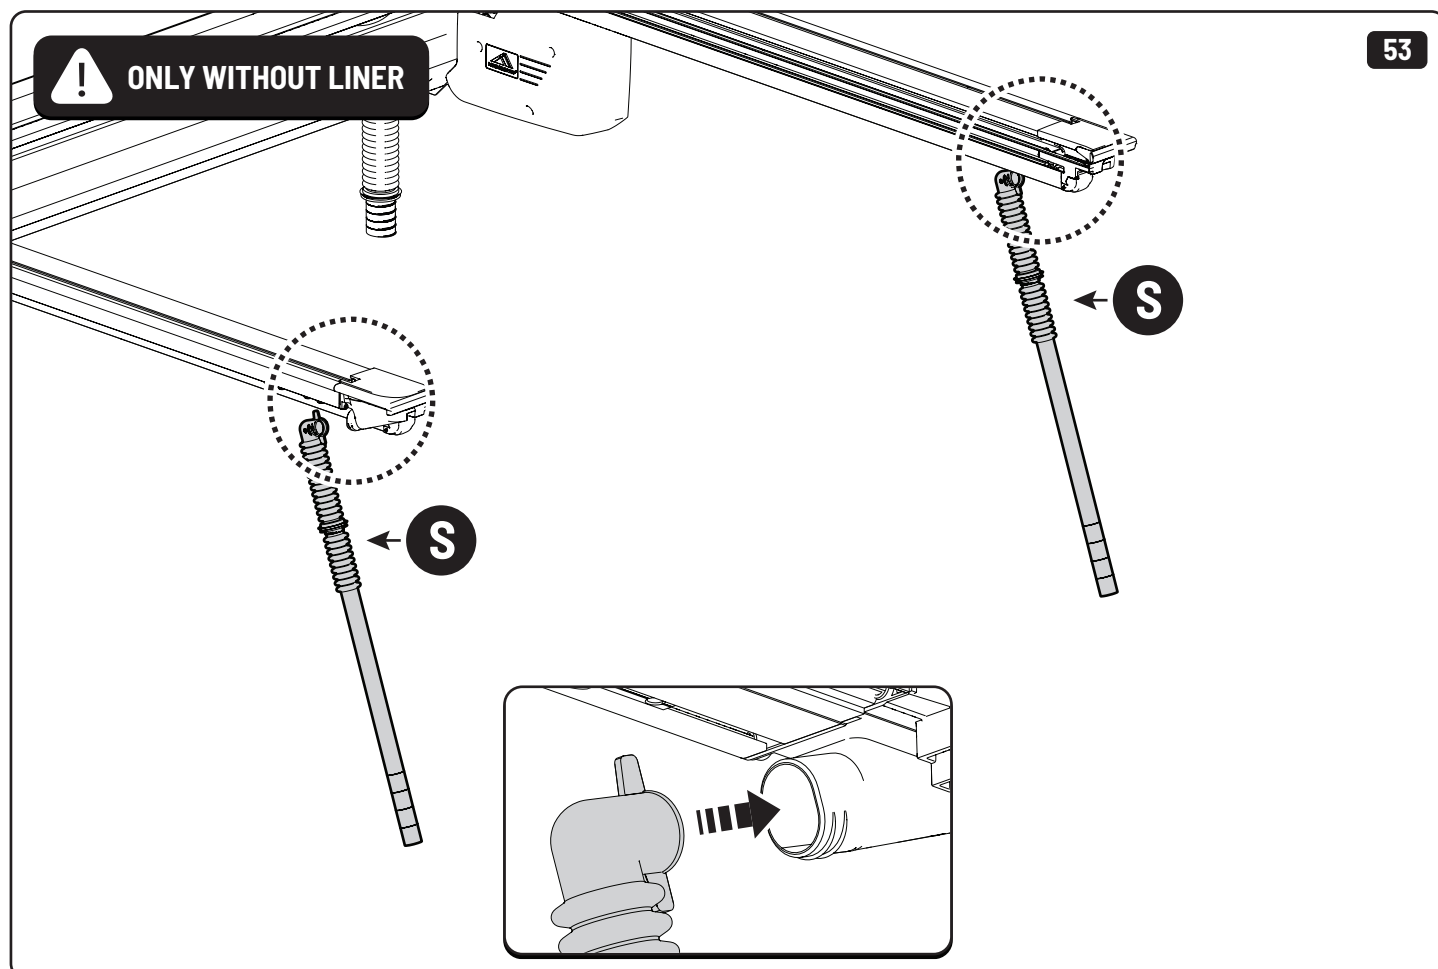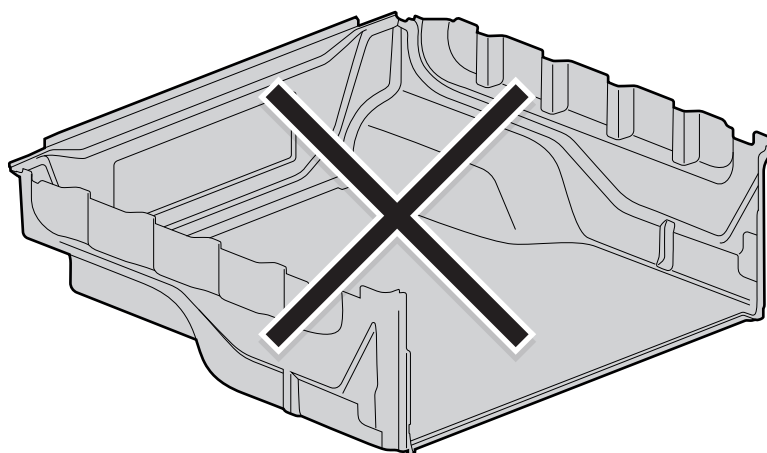




ONLY WITHOUT LINER



EUROPEAN MODEL

X: 650 mm Y: 290 mm

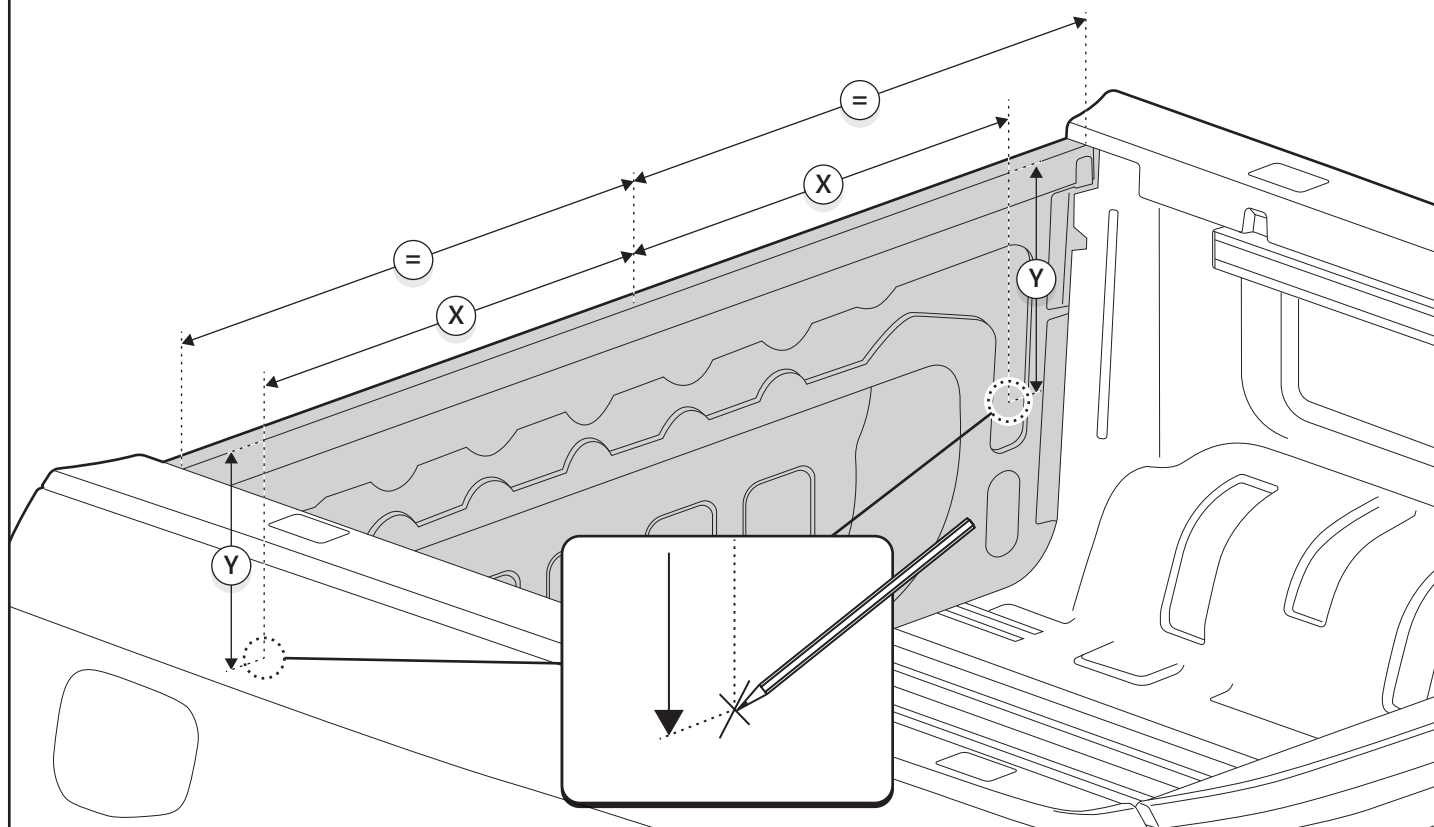




ONLY WITHOUT LINER



OTHER MODELS

X: 580 mm Y: 290 mm

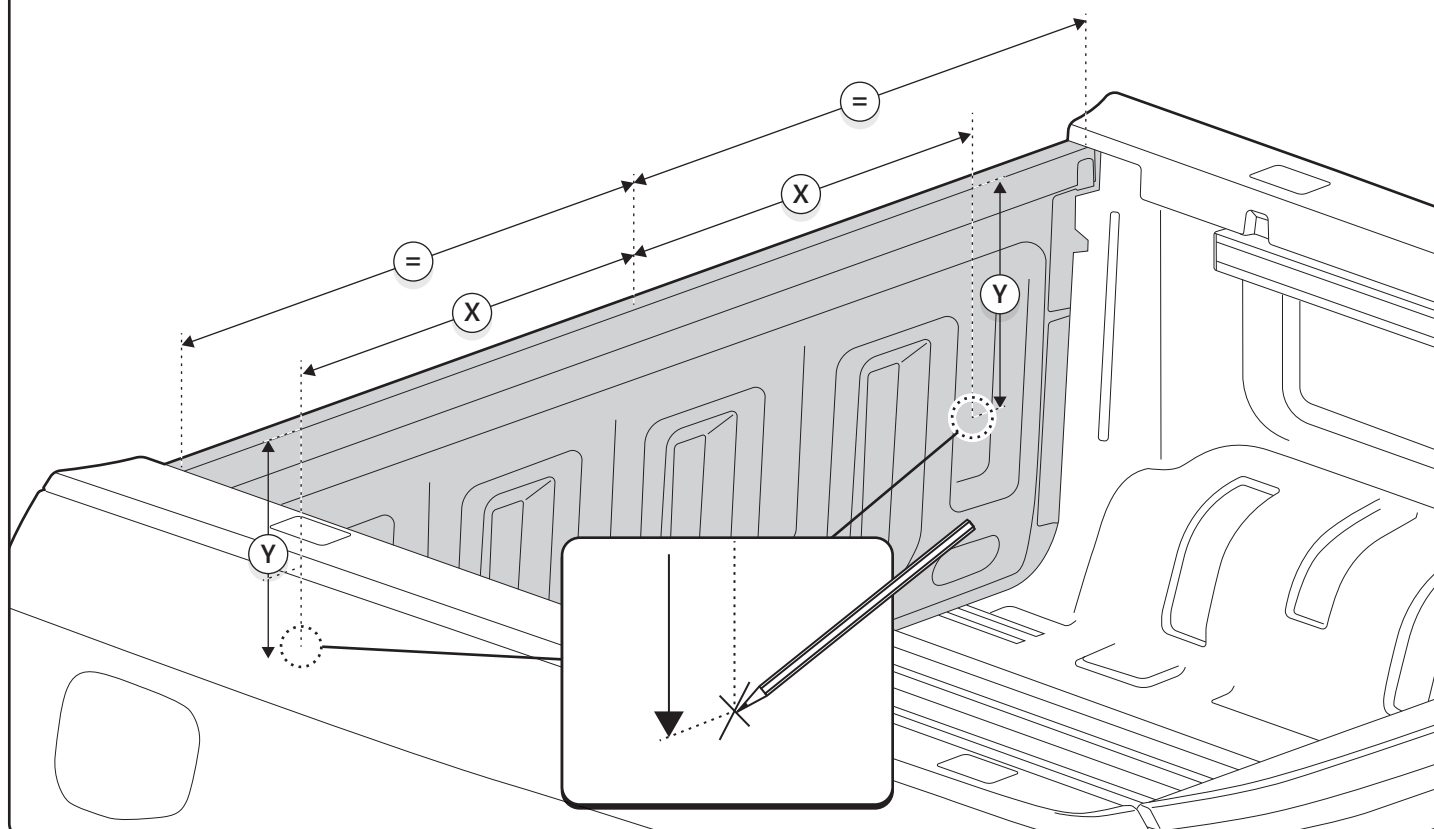

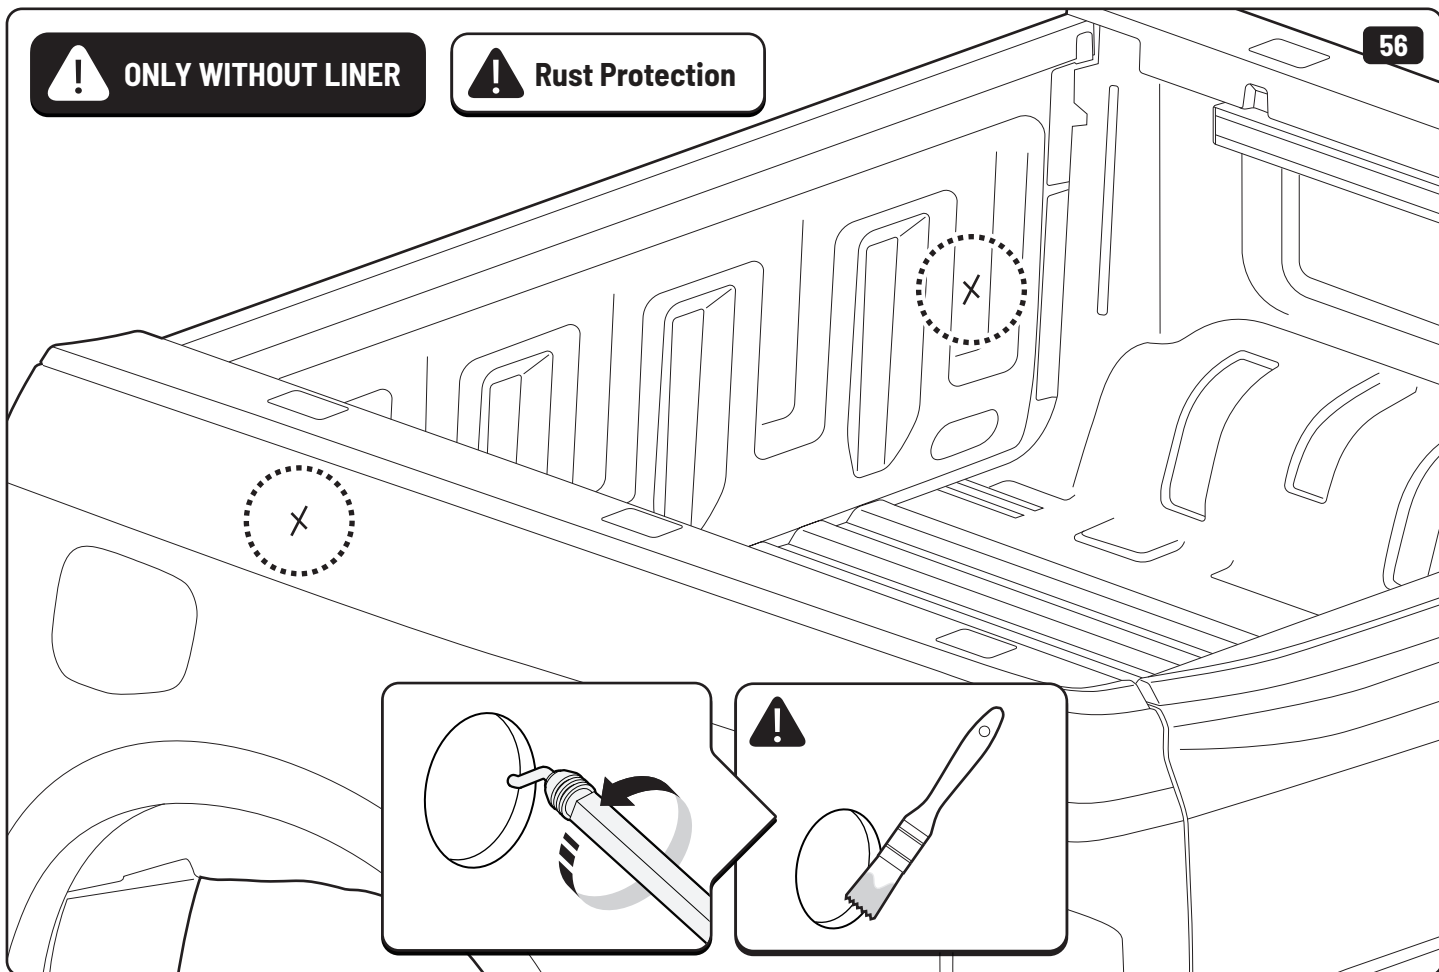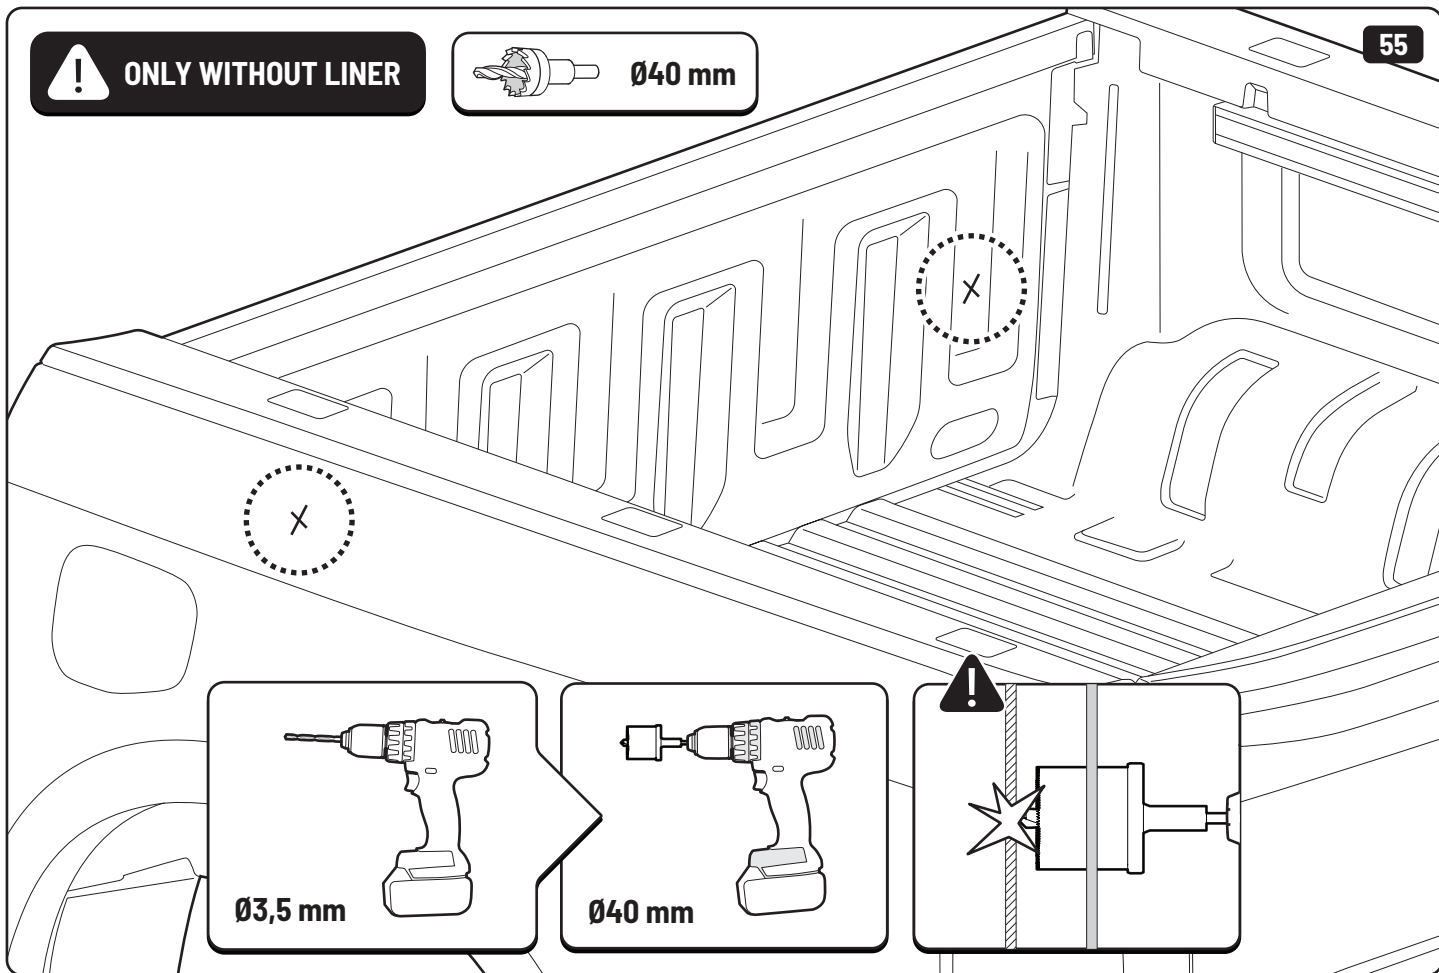




ONLY WITHOUT LINER



57

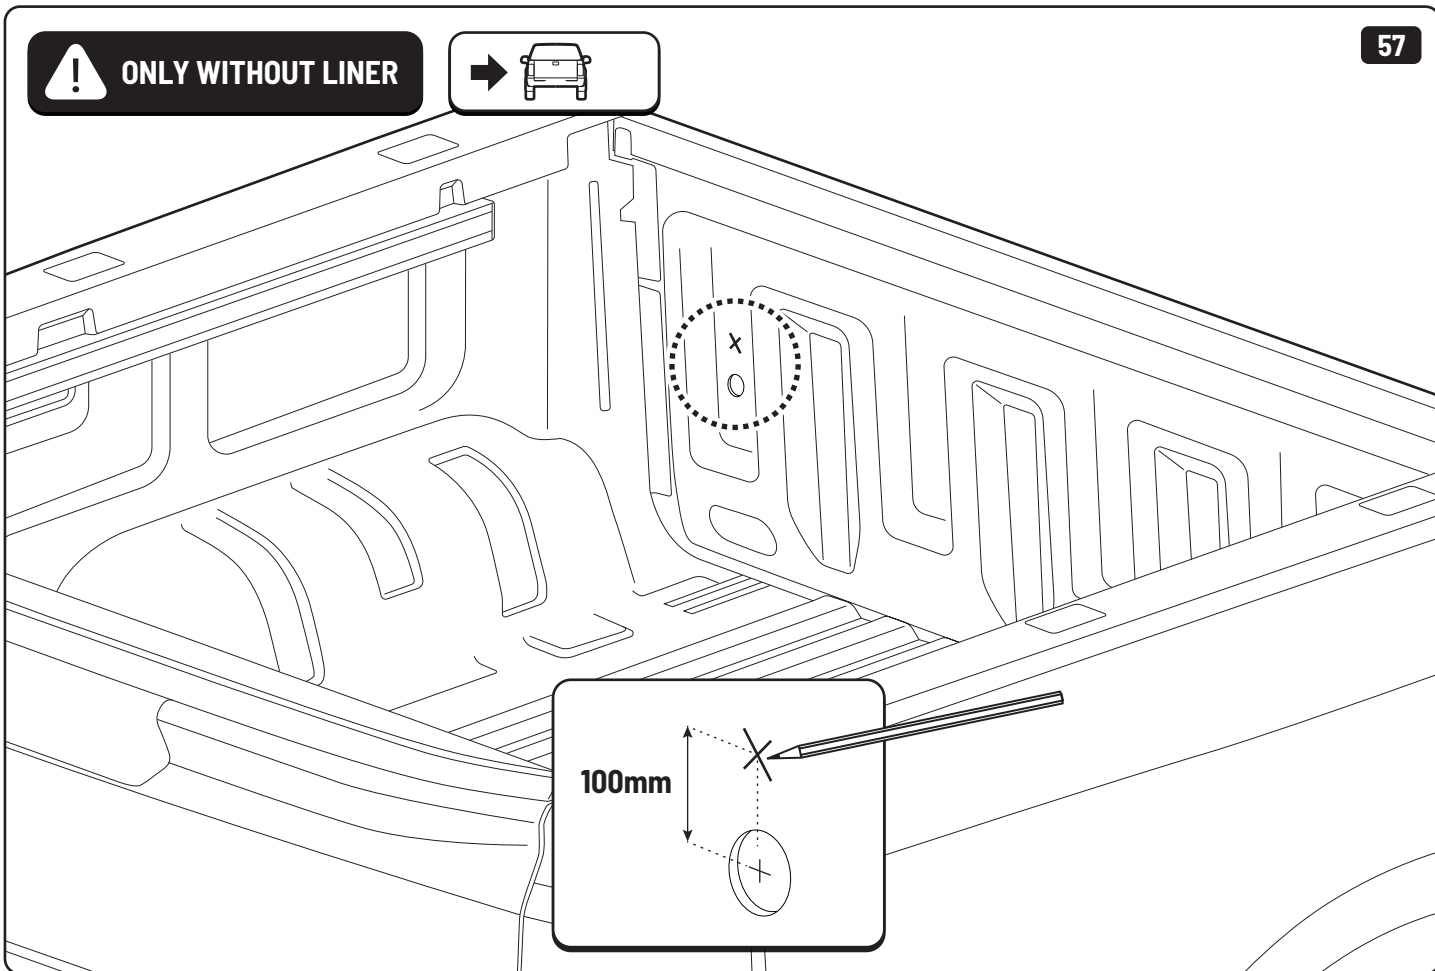

ONLY WITHOUT LINER




Ø 3,5mm



Ø 18mm



58

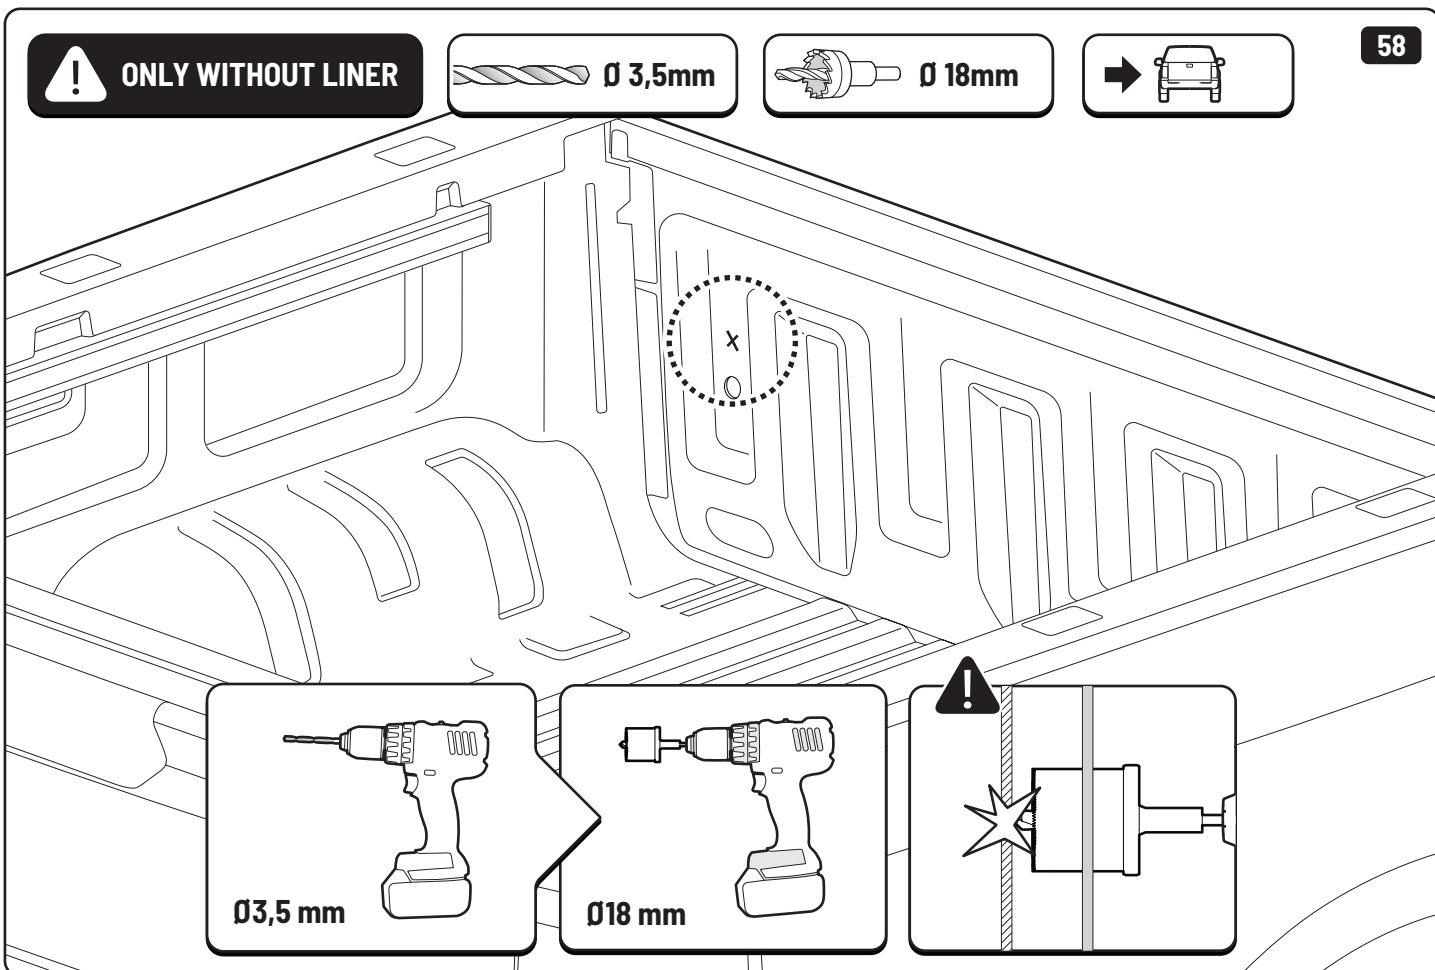




ONLY WITHOUT LINER




Rust Protection

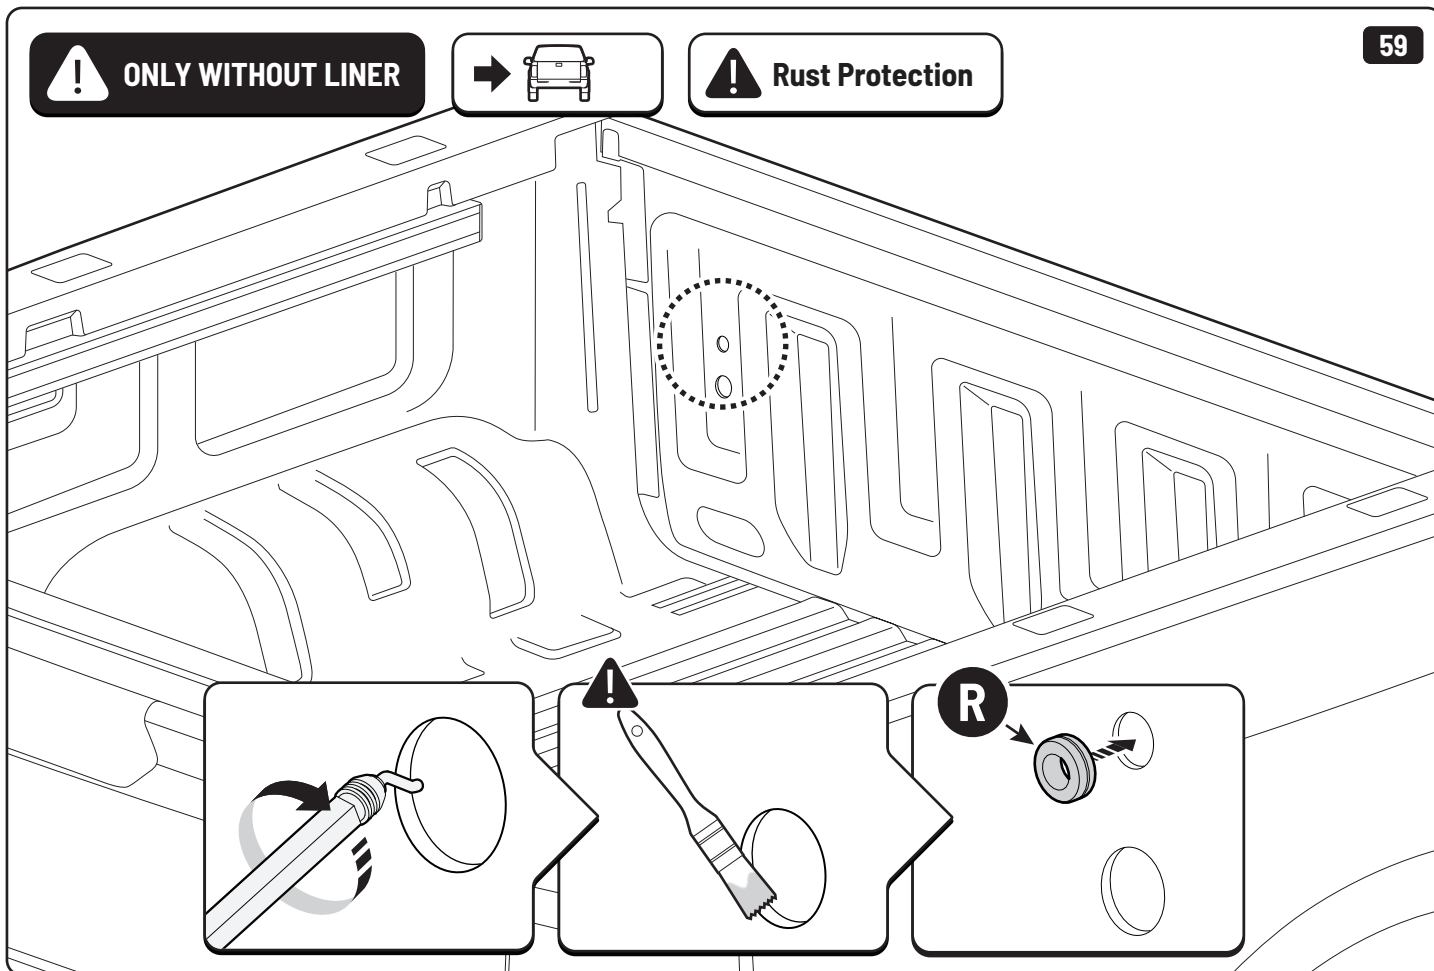

ONLY WITHOUT LINER

A: 55 mm B: 380 mm

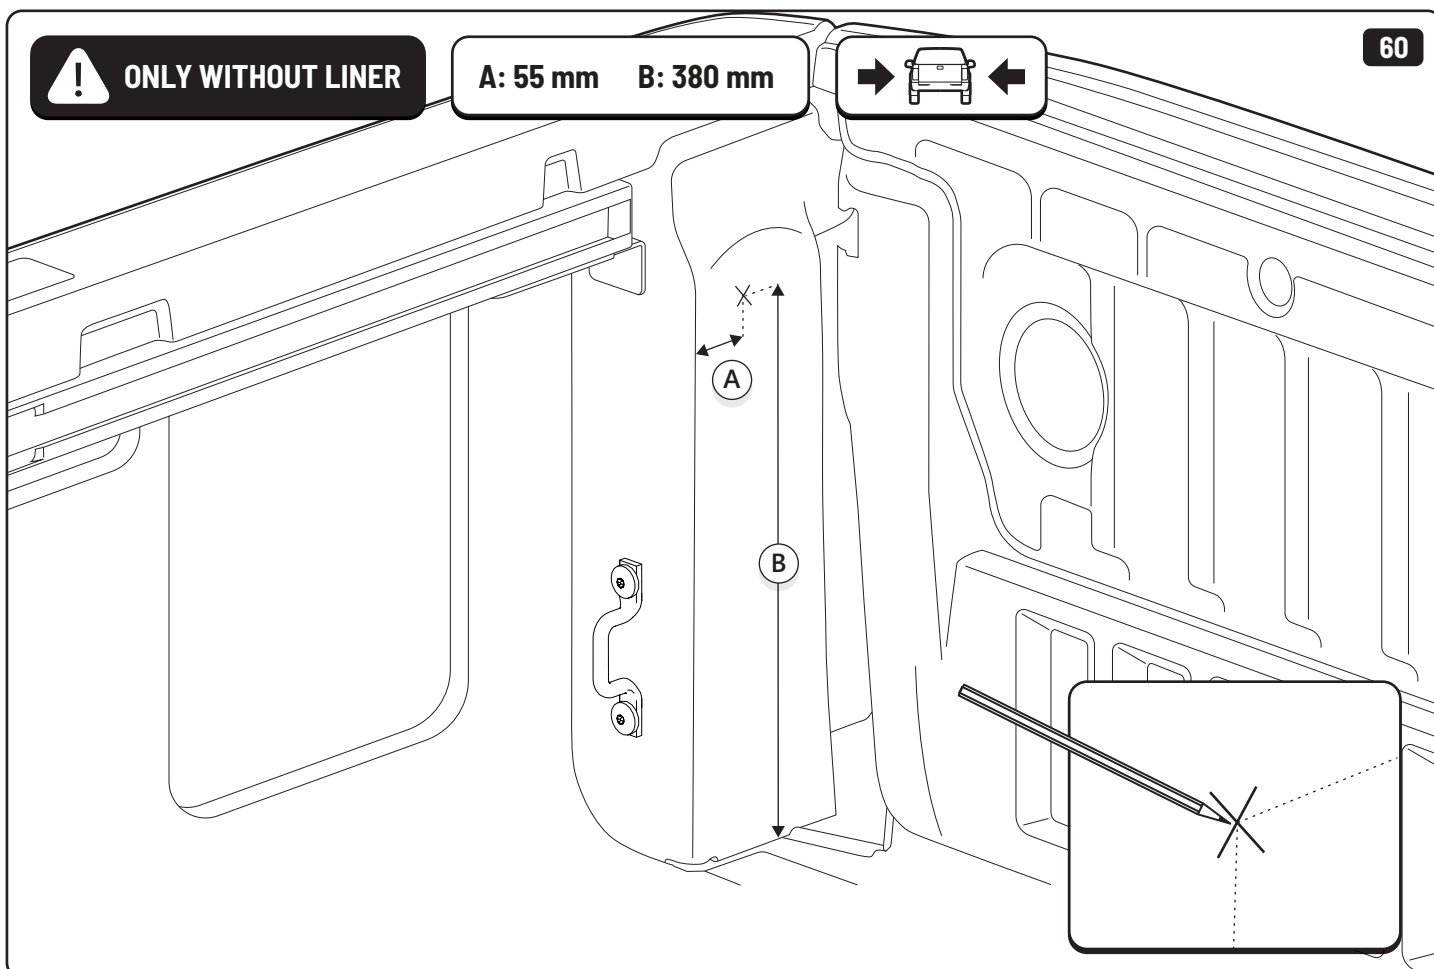



ONLY WITHOUT LINER




Ø30 mm




Rust Protection





61

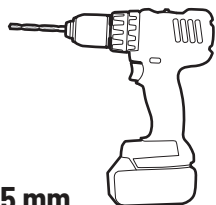

Ø3,5 mm

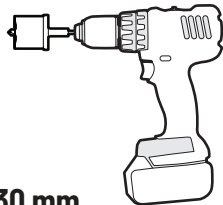


Ø30 mm

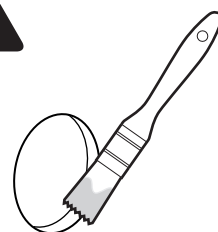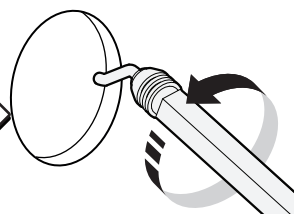




ONLY TO BE INSTALLED BY AUTHORIZED PERSONNEL

62

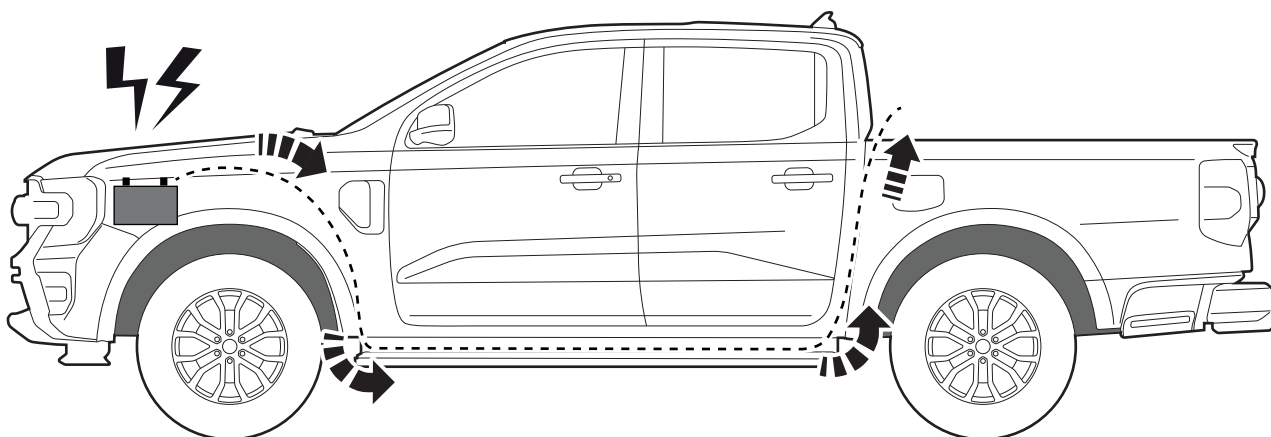



Q2

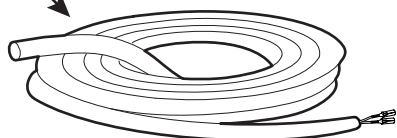


R2




x16

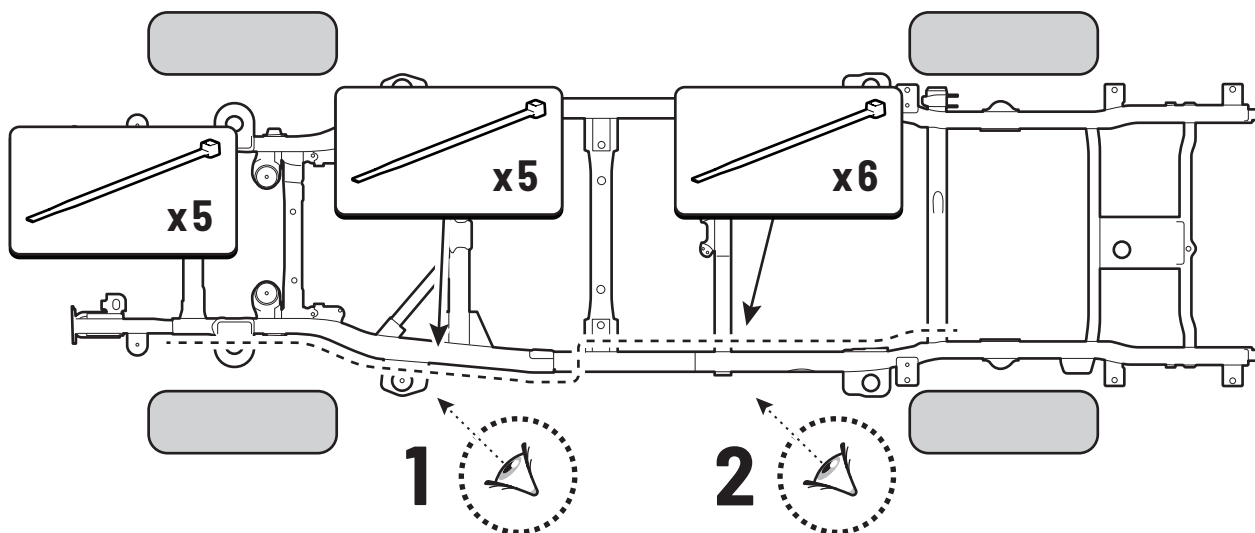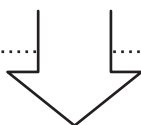

1

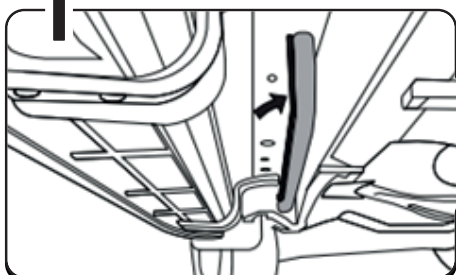

2

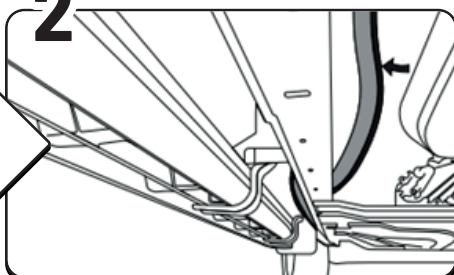





Q2

250mm



R2



MAIN CABLE



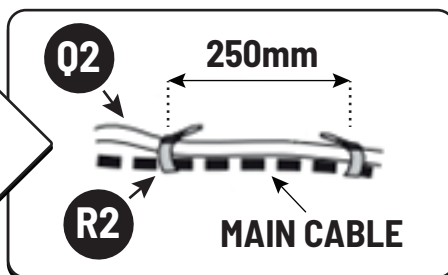


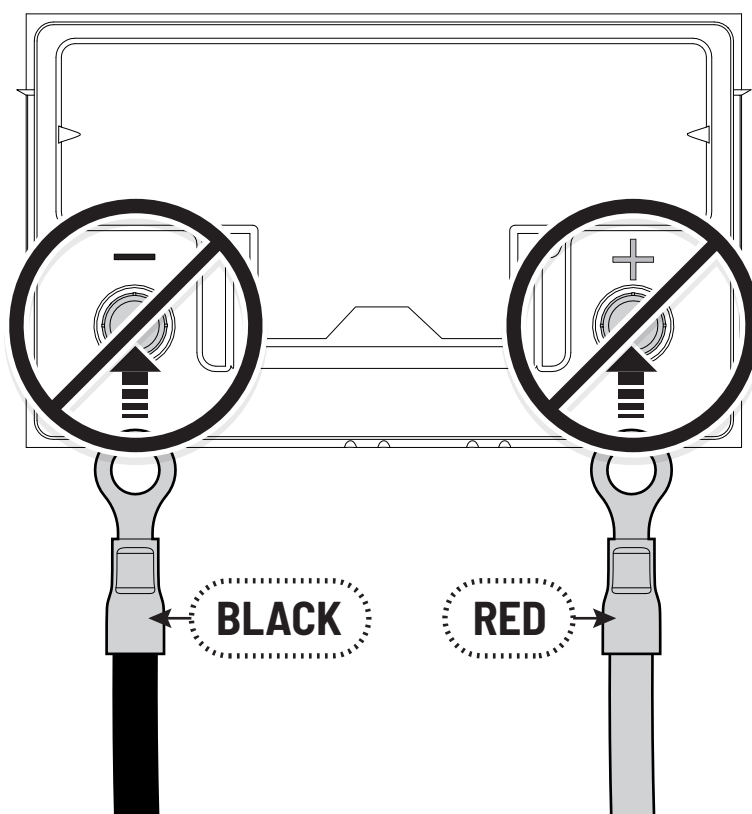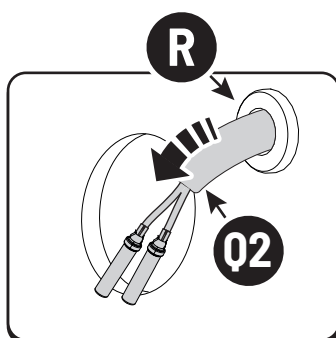
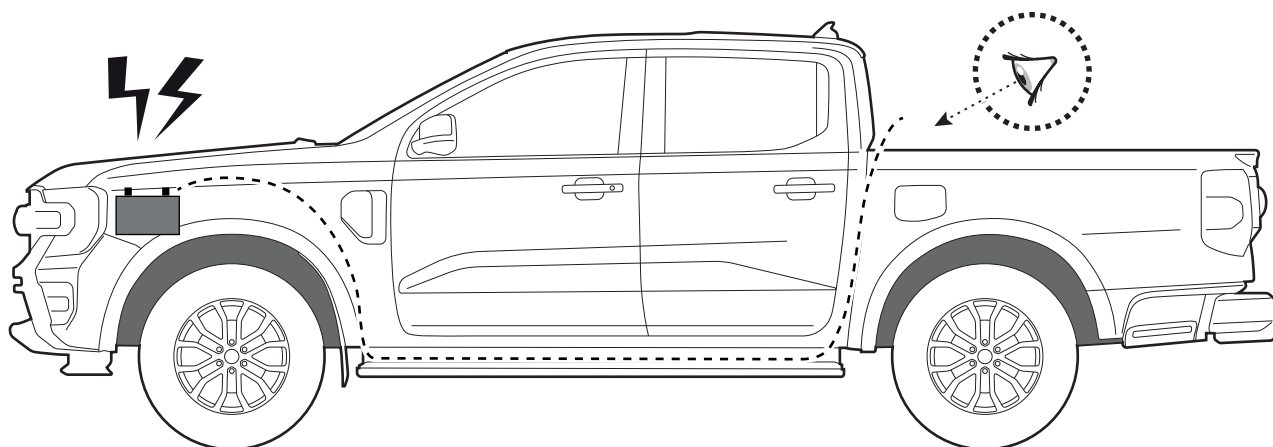











USE PROTECTIVE WOOD / PLASTIC BOARD

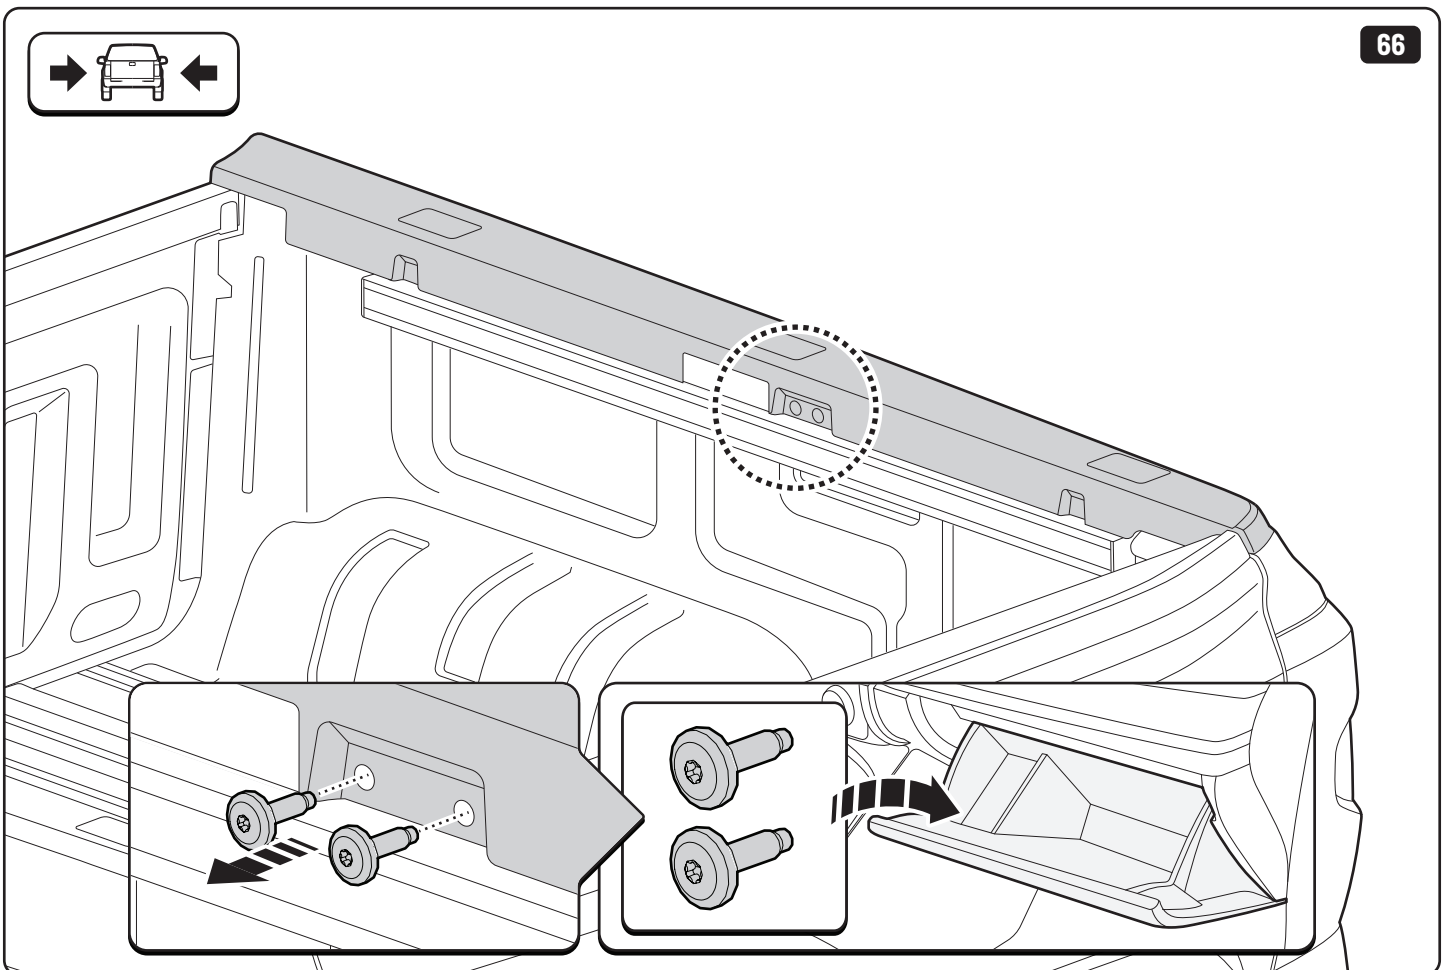
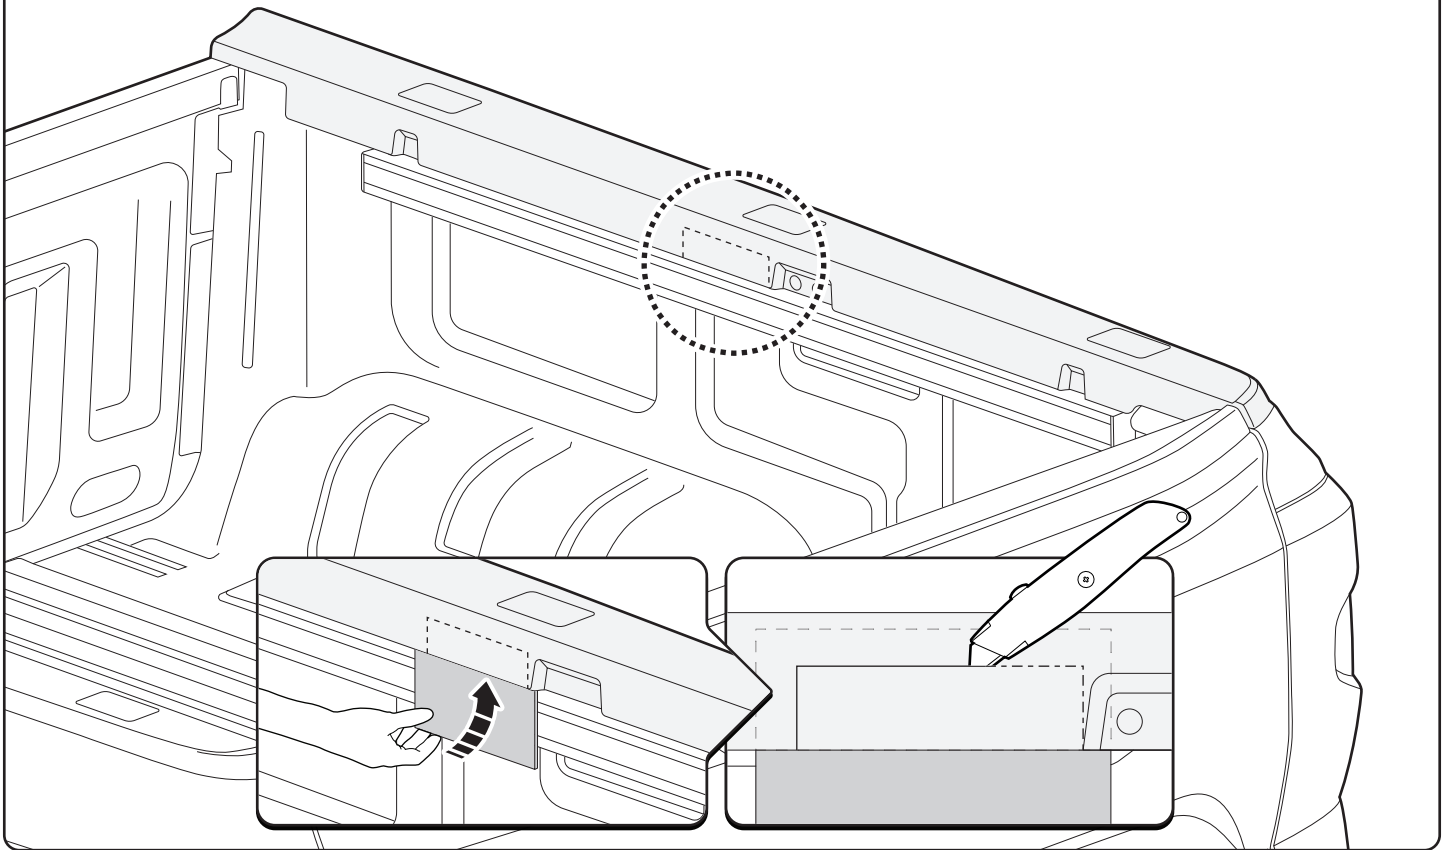


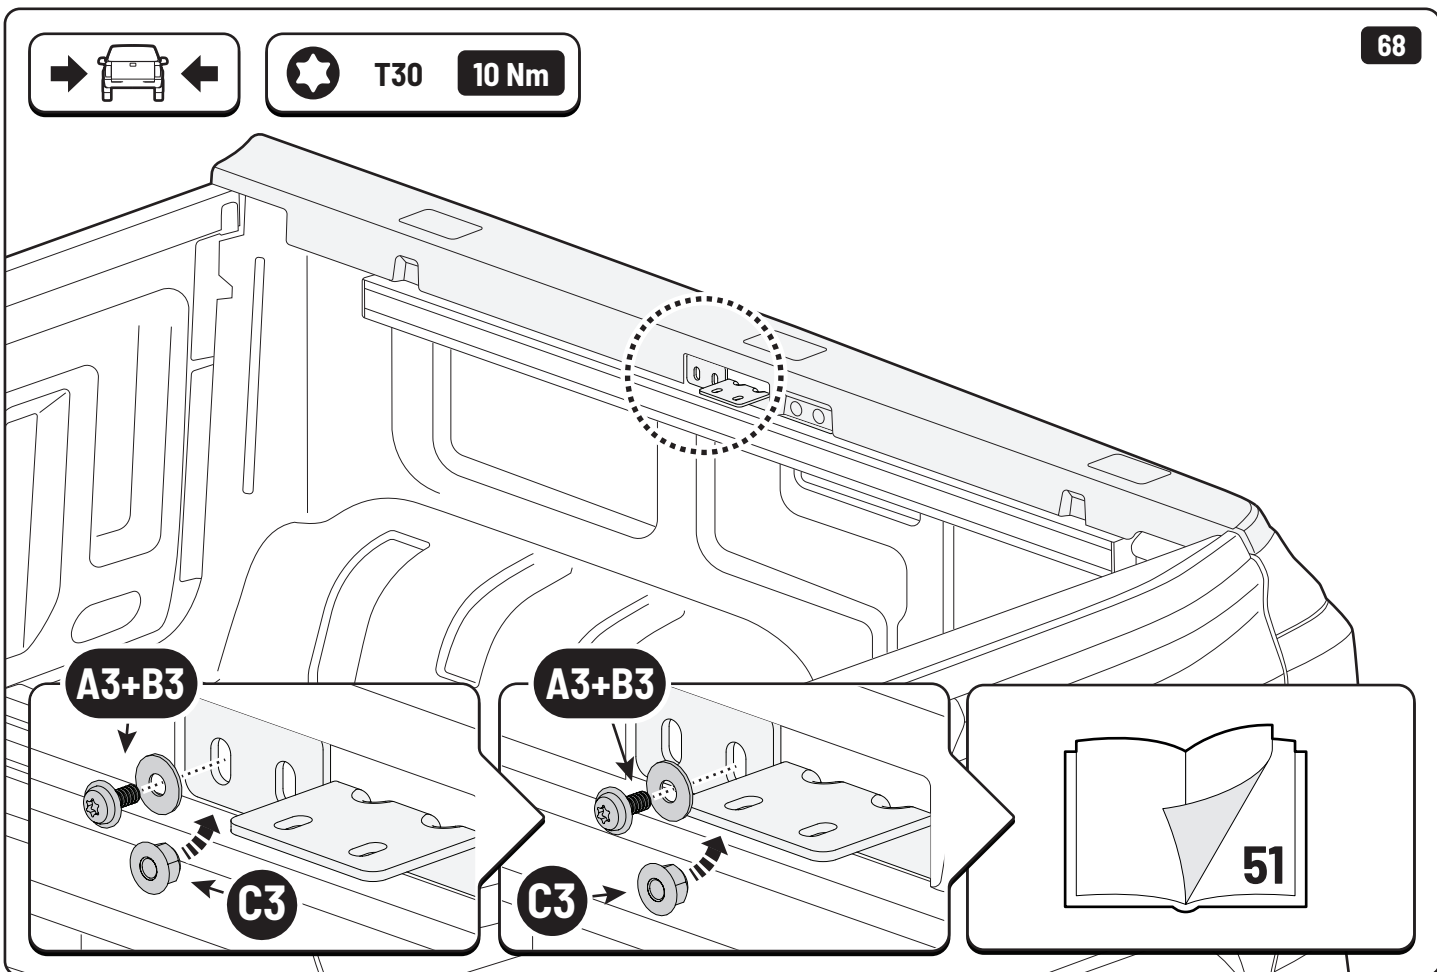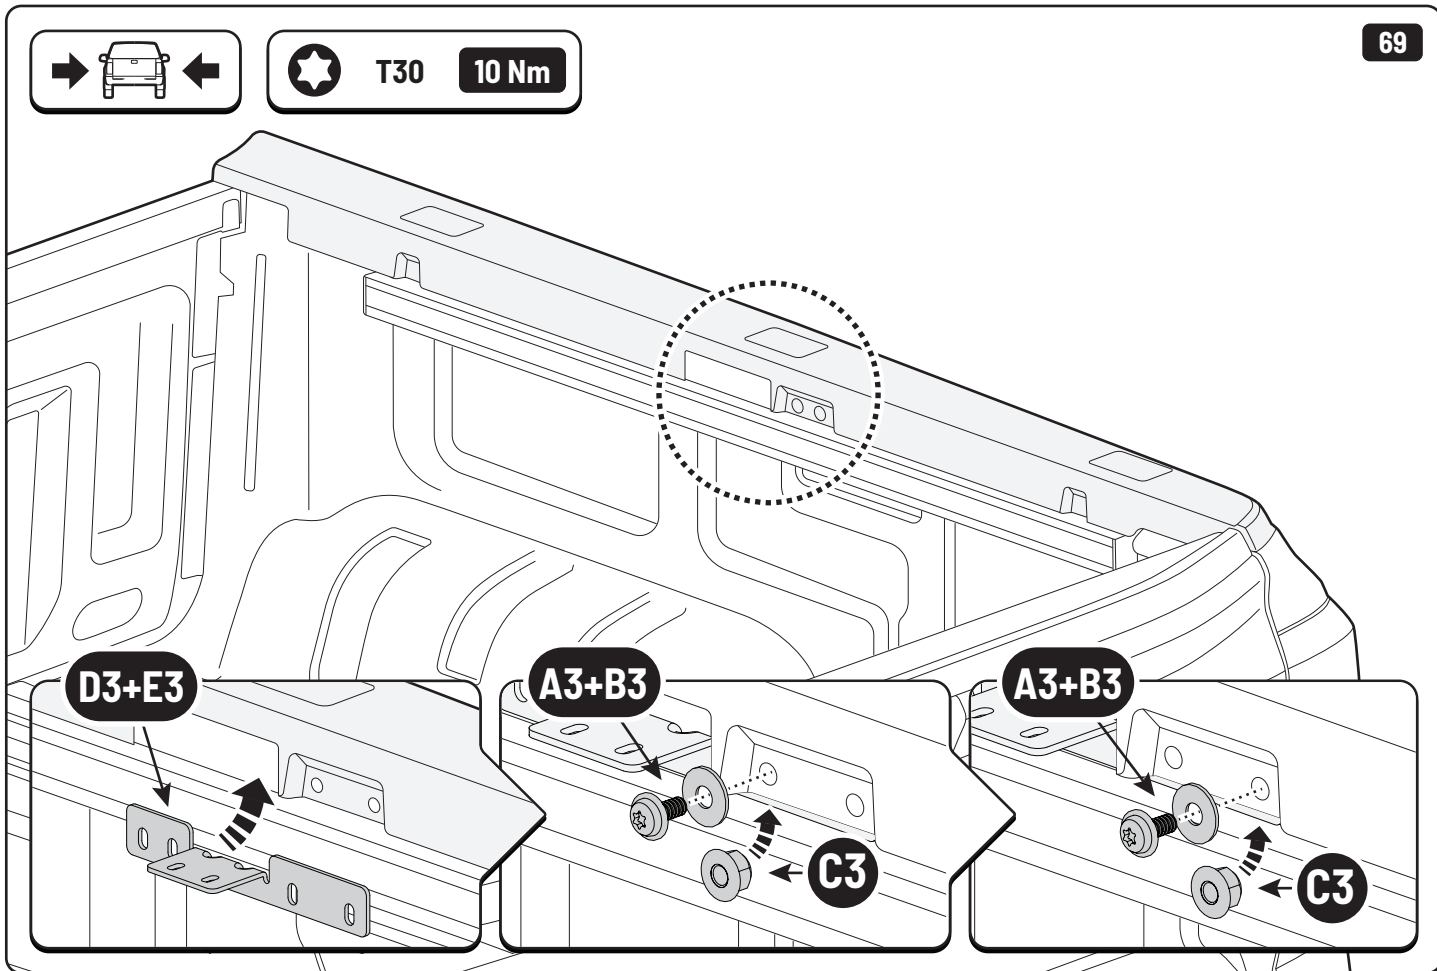

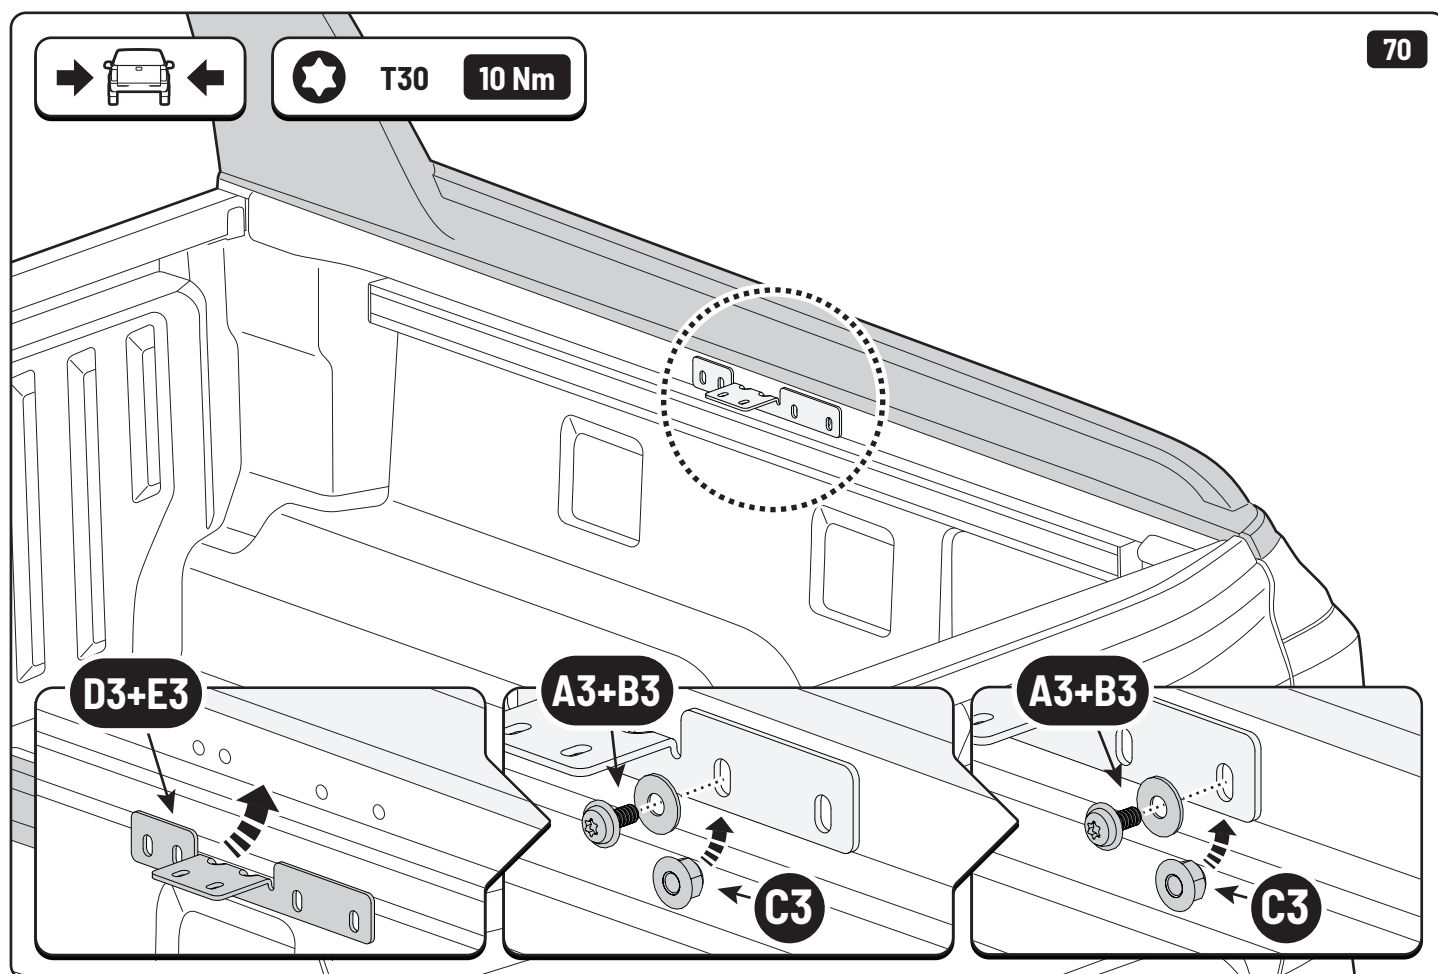
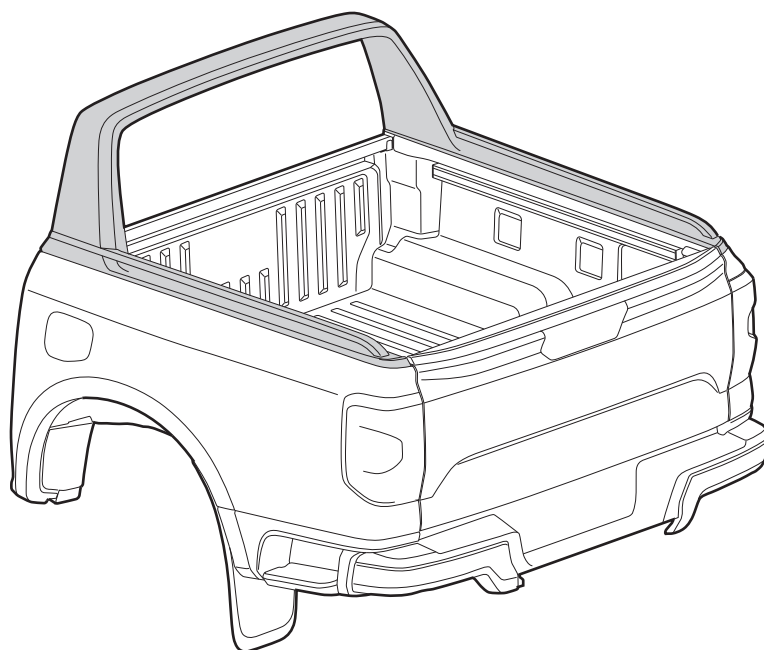


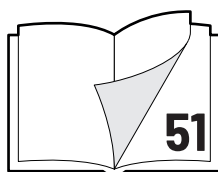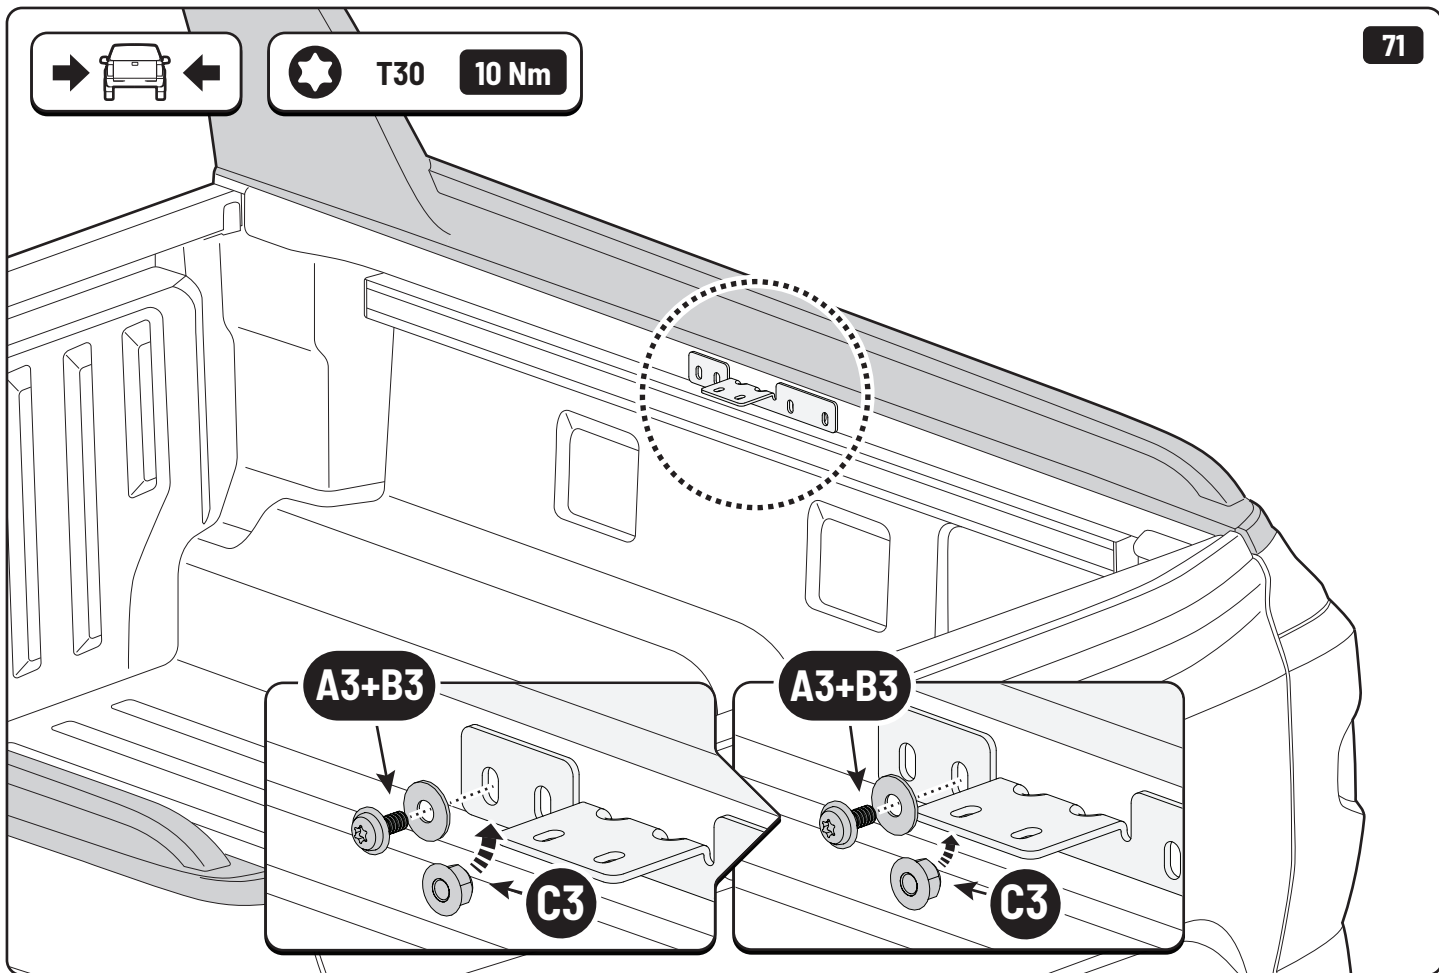

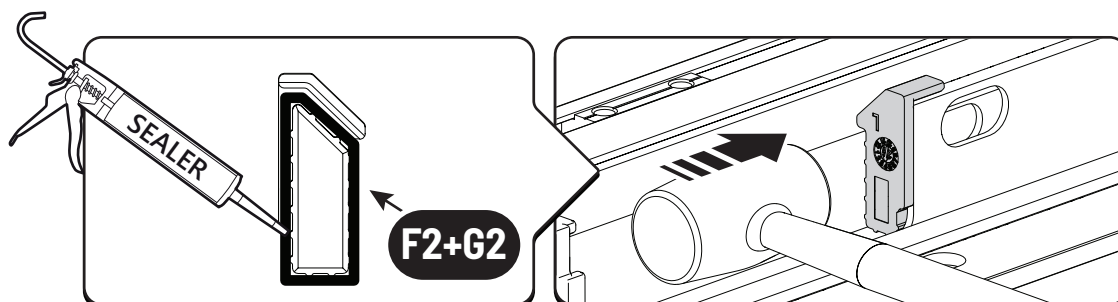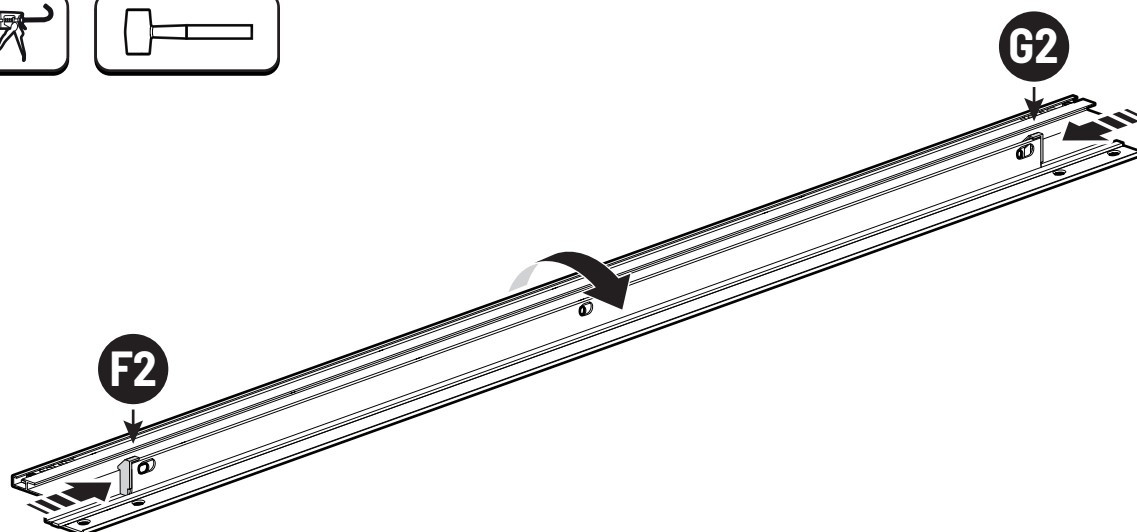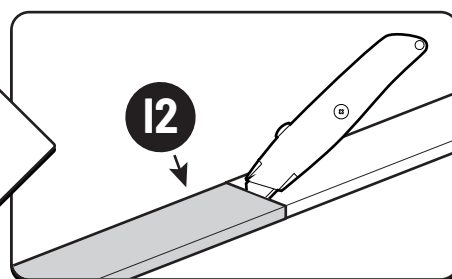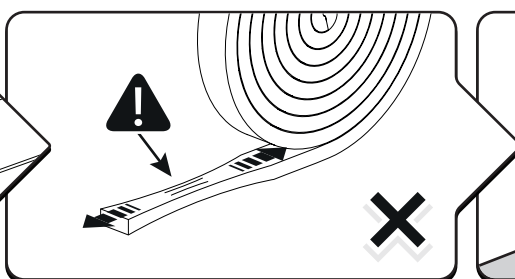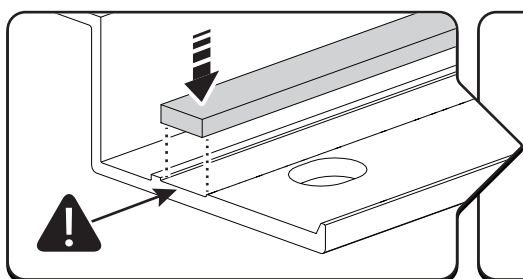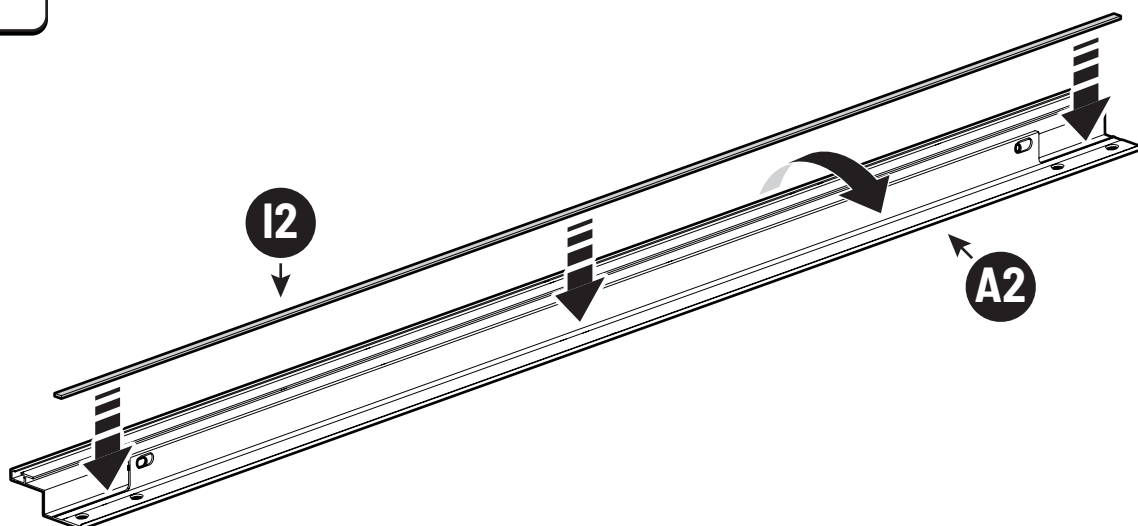

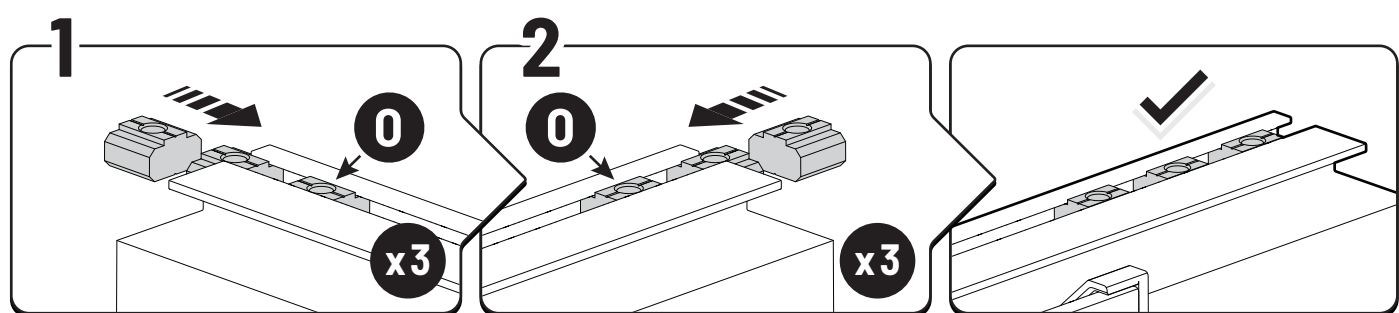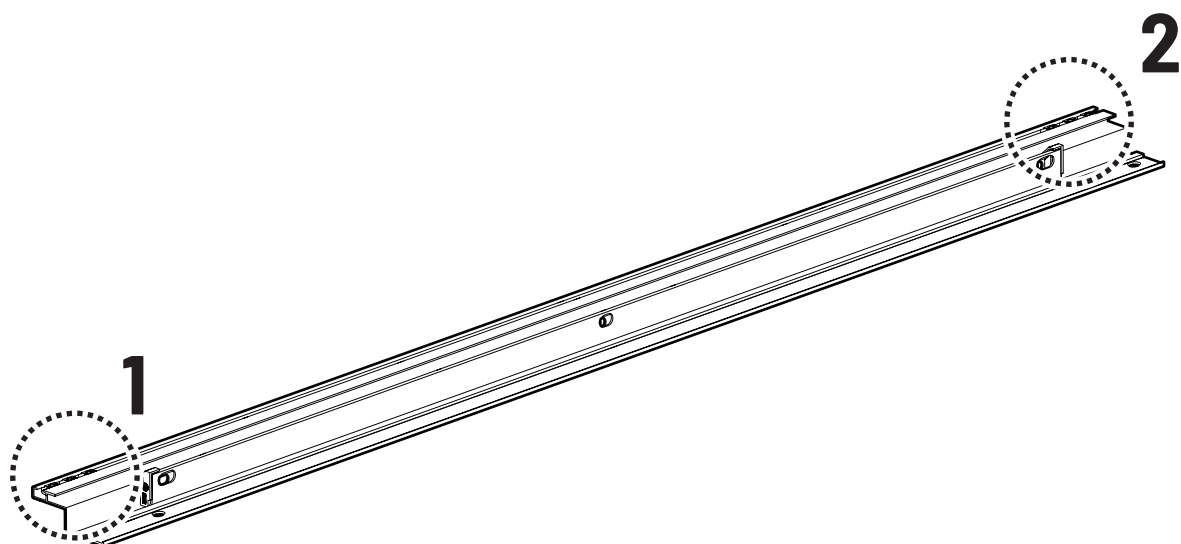




Super Glue (CA)

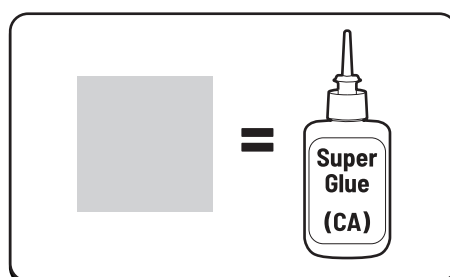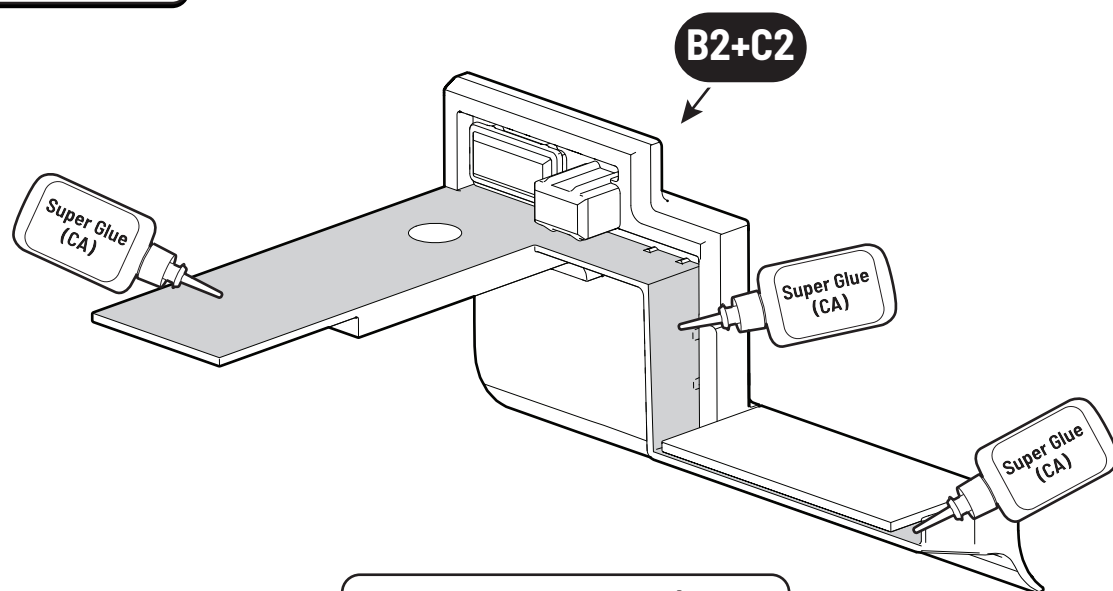















Super Glue (CA)






76

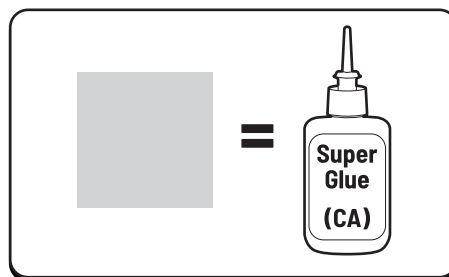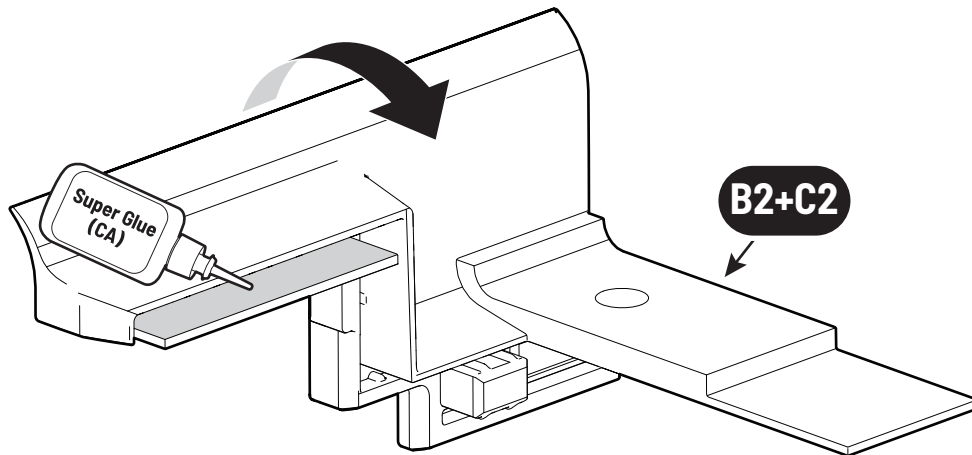



77


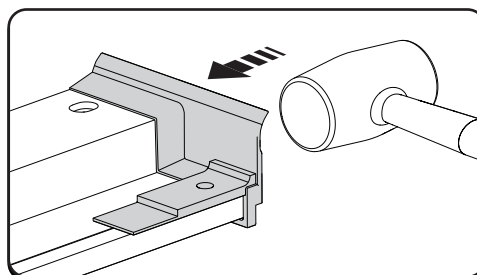
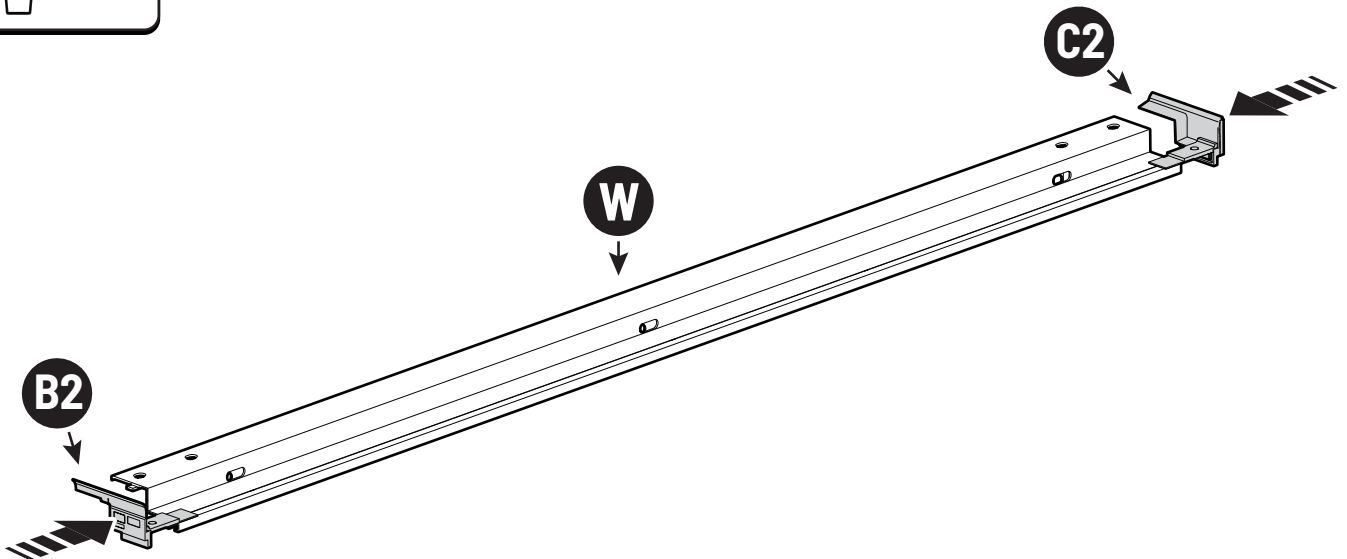


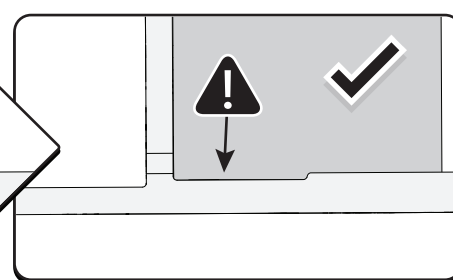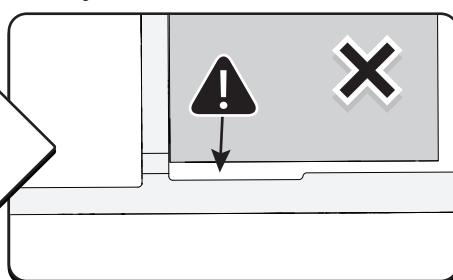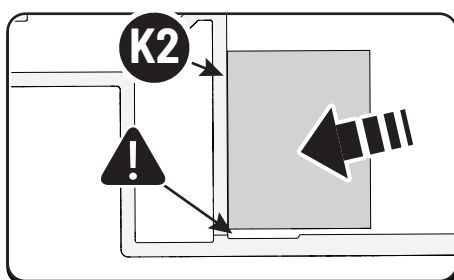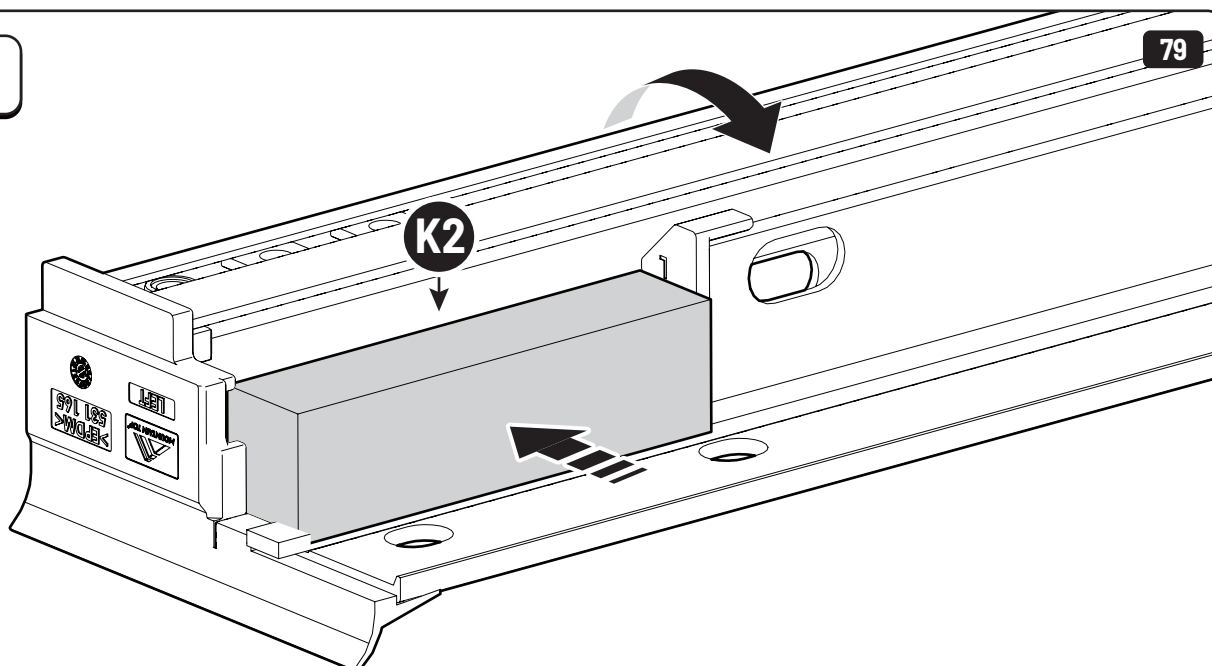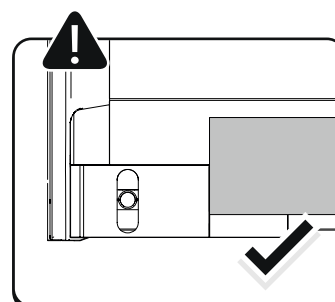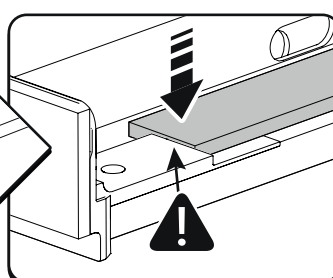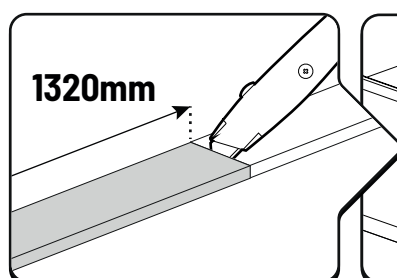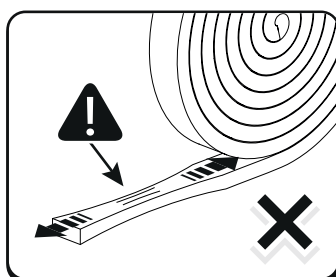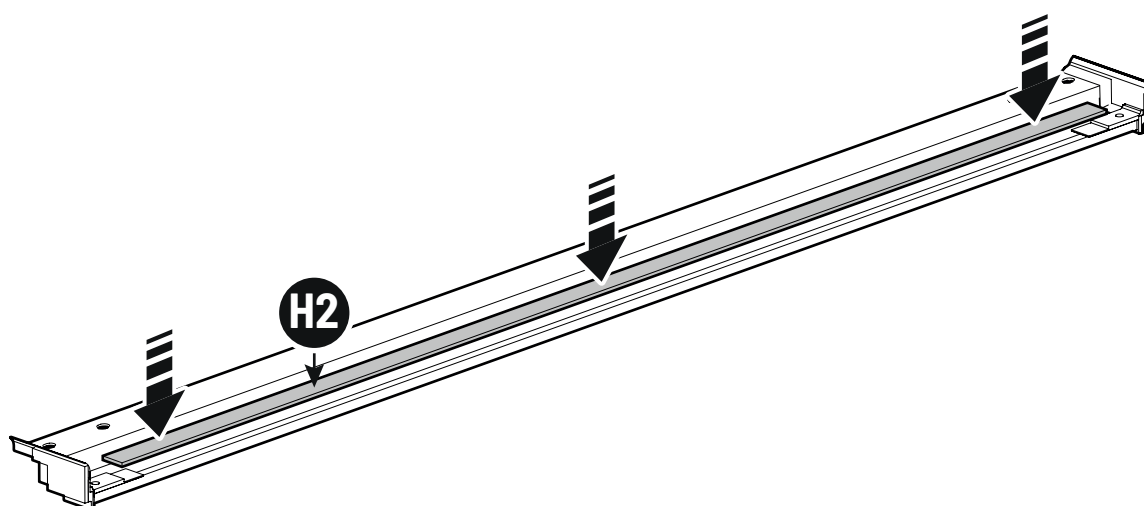

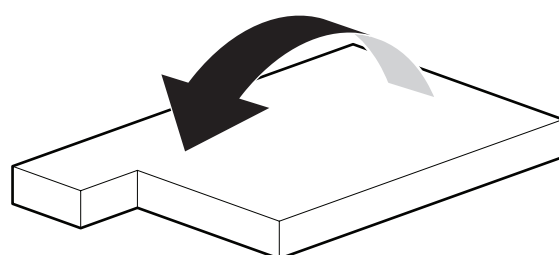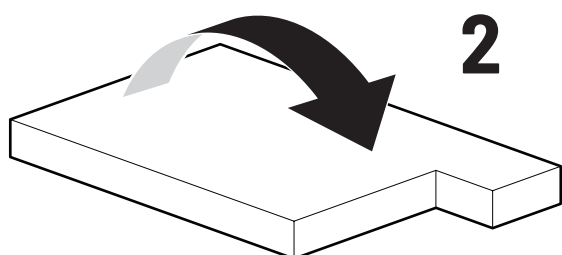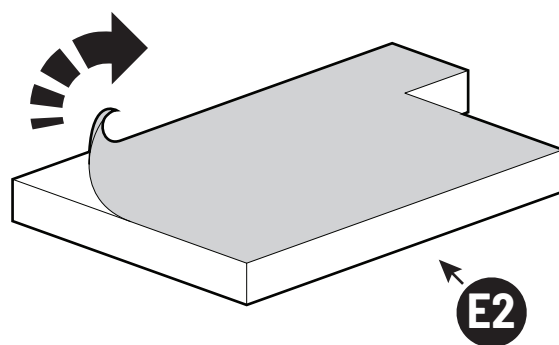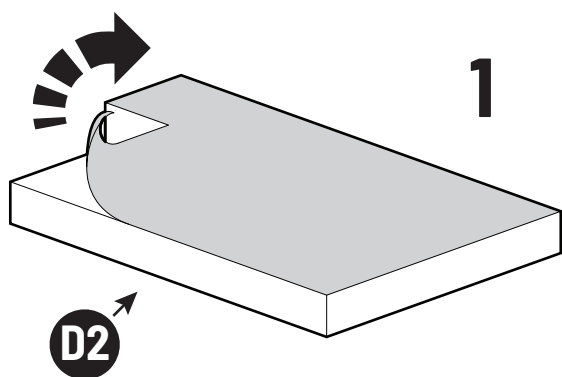

D2+E2

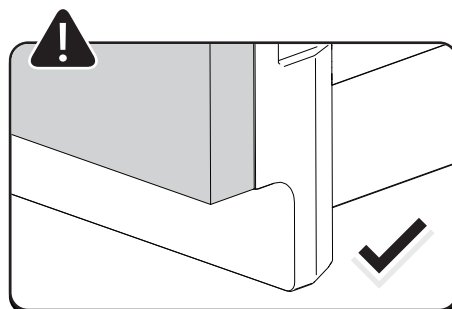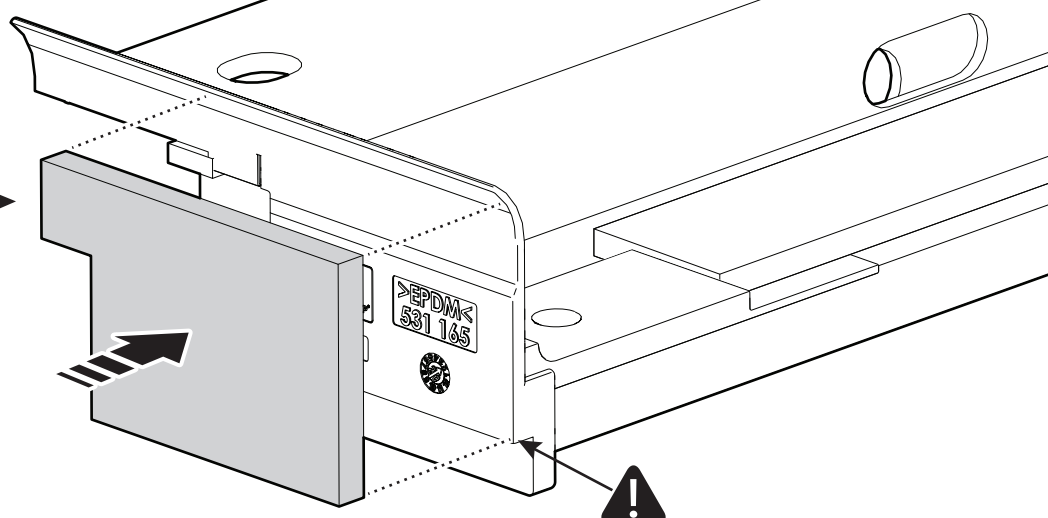


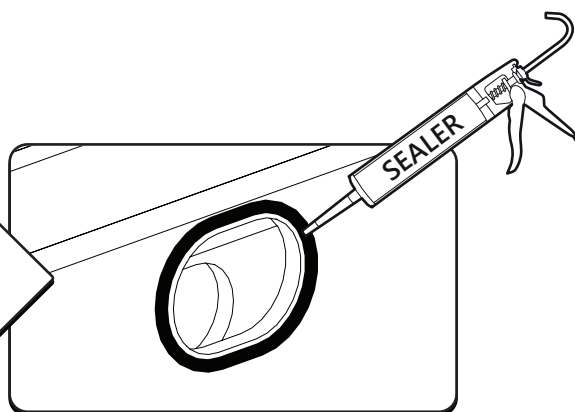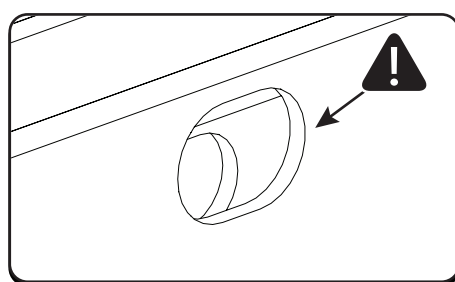
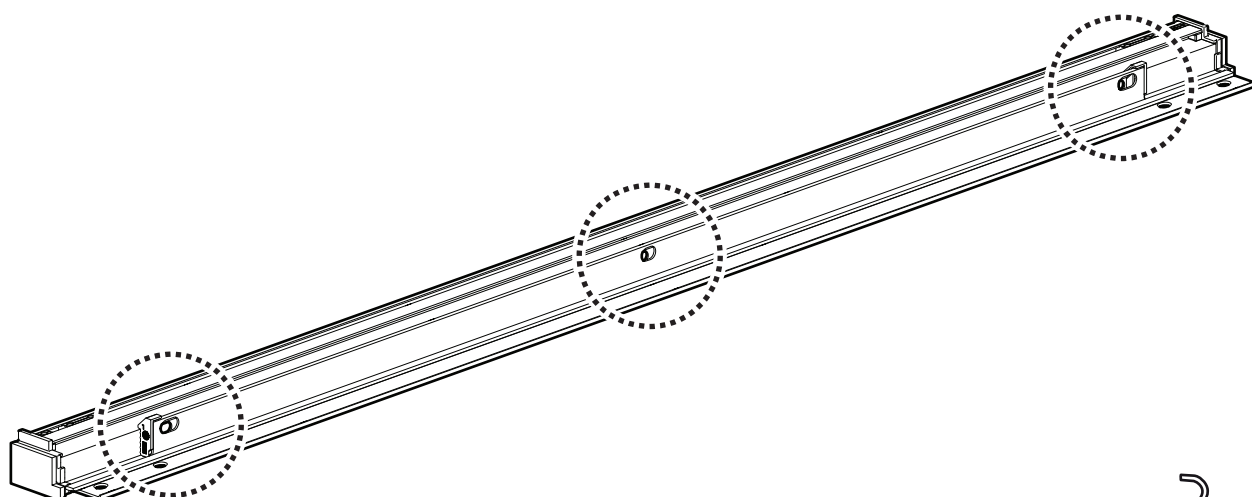




LOCTITE 243







T40


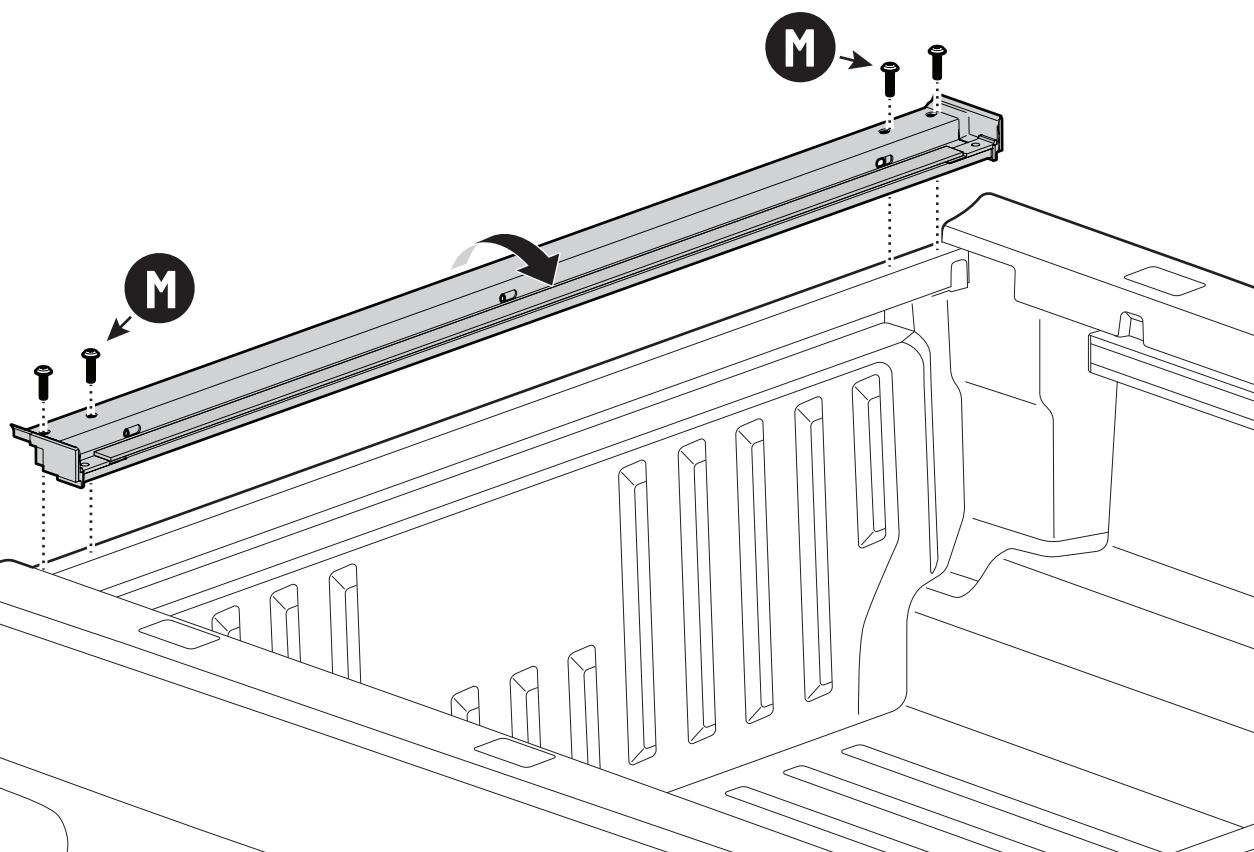


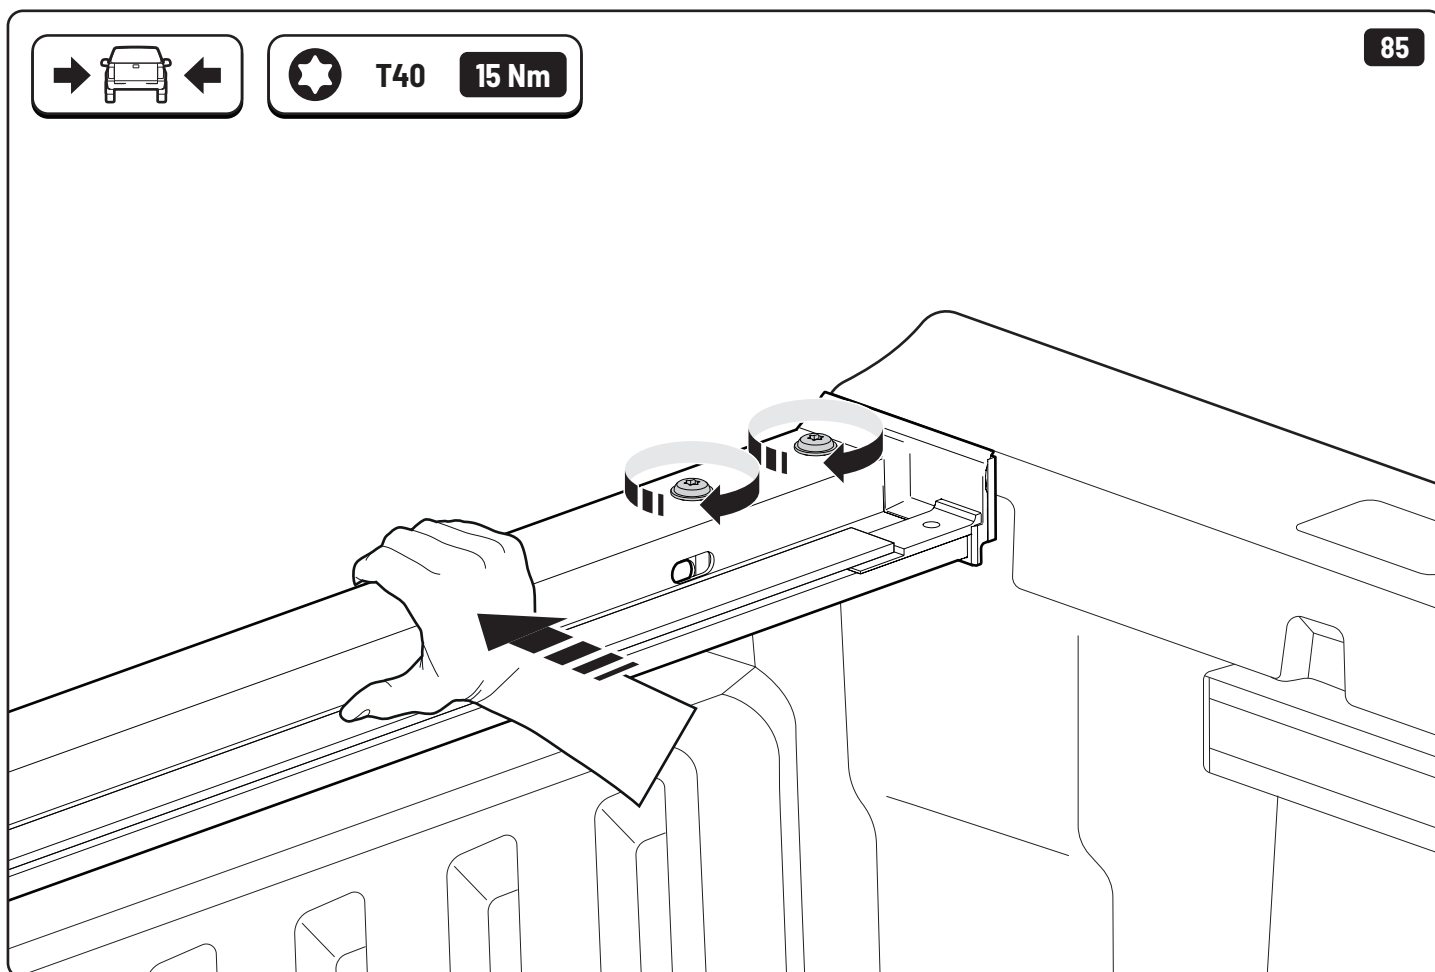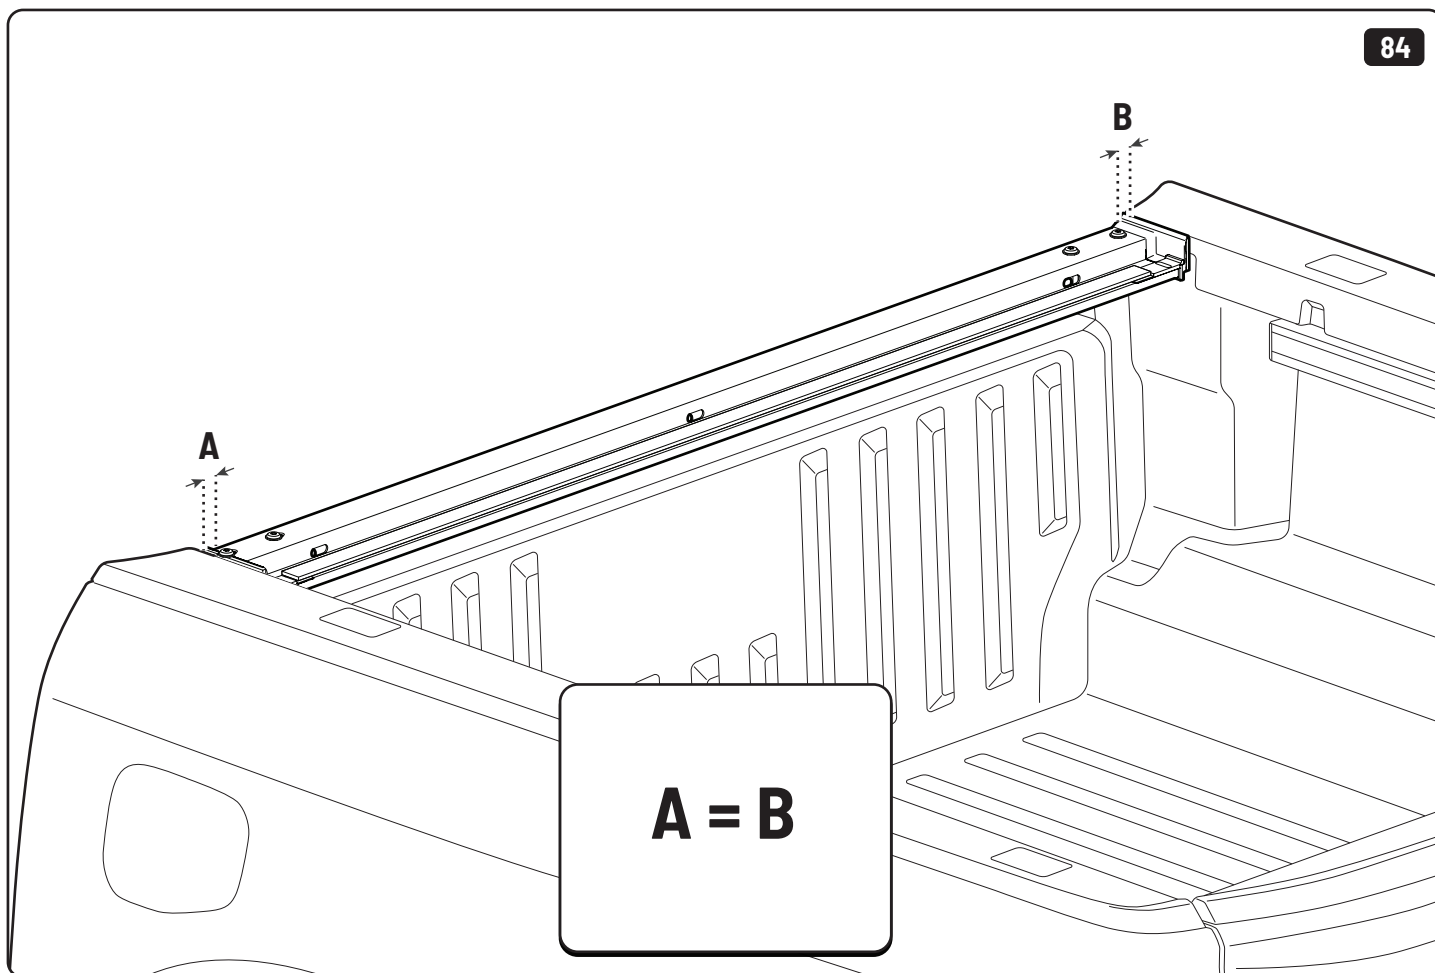


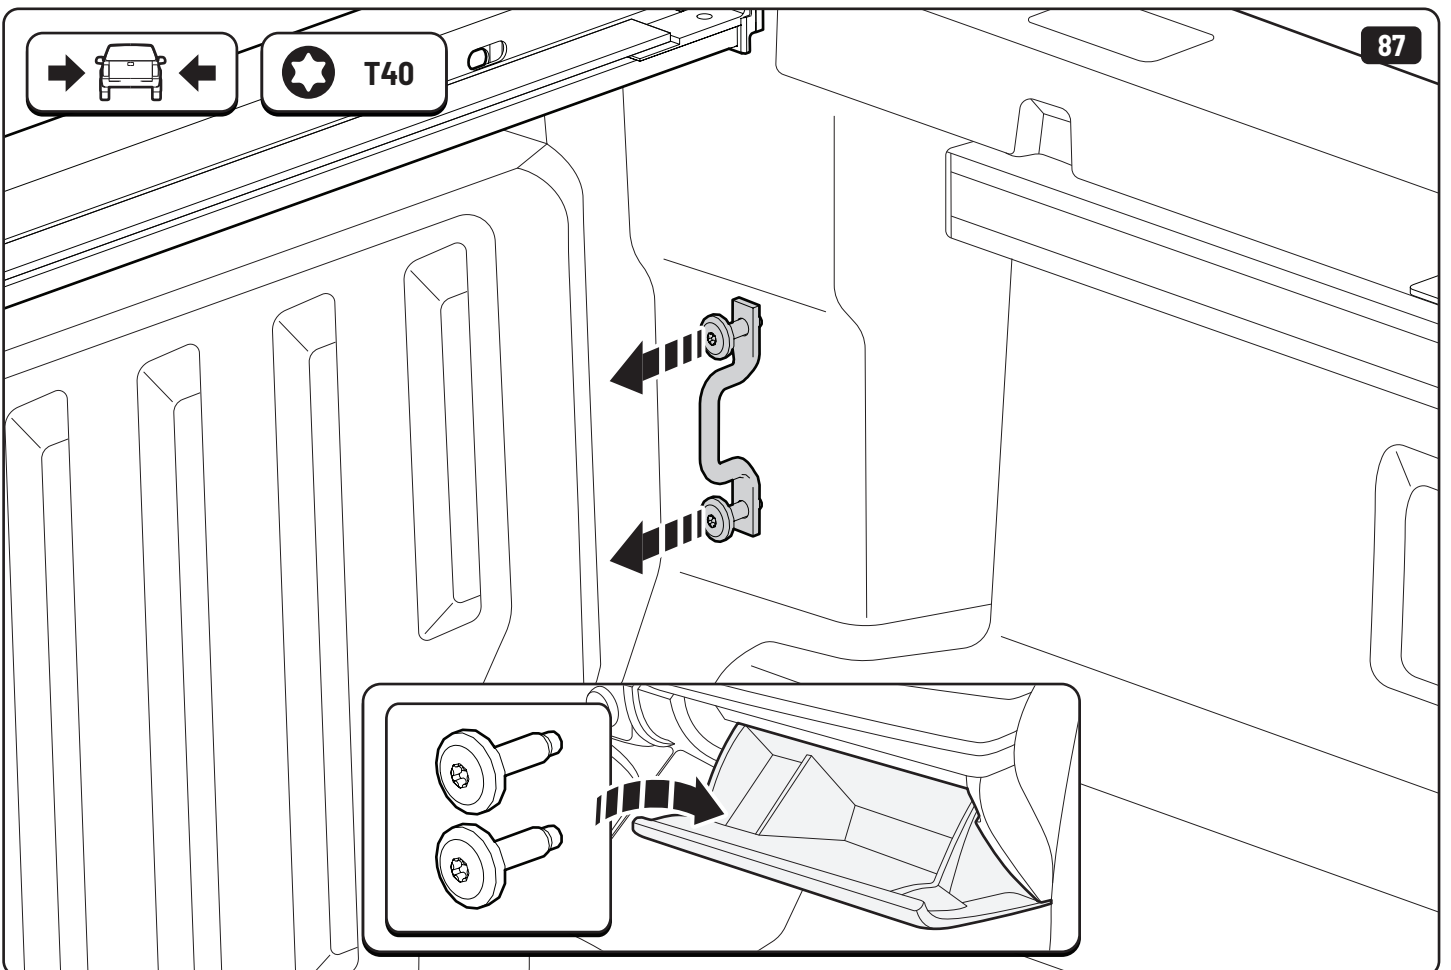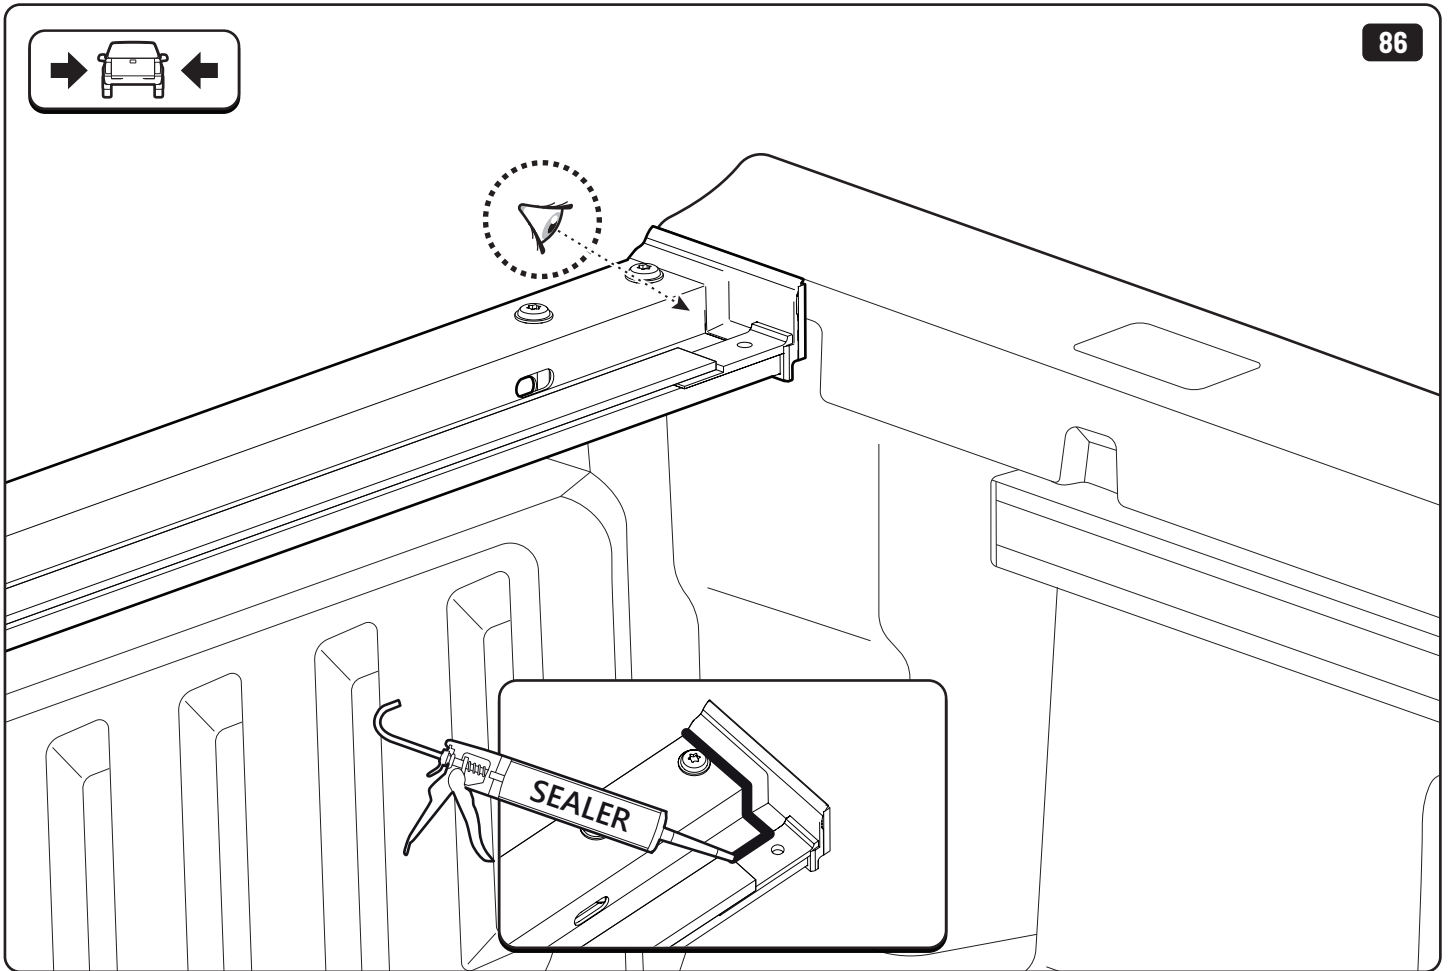

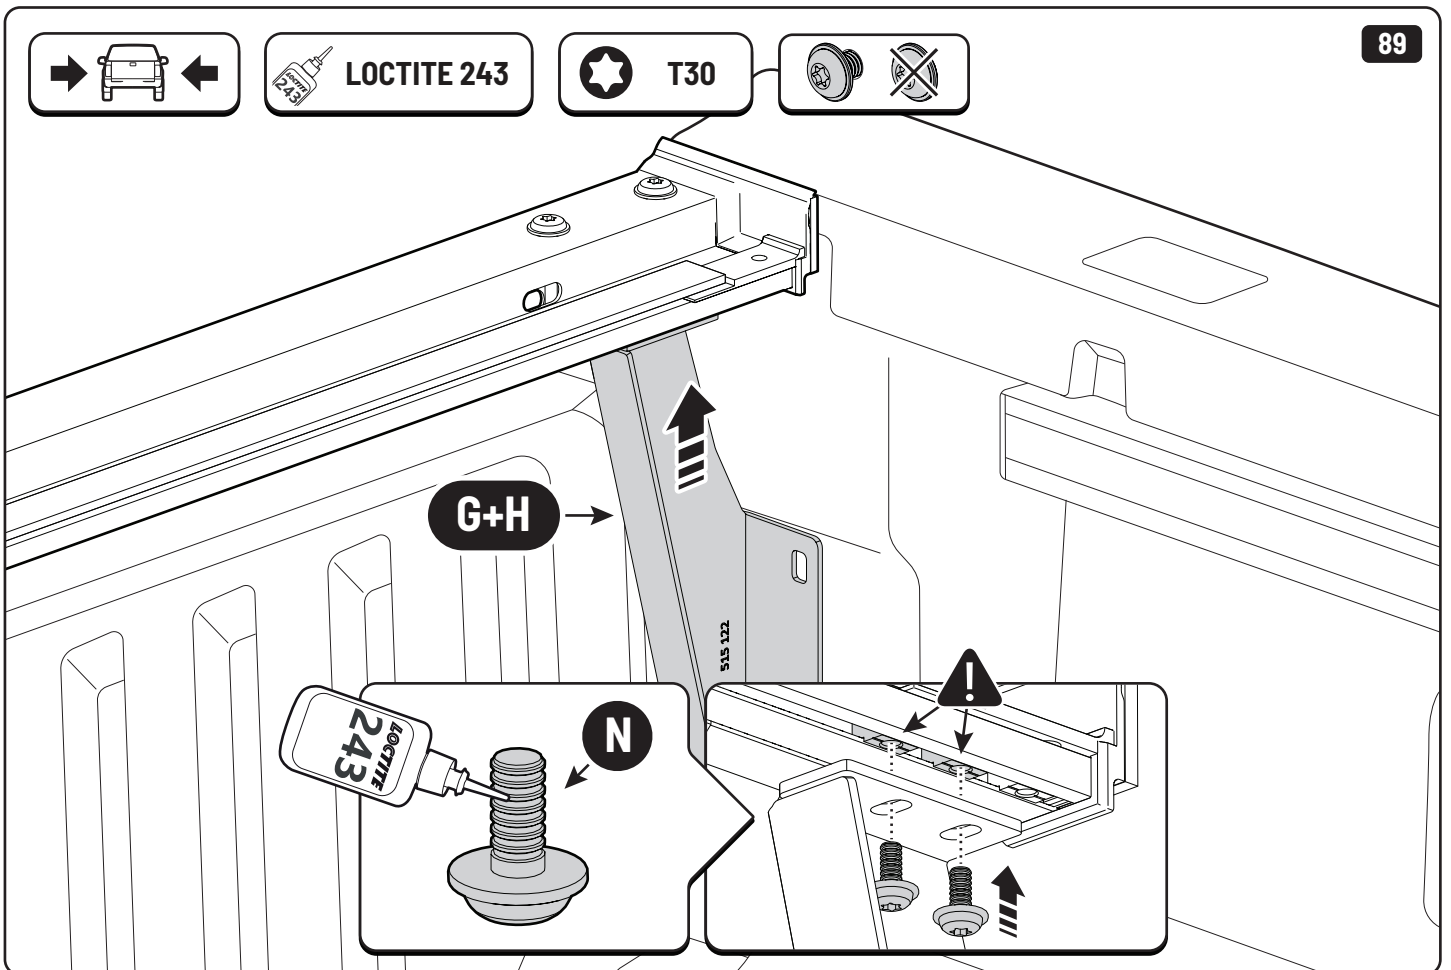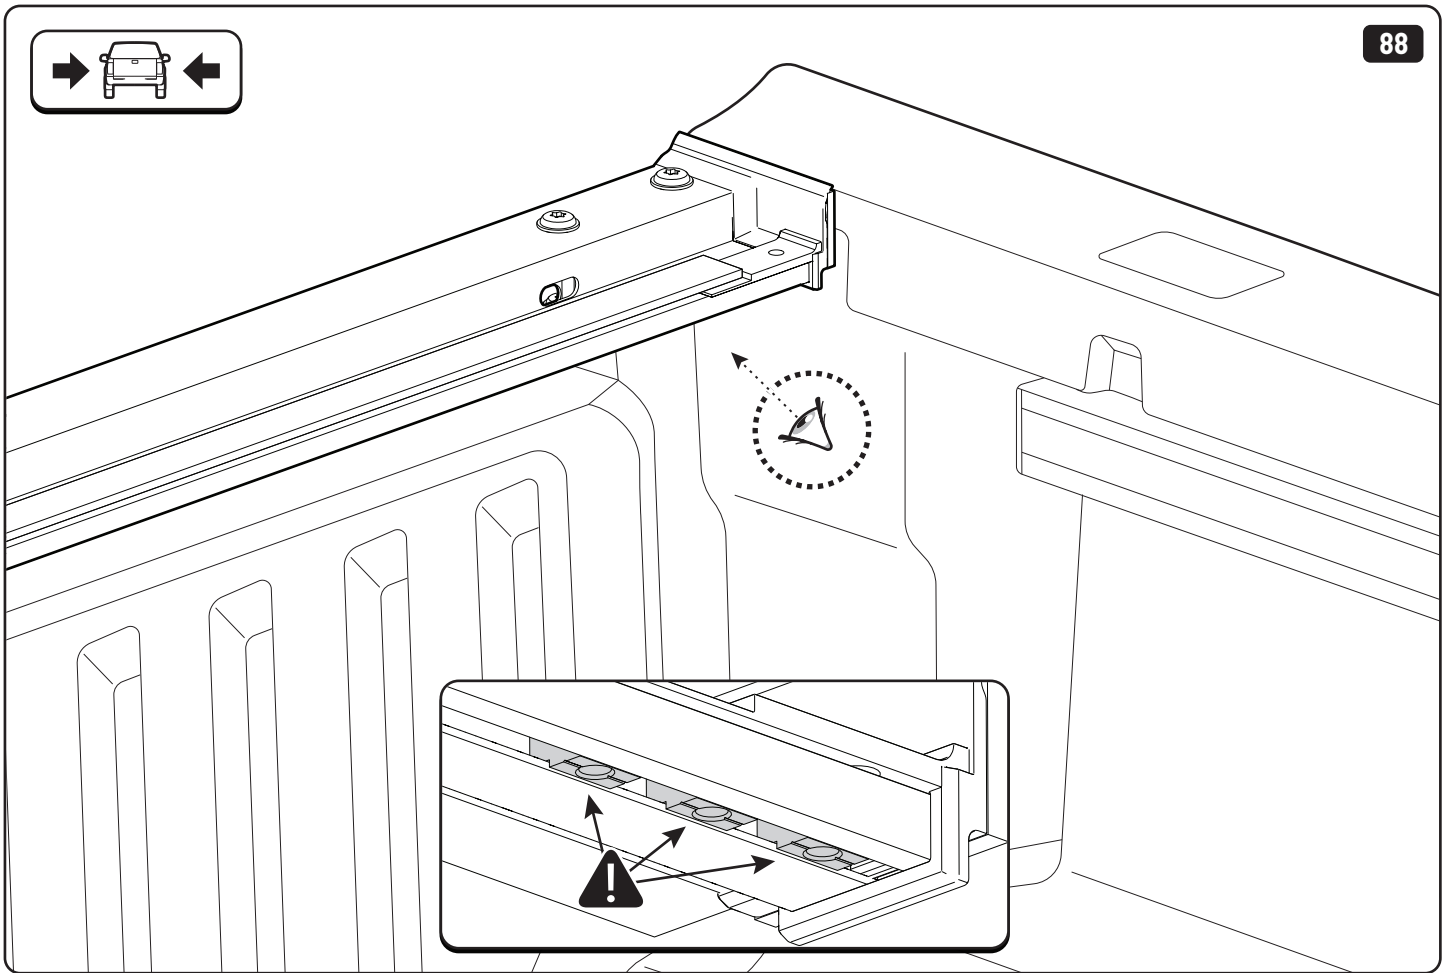

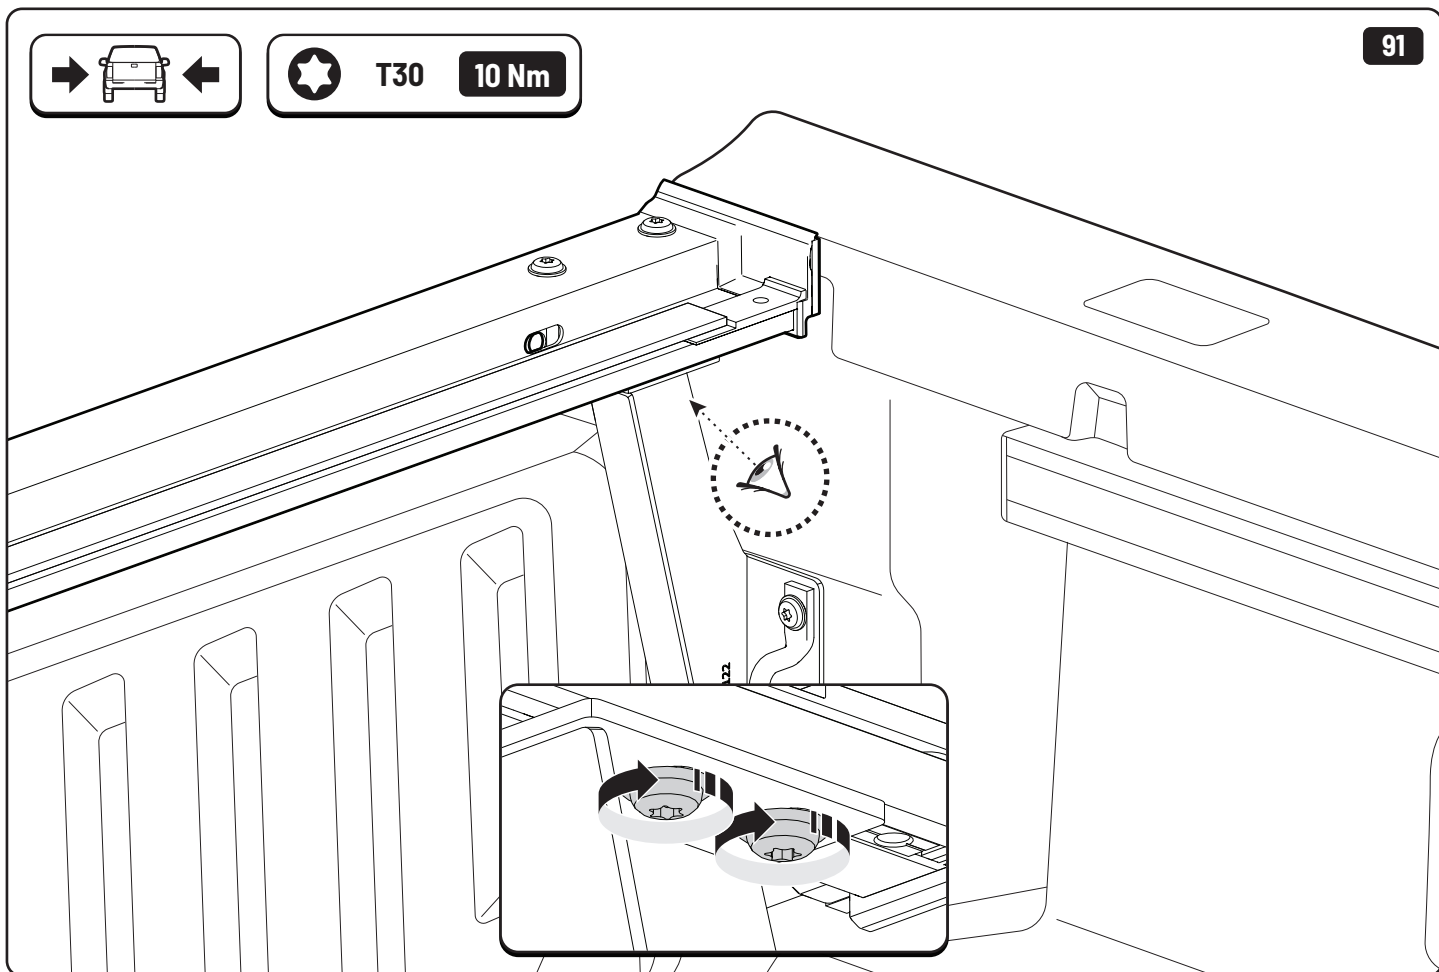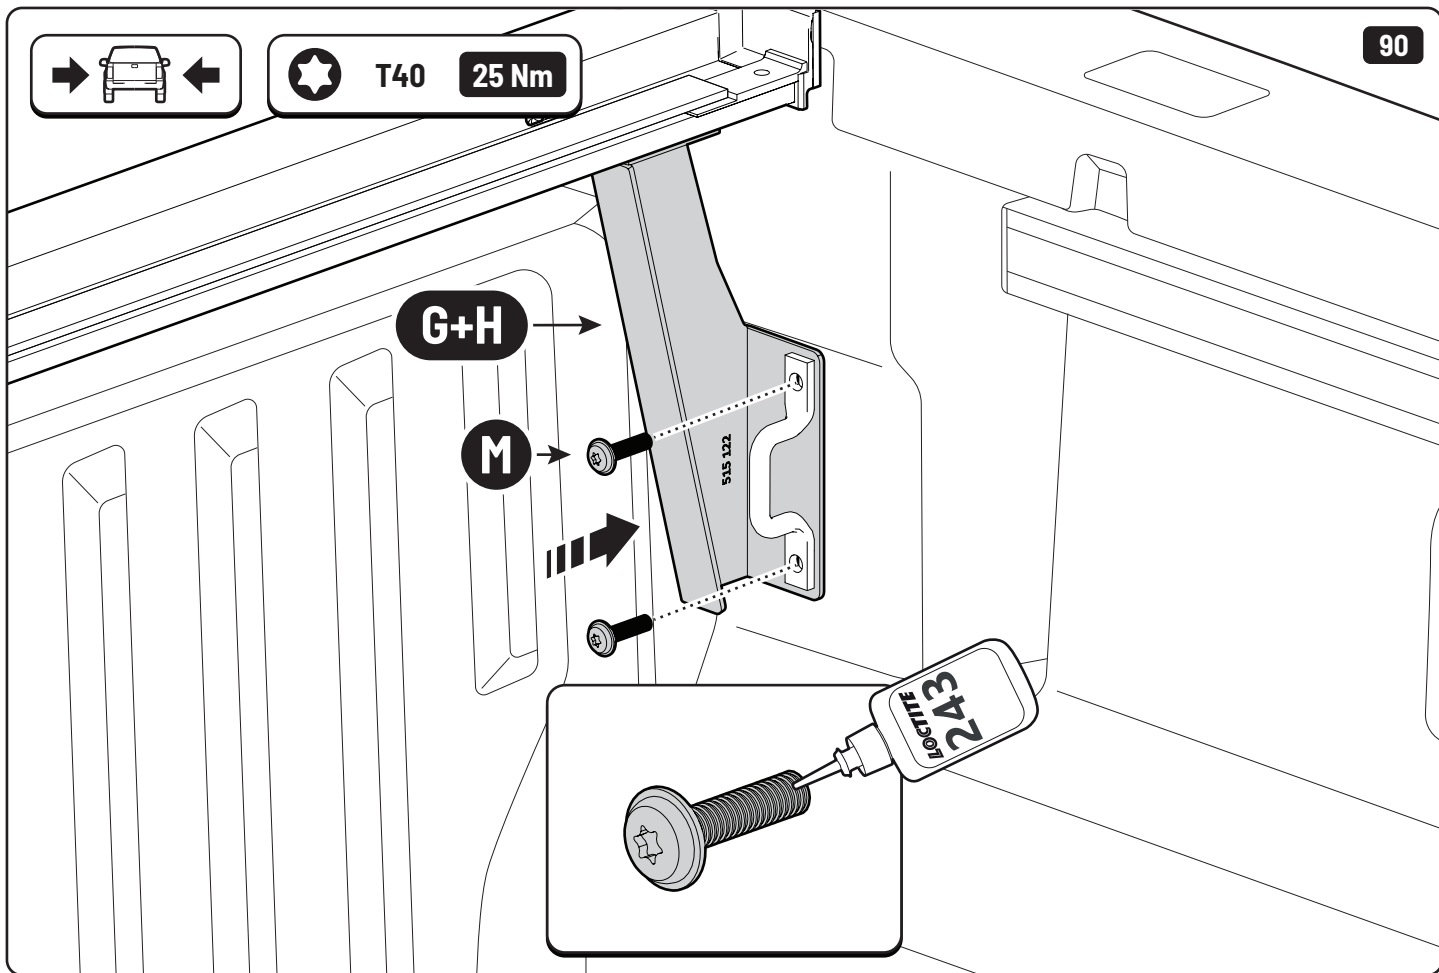

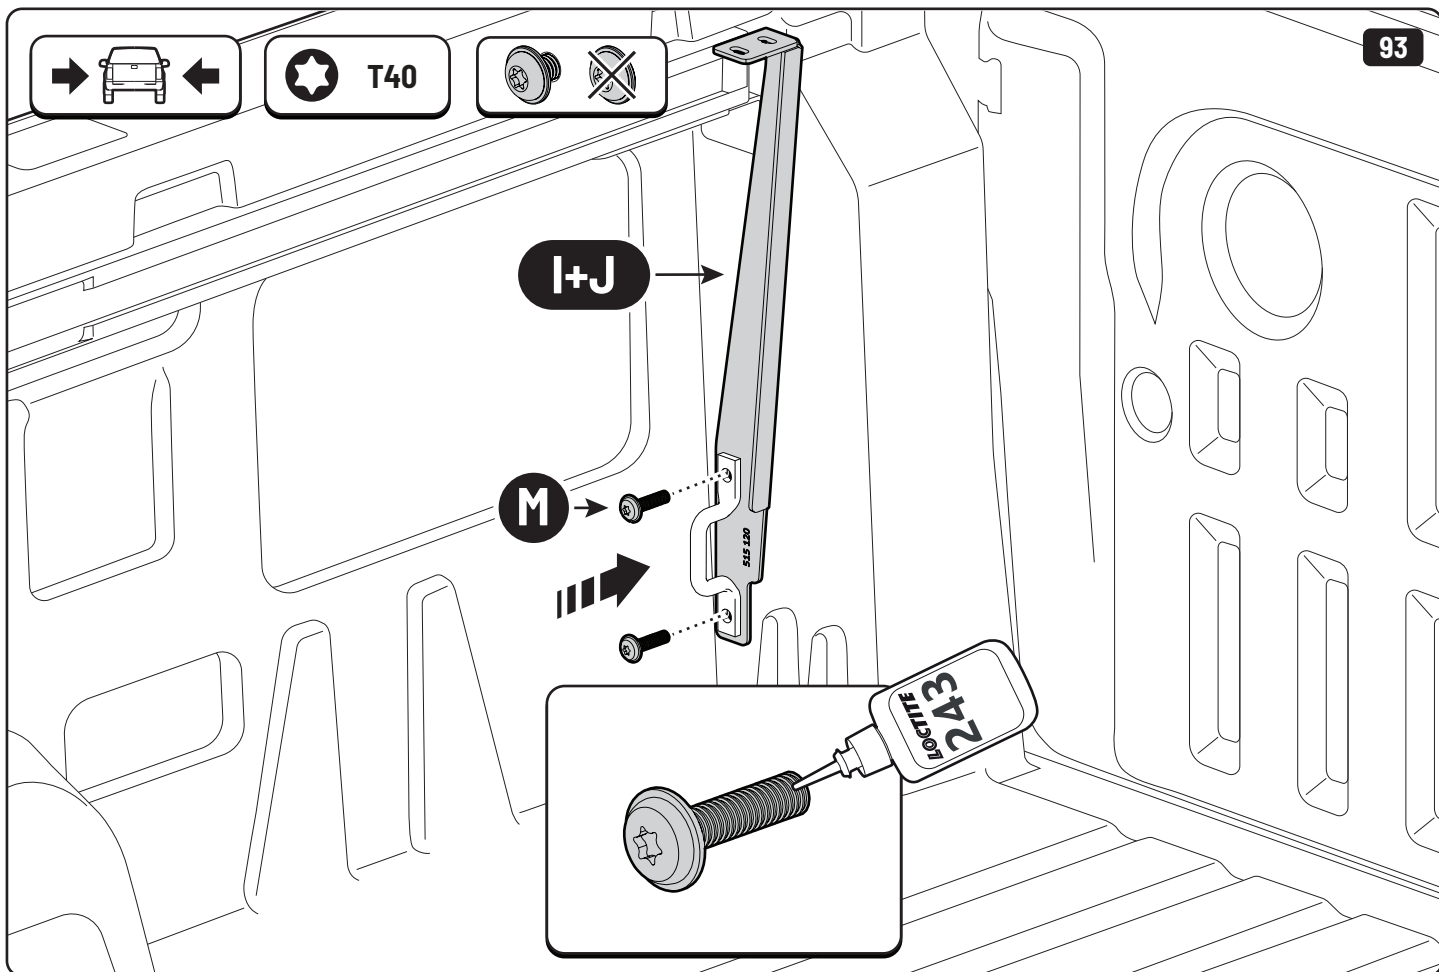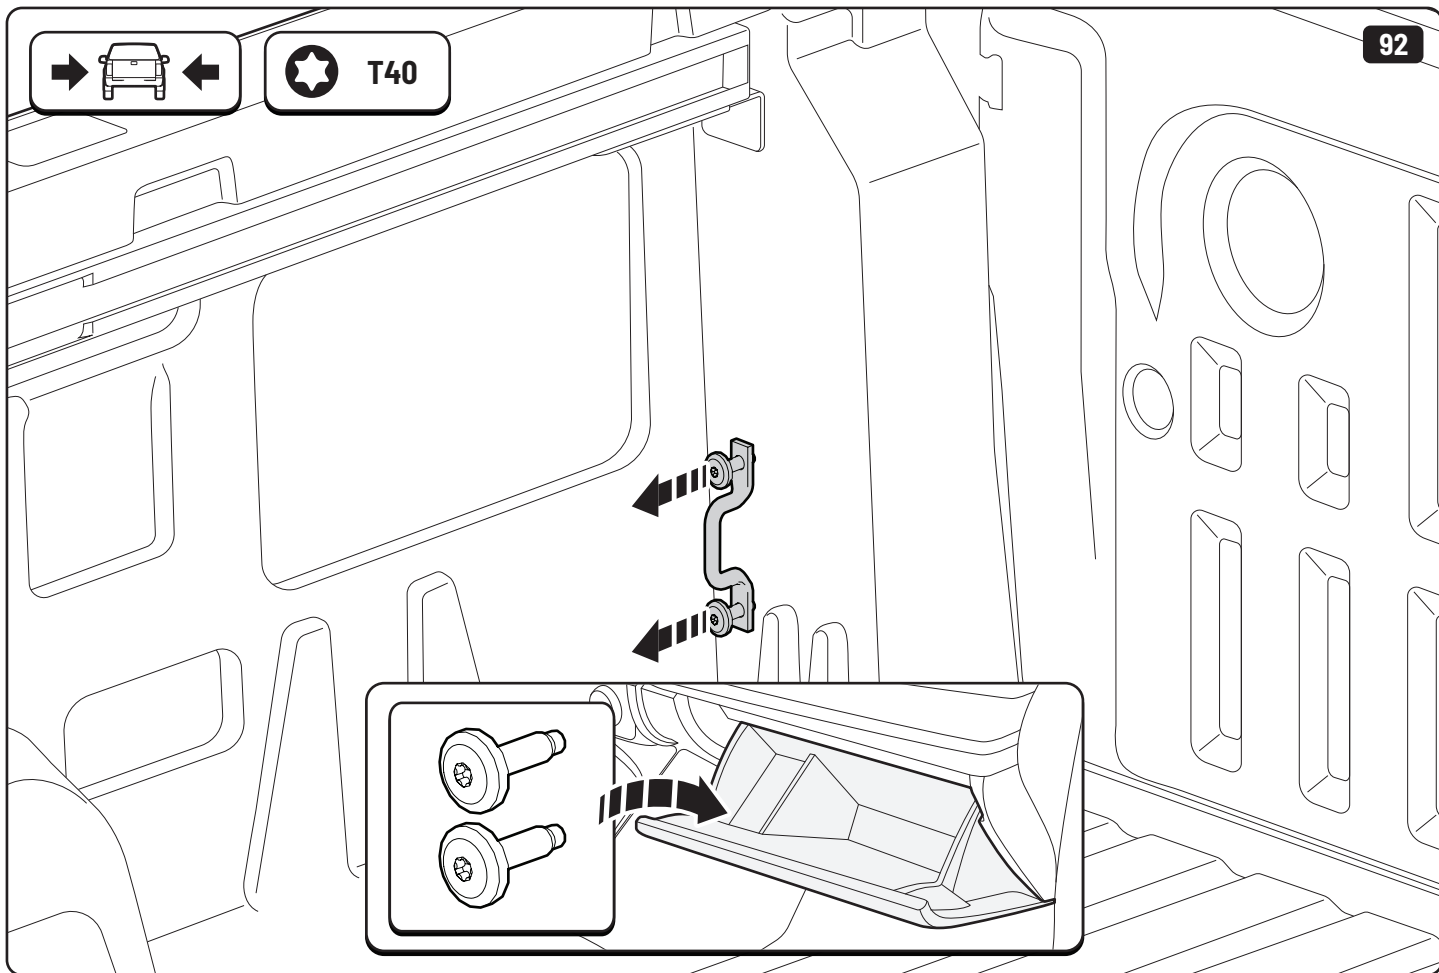


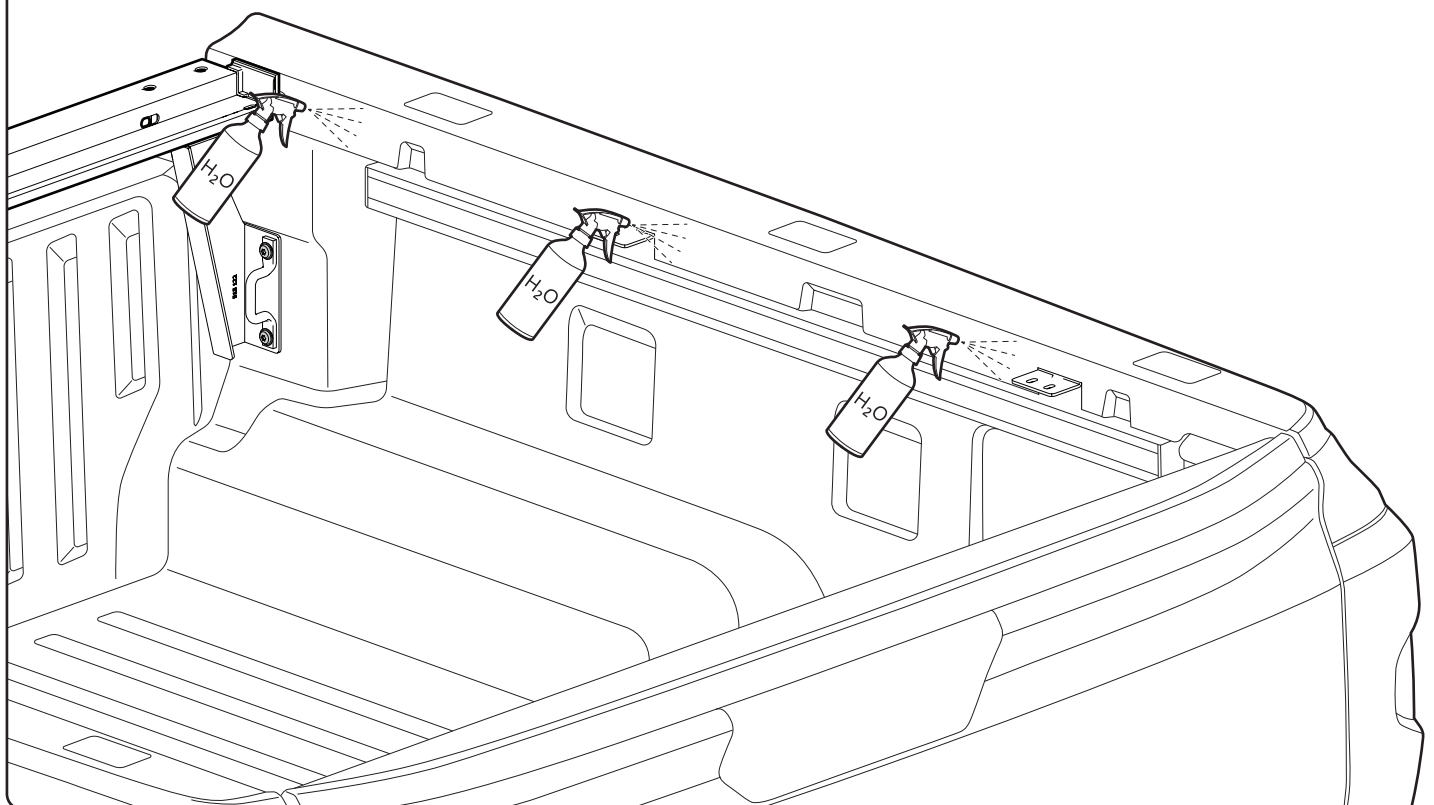

LOCTITE 243



T30

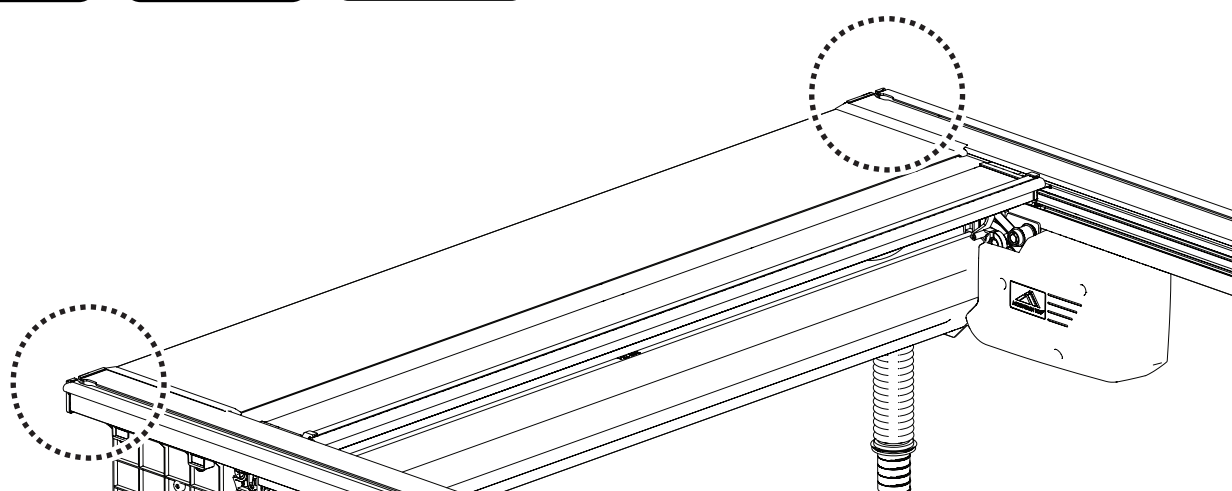

V




V










96


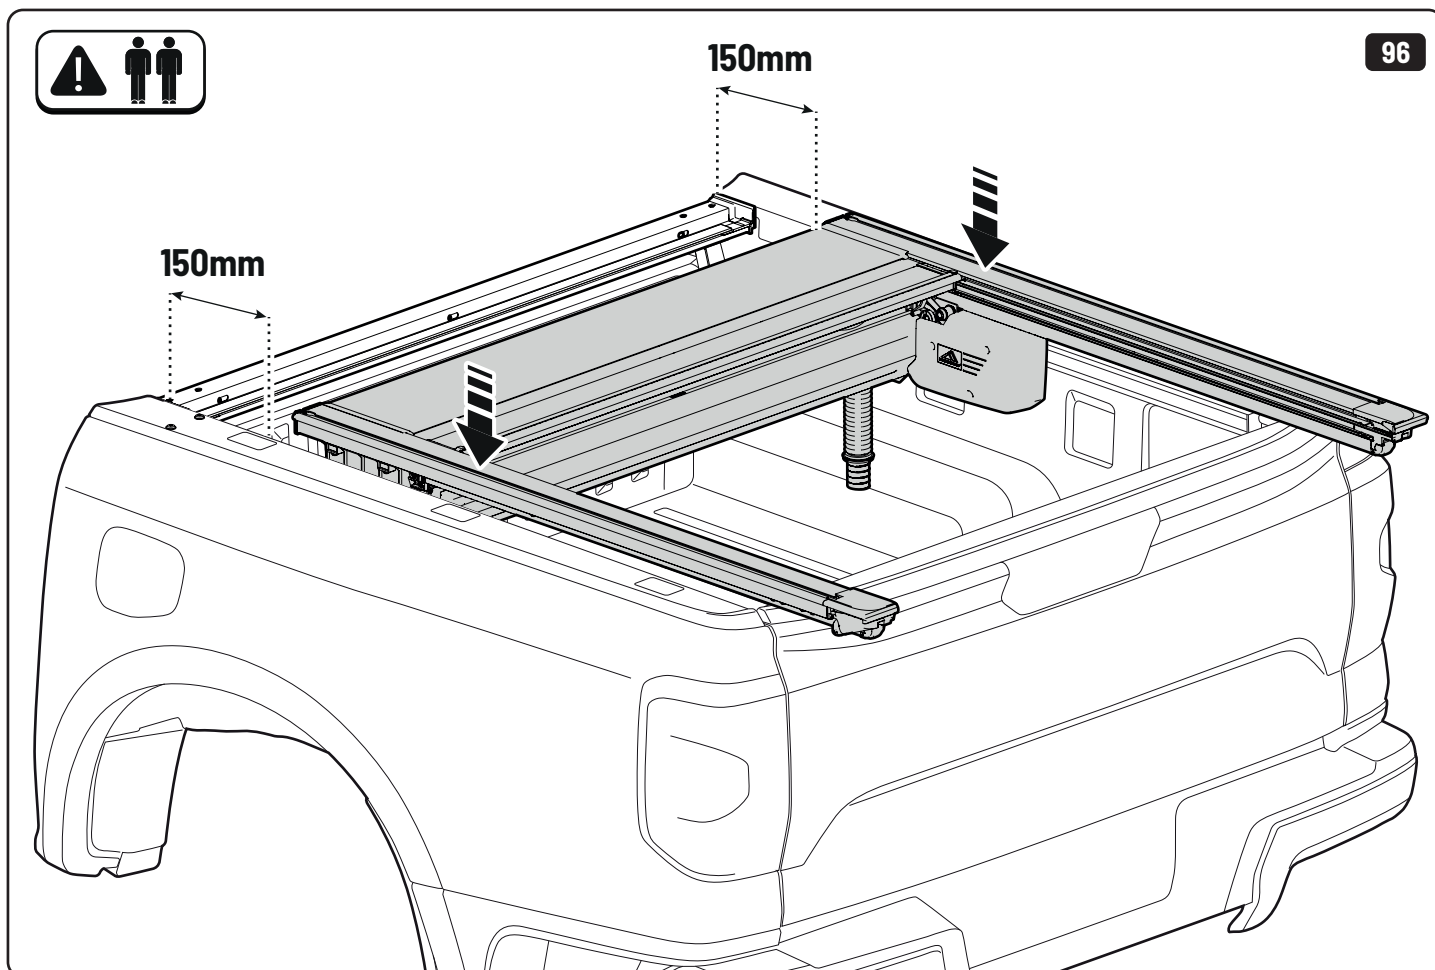


97

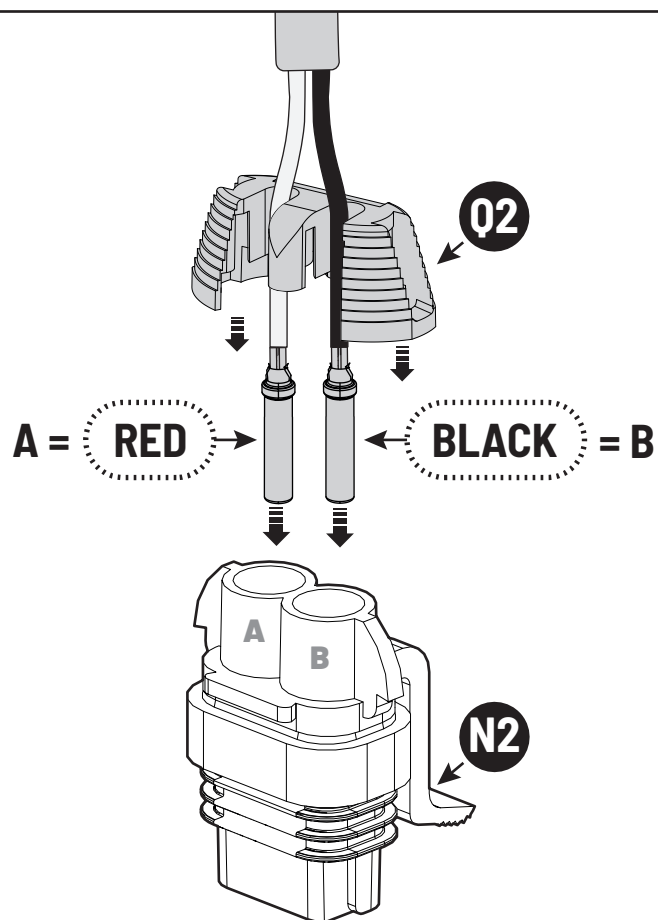

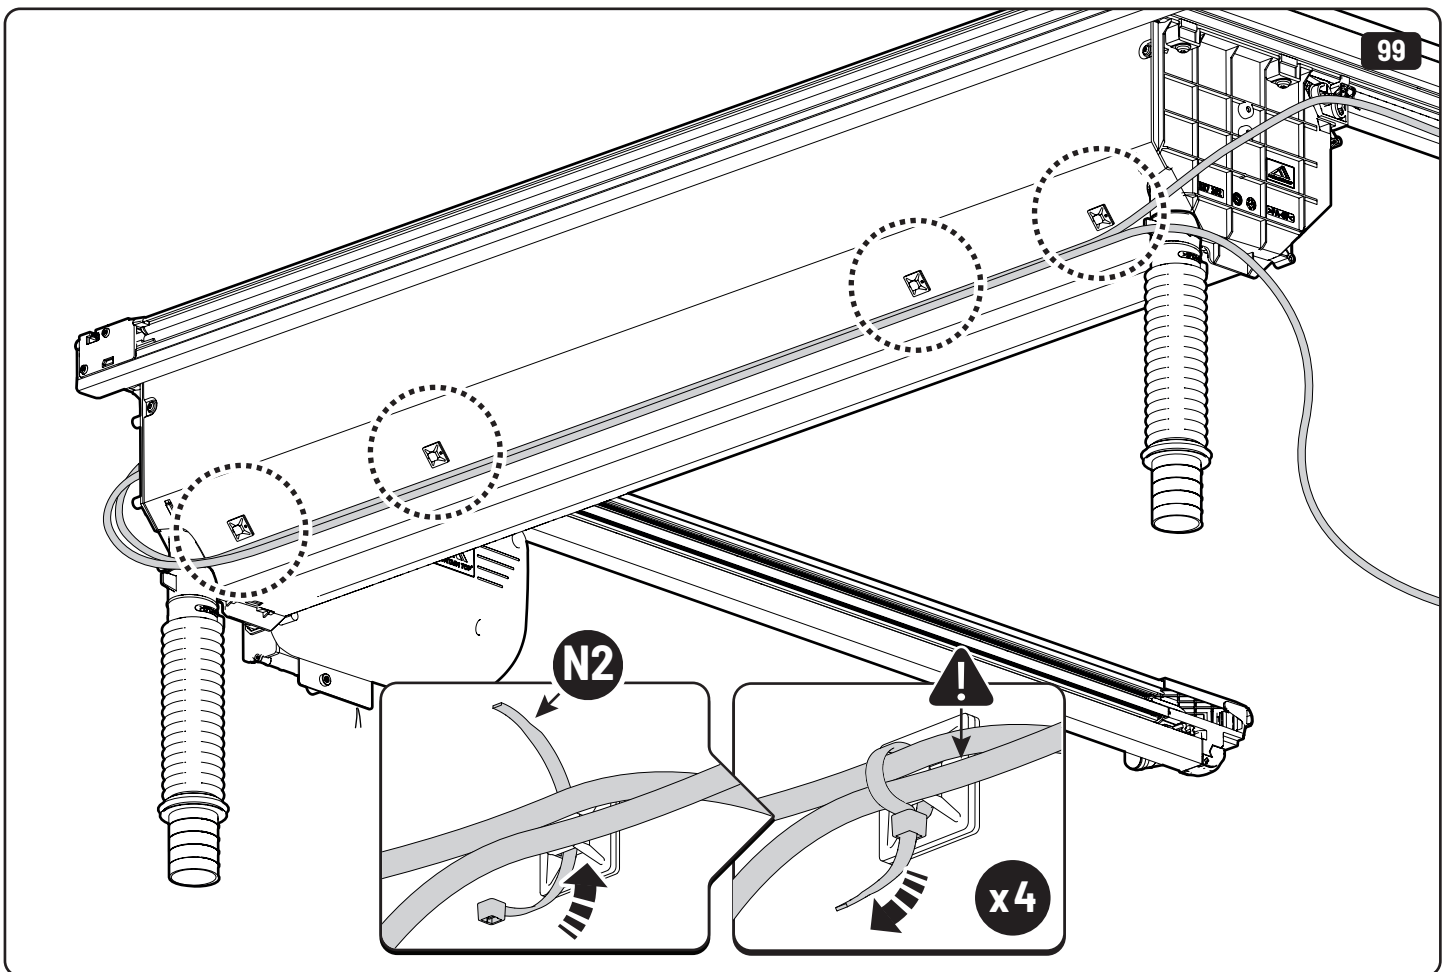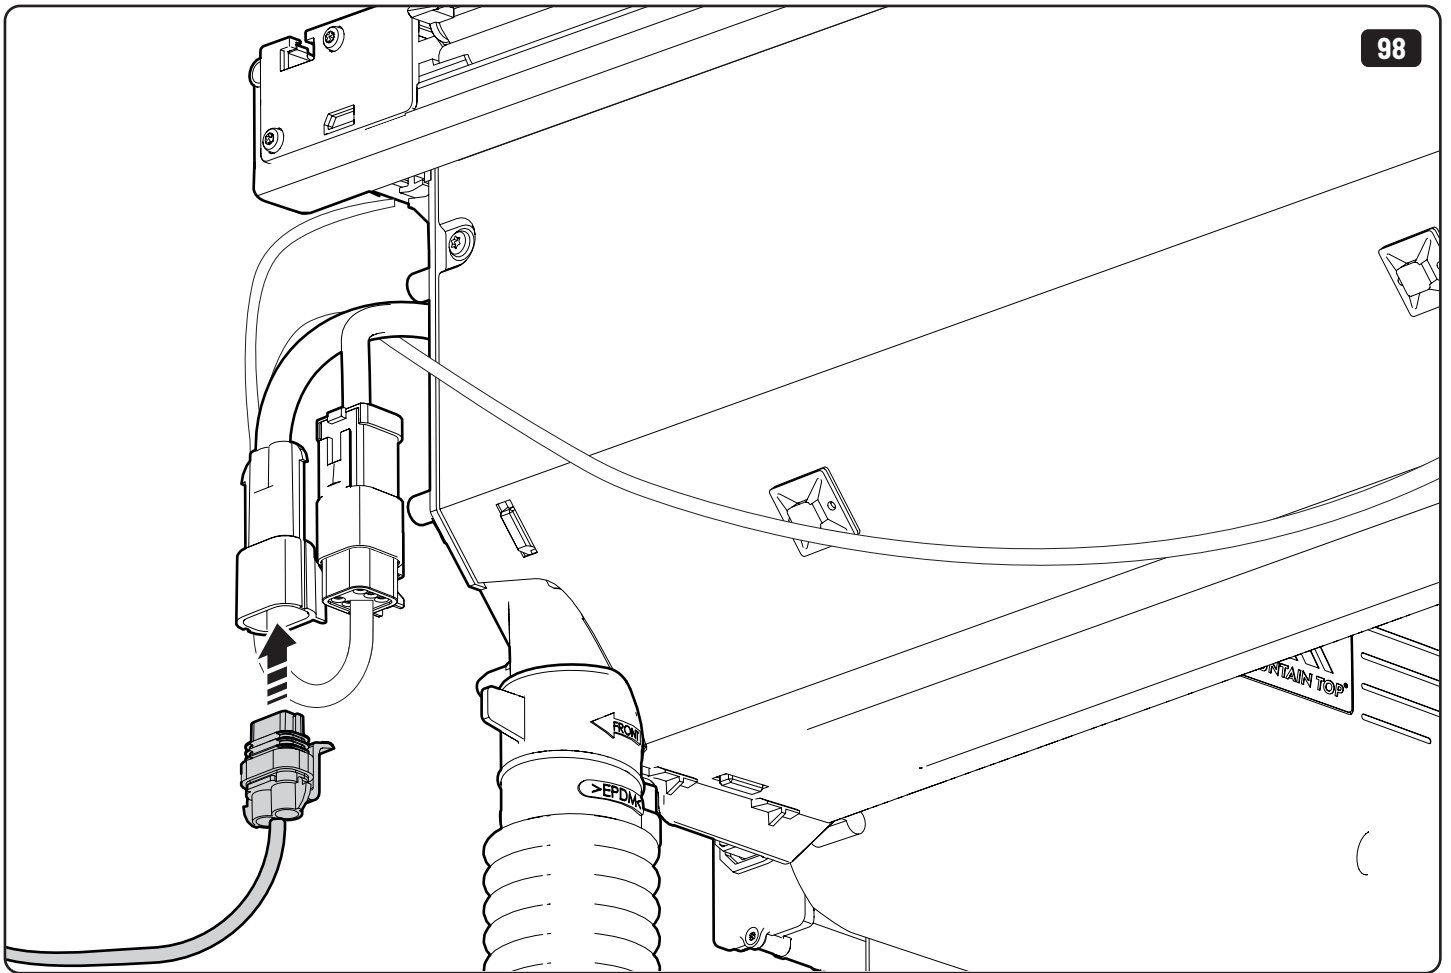

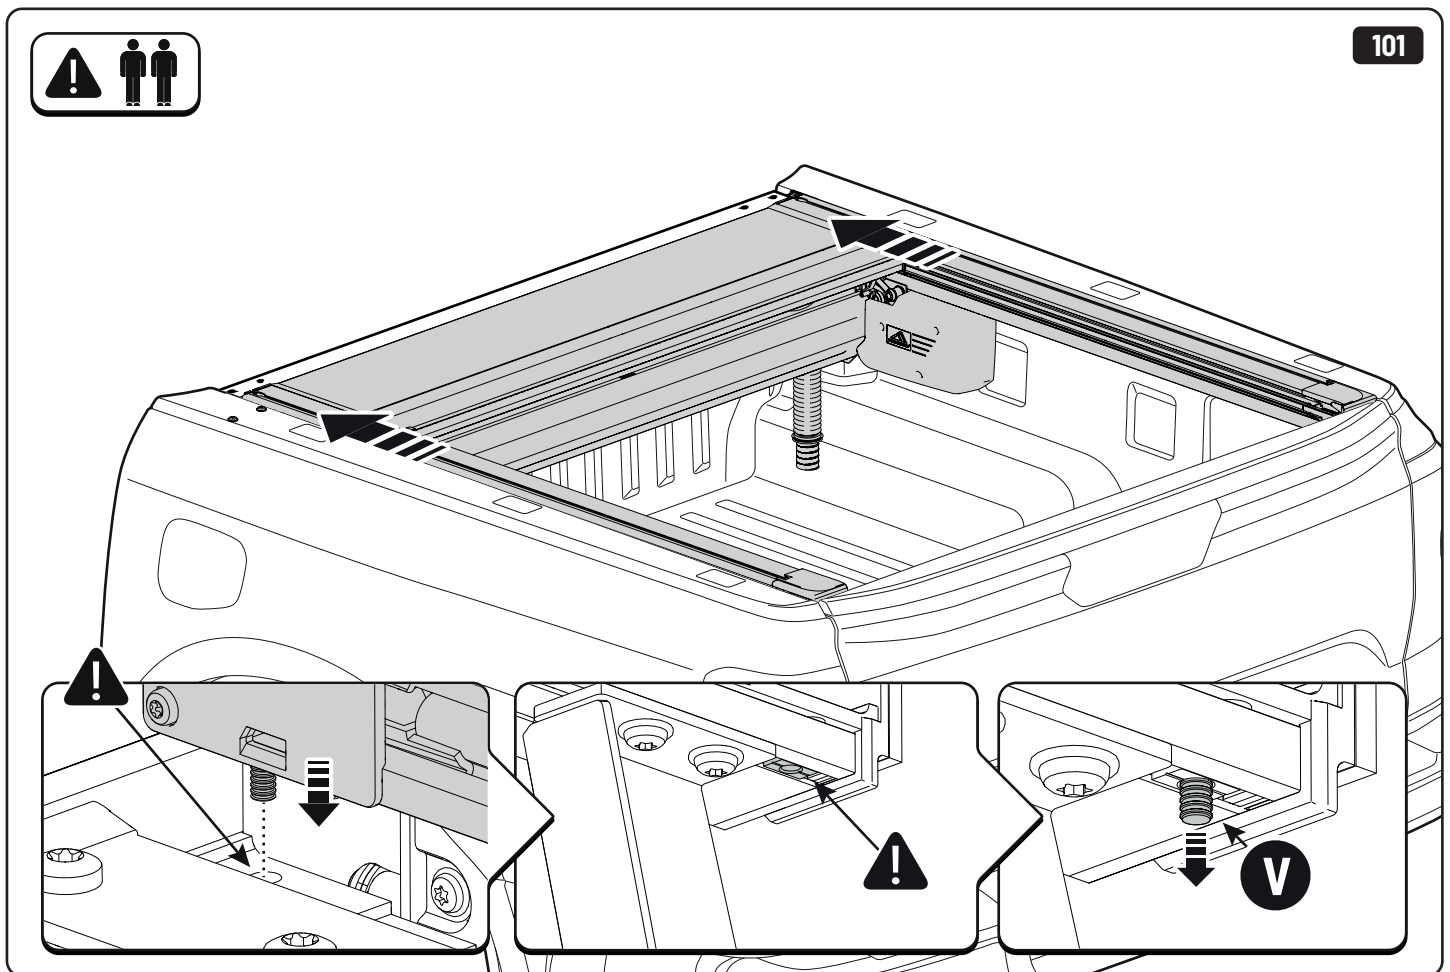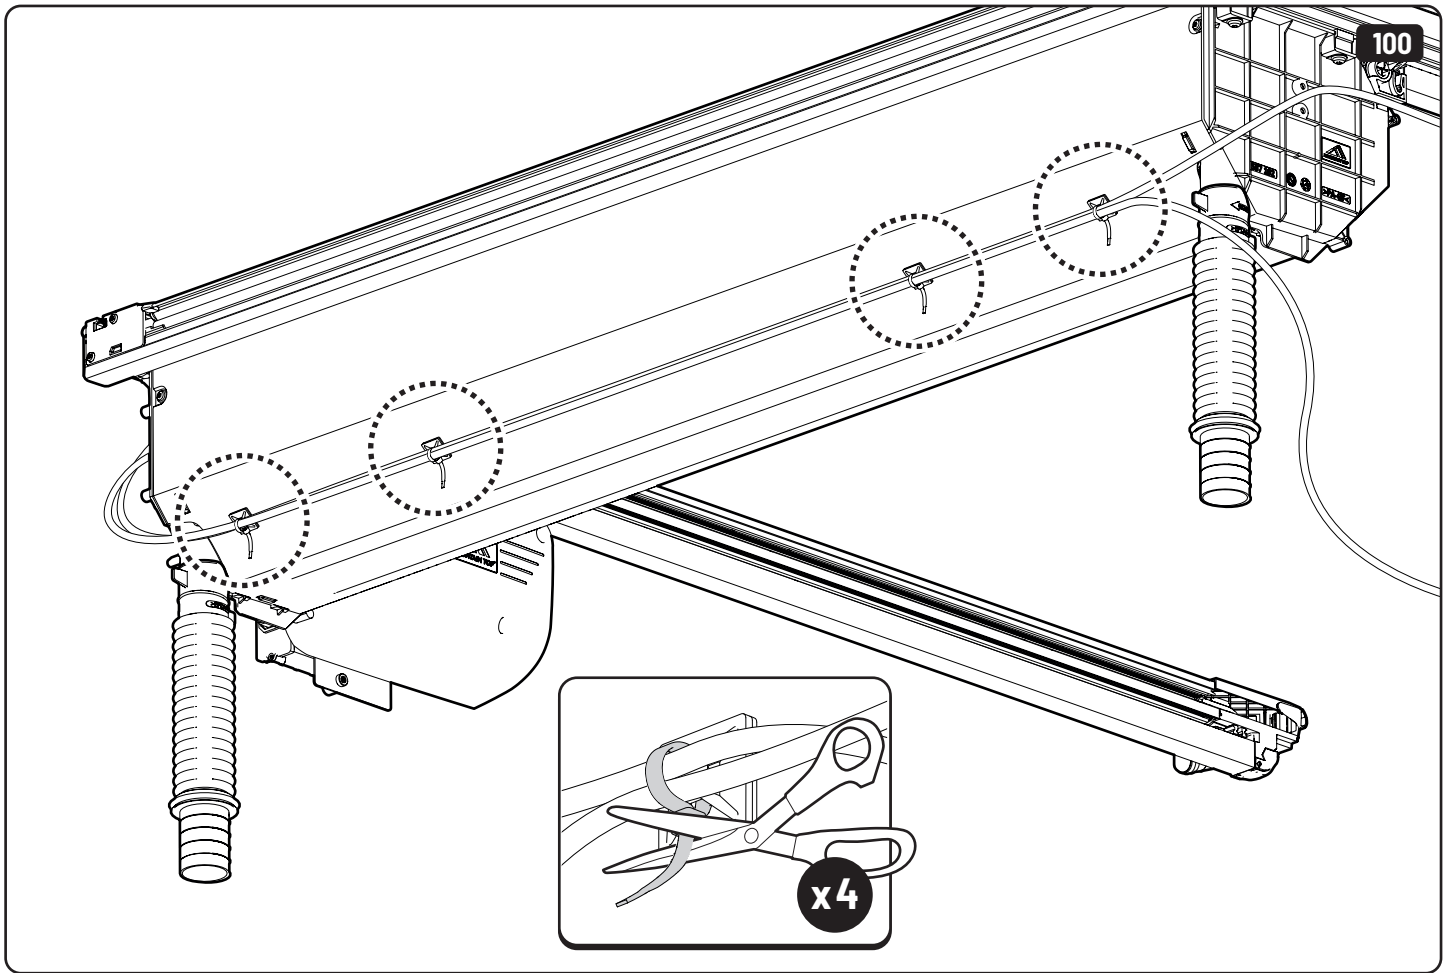

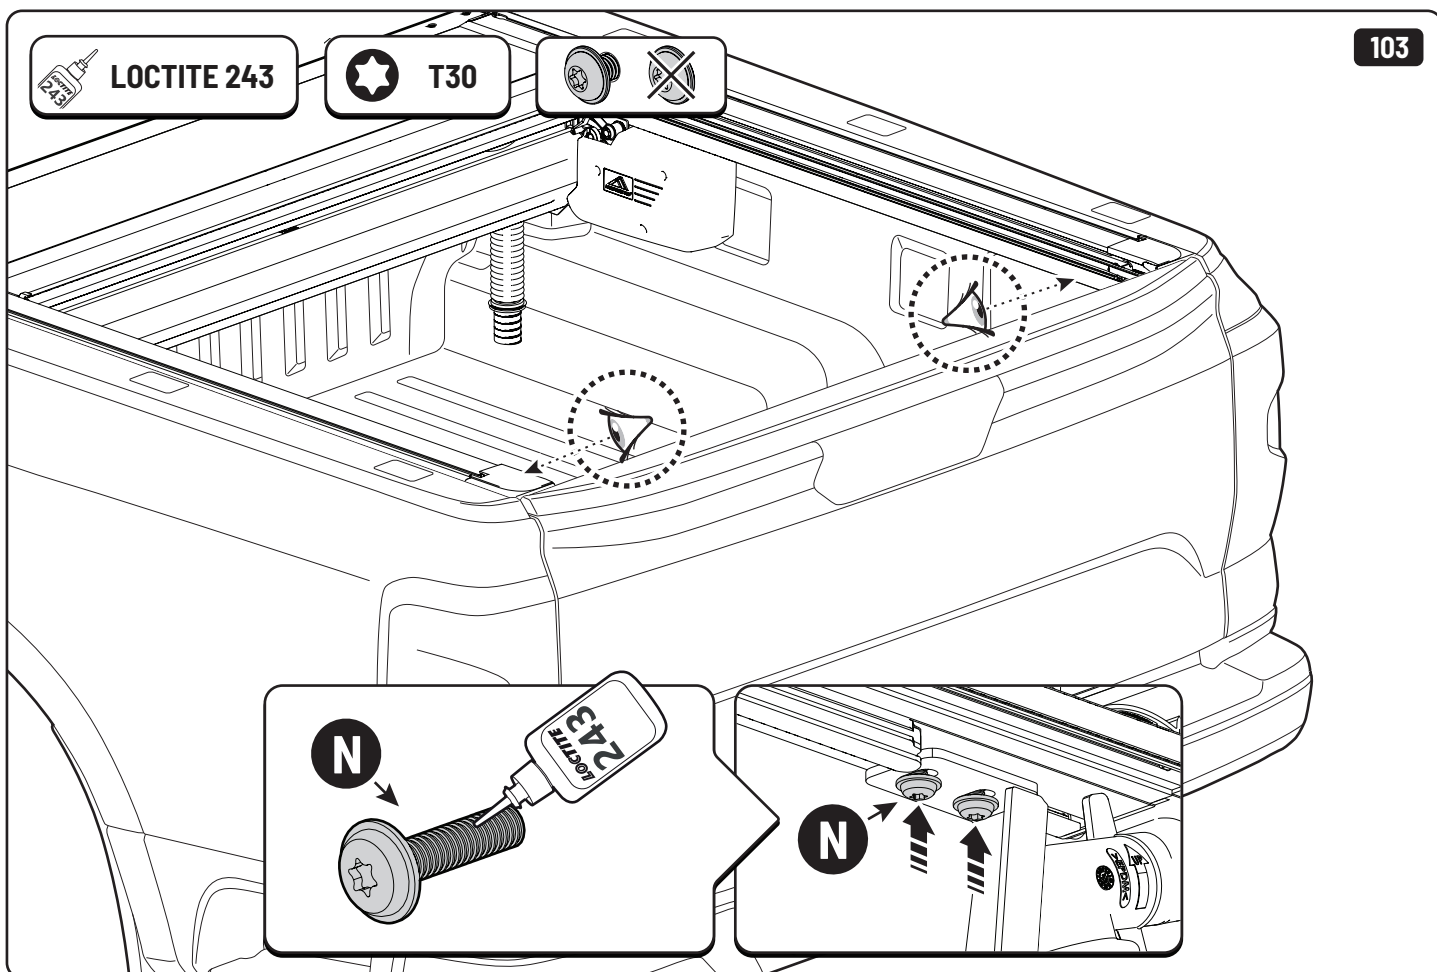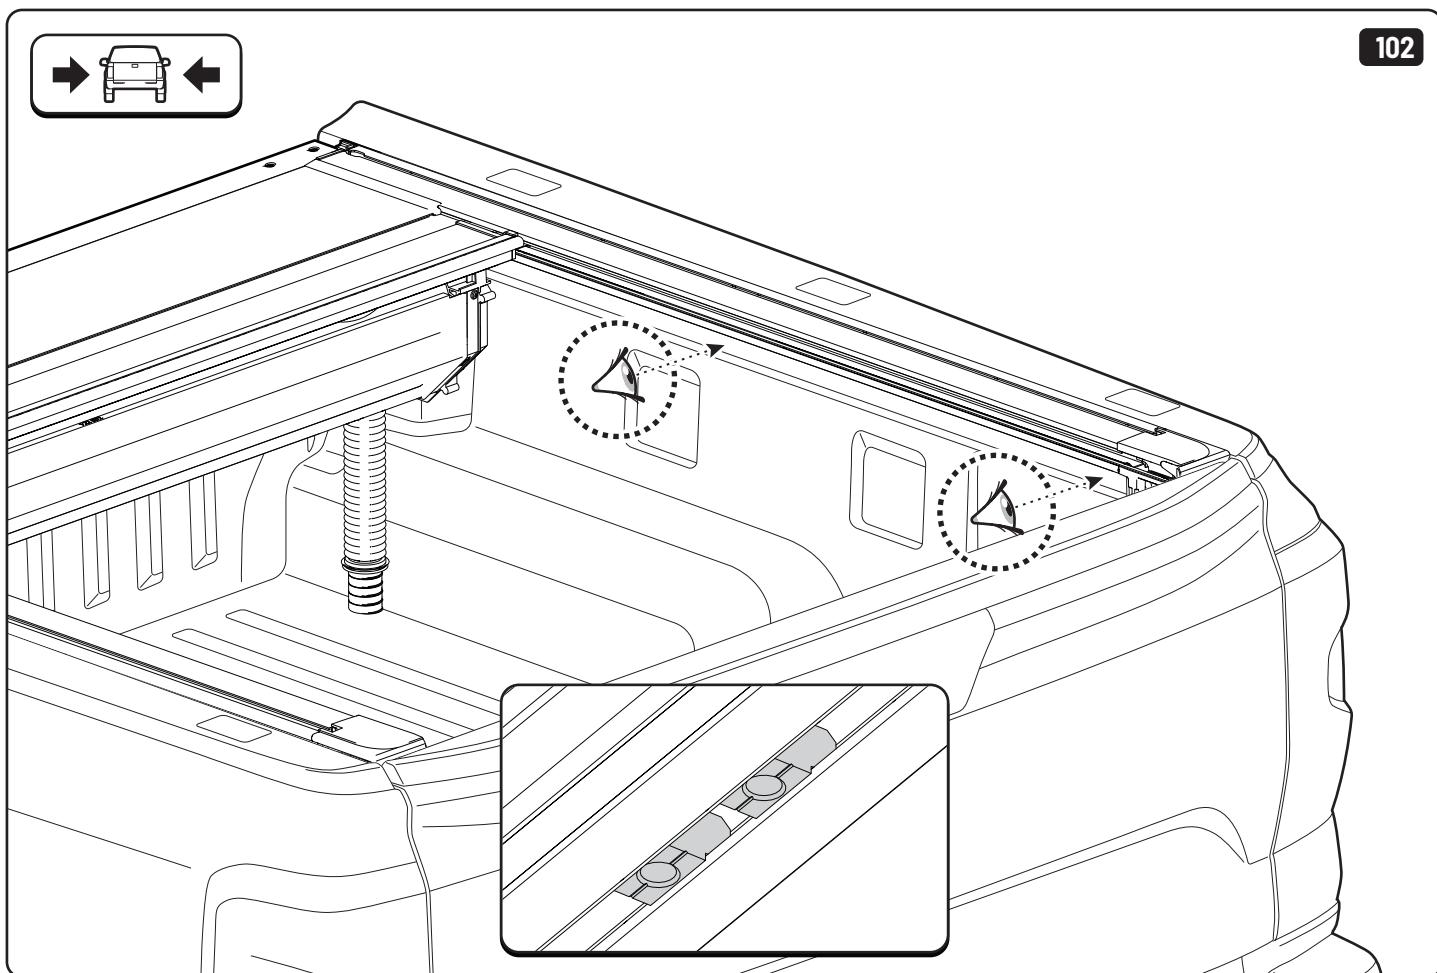


LOCTITE 243


T30




104

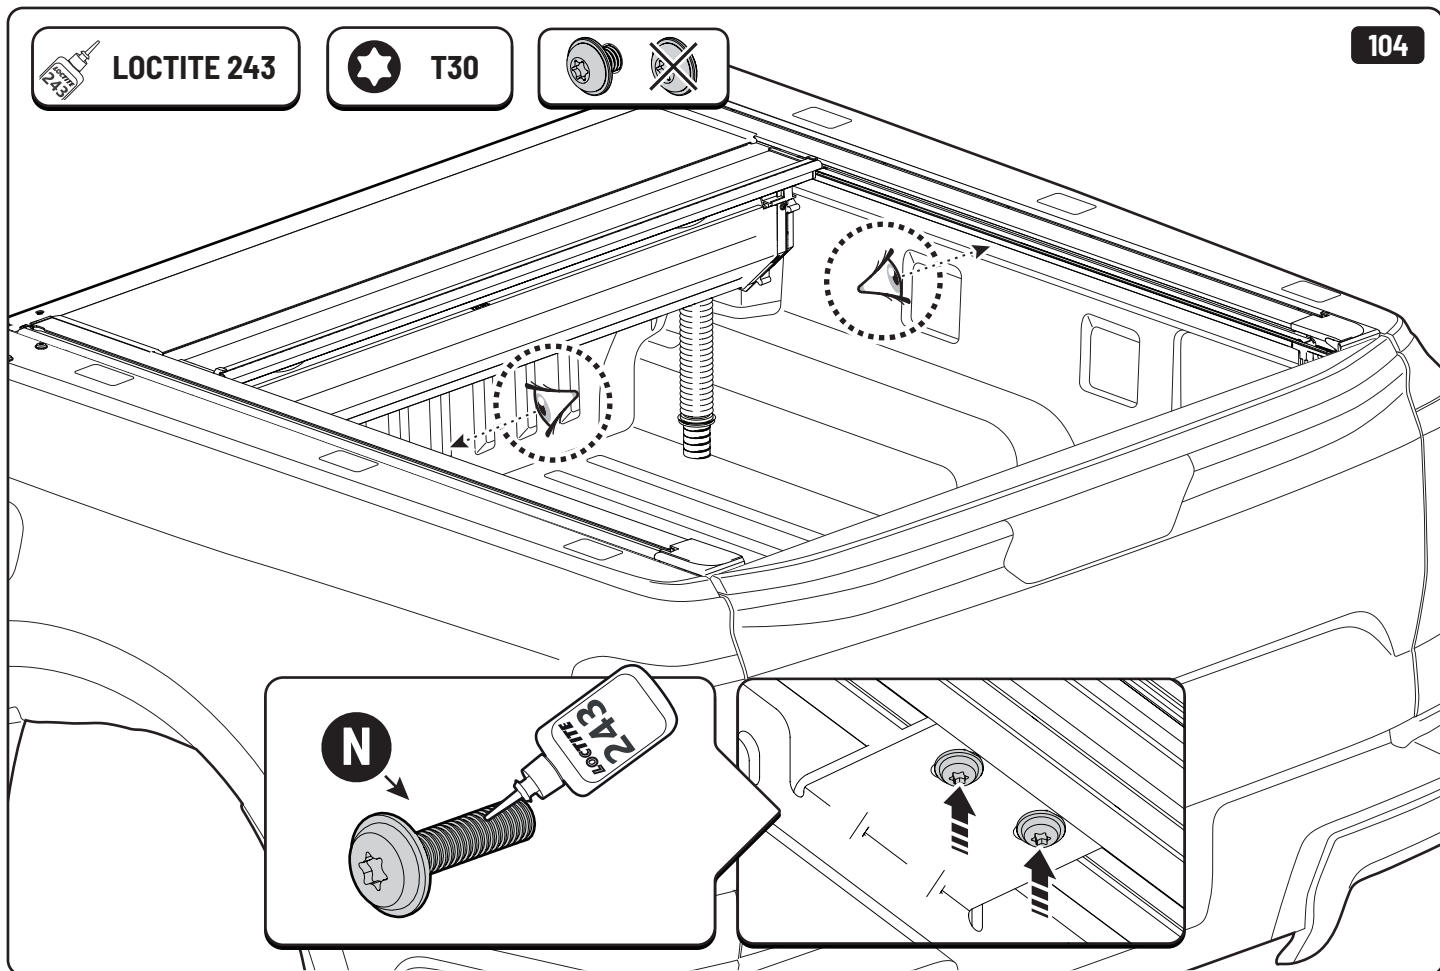

! ONLY FOR FORD RAPTOR / WILDTRAK



105

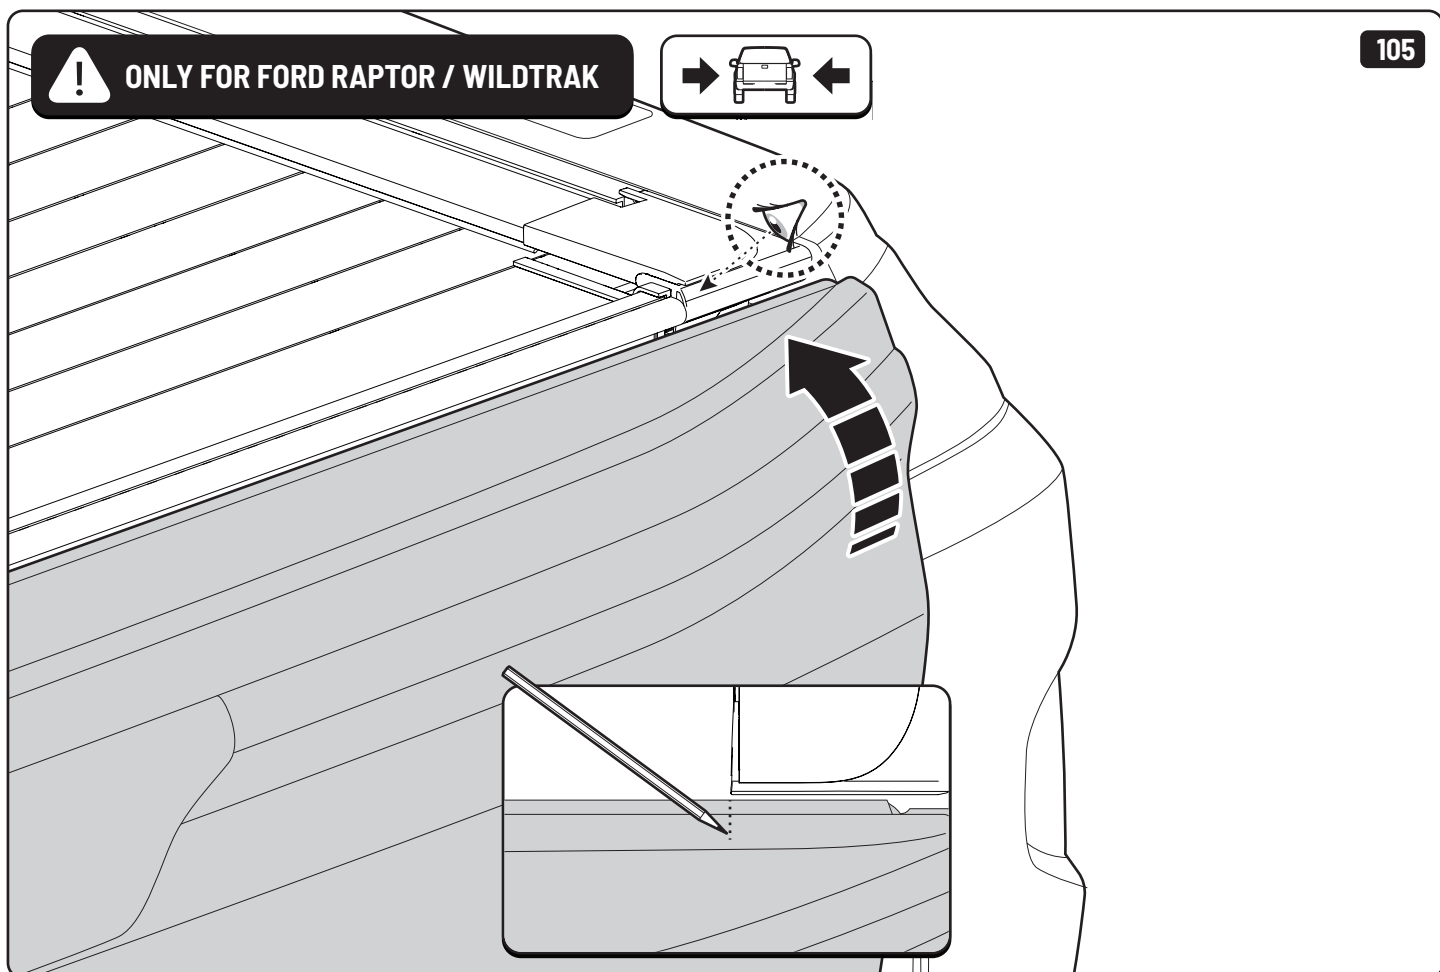





ONLY FOR FORD RAPTOR / WILDTRAK






106

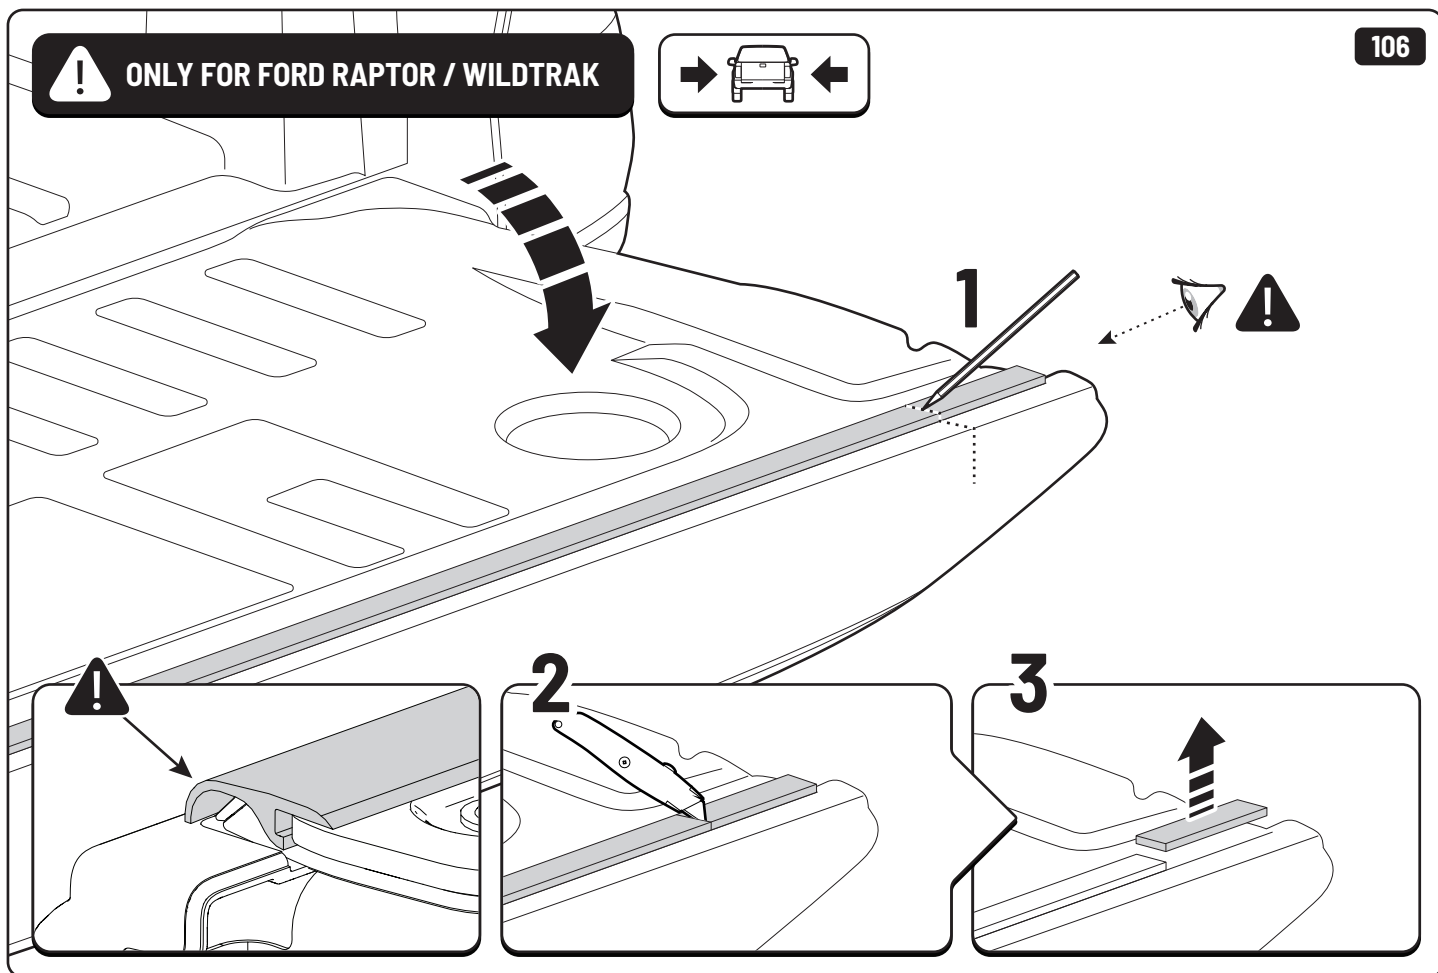

107

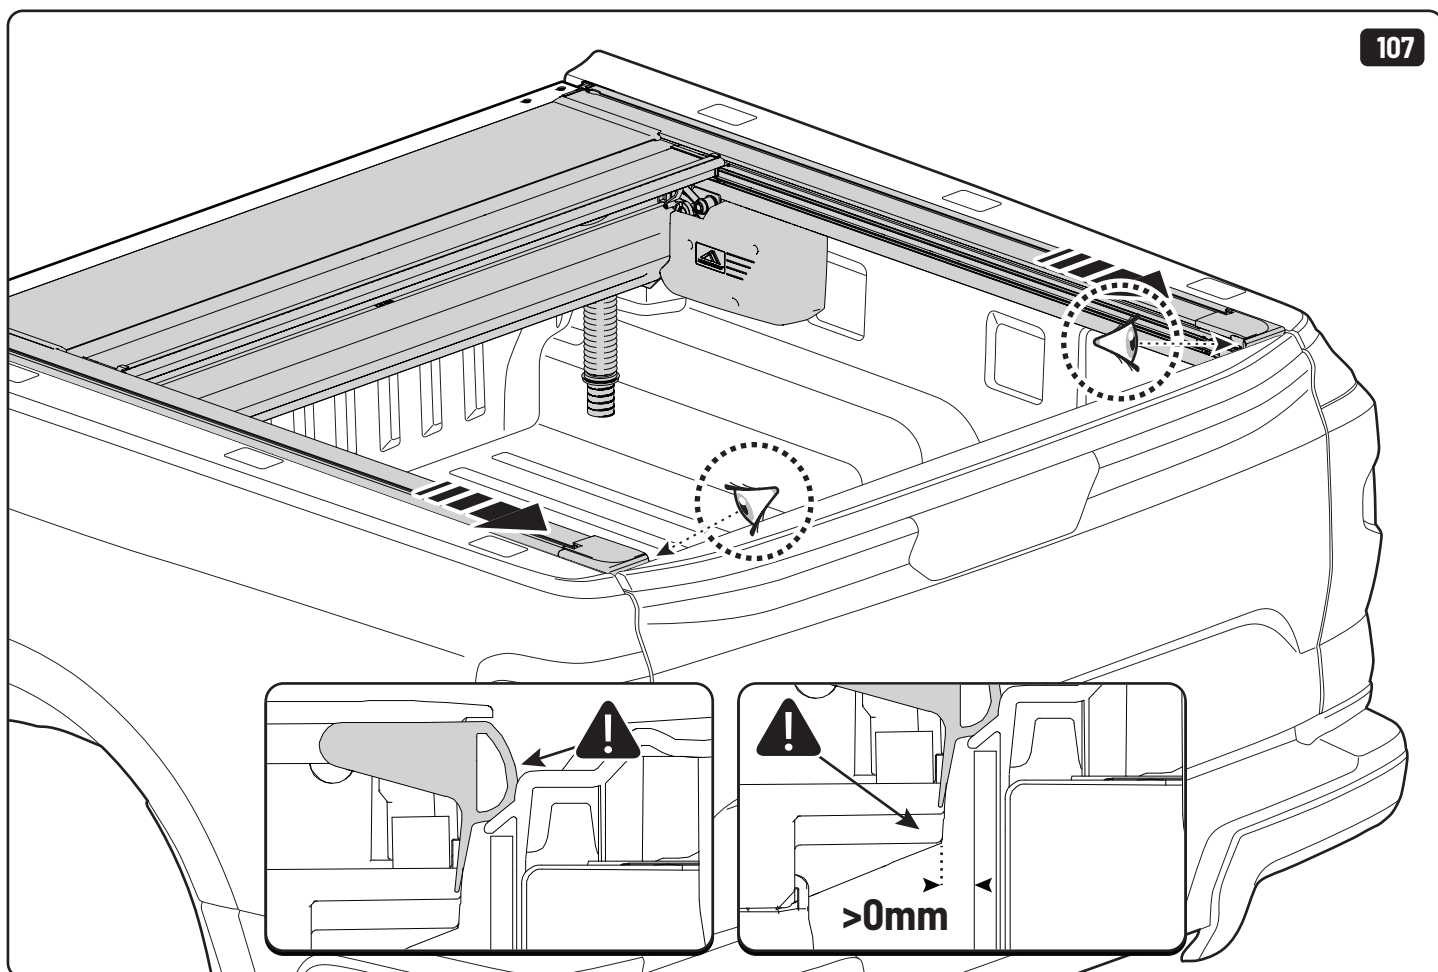


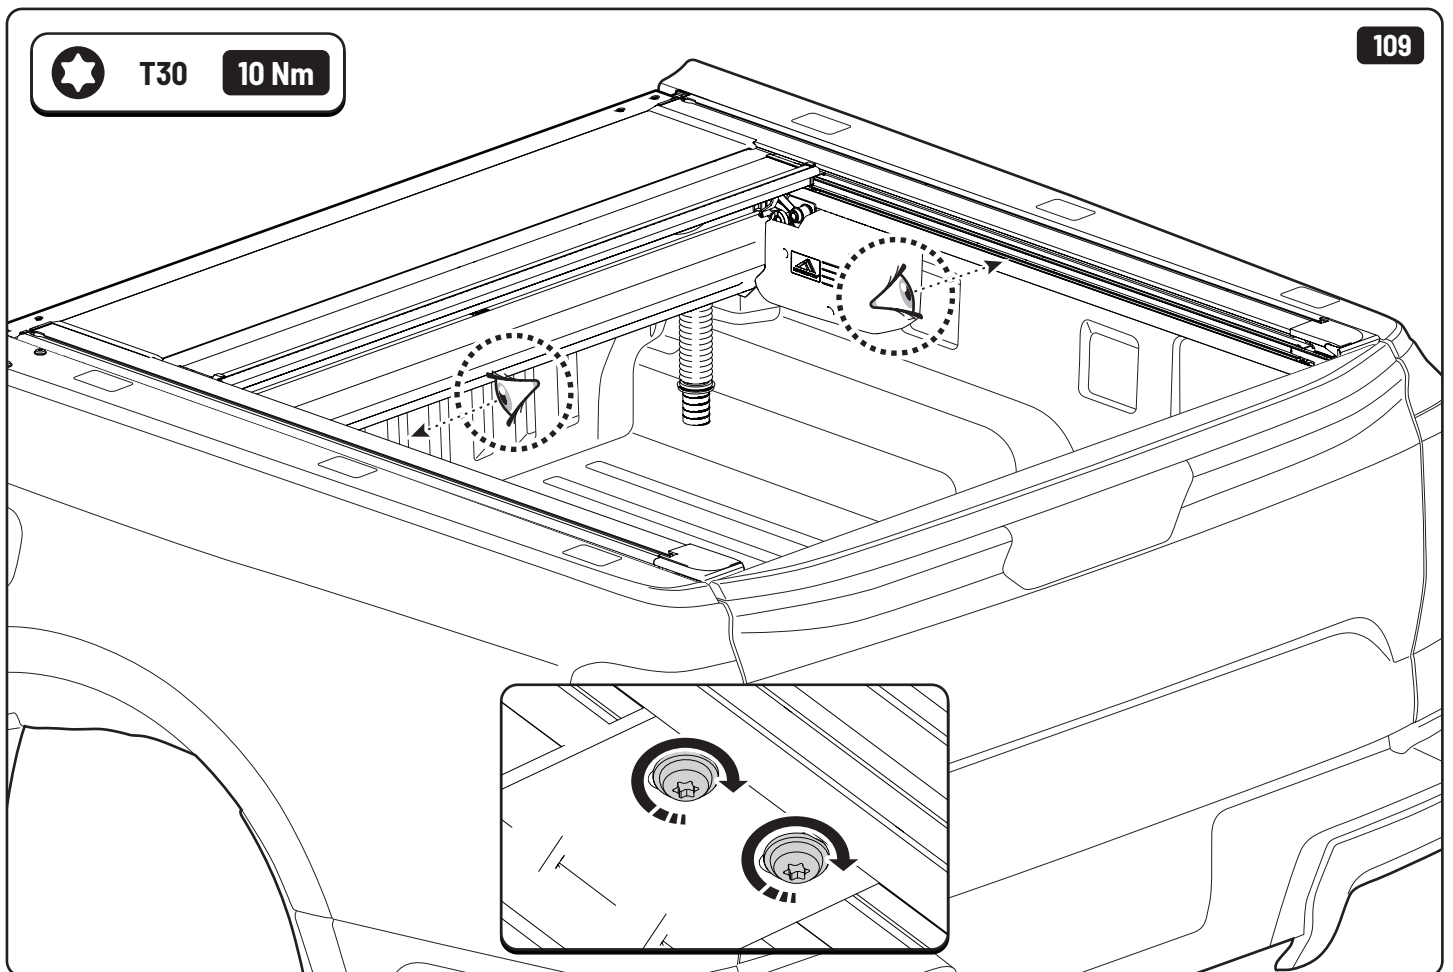
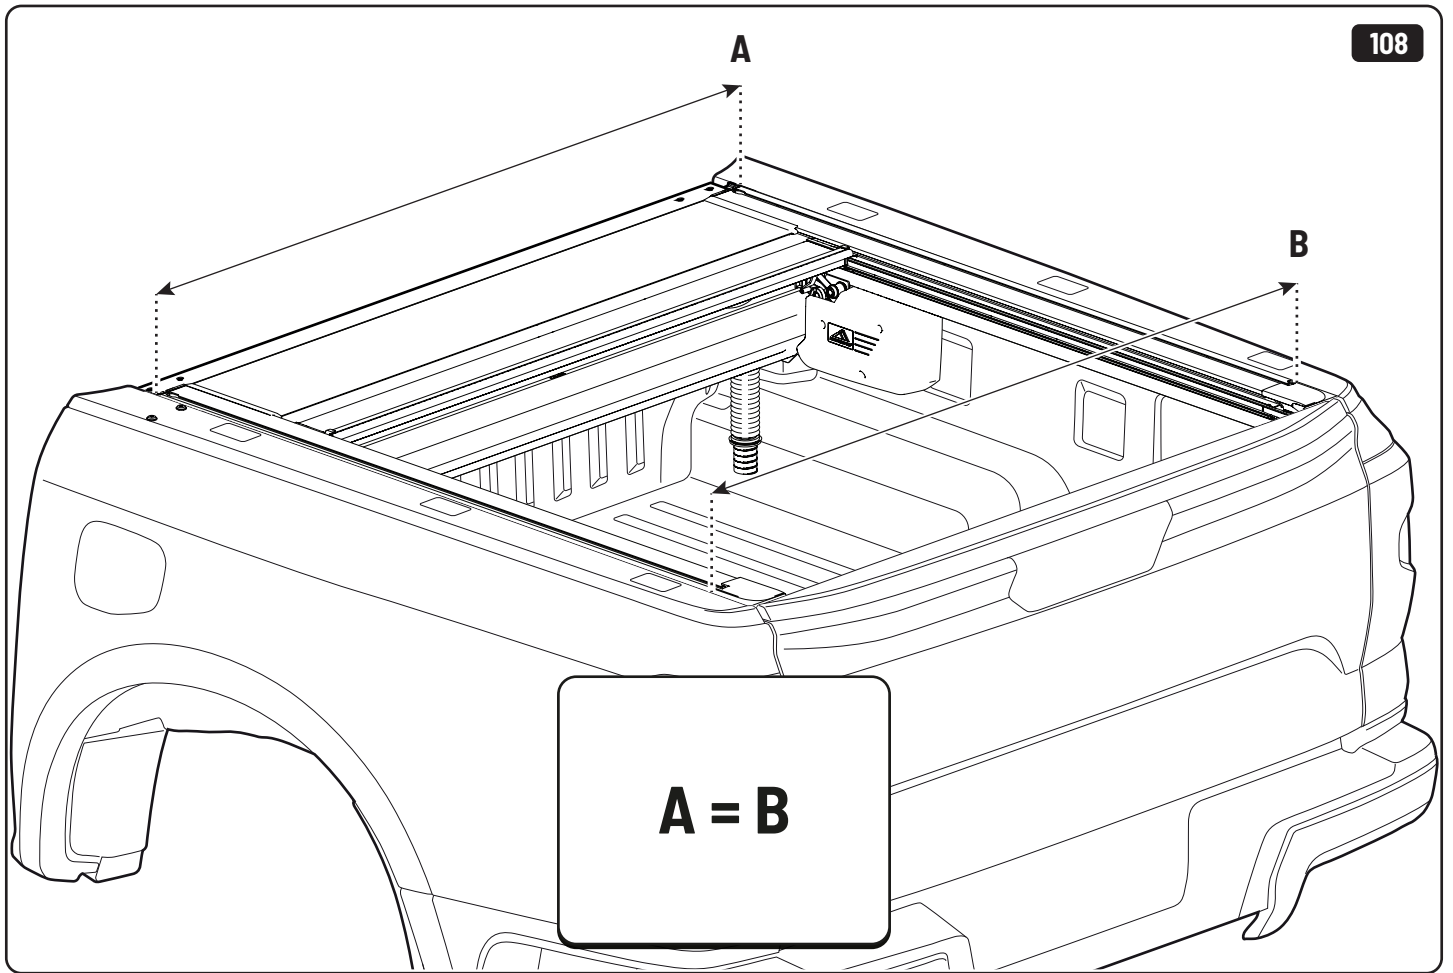



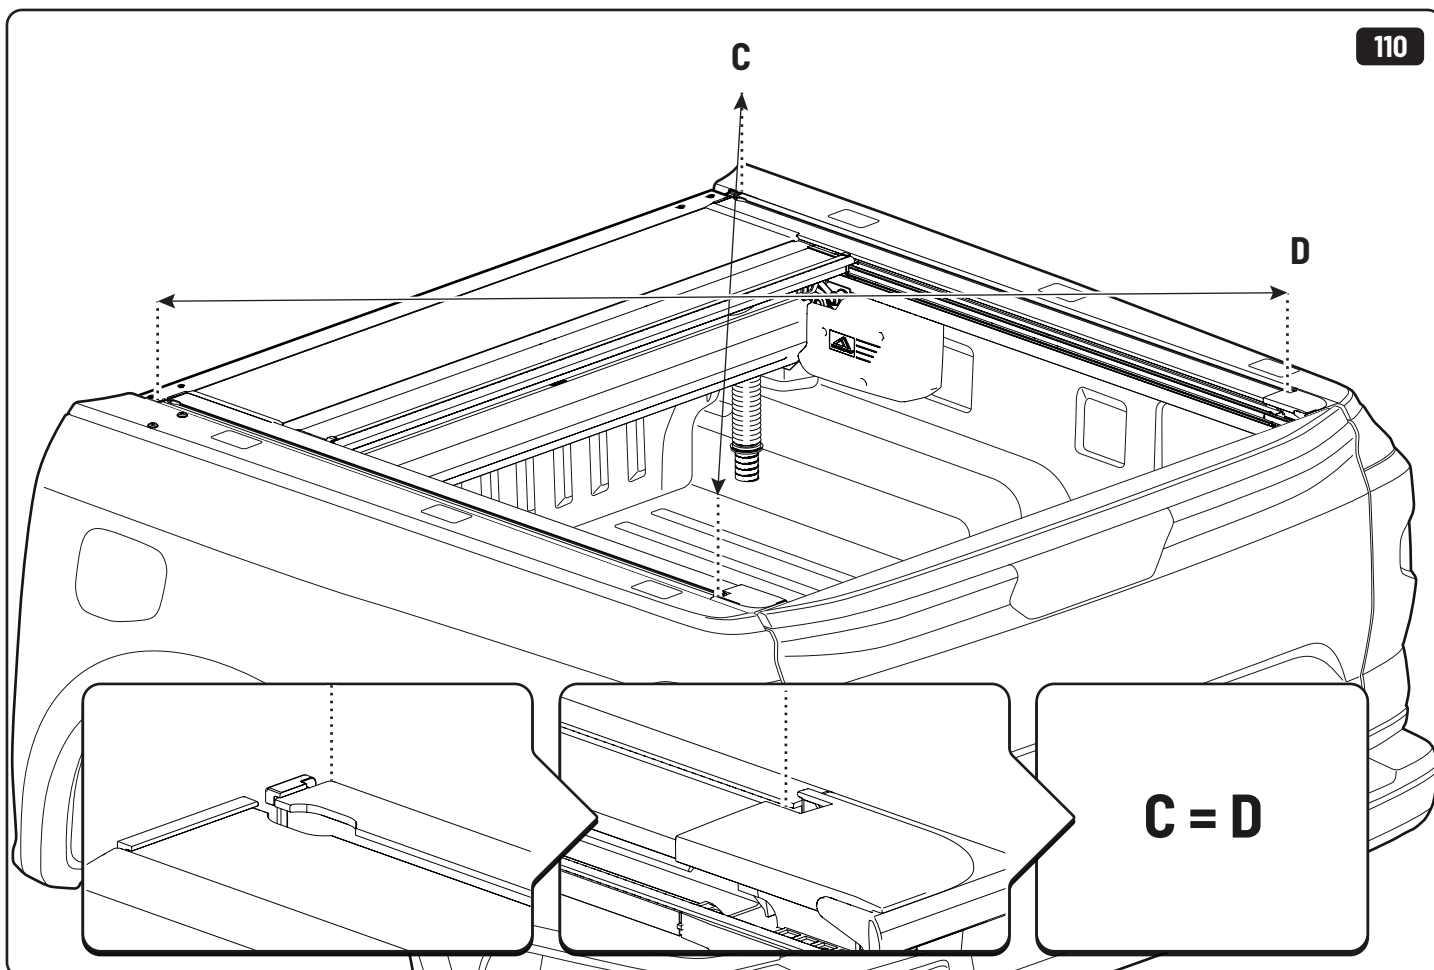



T30





4,8 Nm


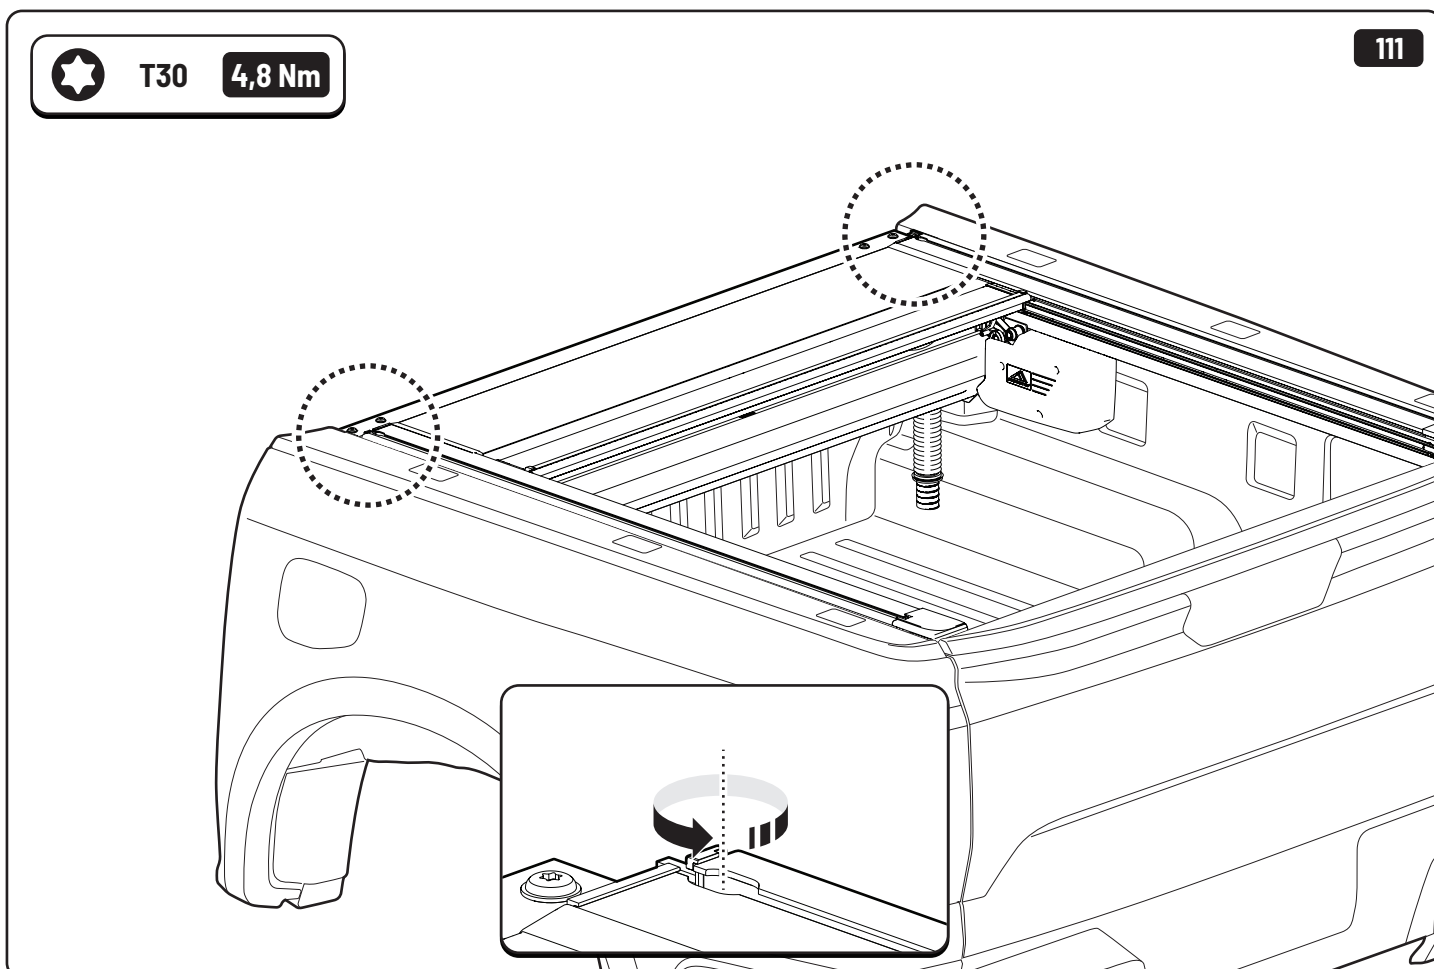


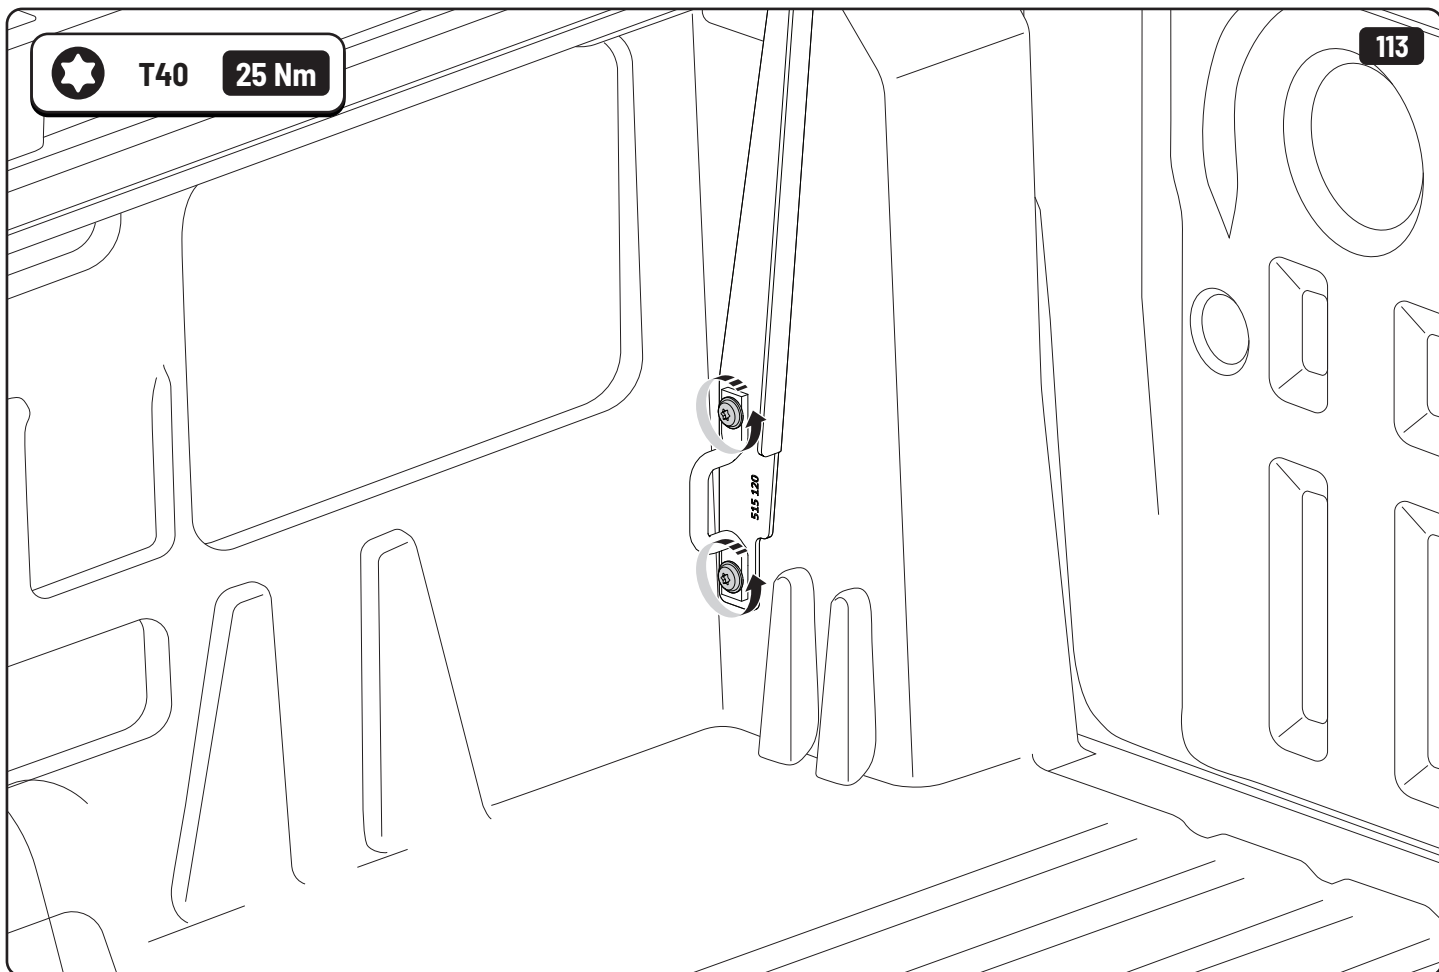
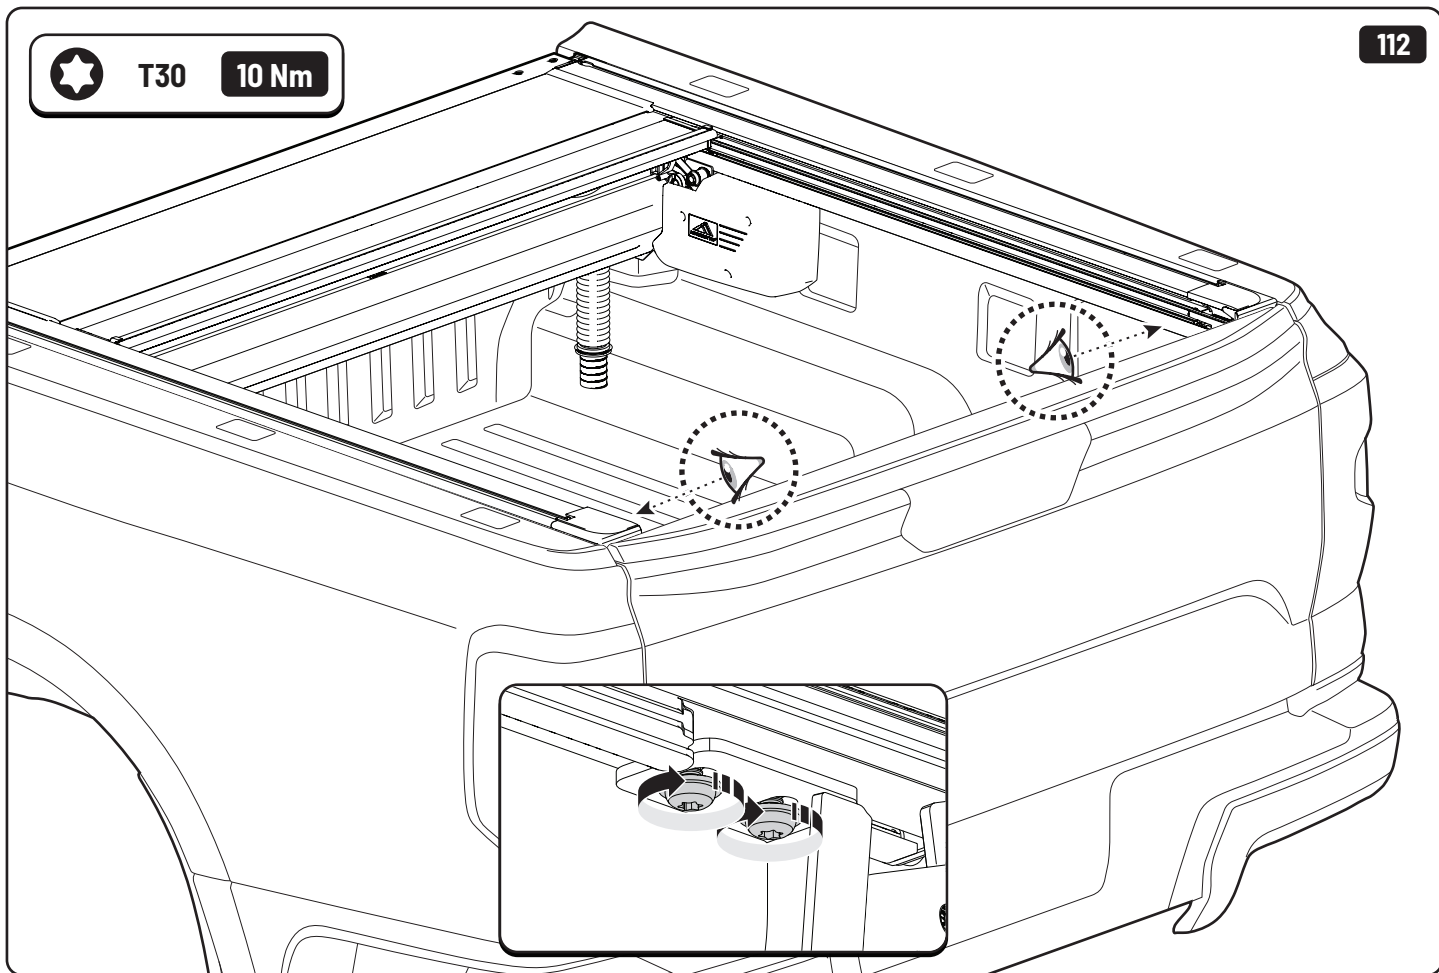



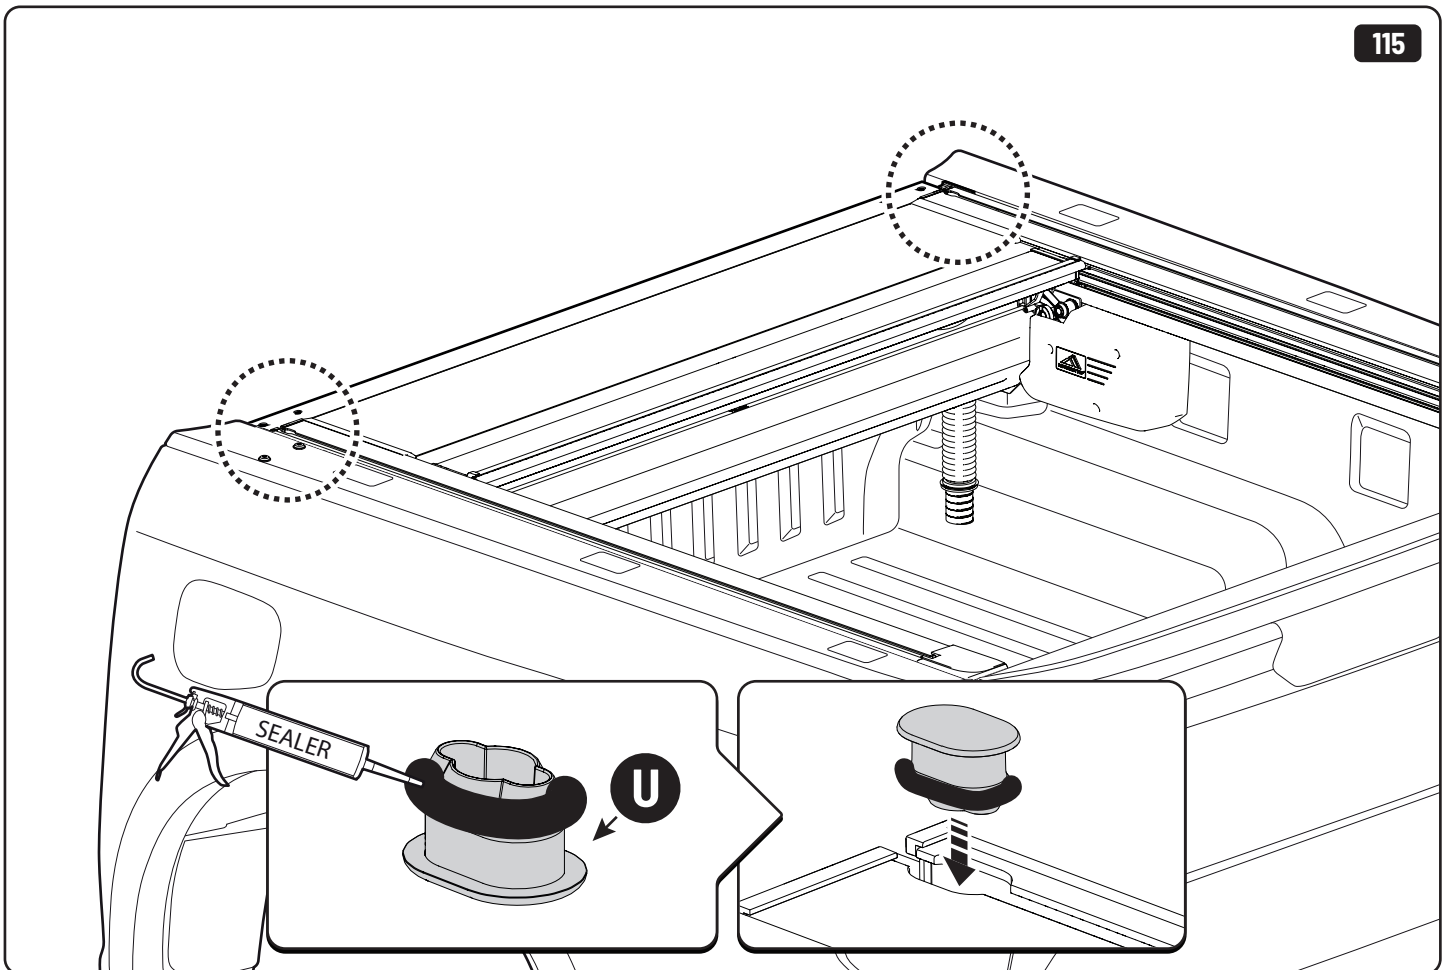
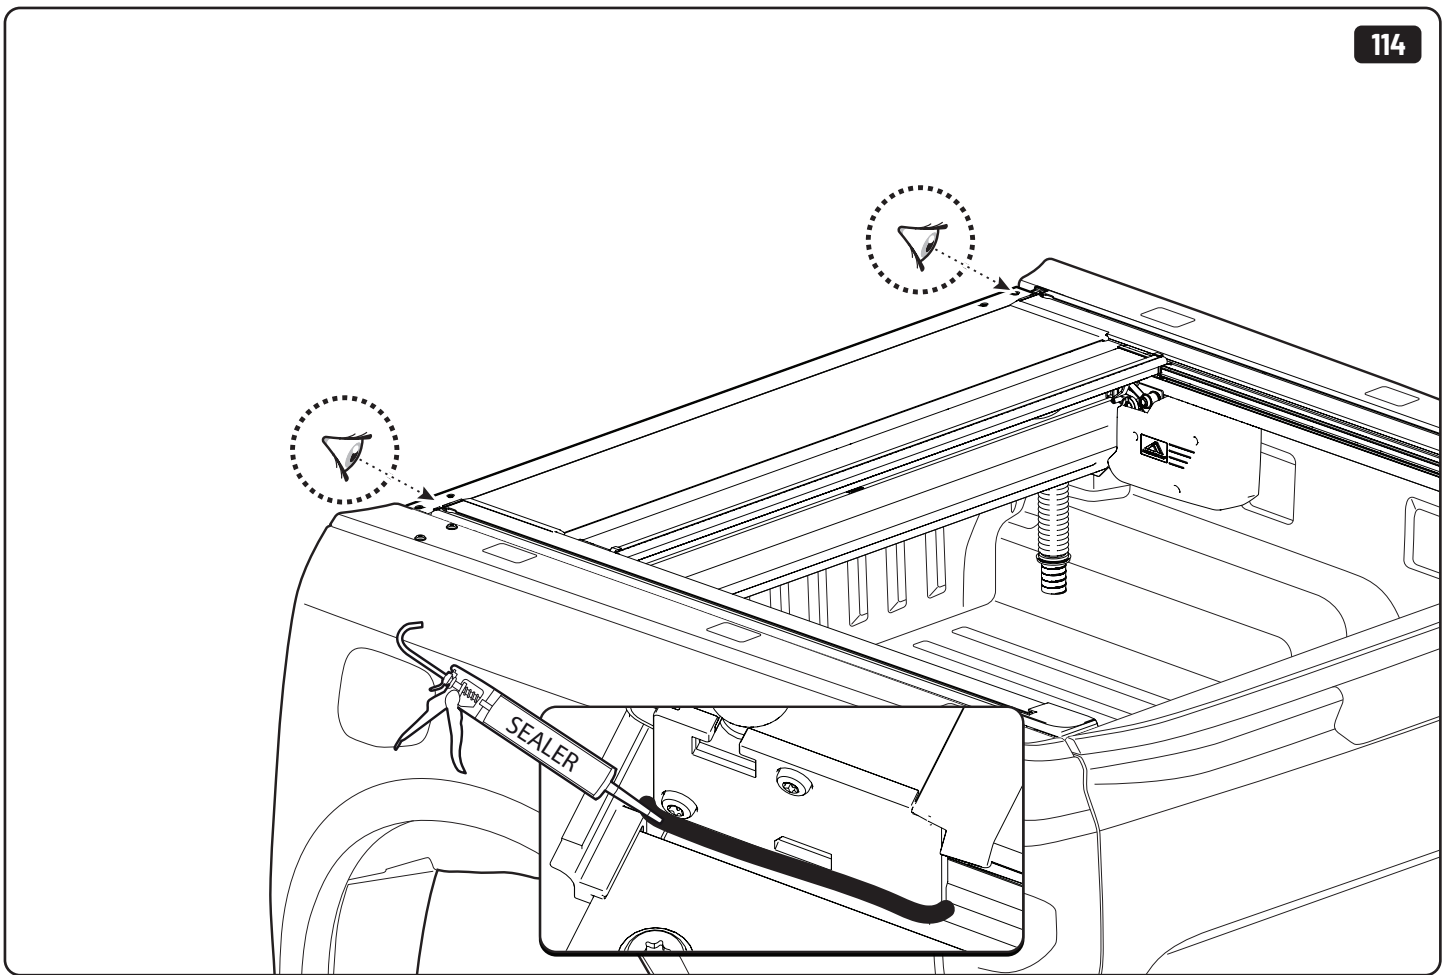



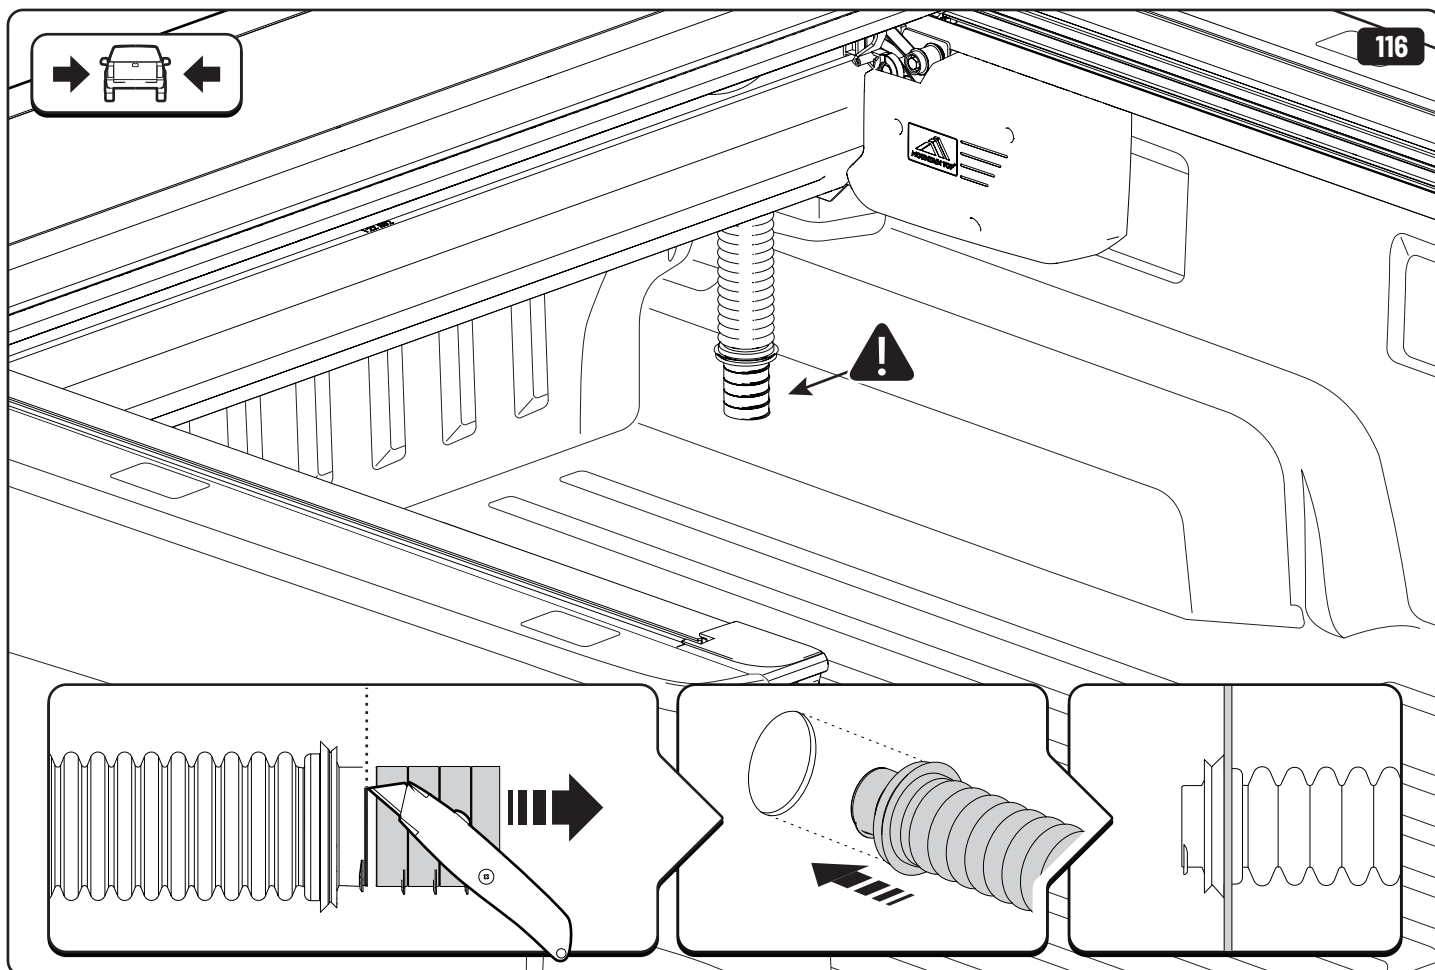


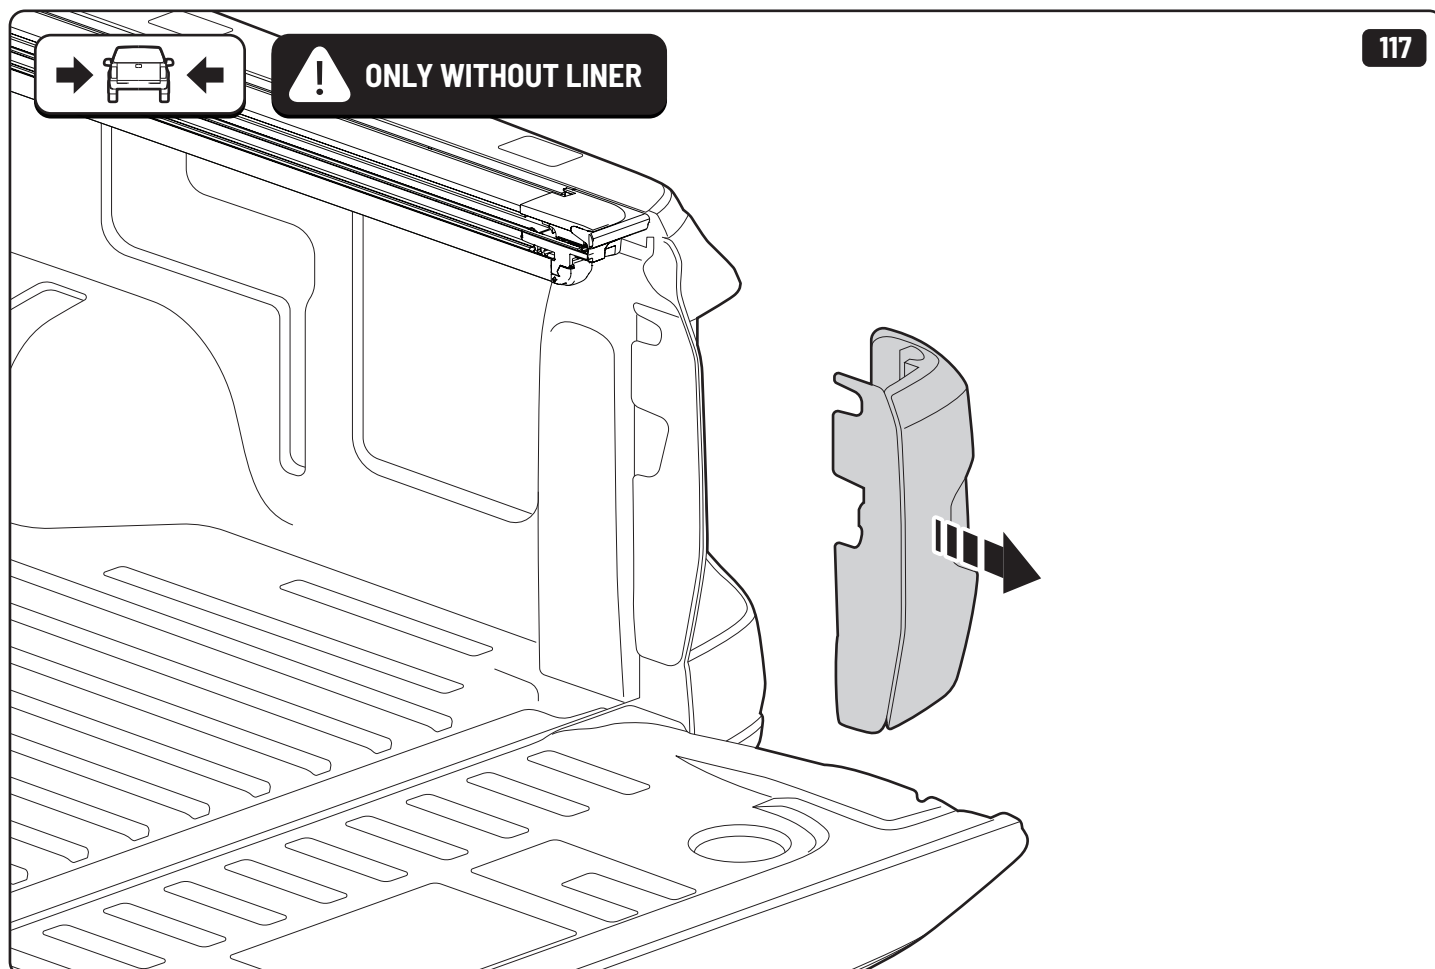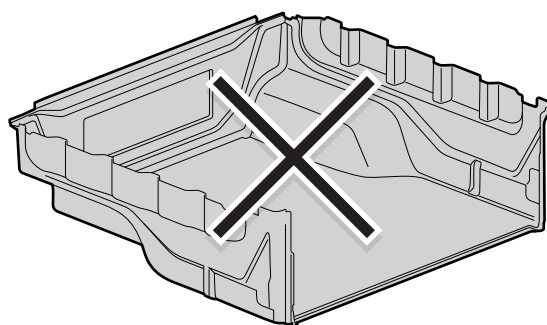
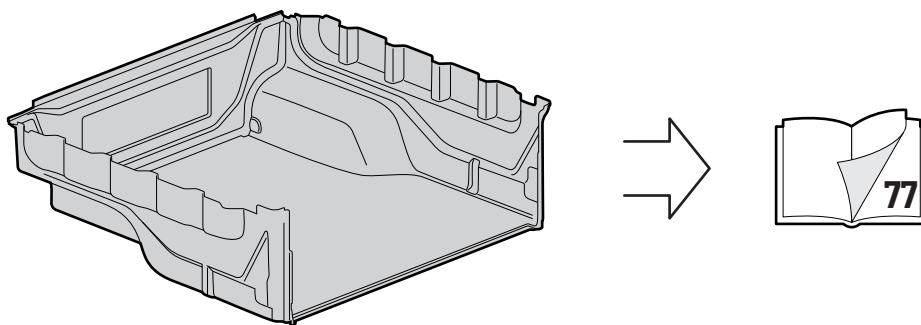


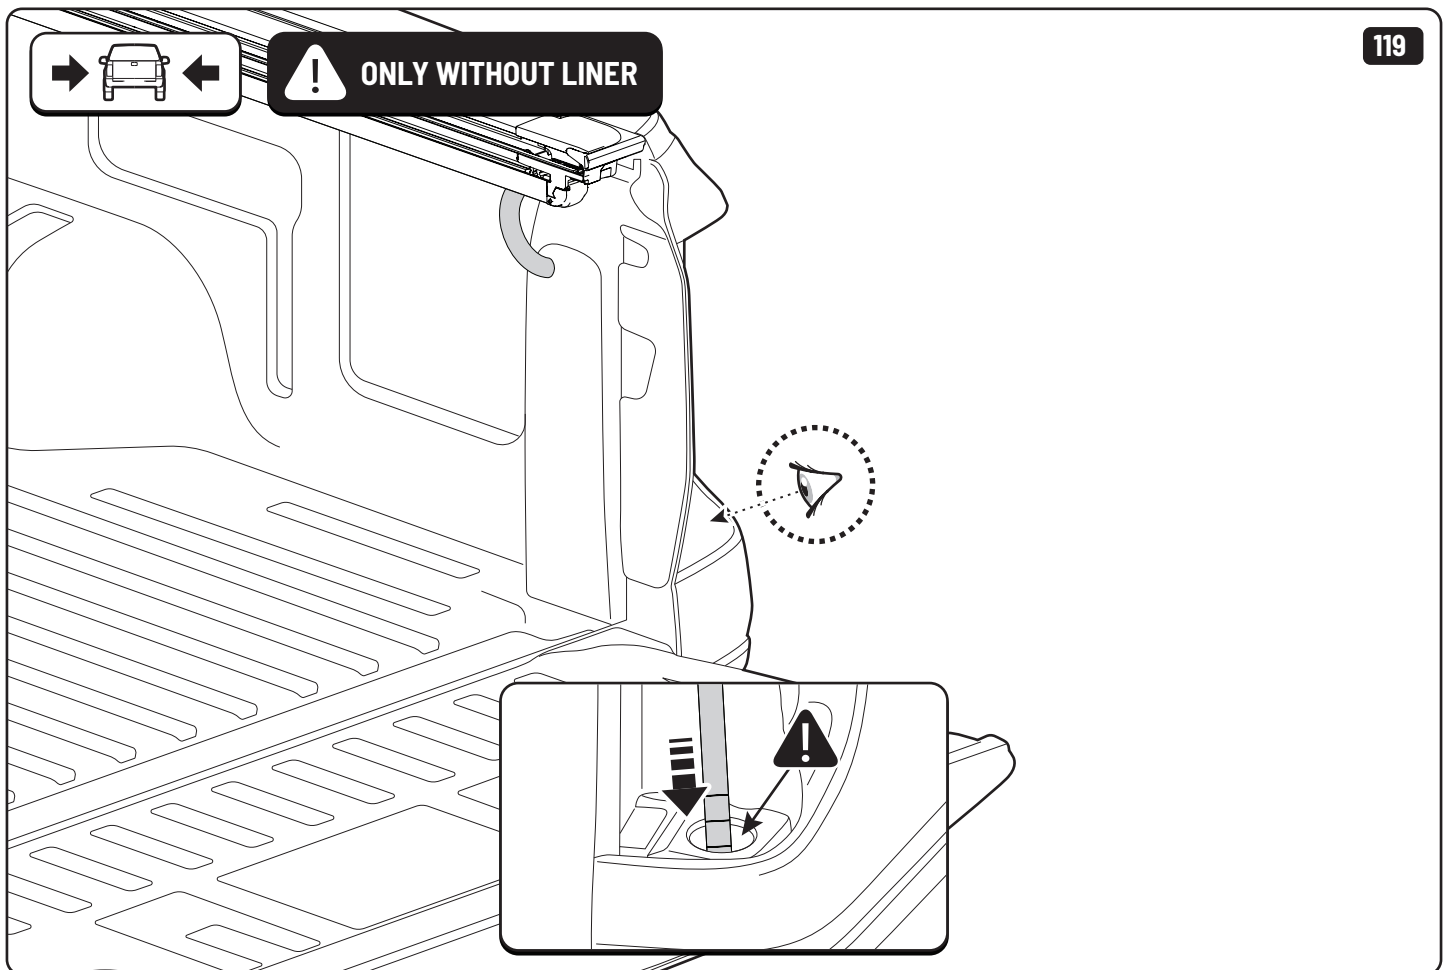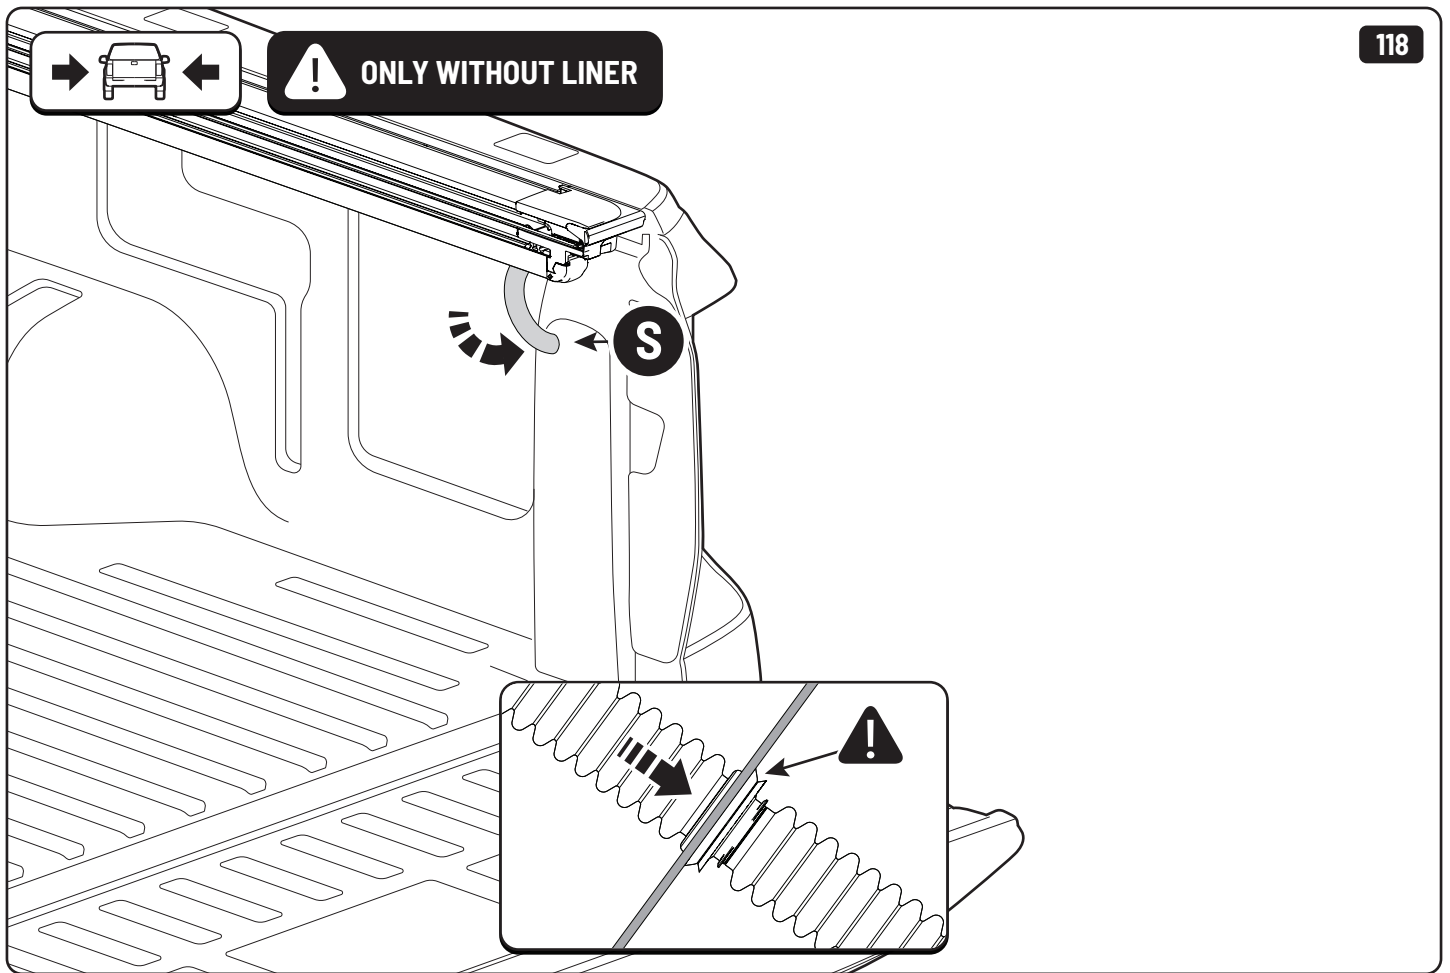


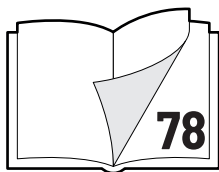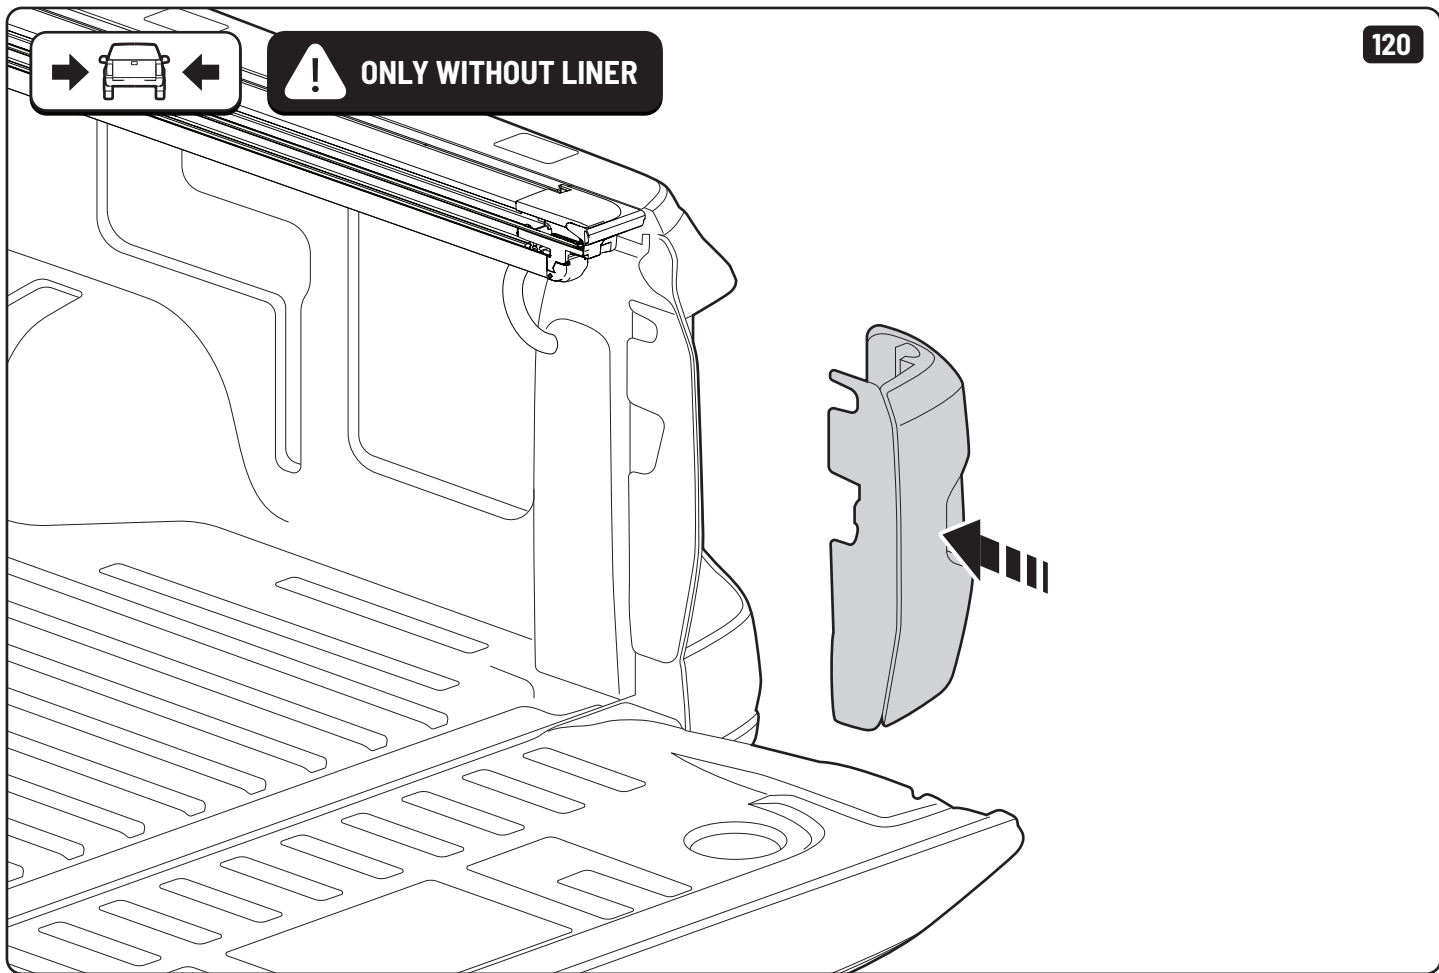

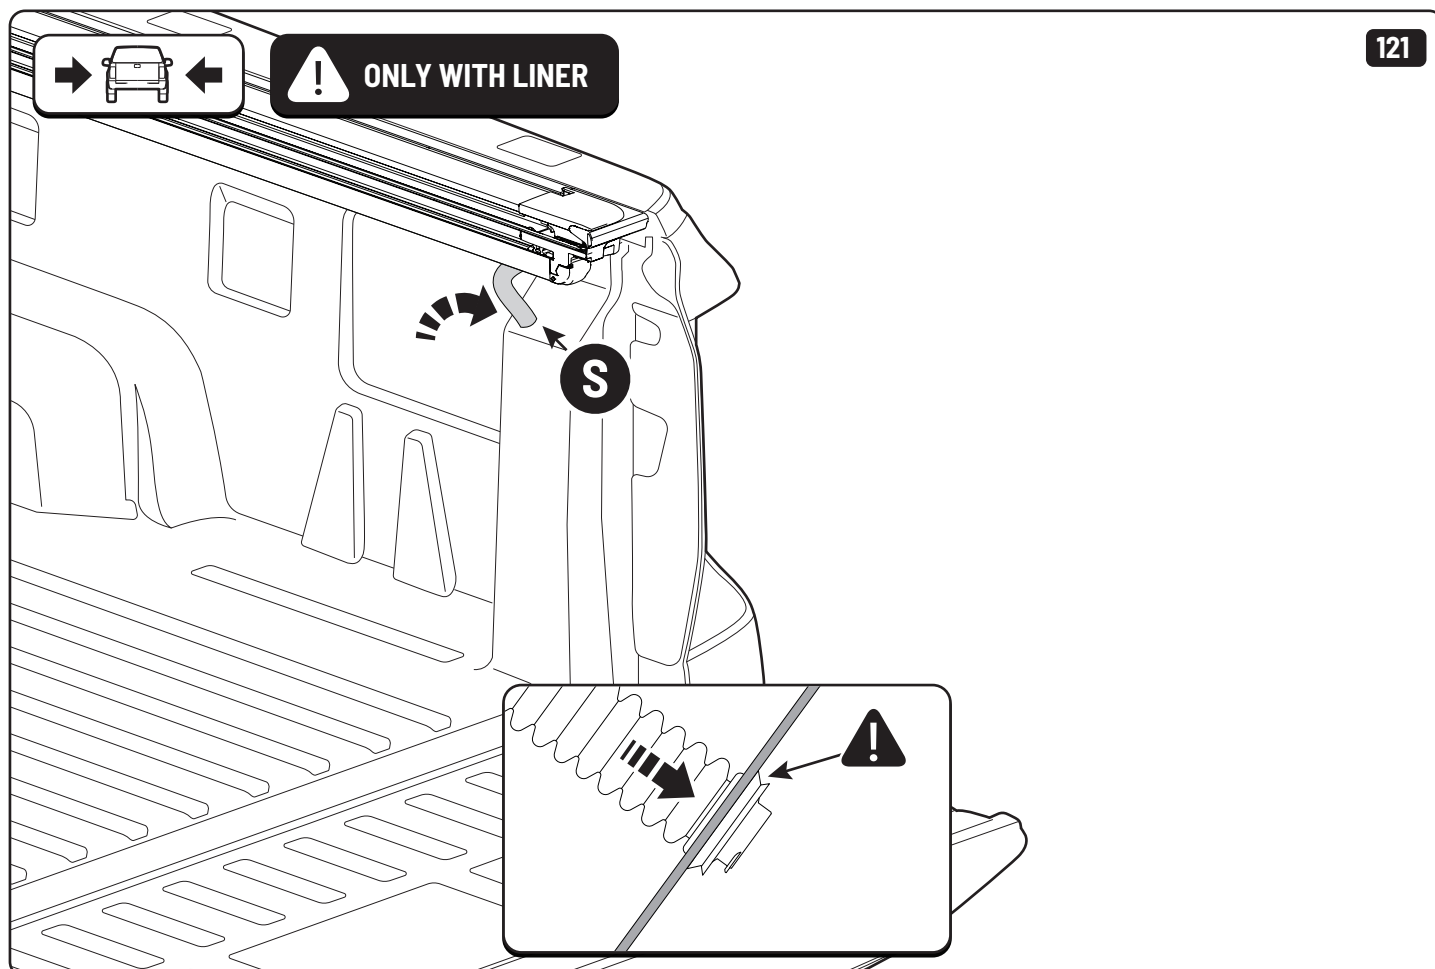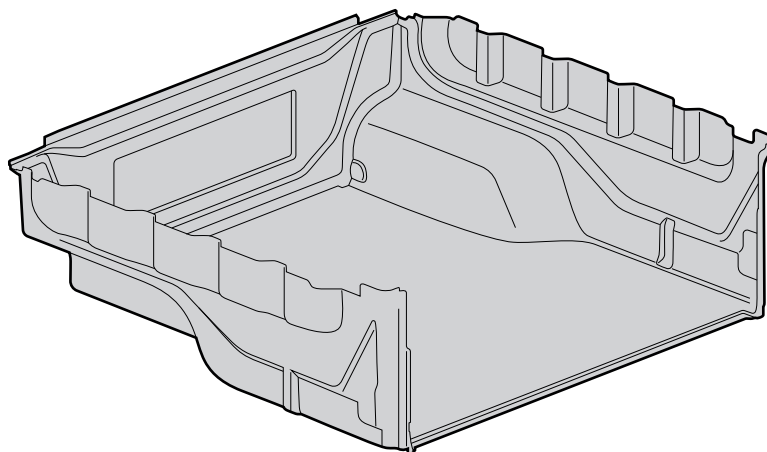

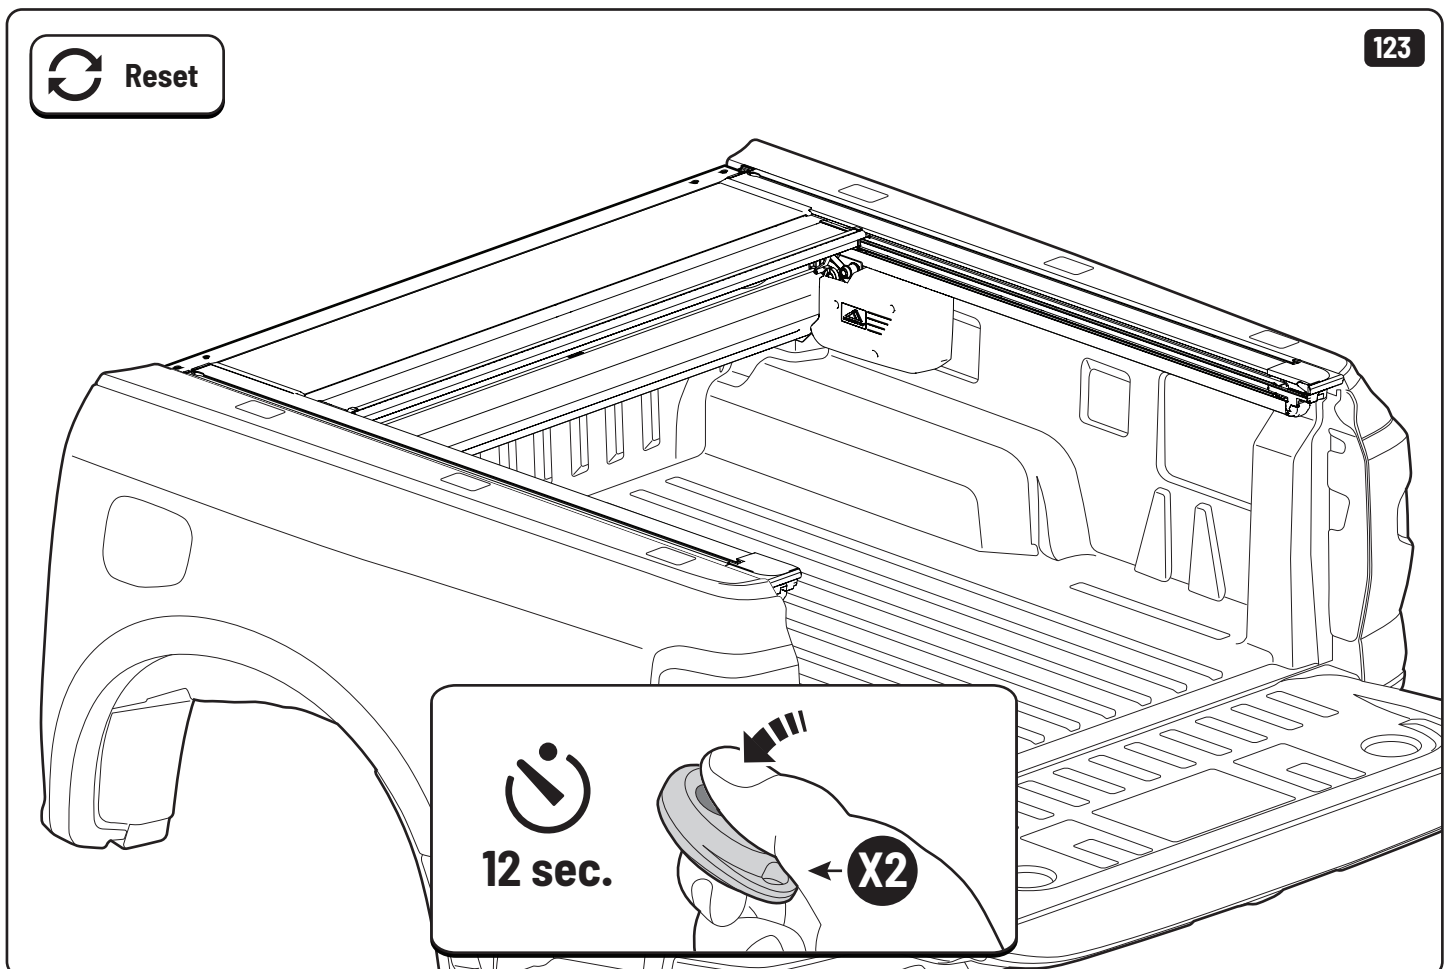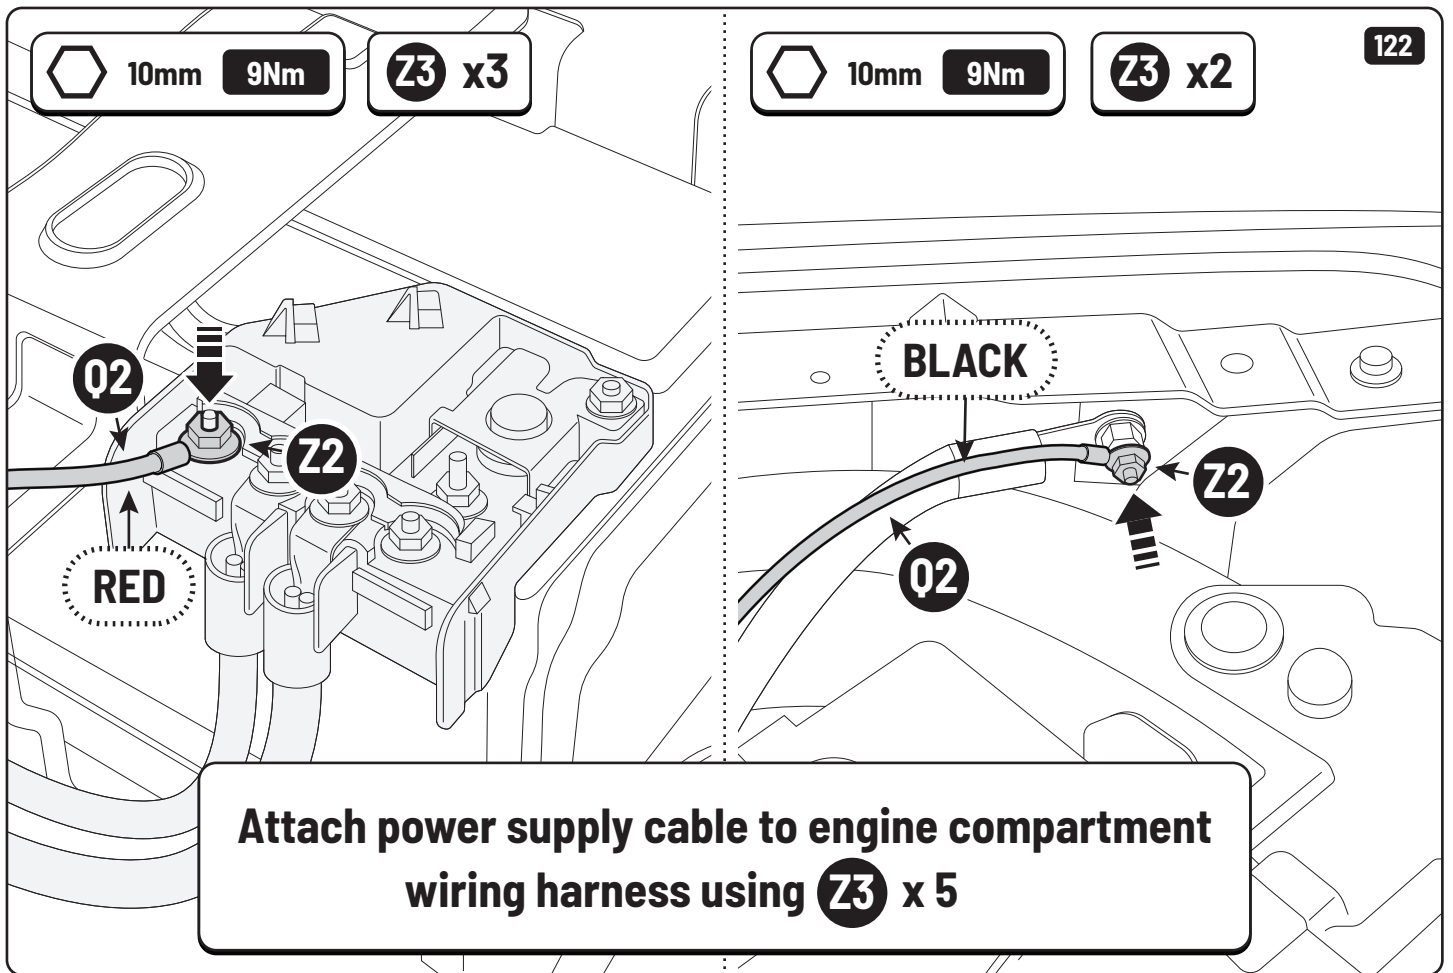

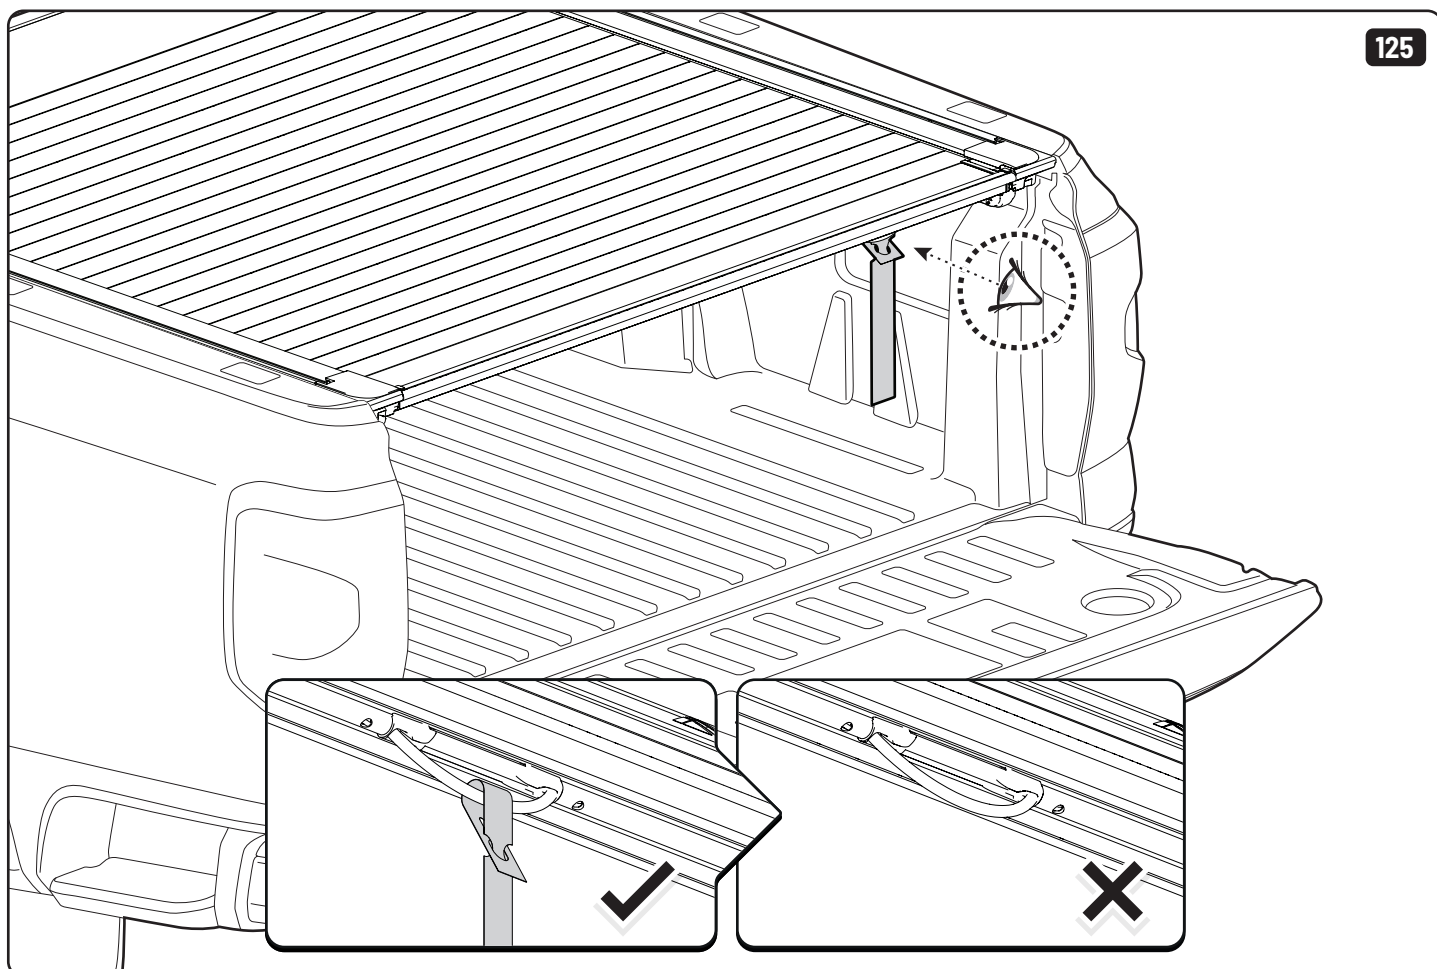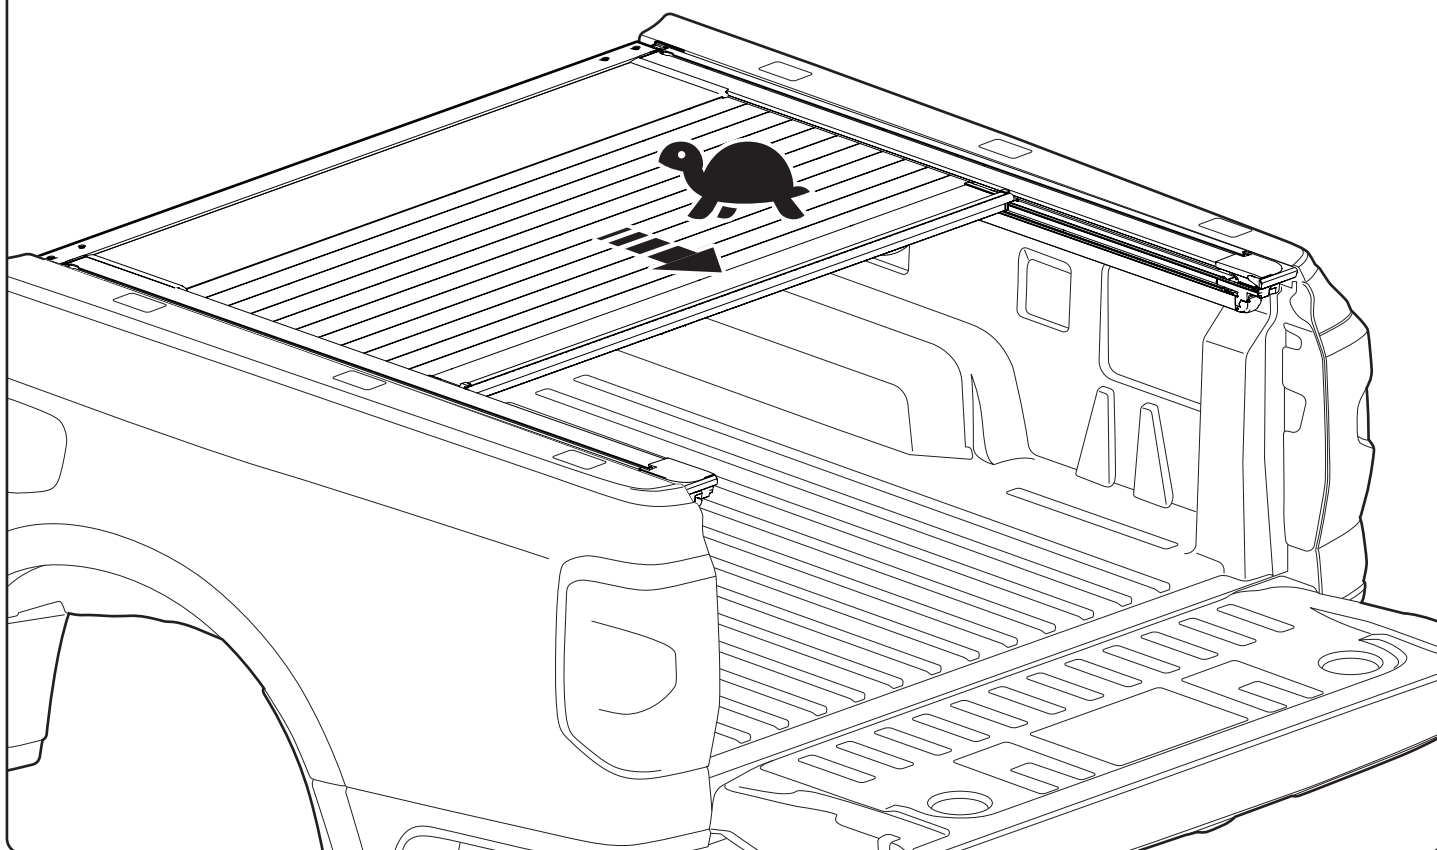

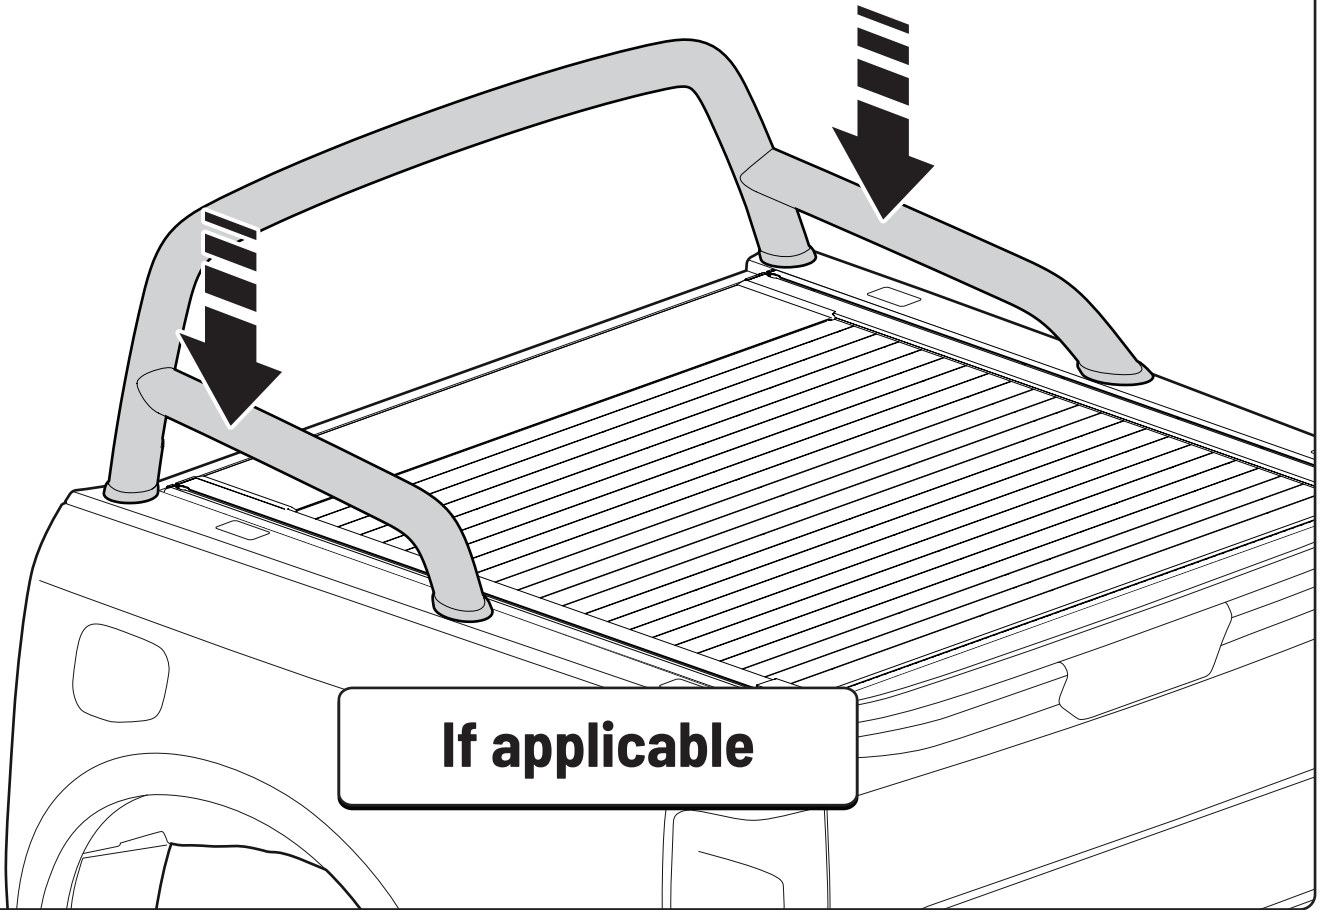



Steps	Page	Done by
Mounting gliding rail in canister	19-20	
Holes for drain	34-37 / 39-43	
Width + Cross measurement	69+70	
Tightening bracket screws	69-71	
Mounting drain	73+74-76 / 77	
Calibrate EVOe	78-79	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number(s)	Model / Year	Cab type (s)	Installation time	Weight
EV0e F010 HB02	Ford Ranger/ 2022 ->	Double Cab	2 hour (s)	33 kg
EV0e F011 HB02	Ford Ranger/ 2022 ->	Rap Cab	2 hour (s)	40 kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni di montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare