

Ford Wildtrak

Red Rock Roll Cover
Installation instructions



Model Year: 2011 →

Part Number: RR RC FO90 H04 Double Cab (DC)
RR RC FO91 H04 Super Cab (SC)


⚖ Weight: 31 / 36 kg

⌚ Installation Time: 2 hr

GR	Installation instruction Mountain Top Roll	S	Monteringsanvisning Mountain Top Roll	RUS	Инструкция по установке Mountain Top Roll
D	Einbauanleitung Mountain Top Roll	SF	Asennusohje Mountain Top Roll	TR	Montaj Talimat Mountain Top Roll
E	Instrucciones de montaje Mountain Top Roll	CZ	Návod k instalaci Mountain Top Roll	RO	Instrucțiuni de instalare Mountain Top Roll
F	Notice de montage Mountain Top Roll	H	Szerelési utasítás Mountain Top Roll	NL	Instalatie-instructies Mountain Top Roll
I	Istruzioni di montaggio Mountain Top Roll	PL	Instrukcja montażu Mountain Top Roll	DK	Monteringsvejledning Mountain Top Roll
P	Instruções de instalação Mountain Top Roll	GR	Οδηγίες Εγκατάστασης Mountain Top Roll	N	Monteringsvejledning Mountain Top Roll

Ford Wildtrak


Red Rock Roll Cover
Installation instructions

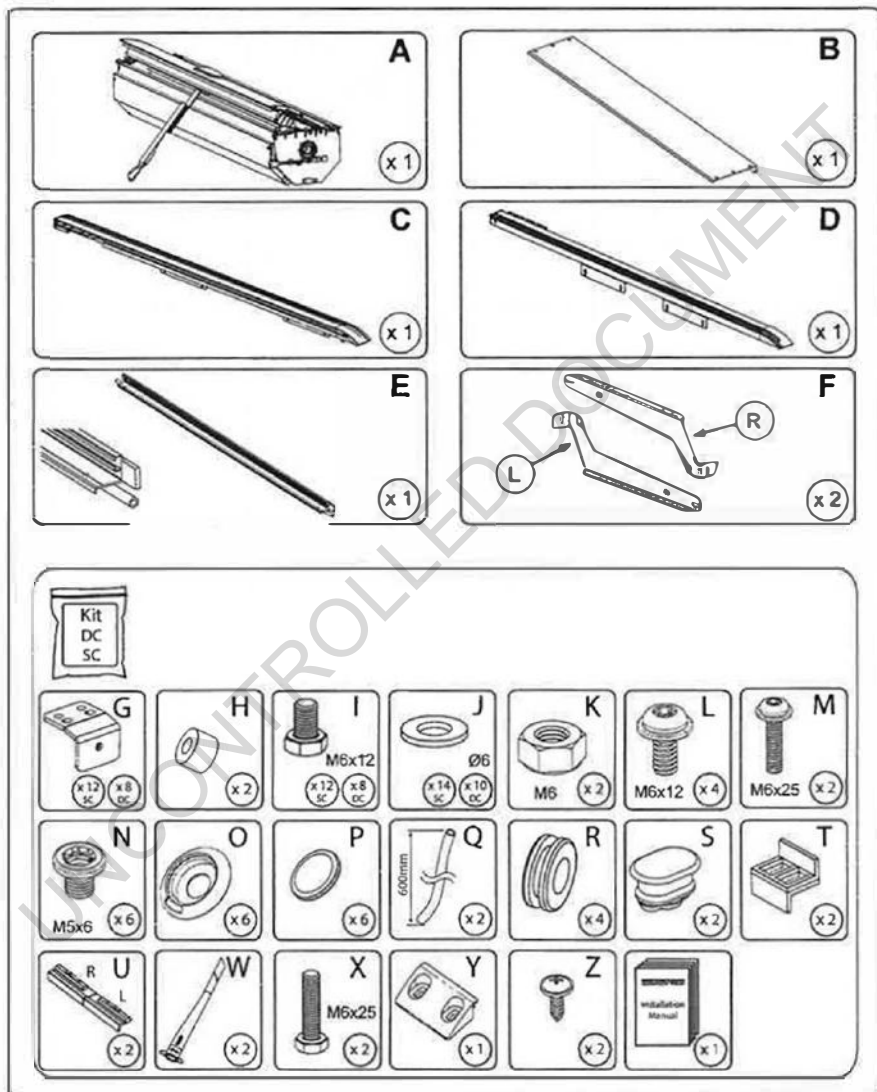

Ford Wildtrak


Red Rock Roll Cover
Installation instructions

REDROCK
DIRECT.COM.AU

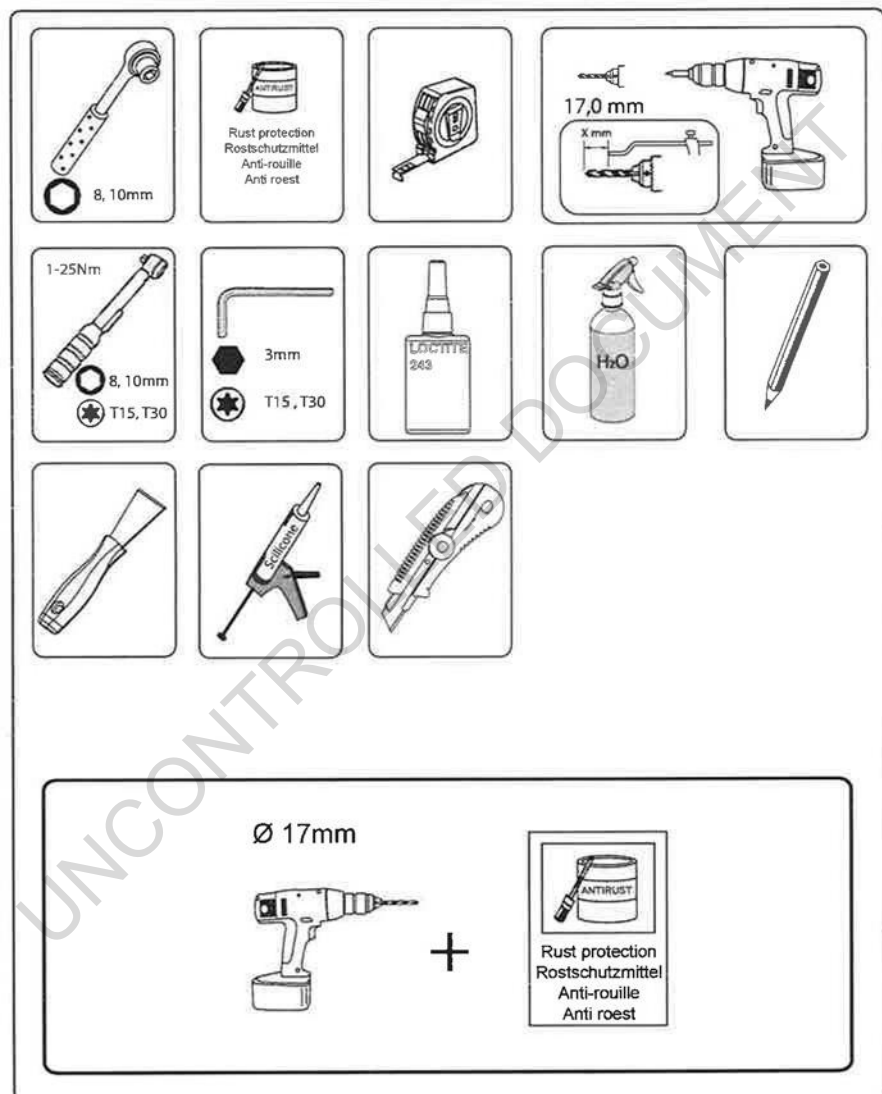


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

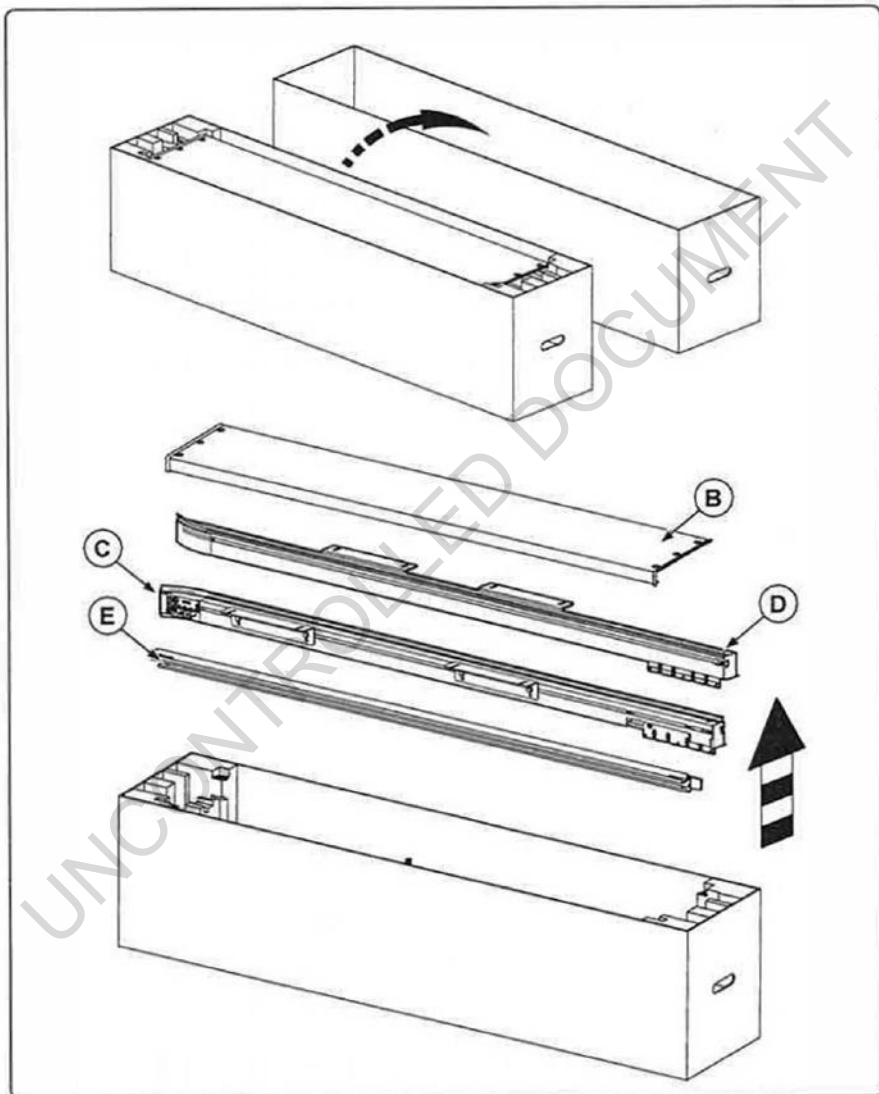

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

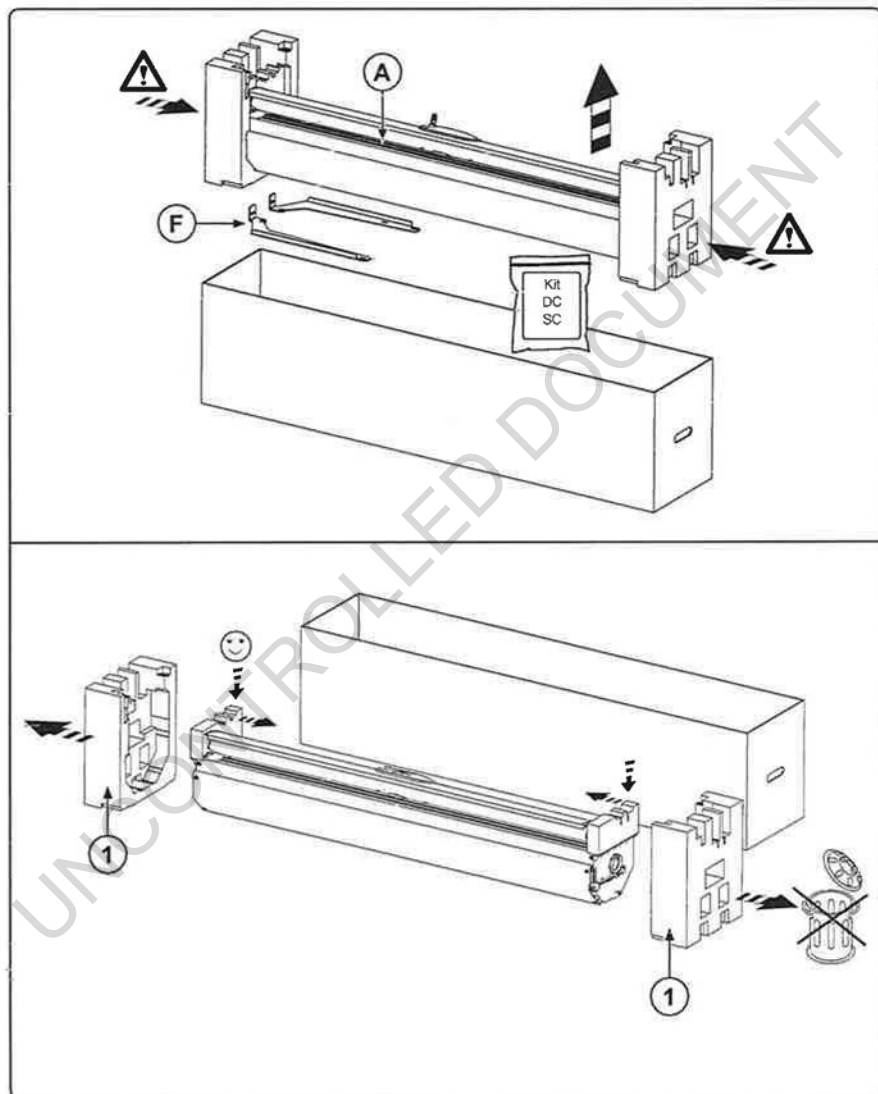

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 5/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringsvejledninger\886 019.PDF


Ford Wildtrak

Red Rock Roll Over
Installation instructions

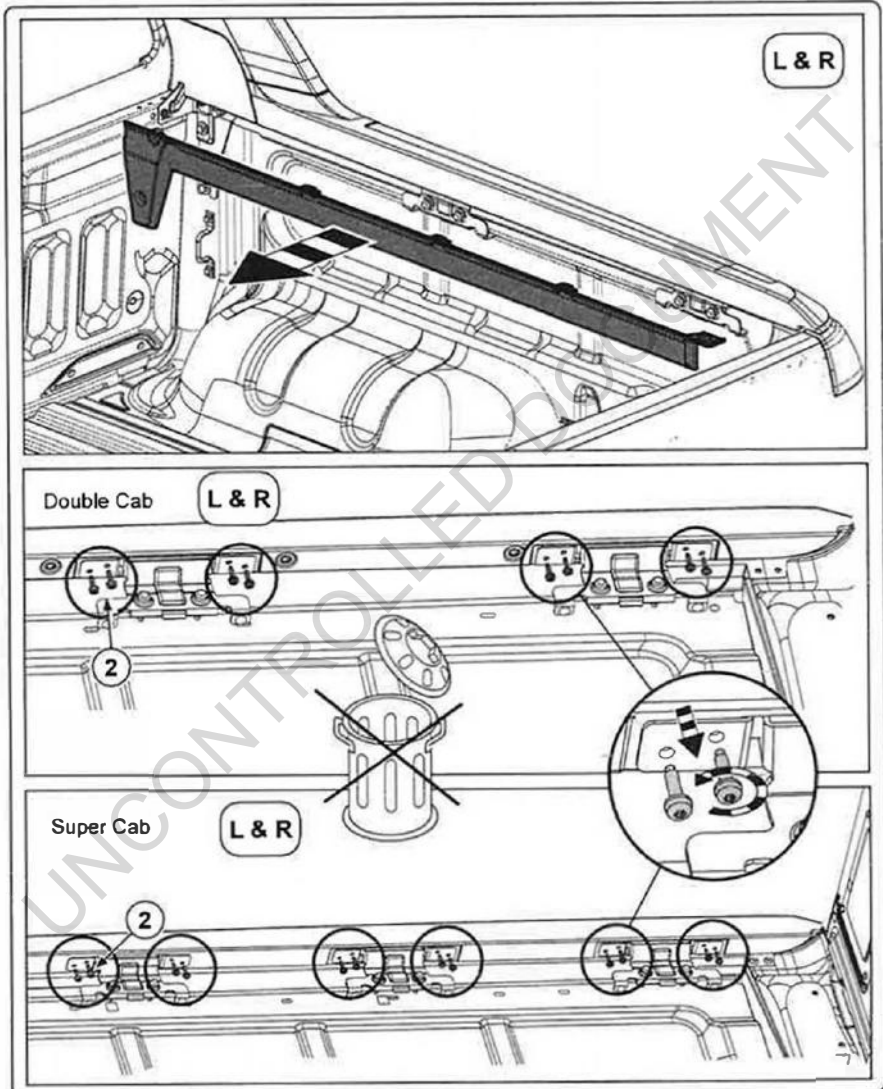

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

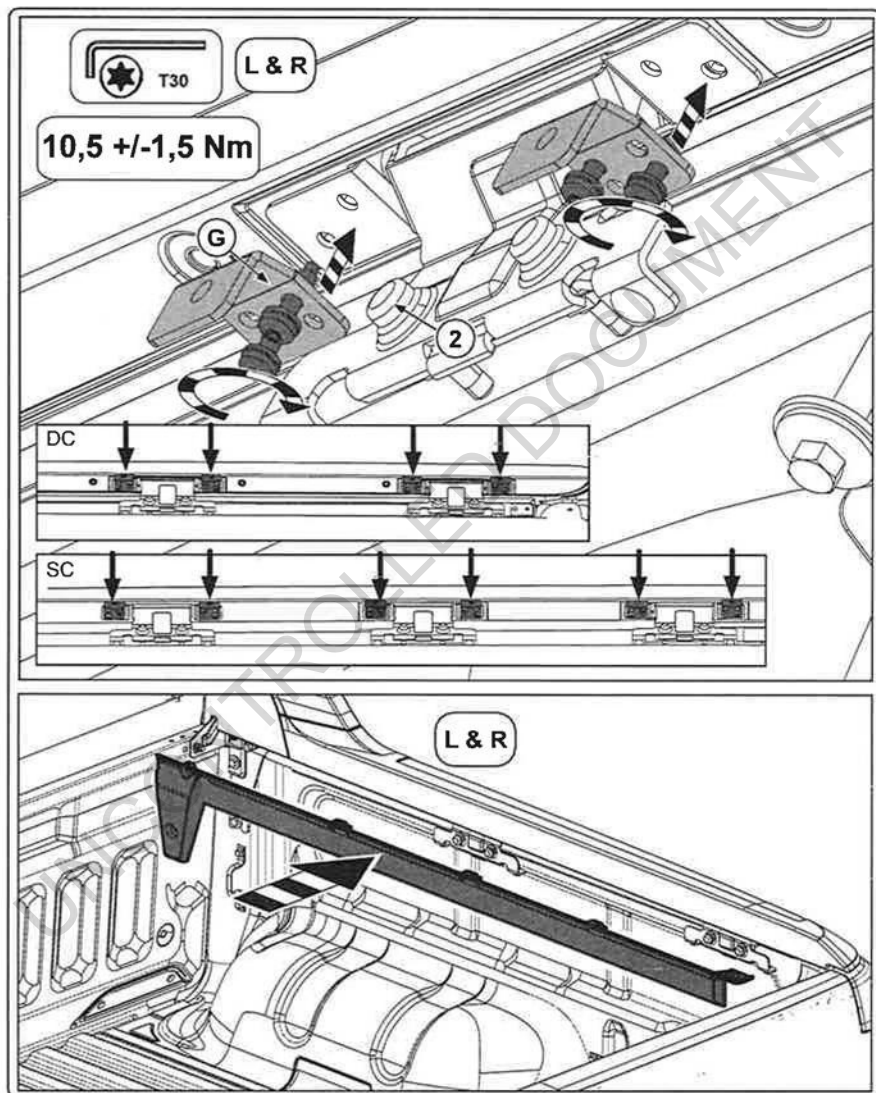

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04



Page 7/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringvejledning\886 019 PDF

Ford Wildtrak




Red Rock Roll Over
Installation instructions

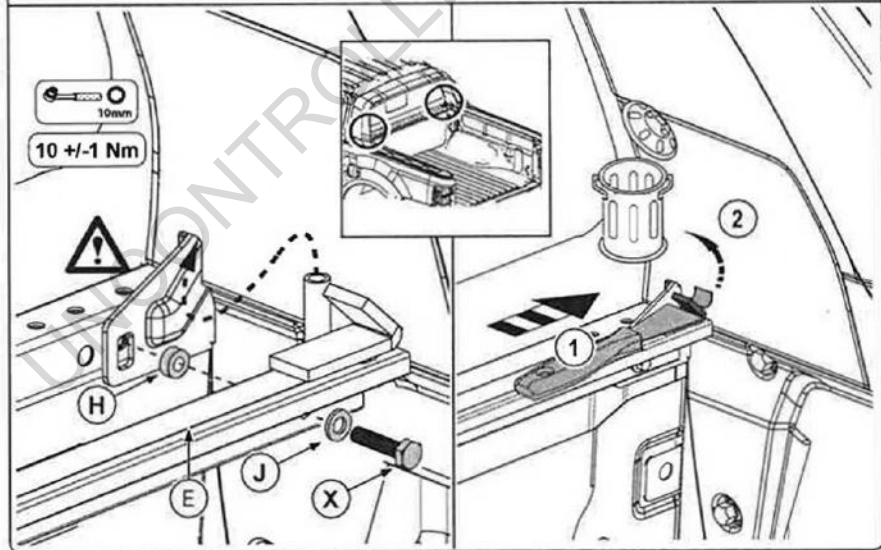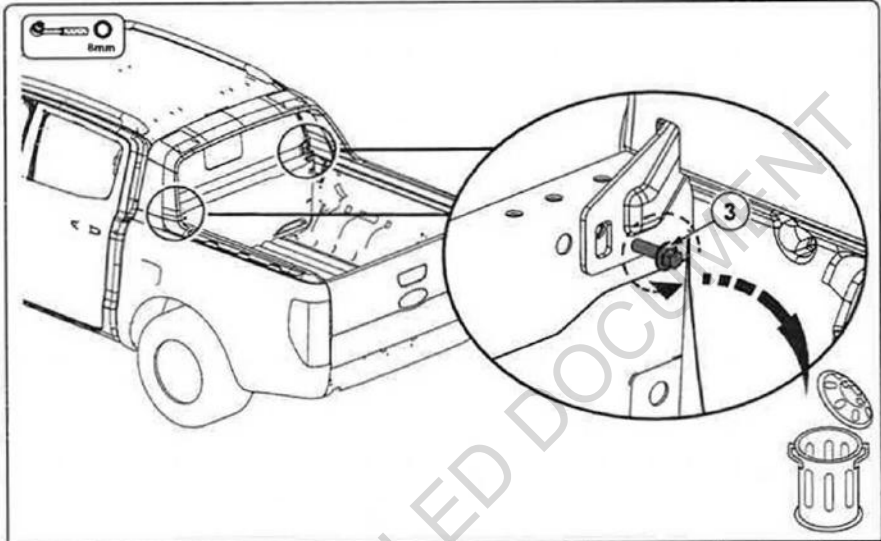

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

RED ROCK
DIRECT.COM.AU

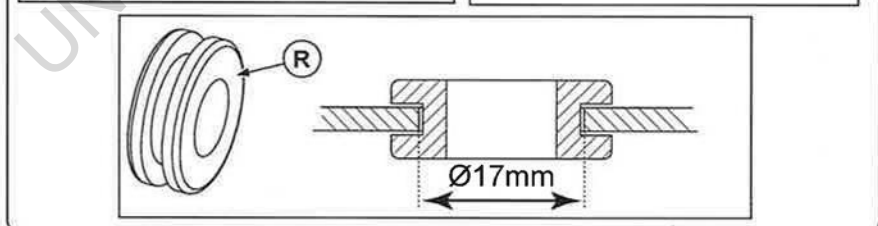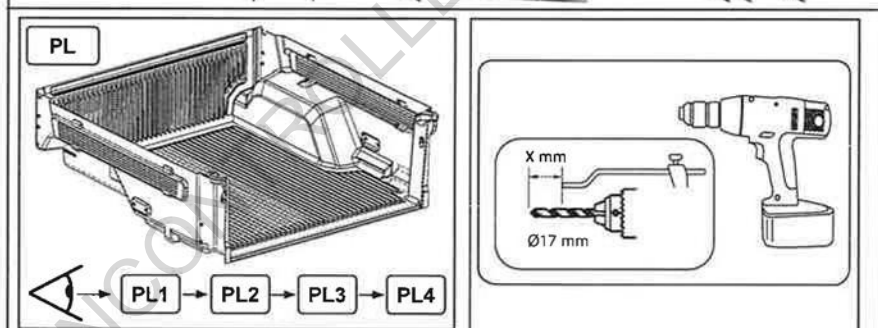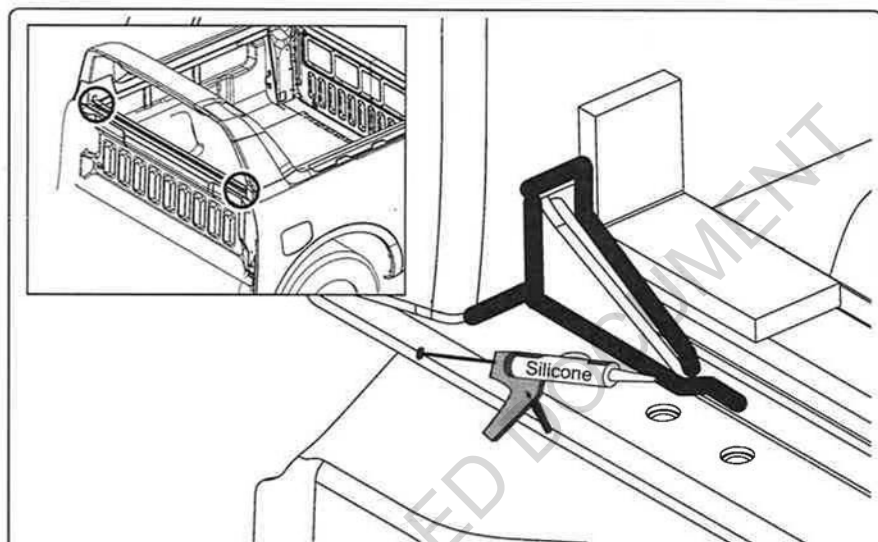

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 9/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringvejledning\886 019.PDF

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

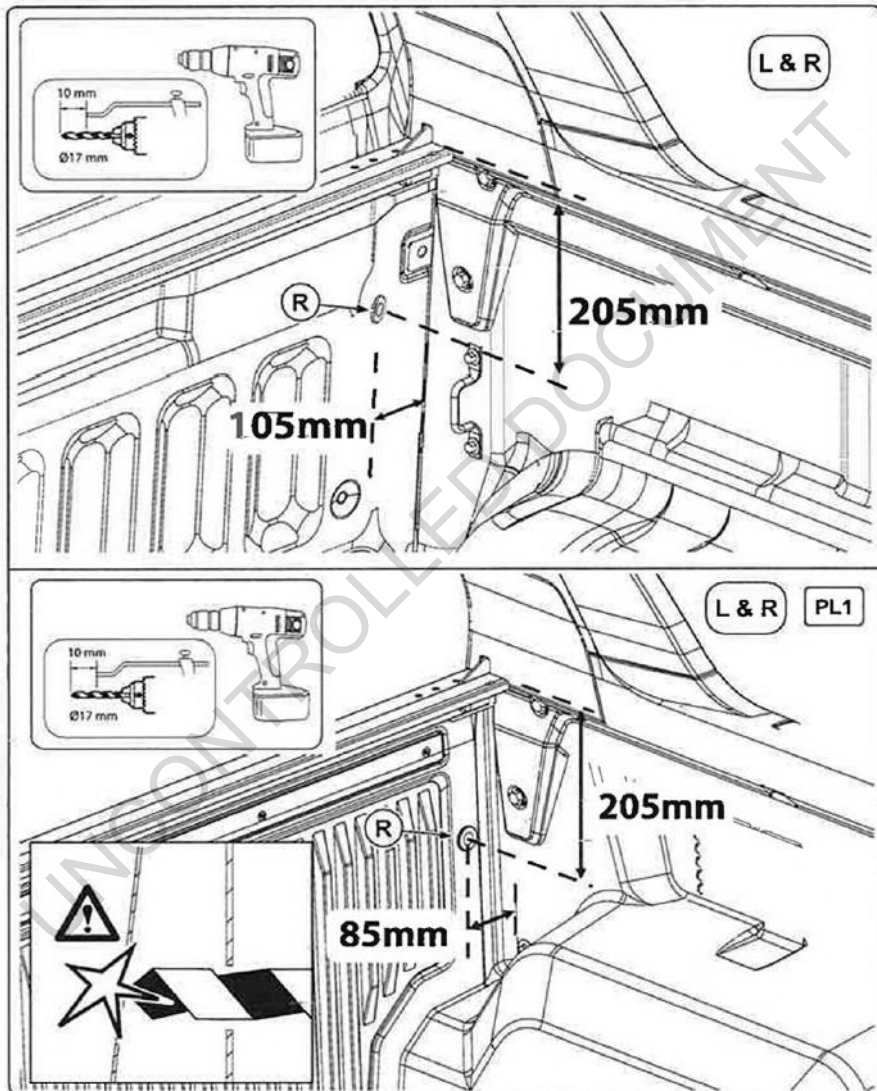

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 10/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monting\rv\ek\dingex\865 019.PDF

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

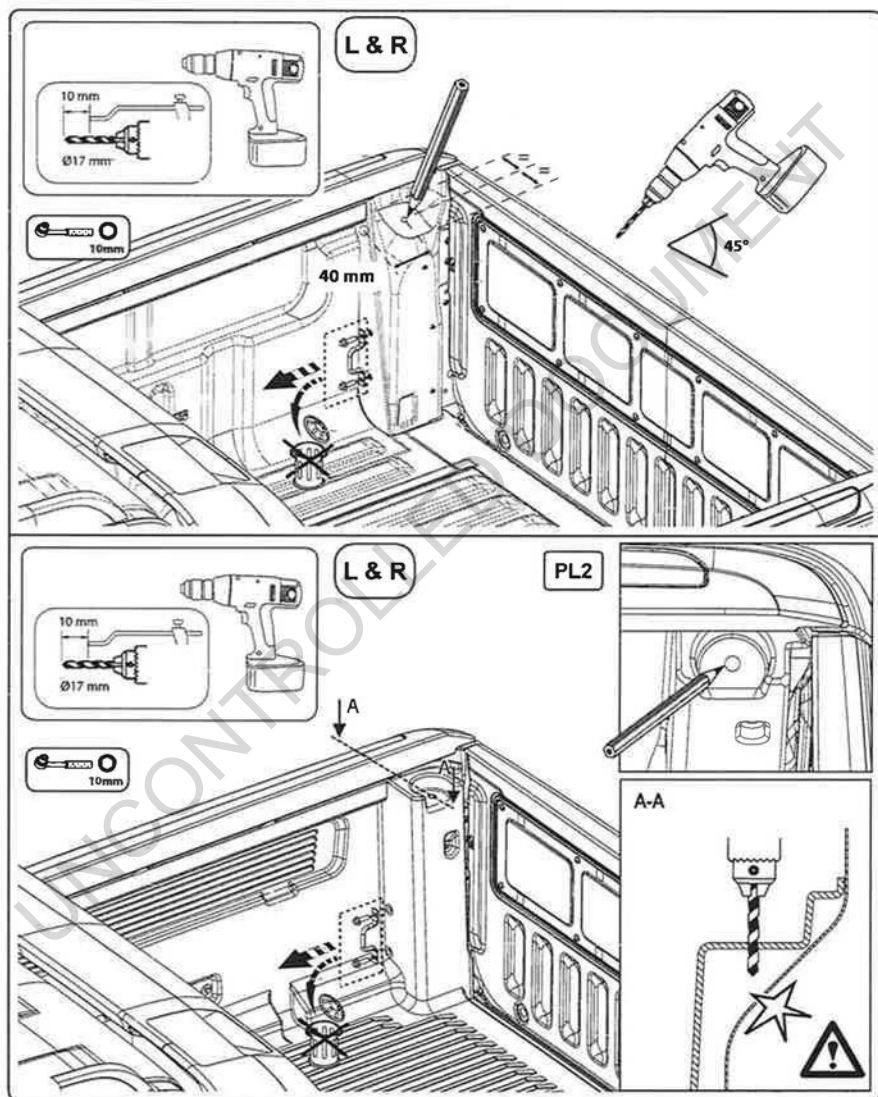

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04



Page 11/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Montering\vejledning\886 019.PDF

Ford Wildtrak

Red Rock Roll Over
Installation instructions

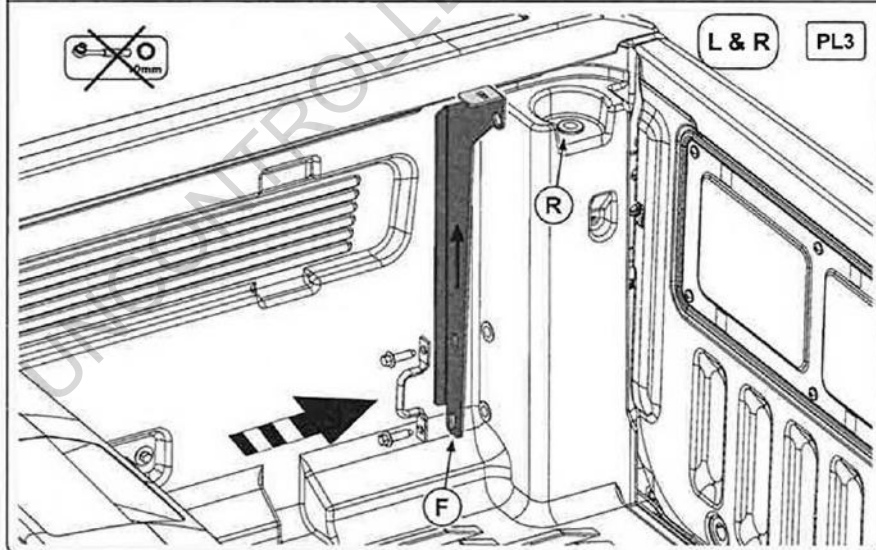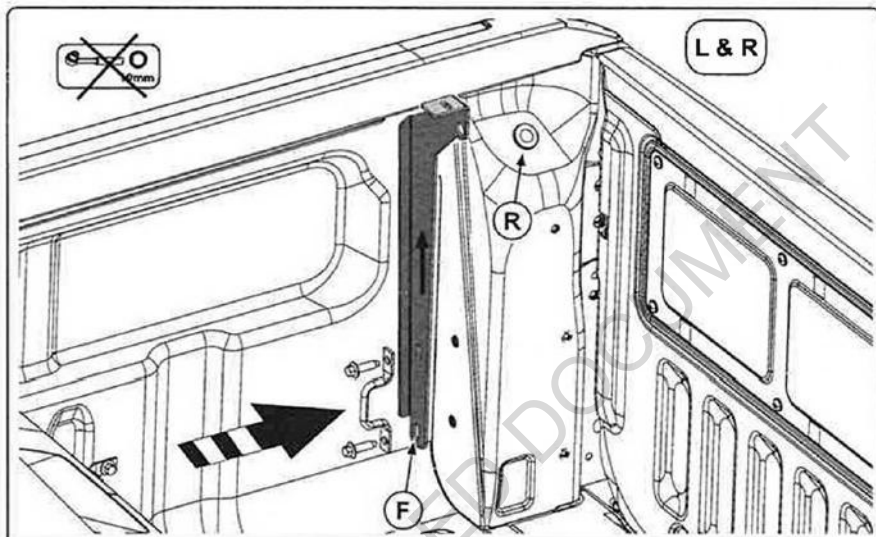

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 12/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monitor\ngov\edneger\886 019.PDF

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

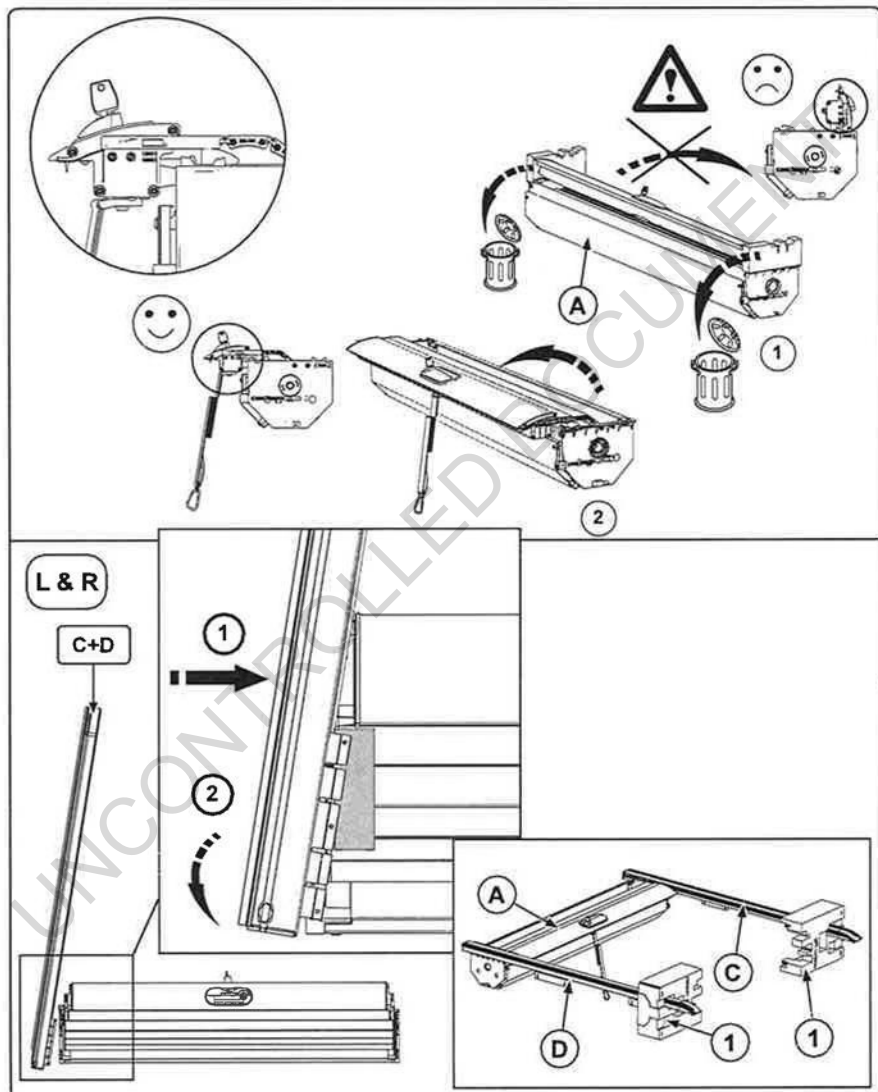

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 13/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Montering\vajledninger\886 019.PDF


Ford Wildtrak

Red Rock Roll Over
Installation instructions

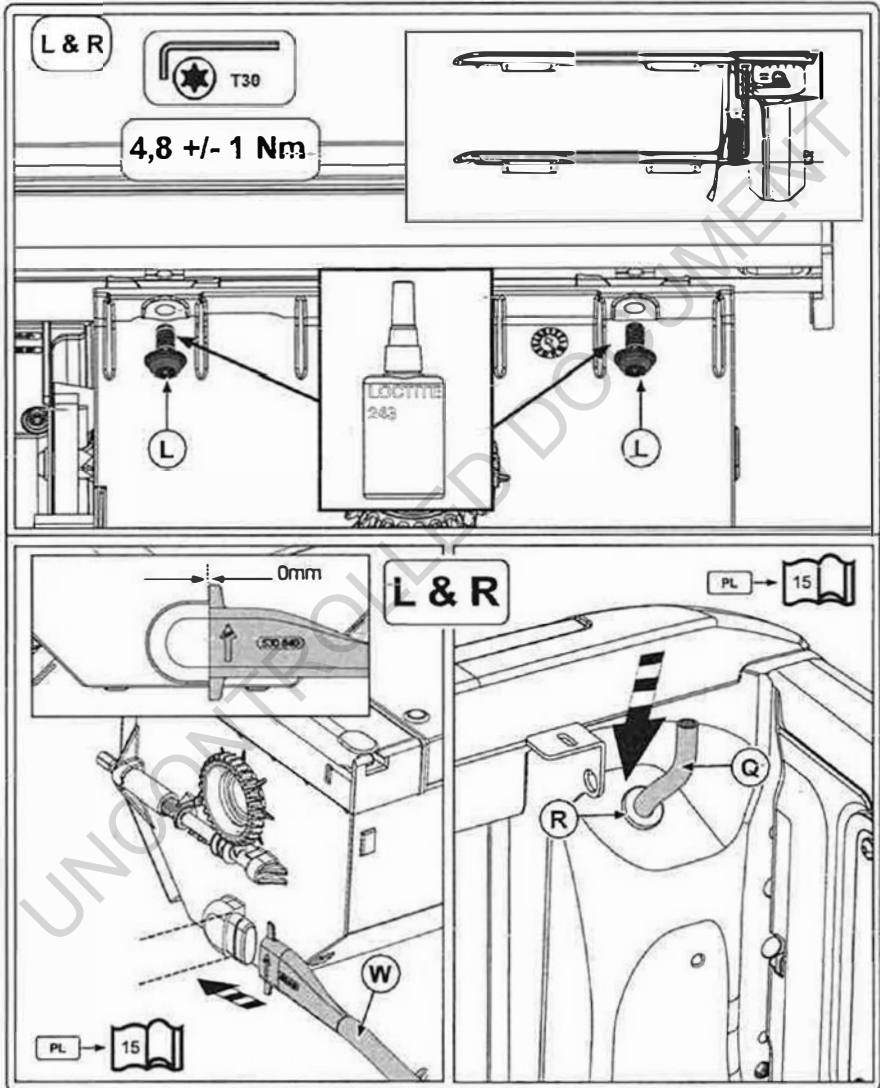

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

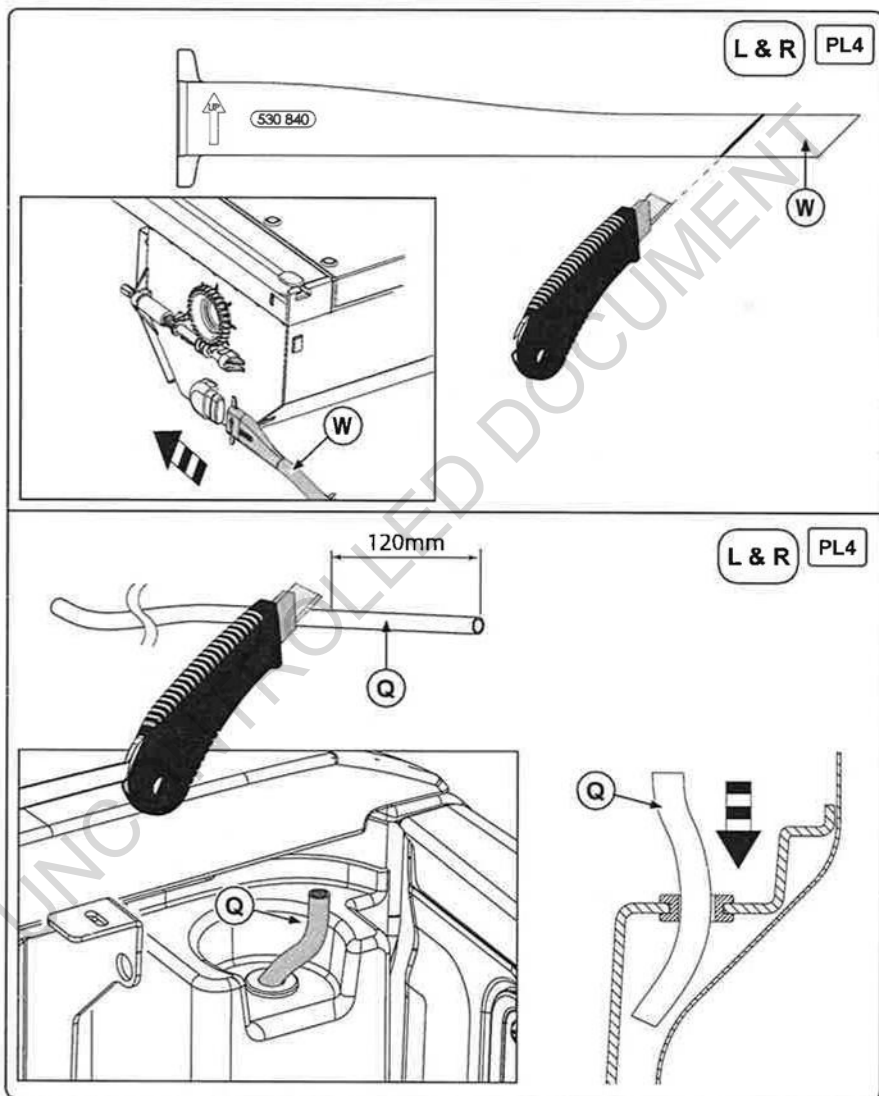

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 15/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Montering\vrijledningen\886 019.PDF


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

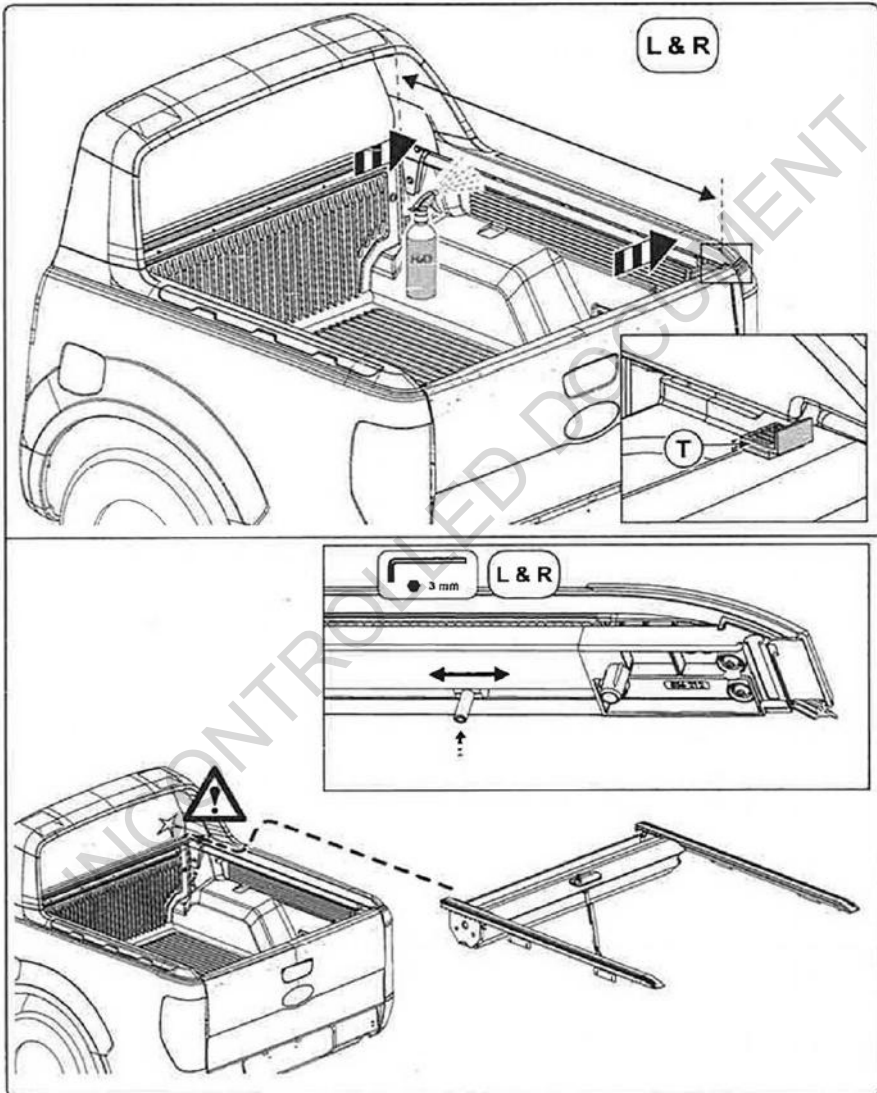


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

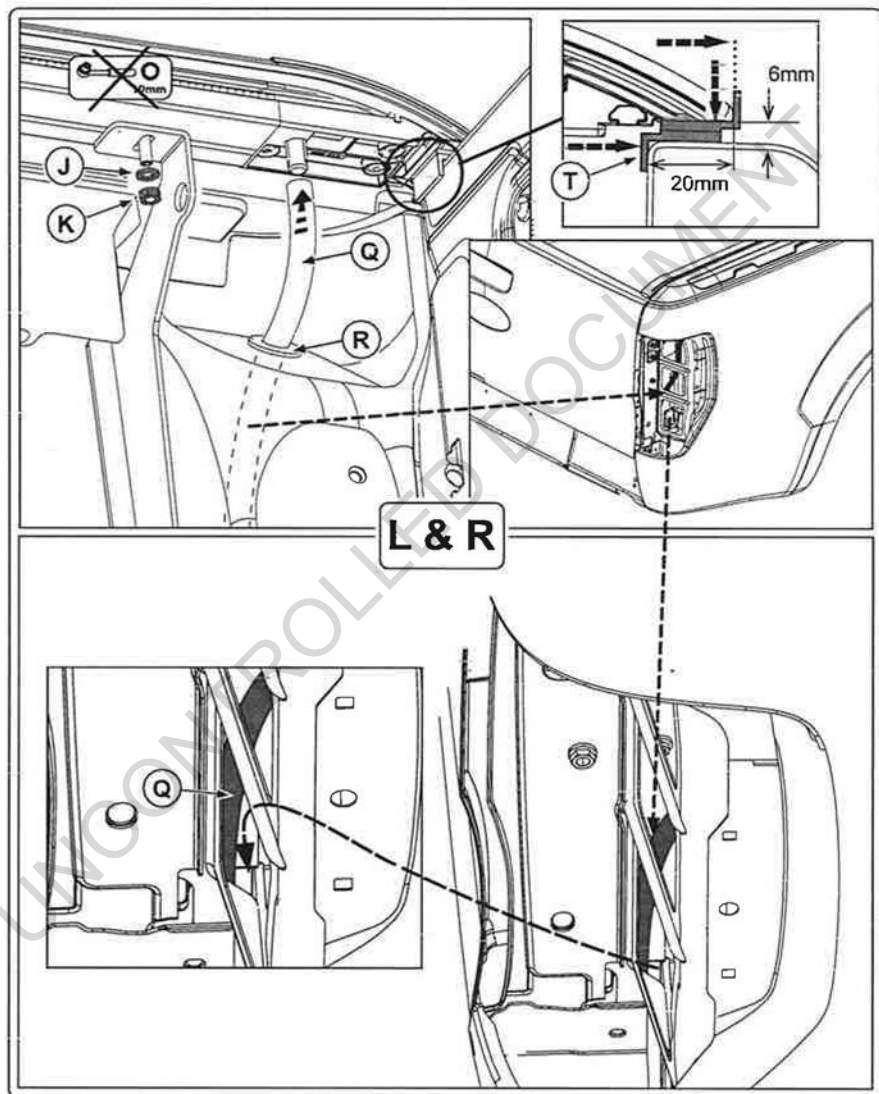


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

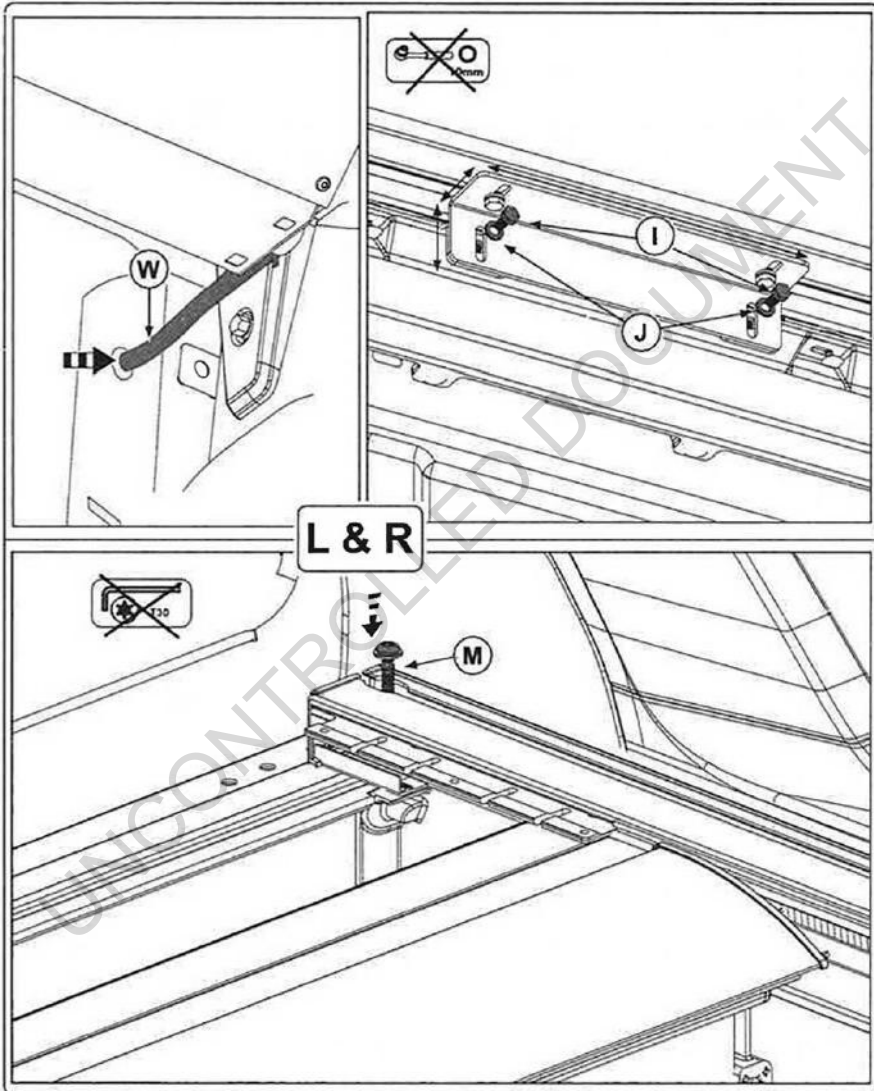

Ford Wildtrak

Red Rock Roll Over
Installation instructions

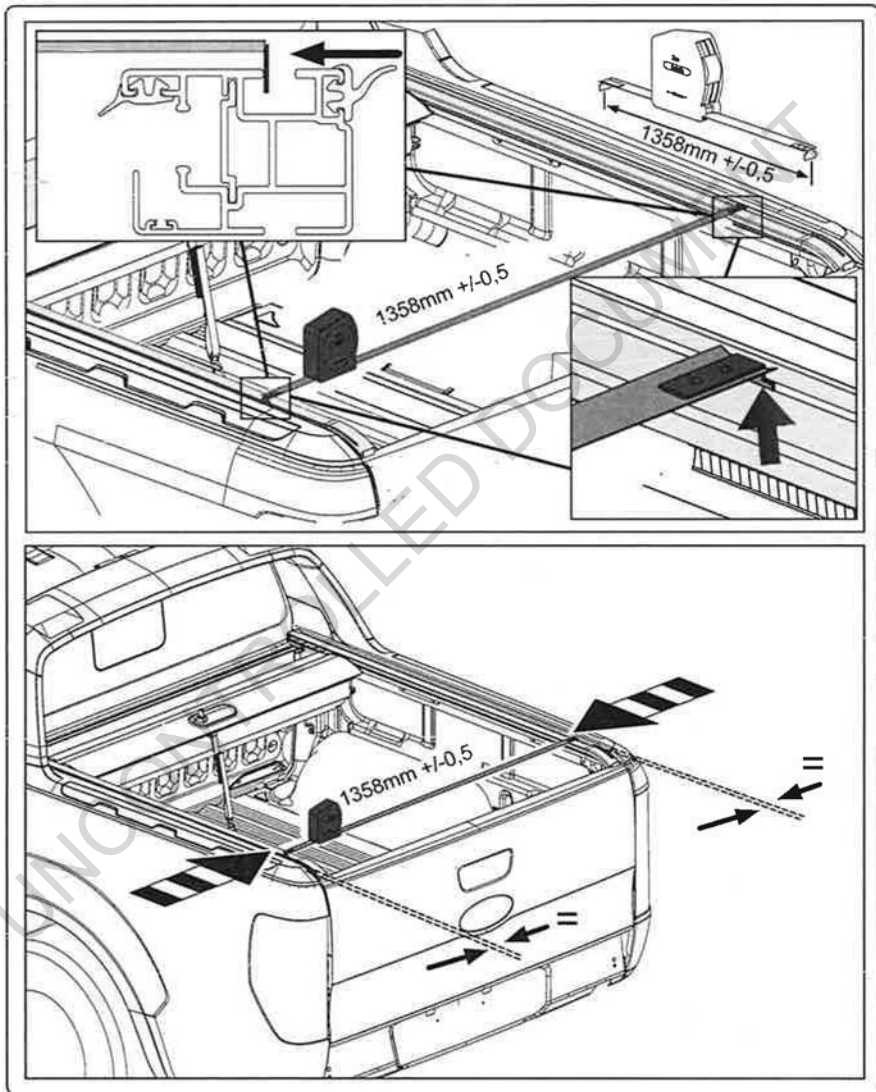

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 19/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringsvejledning\886 019.PDF



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

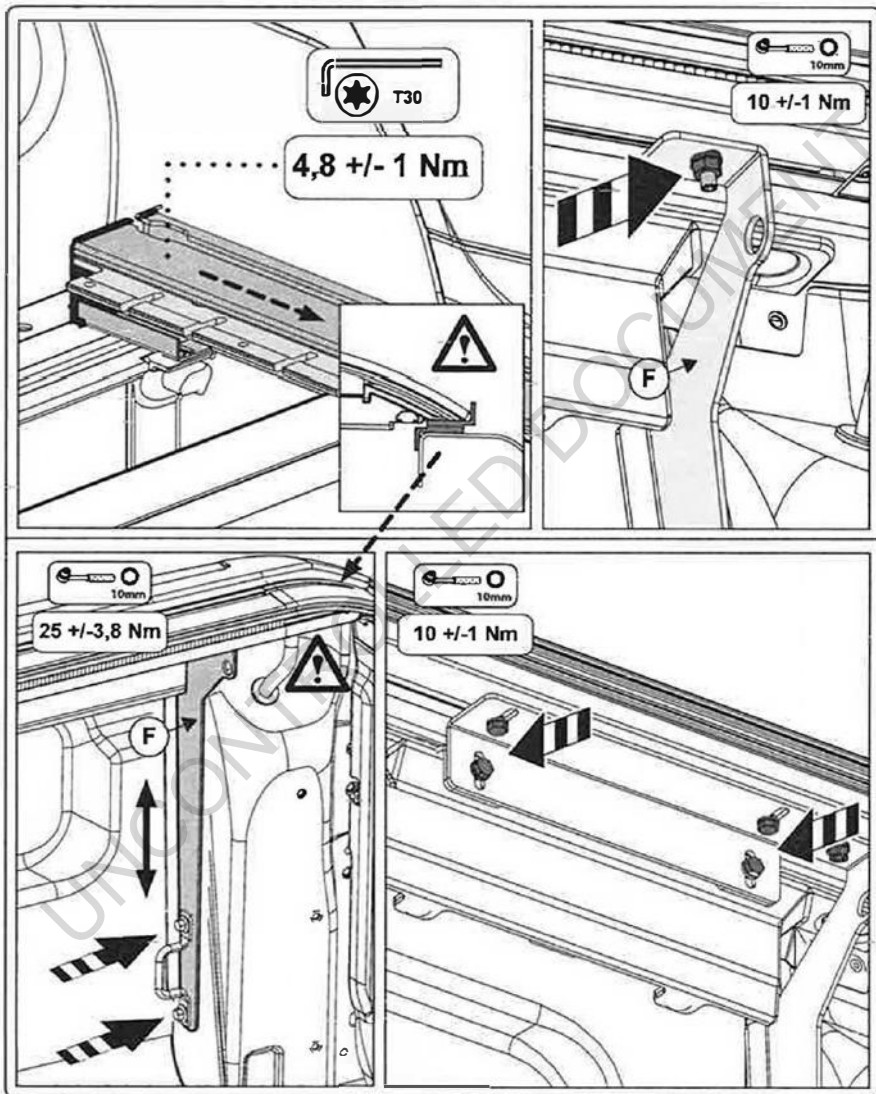

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

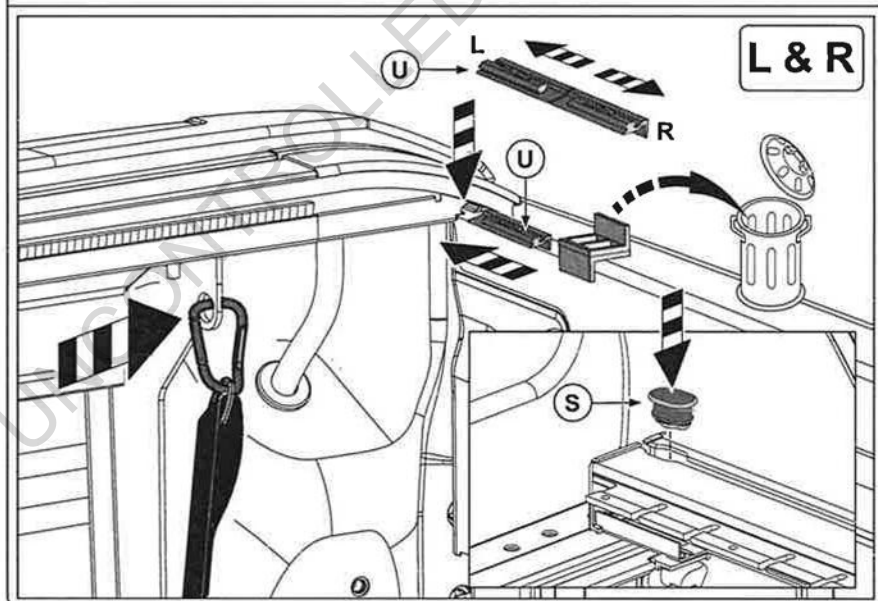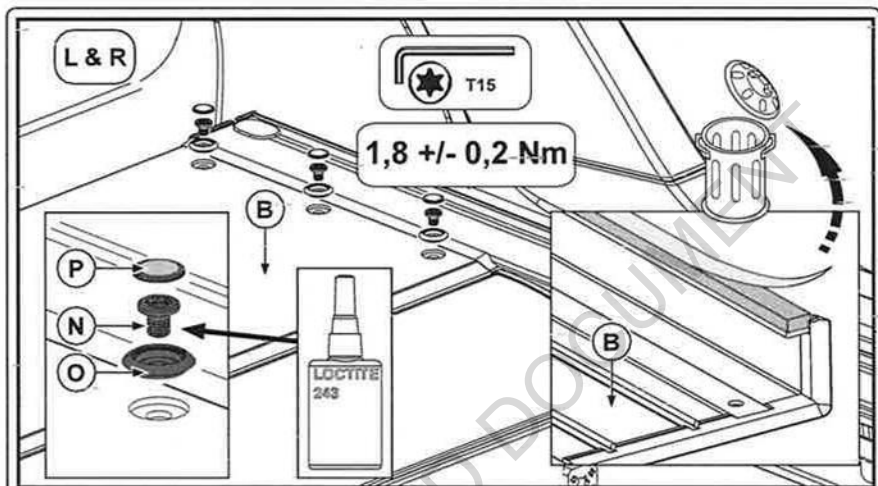

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 21/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringsvejledninger\886 019.PDF


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

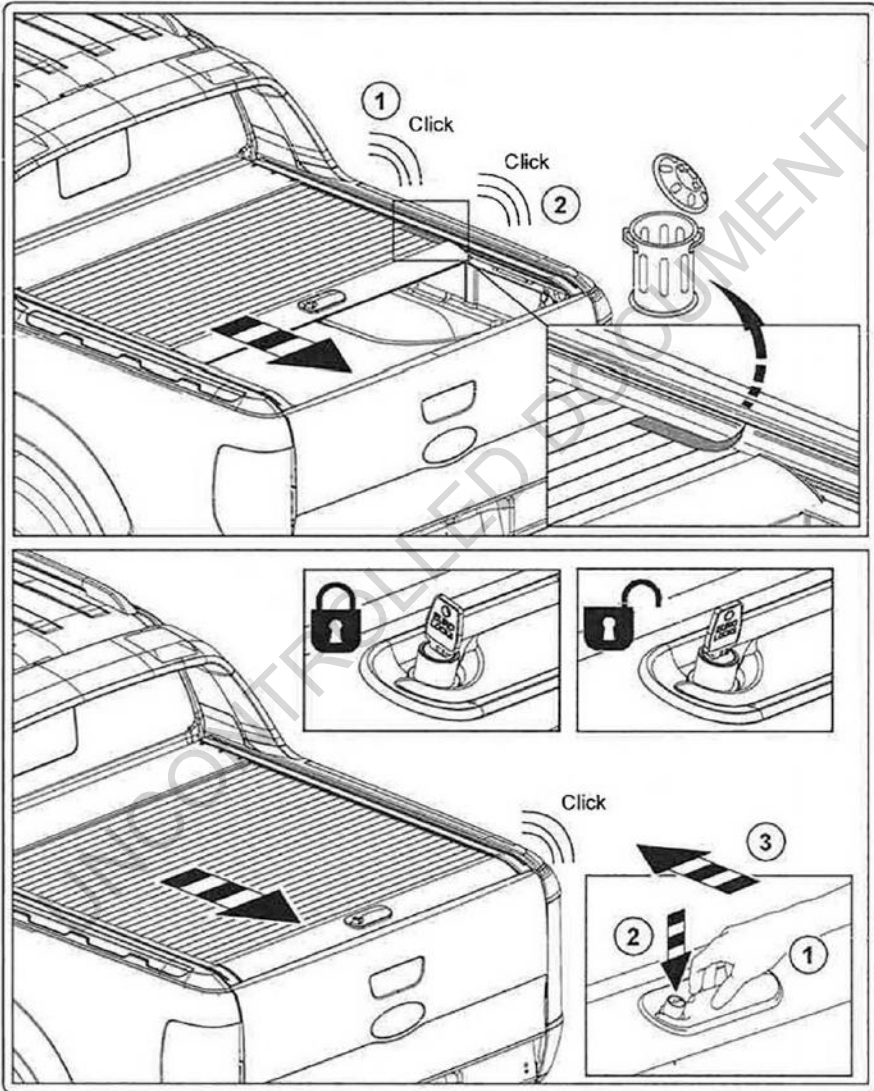


Ford Wildtrak

Red Rock Roll-Cover
Installation instructions

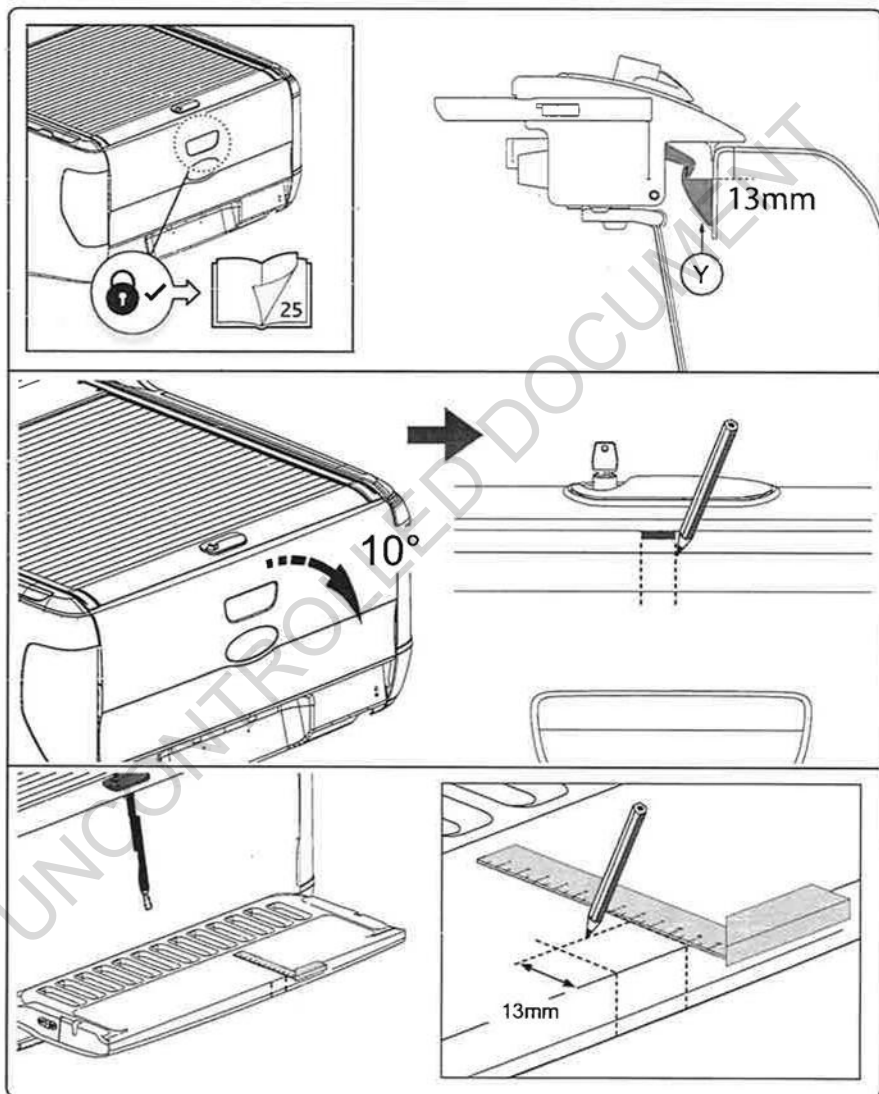





Ford Wildtrak

Red Rock Roll Cover
Installation instructions

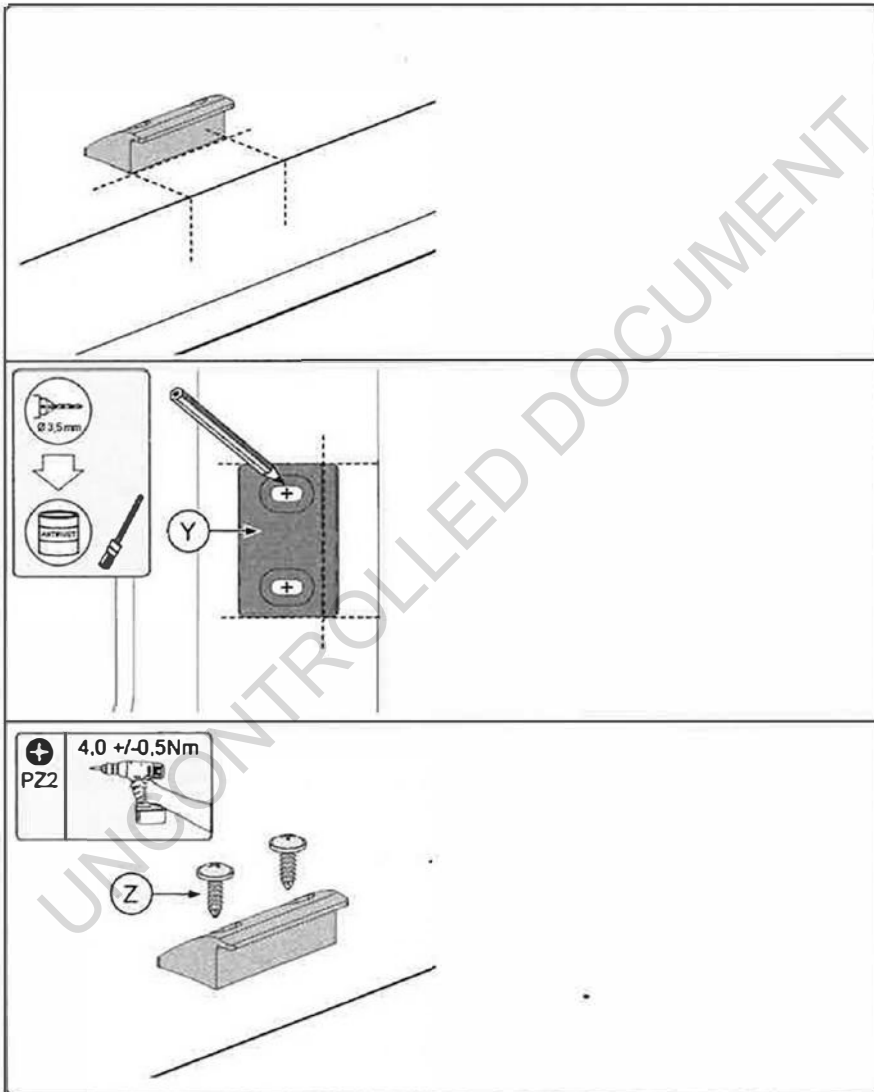



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

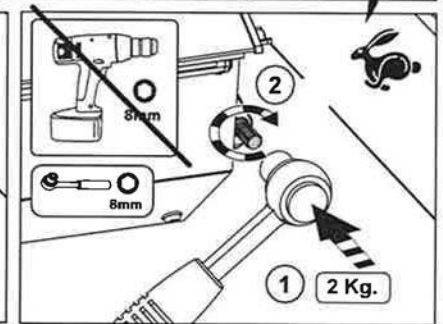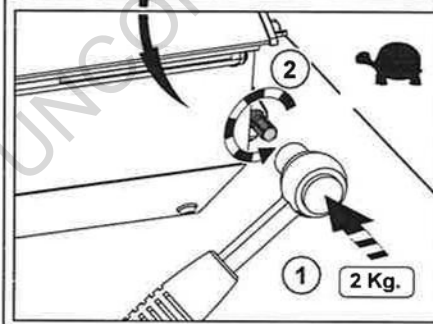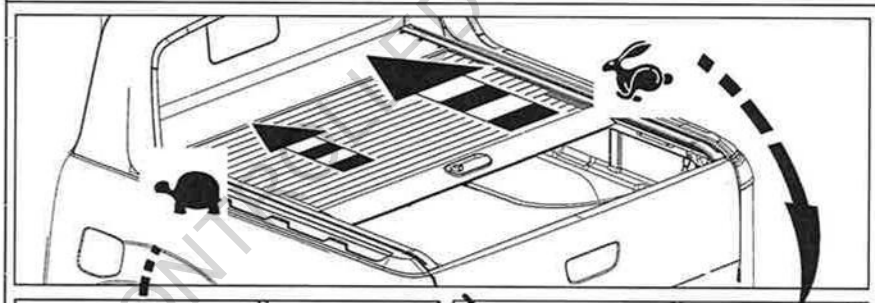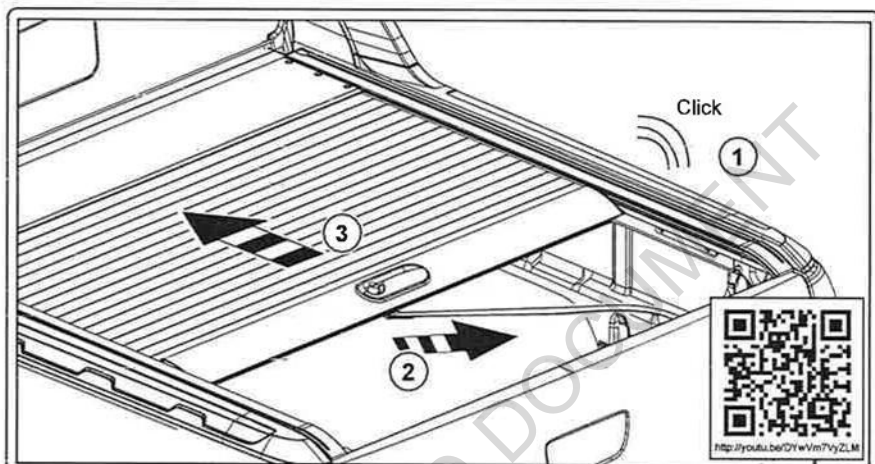

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

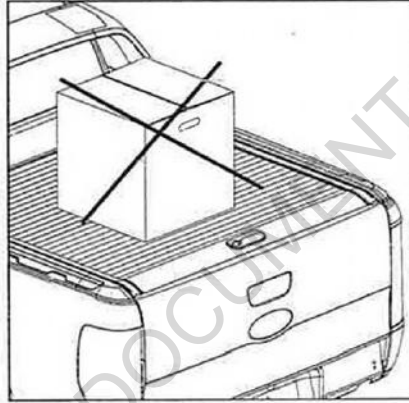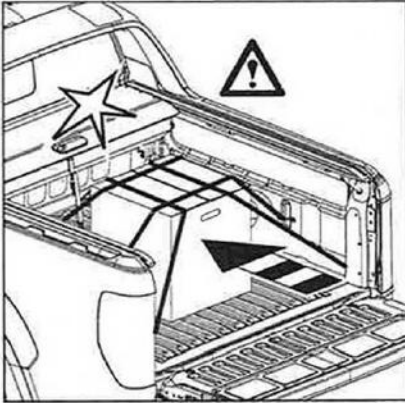

UNCONTROLLED DOCUMENT

UNCONTROLLED DOCUMENT

UNCONTROLLED DOCUMENT