

Ford Wildtrak

Red Rock Roll Cover
Installation instructions



Model Year: 2011 →

Part Number: RR RC FO90 H04 Double Cab (DC)
RR RC FO91 H04 Super Cab (SC)

⚖ Weight: 31 / 36 kg

⌚ Installation Time: 2 hr

GR Installation Instruction
Mountain Top Roll

S Monteringsanvisning
Mountain Top Roll

RUS Инструкция по установке
Mountain Top Roll

D Einbauanleitung
Mountain Top Roll

SF Asennusohje
Mountain Top Roll

TR Montaj Talimatı
Mountain Top Roll

E Instrucciones de montaje
Mountain Top Roll

CZ Návod k instalaci
Mountain Top Roll

RO Instrucțiuni de instalare
Mountain Top Roll

F Notice de montage
Mountain Top Roll

H Szerelési utasítás
Mountain Top Roll

NL Installatie-instructies
Mountain Top Roll

I Istruzioni di montaggio
Mountain Top Roll

PL Instrukcja montażu
Mountain Top Roll

DK Monteringsvejledning
Mountain Top Roll

P Instruções de instalação
Mountain Top Roll

GR Οδηγίες Εγκατάστασης
Mountain Top Roll

N Monteringsvejledning
Mountain Top Roll

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 1/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringvejledning\886 019 PDF


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

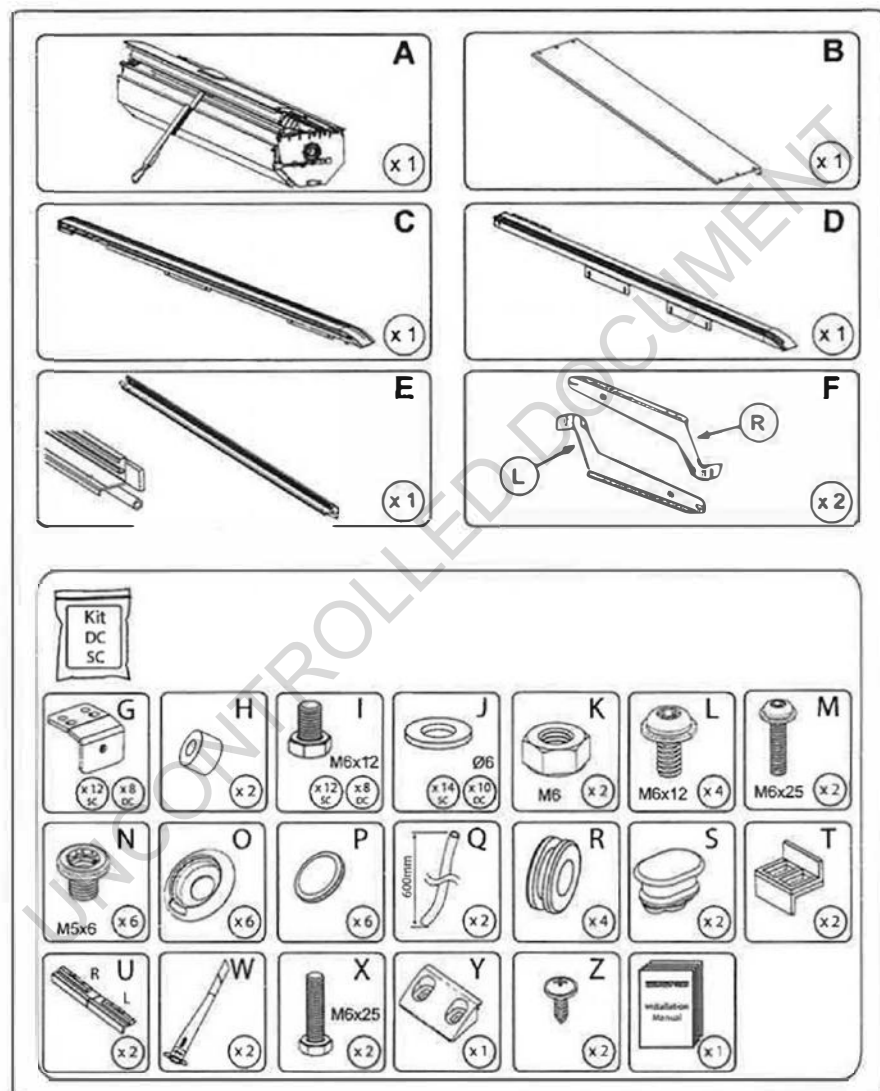


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

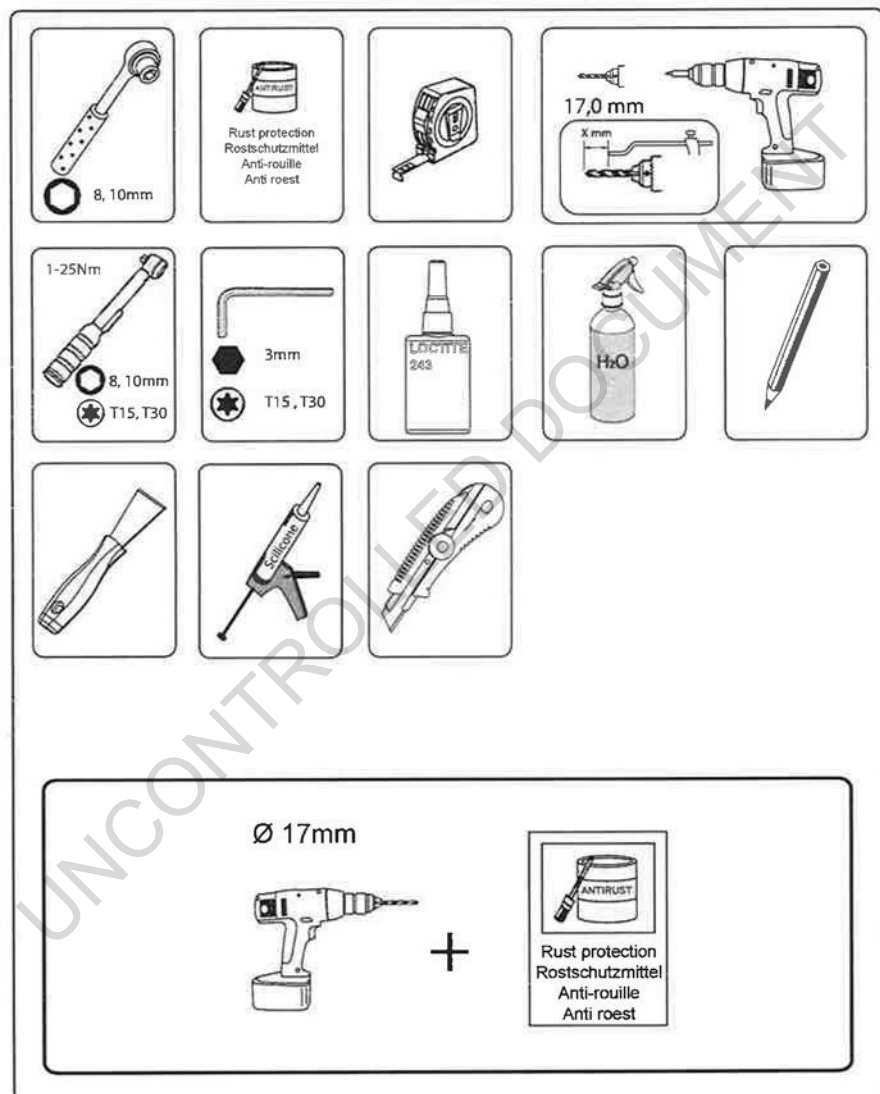


Ford Wildtrak

Red Rock Roll Cover Installation instructions

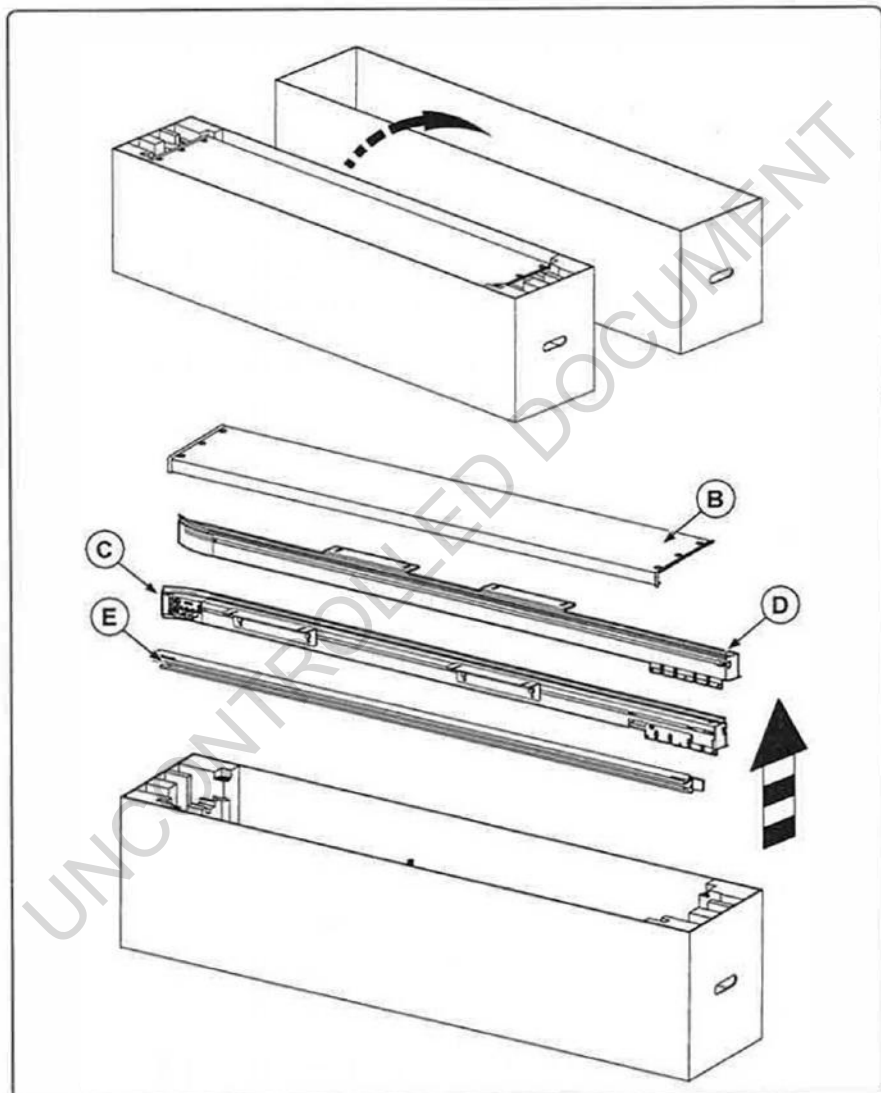


Ford Wildtrak

Red Rock Roll Cover Installation instructions

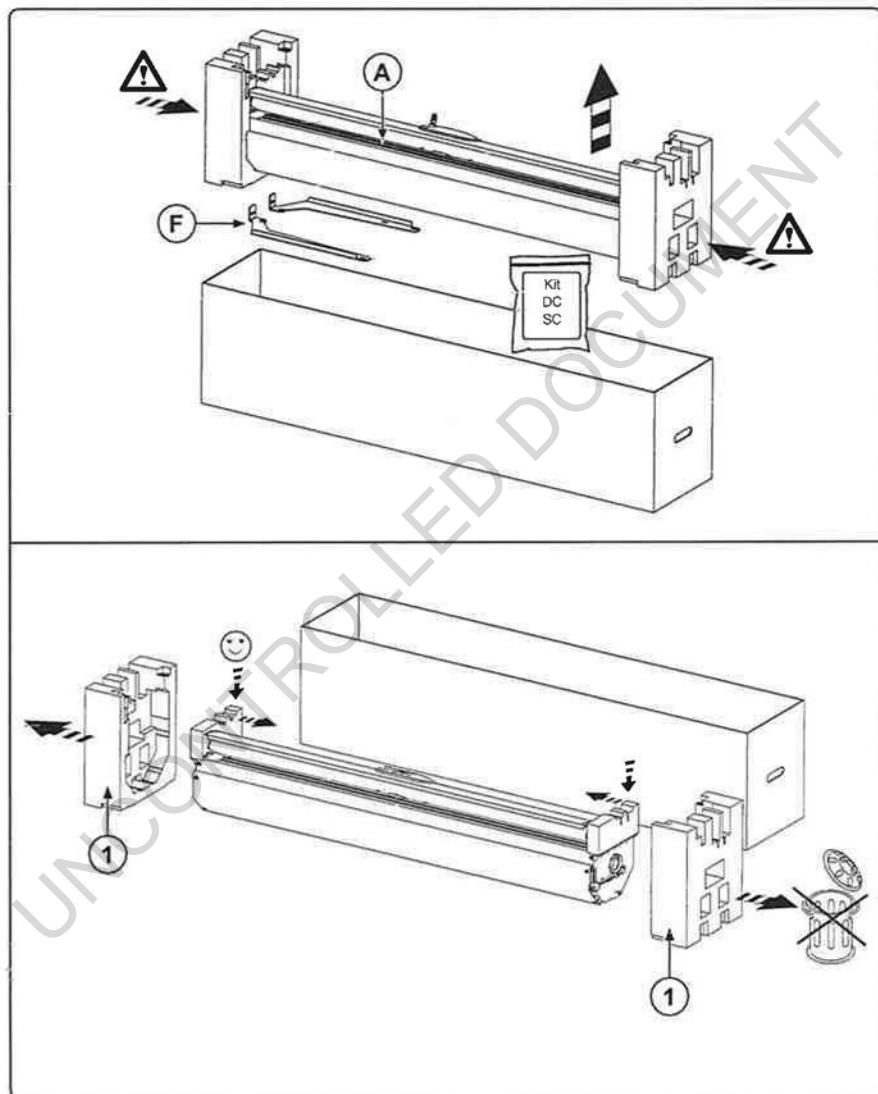


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

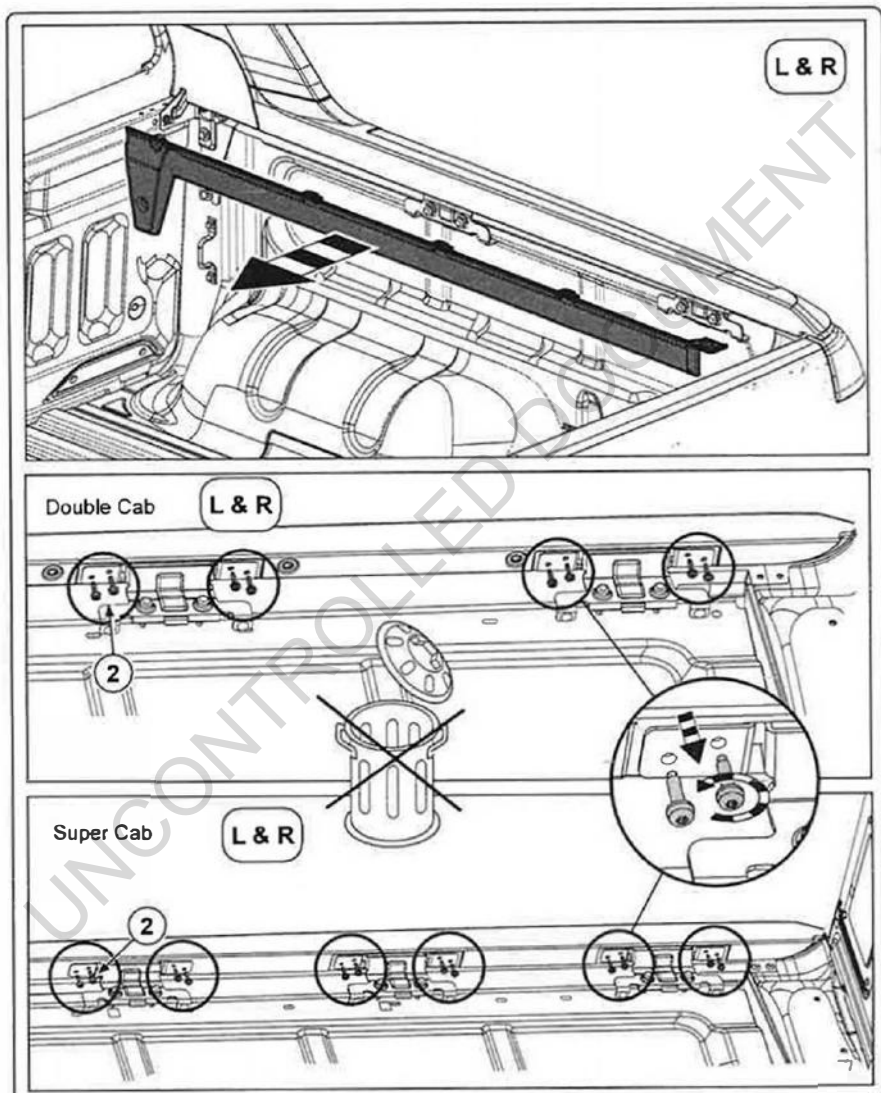

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

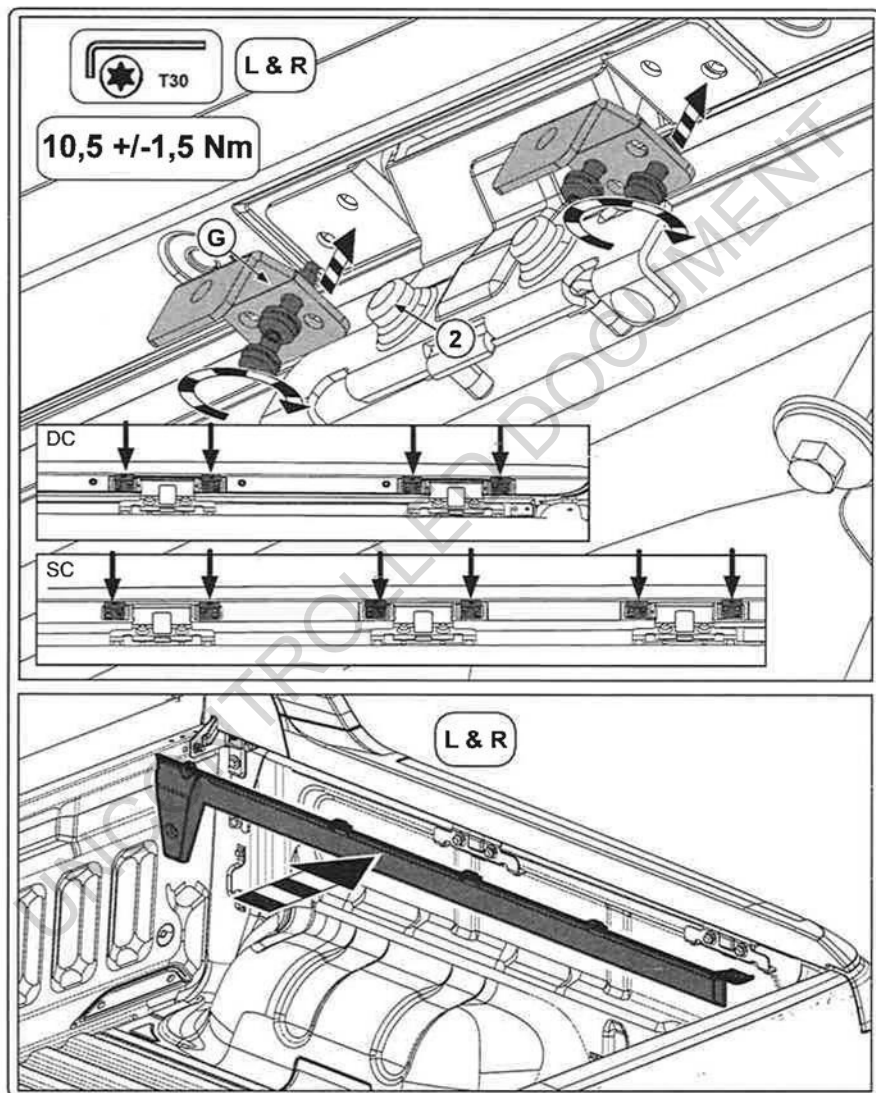

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 7/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringvejledning\886 019 PDF


Ford Wildtrak

Red Rock Roll Cover Installation instructions

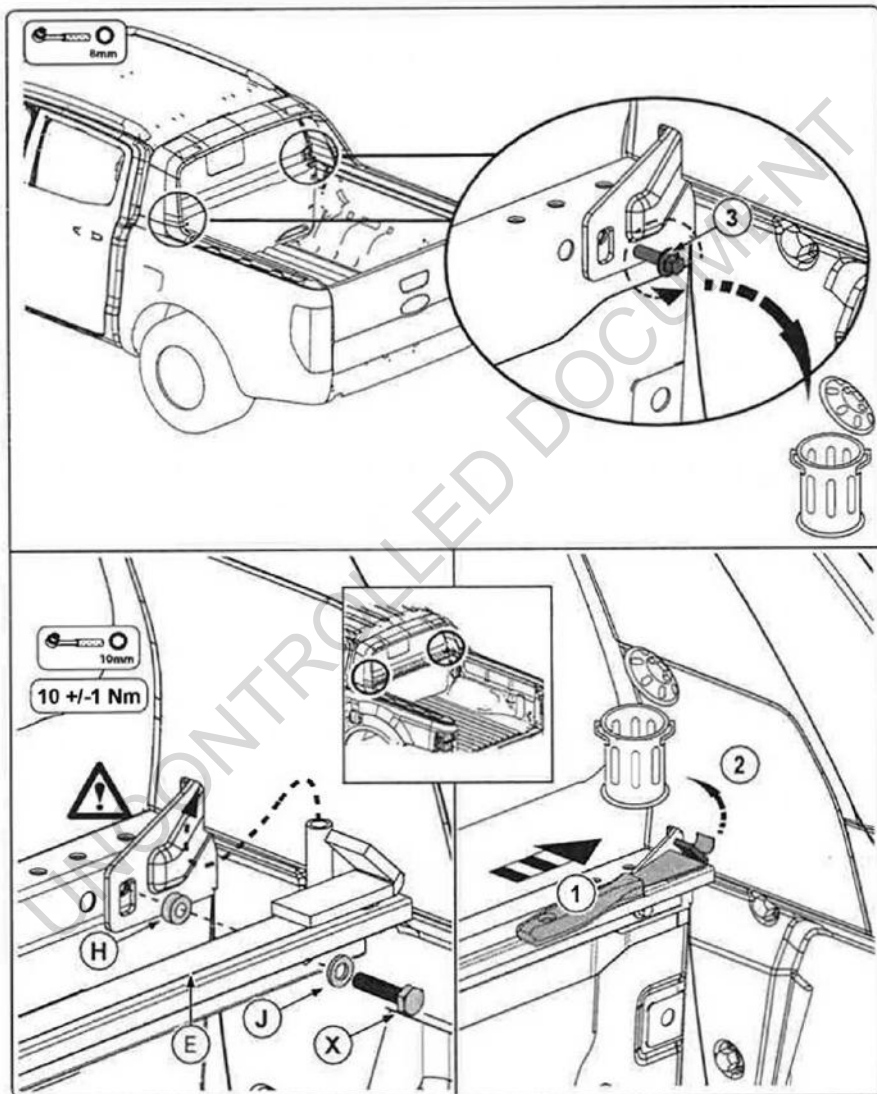


Ford Wildtrak

Red Rock Roll Cover Installation instructions

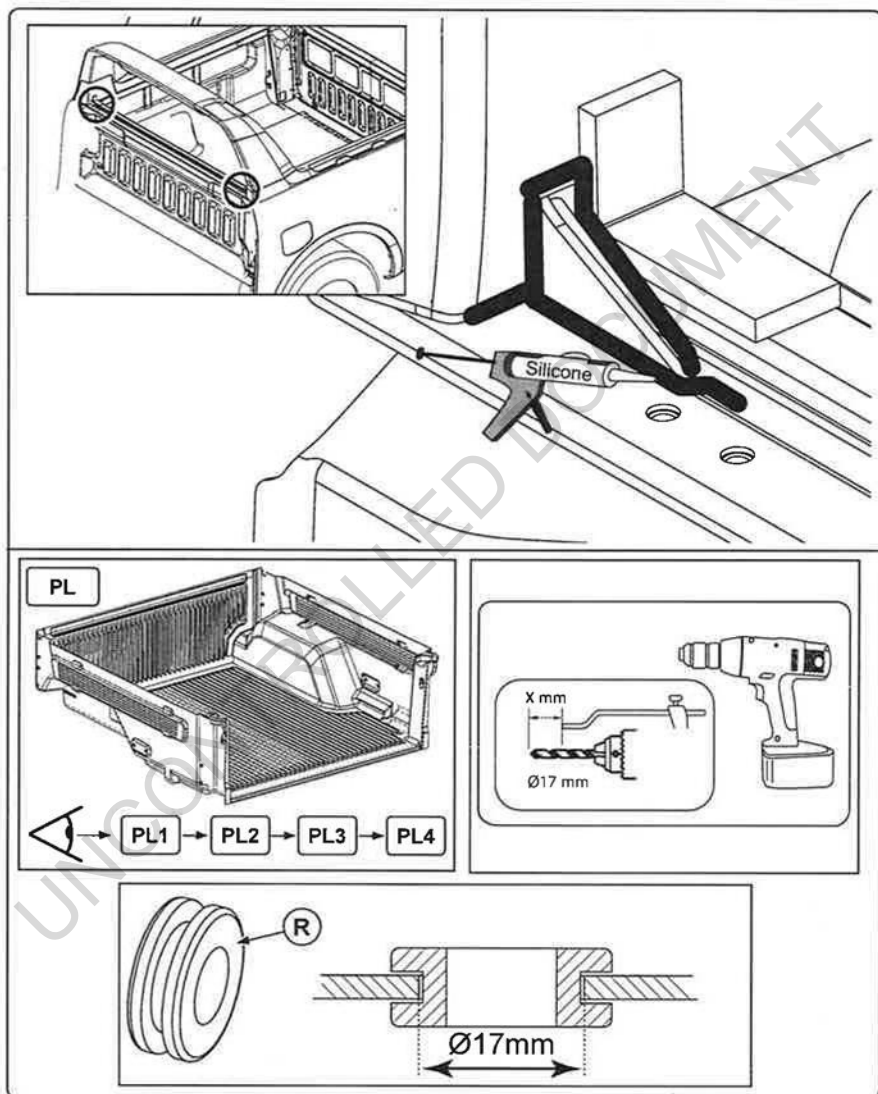


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

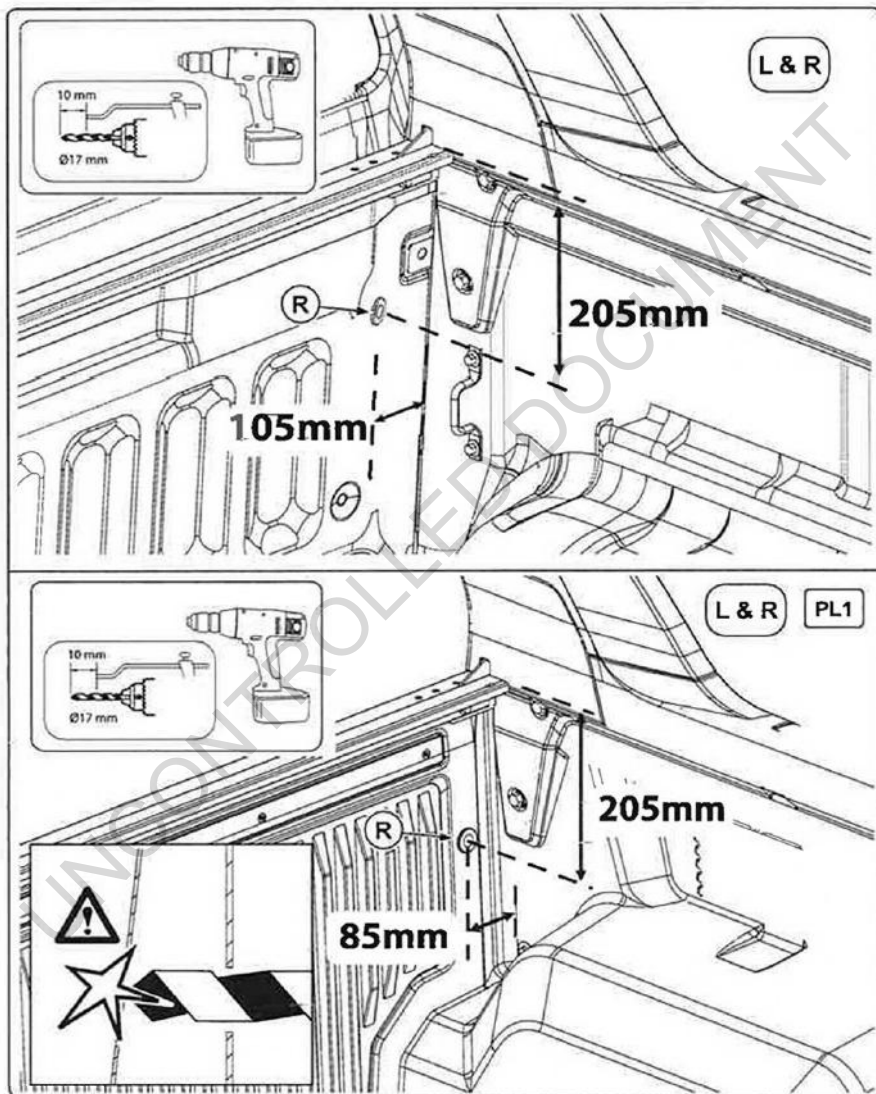


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

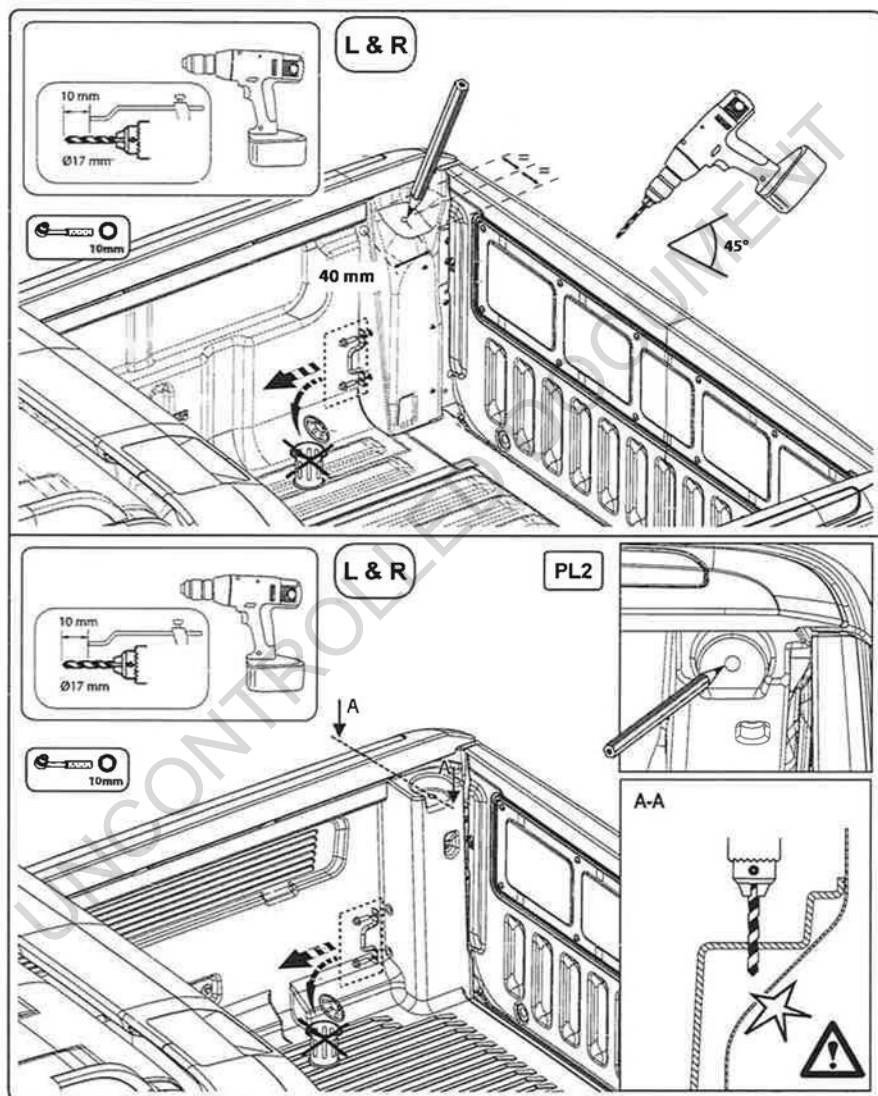


Ford Wildtrak

Red Rock Roll Cover Installation instructions

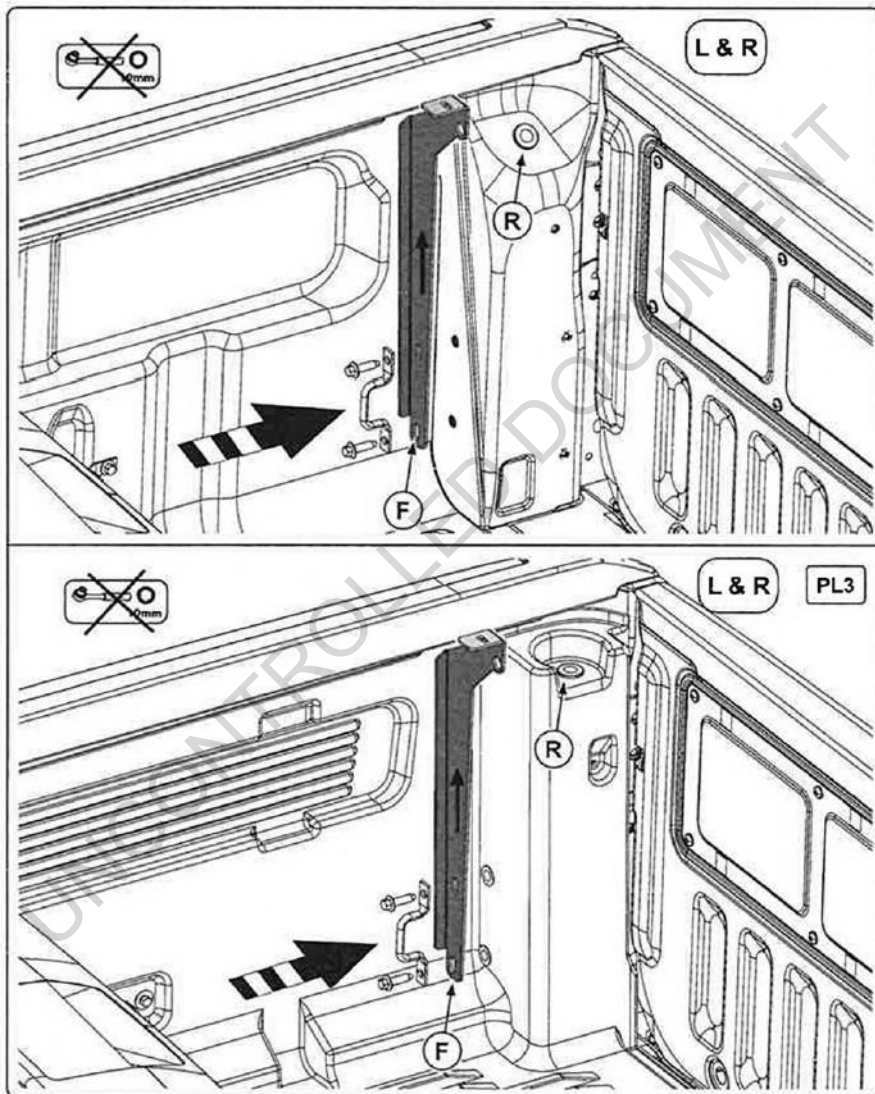


Ford Wildtrak

Red Rock Roll Cover Installation instructions

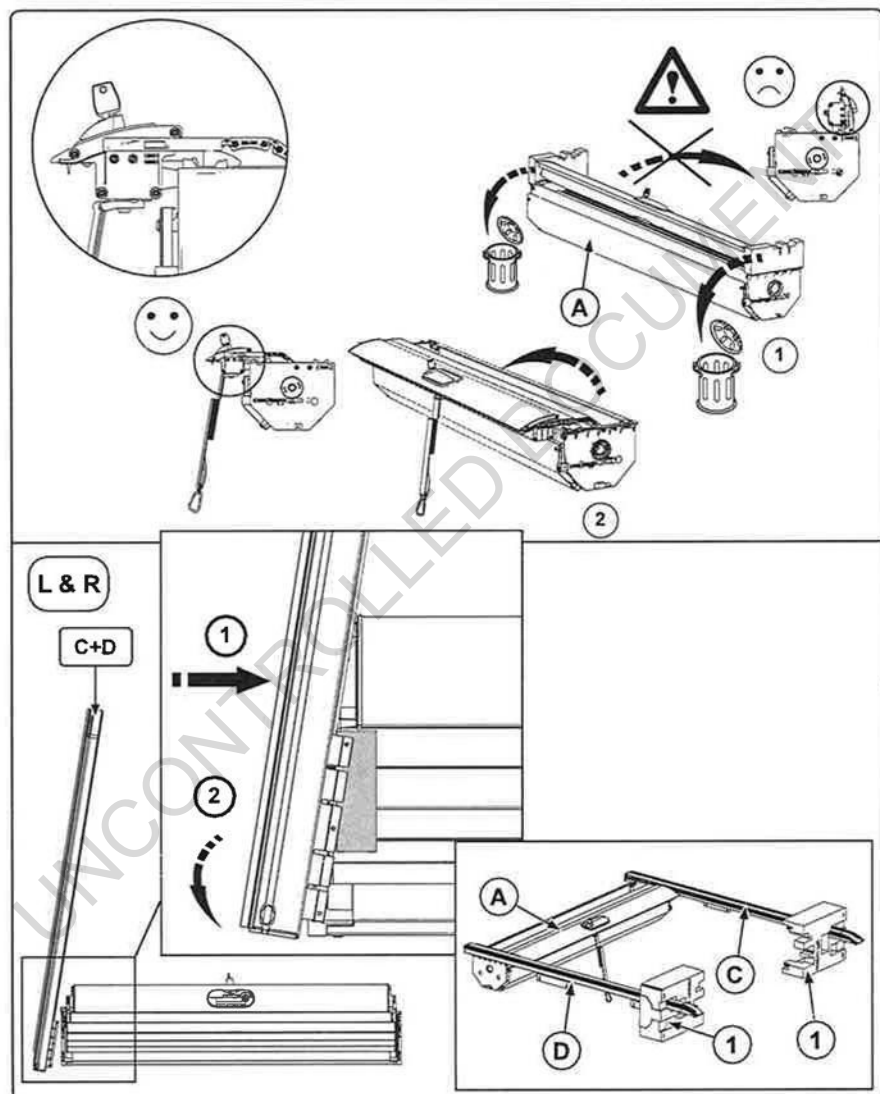


Ford Wildtrak

Red Rock Roll Cover Installation instructions

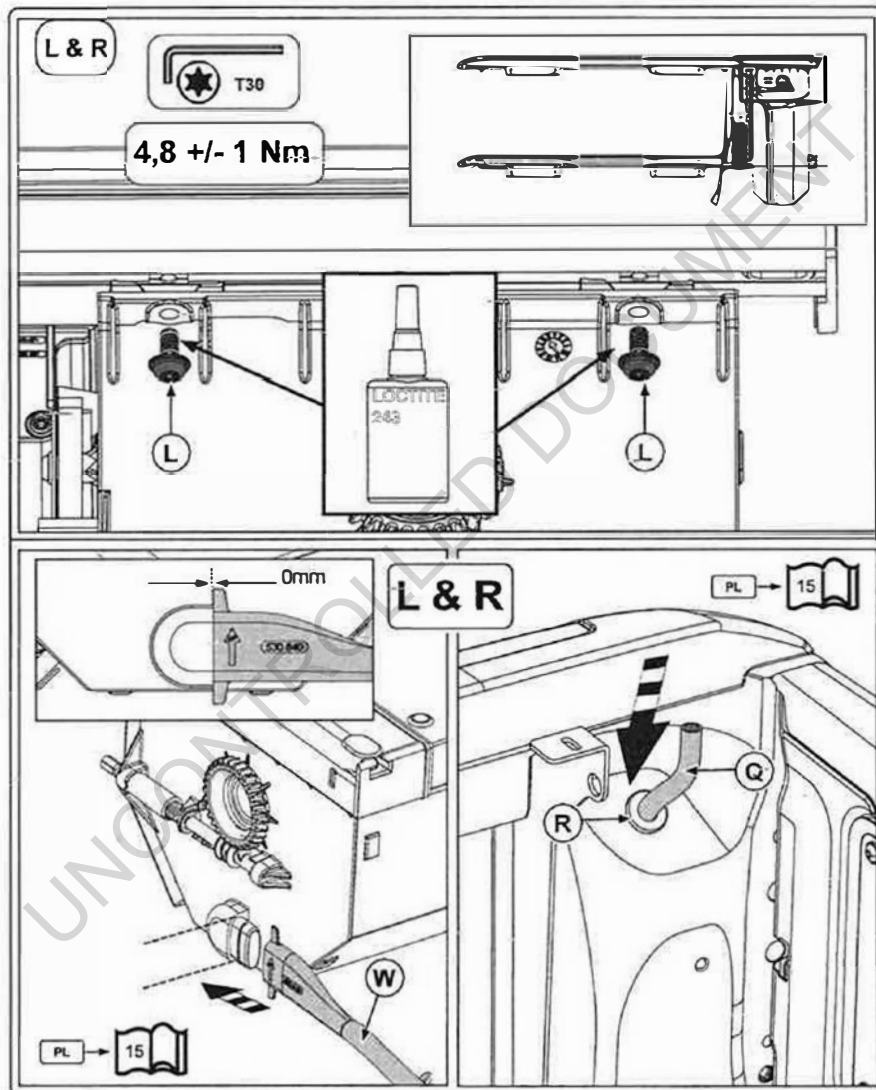


Ford Wildtrak

Red Rock Roll Cover Installation instructions

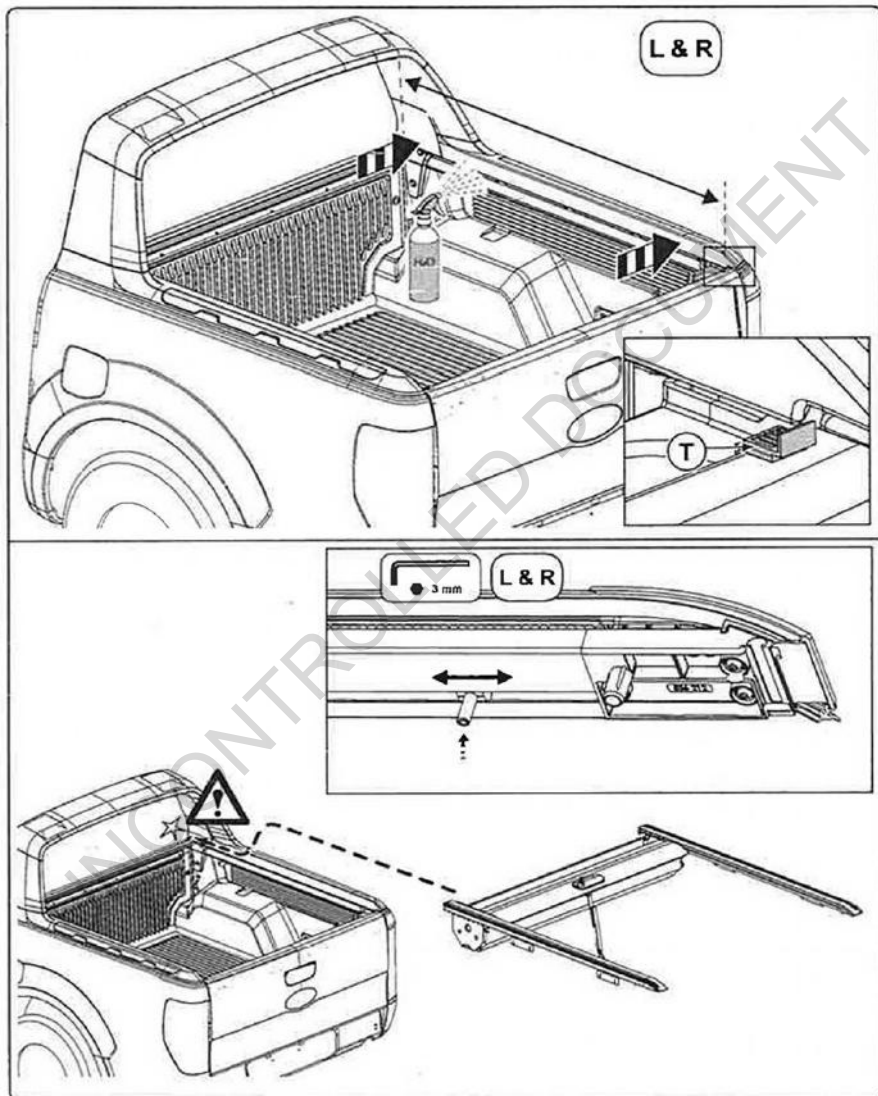


Ford Wildtrak

Red Rock Roll Cover Installation instructions

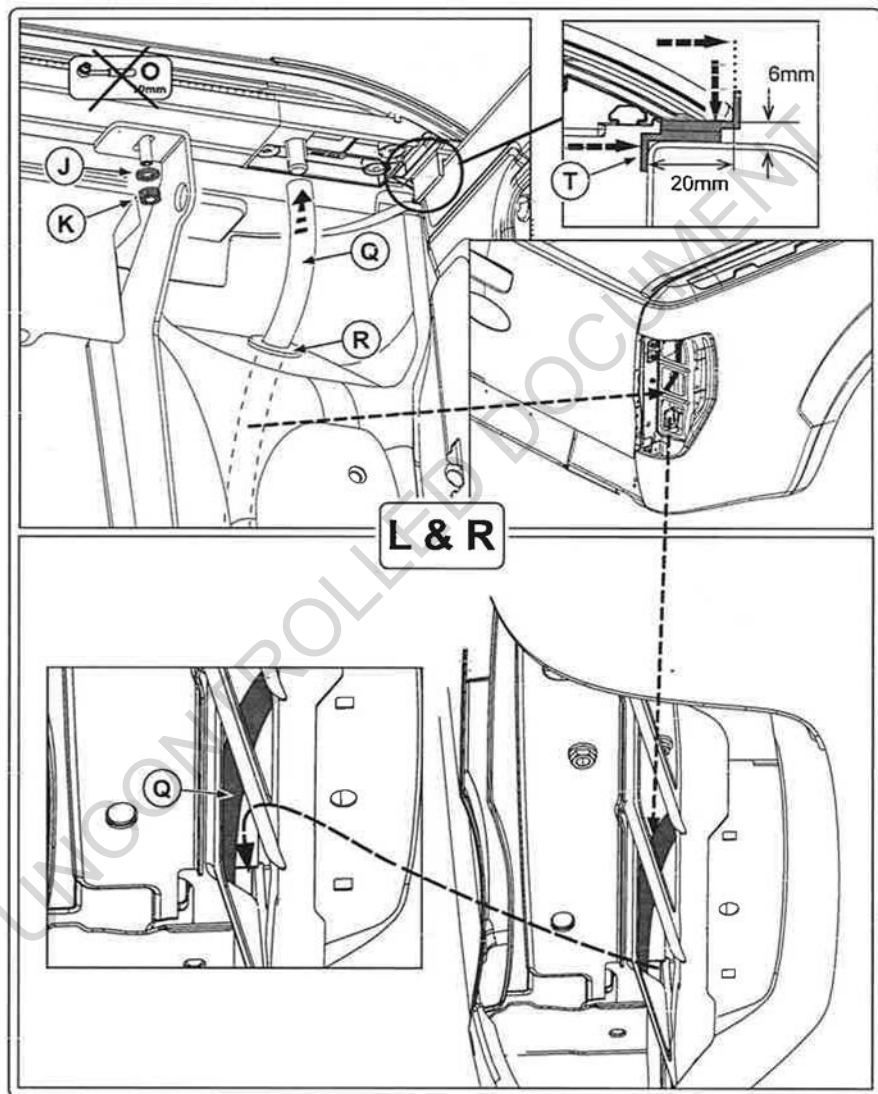

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

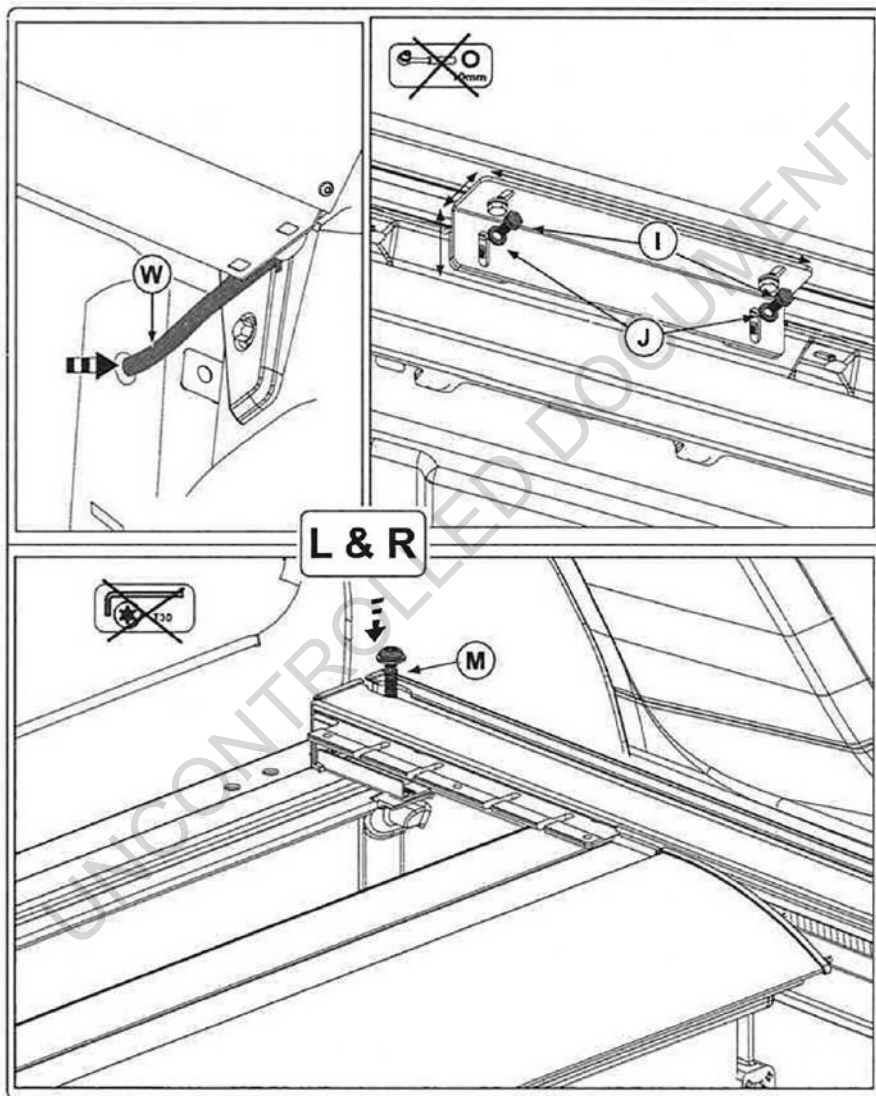

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 18/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Marketing\vejledninger\886 019.PDF


Ford Wildtrak

Red Rock Roll Cover Installation instructions

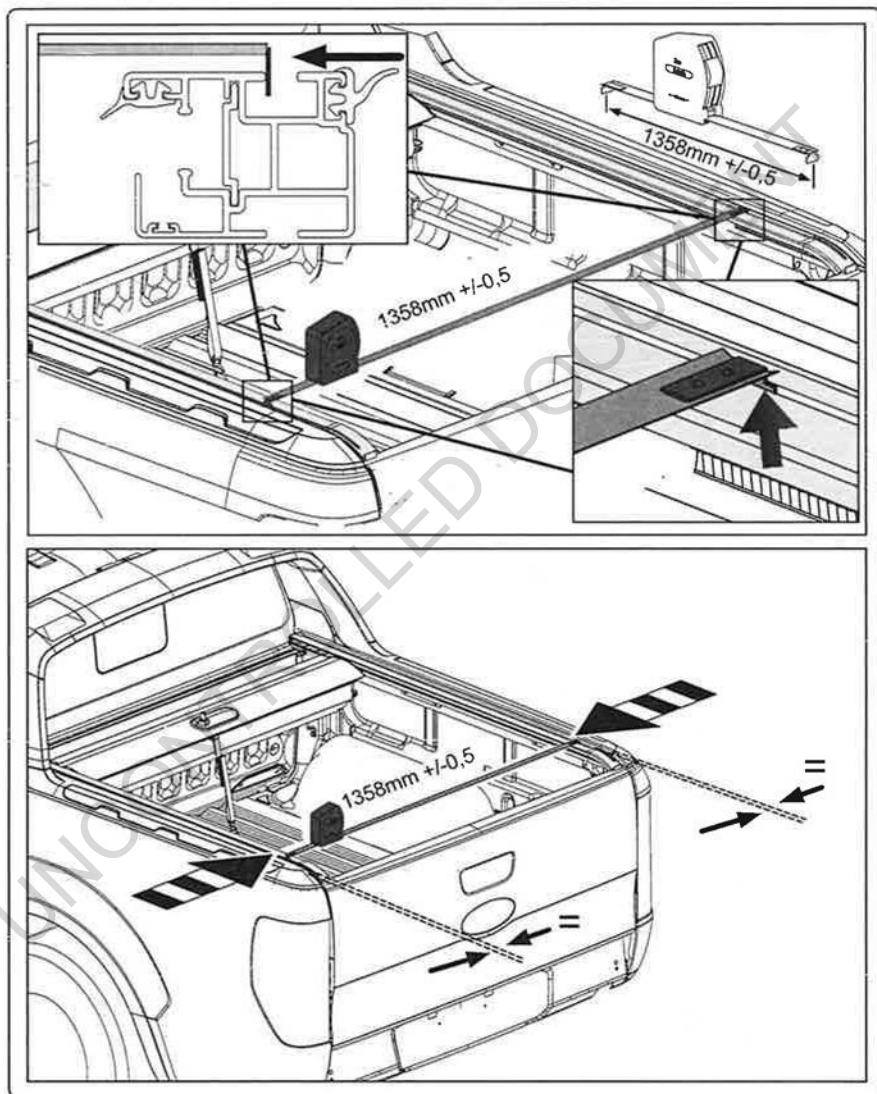


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

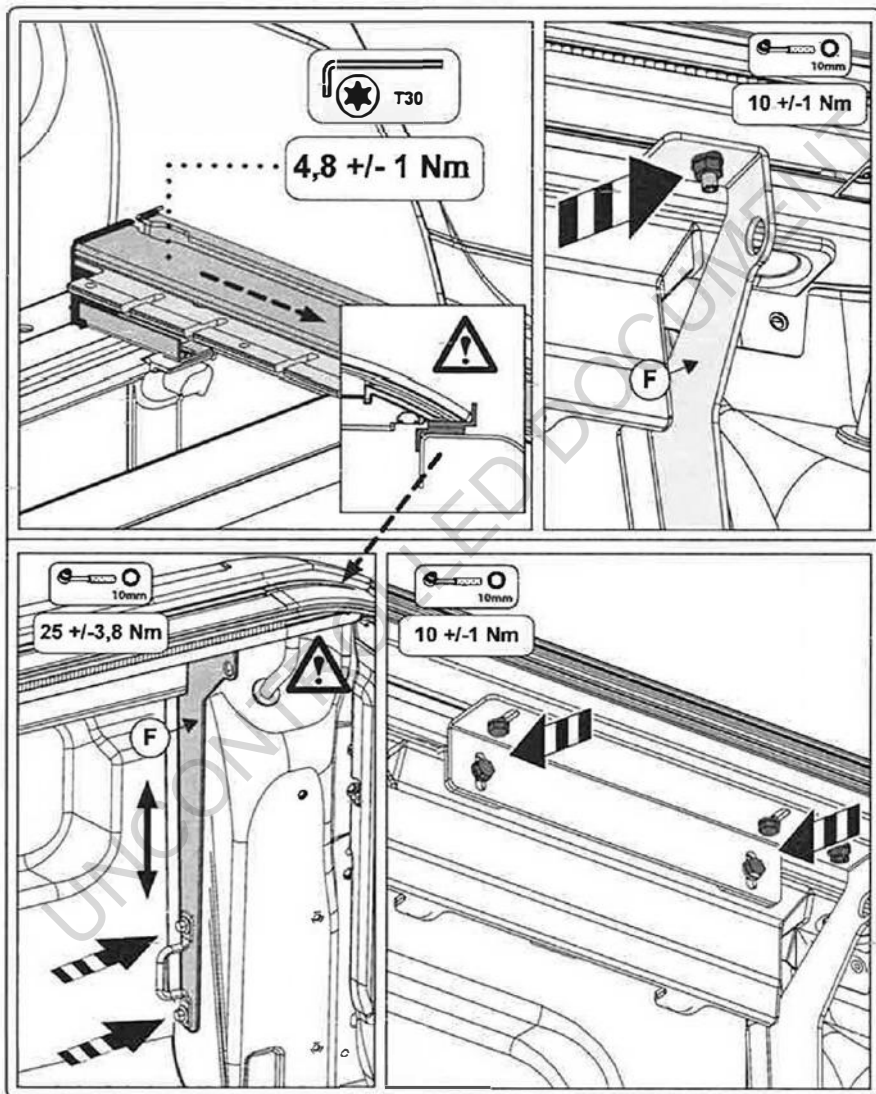


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

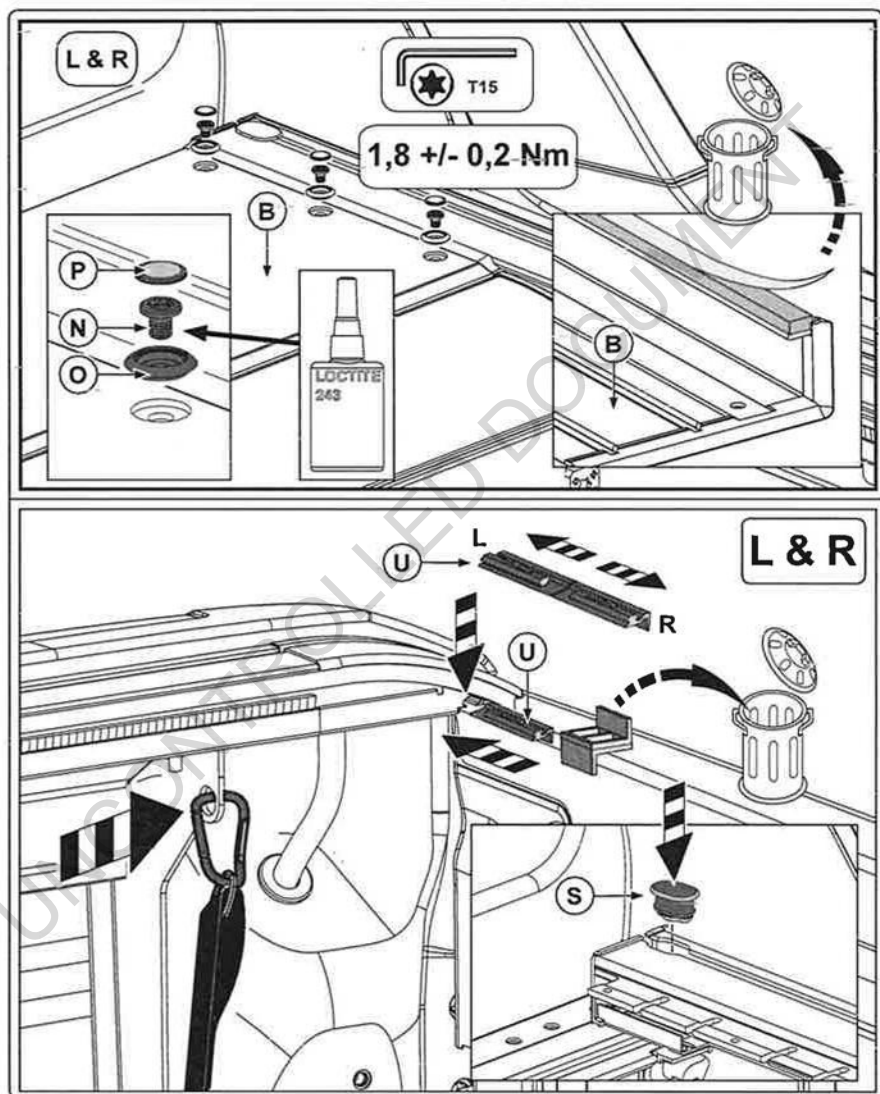


Ford Wildtrak

Red Rock Roll Cover Installation instructions

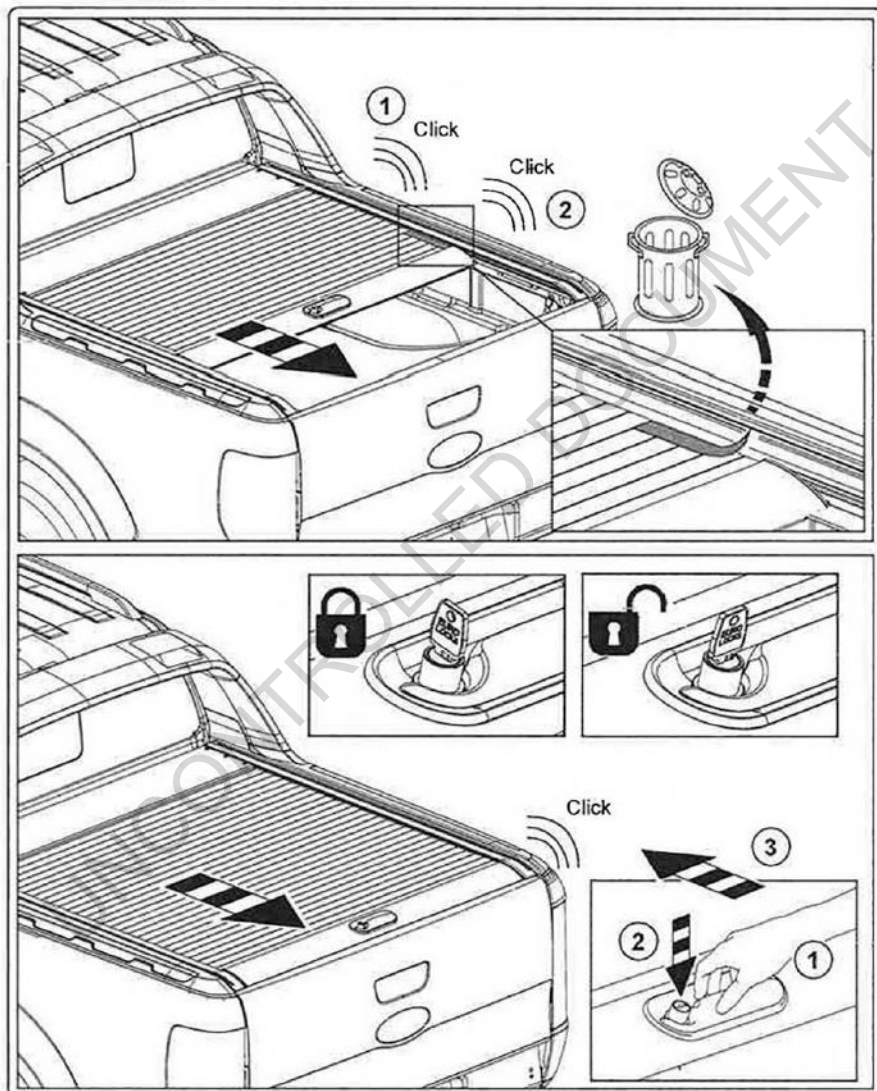


Ford Wildtrak

Red Rock Roll-Cover Installation instructions

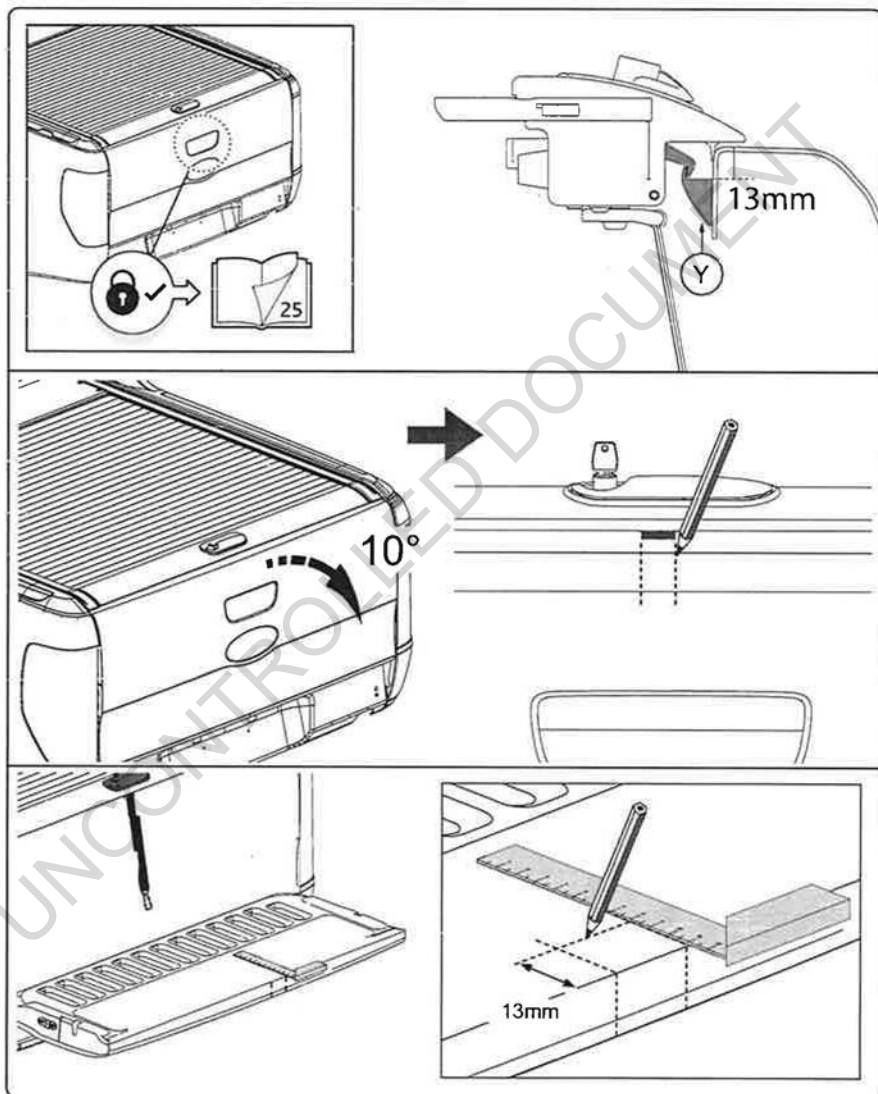

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

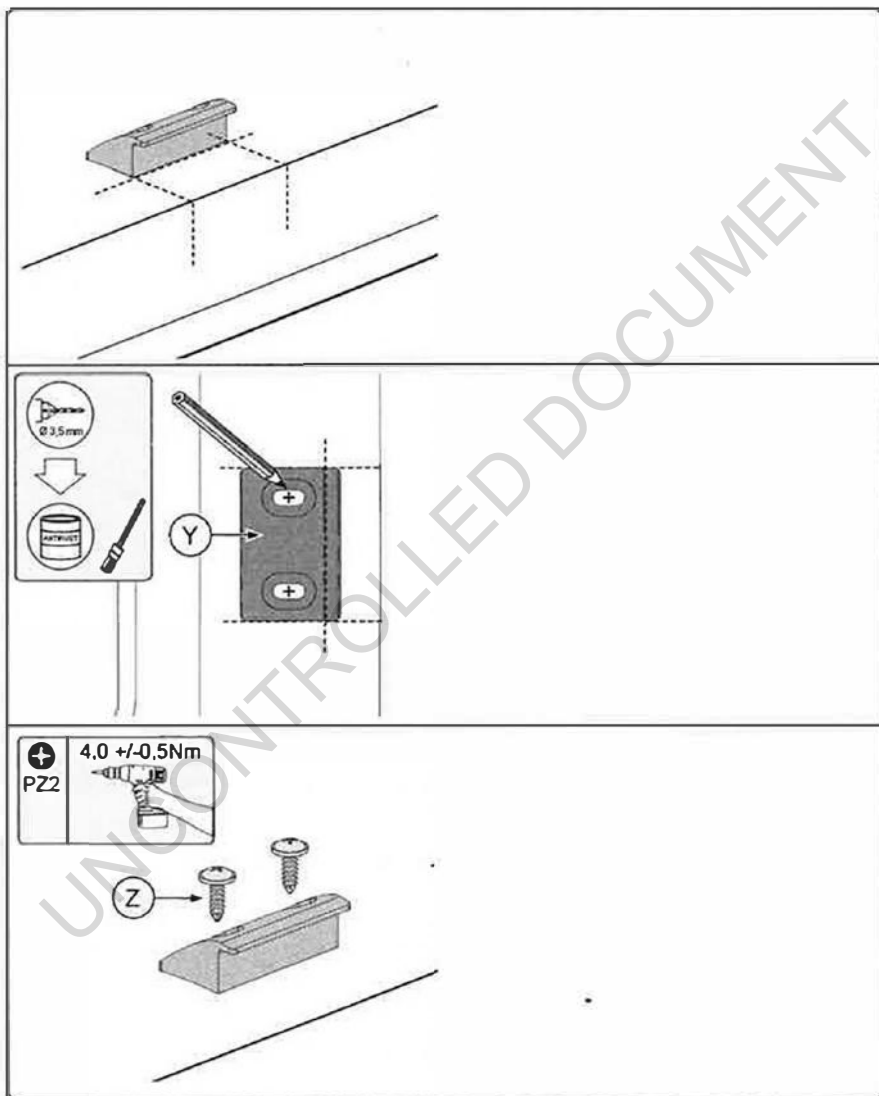

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 24/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Work\engineering\walingen\886 019.PDF

Ford Wildtrak

Red Rock Roll Cover Installation instructions

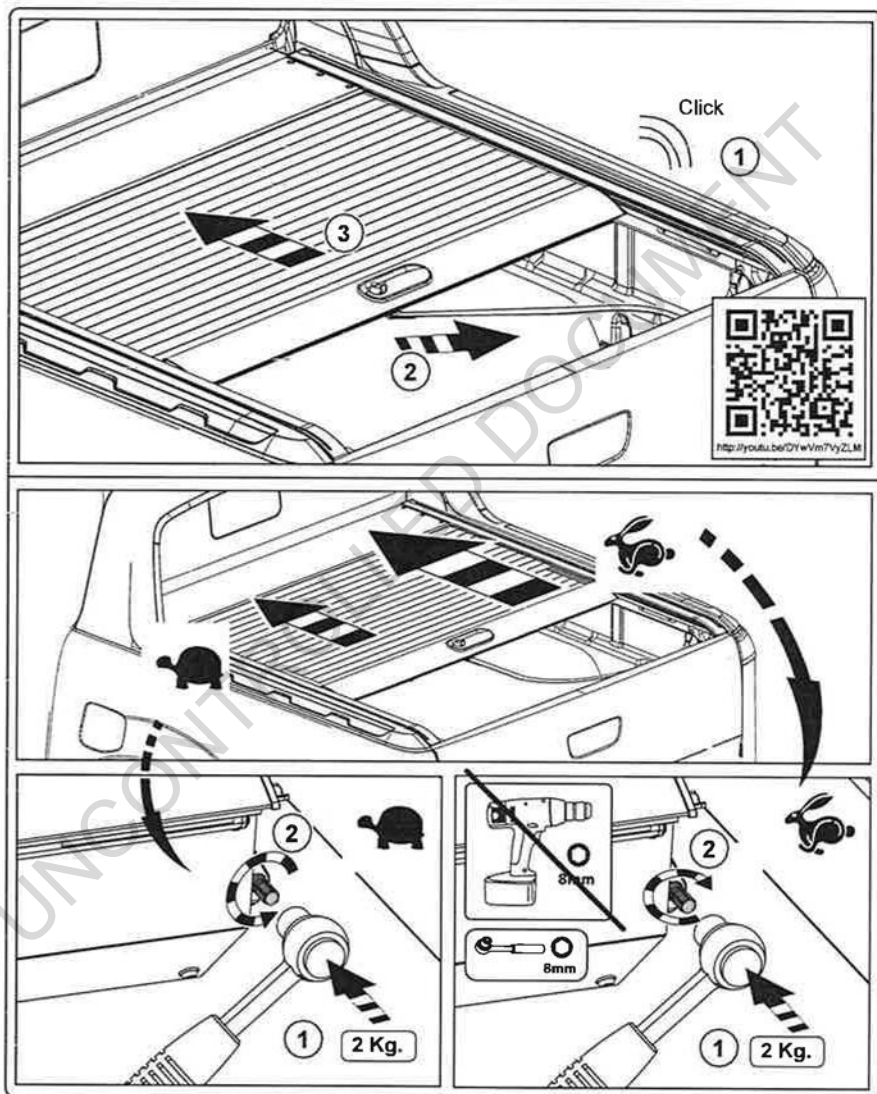

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 25/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monitoring\regled-niger\886 019 PDF

Ford Wildtrak

Red Rock Roll Cover Installation instructions

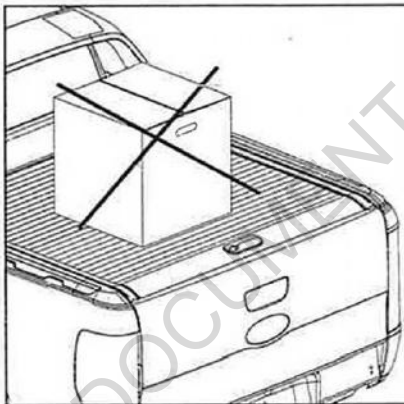

UNCONTROLLED DOCUMENT

UNCONTROLLED DOCUMENT

UNCONTROLLED DOCUMENT