

Mountain Top Roll Installation Instructions



Model Year:	TOYOTA	2005 T/D:
	FORD	2011 T/D
	ISUZU	2012 T/D
Part Number:	MTR TO80 A01	Double cab
	MTR TO81 A01	Extra cab
	MTR FO90 A01	Double cab
	MTR FO91 A01	Suber cab
	MTR IS90 A01	Double cab
	MTR IS90 S01	Double cab (black)
	MTR IS91 A01	Space cab



Weight: 31 / 36 kg.




Installation Time: 1 hr.

Video Installation intruction








<http://youtu.be/2yM2hbplCdg>



Mountain Top Roll Installation Instructions

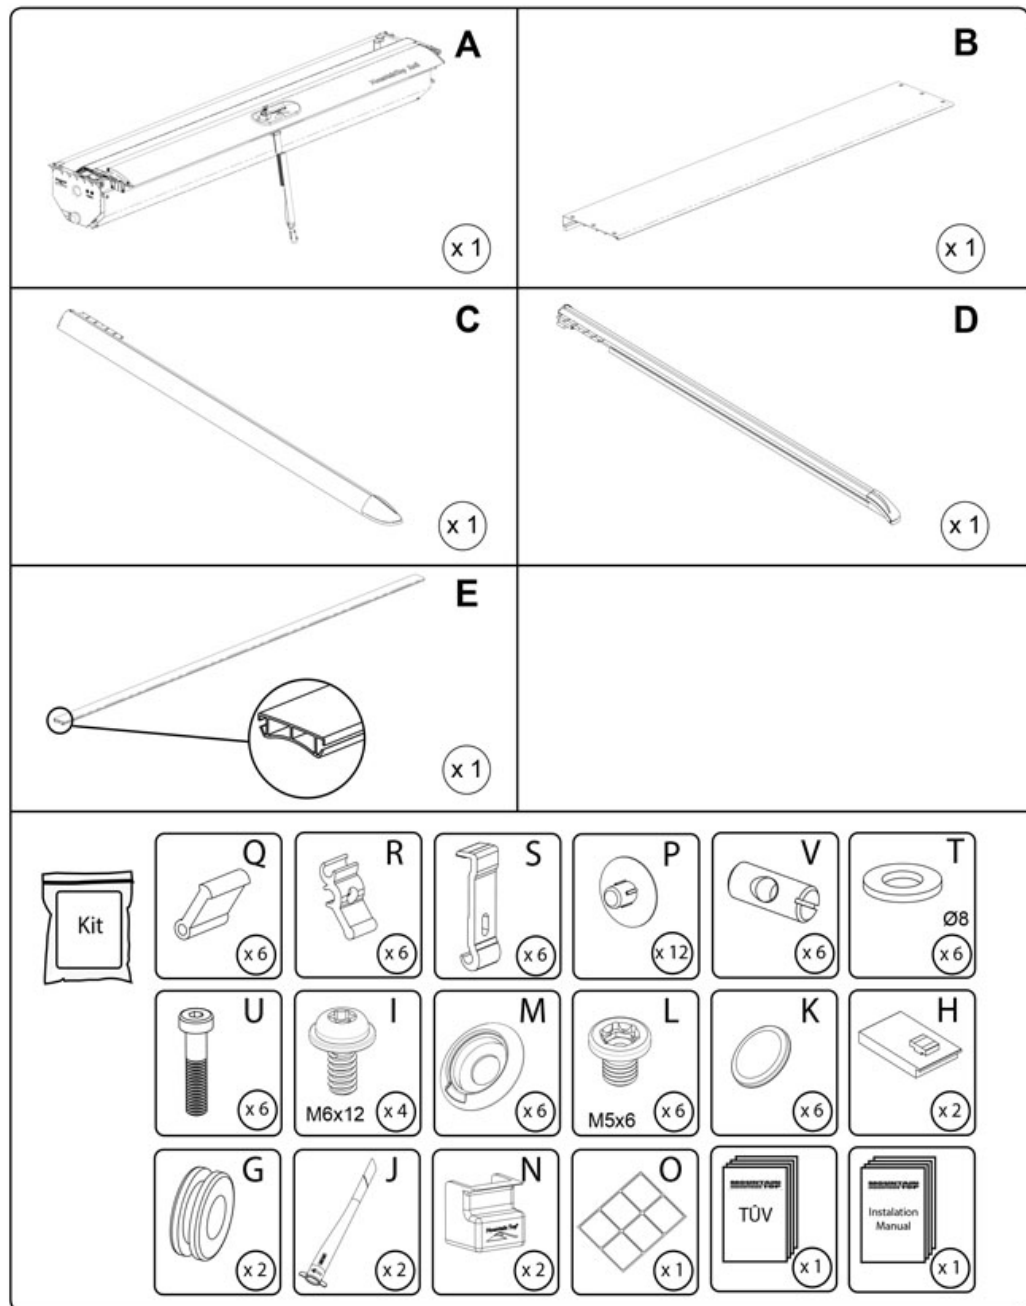

Mountain Top Roll Installation Instructions

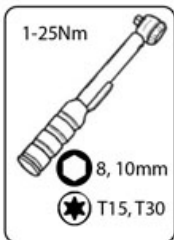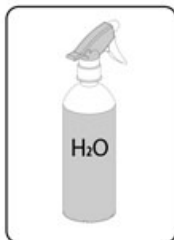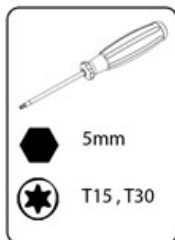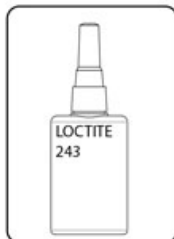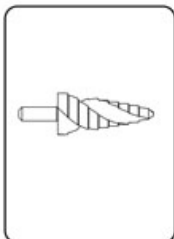


Mountain Top Roll Installation Instructions


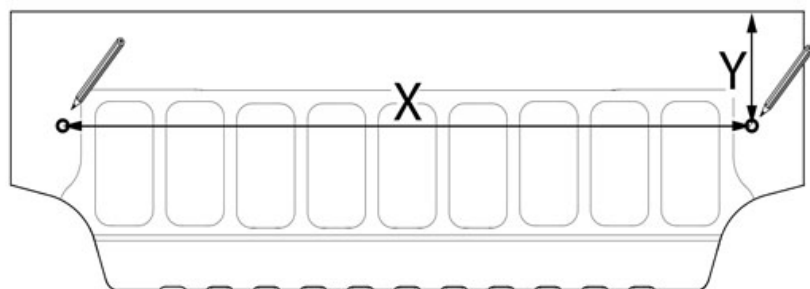
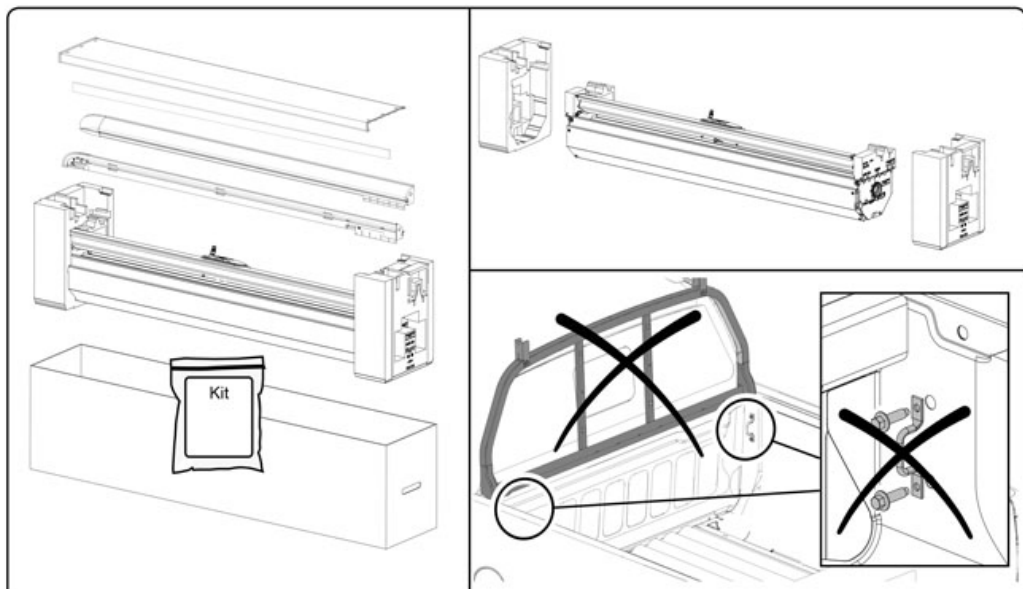


	Plain bed	
	X	Y
TOYOTA	1421	180
ISUZU	1456	190
FORD	1460	208



Mountain Top Roll Installation Instructions

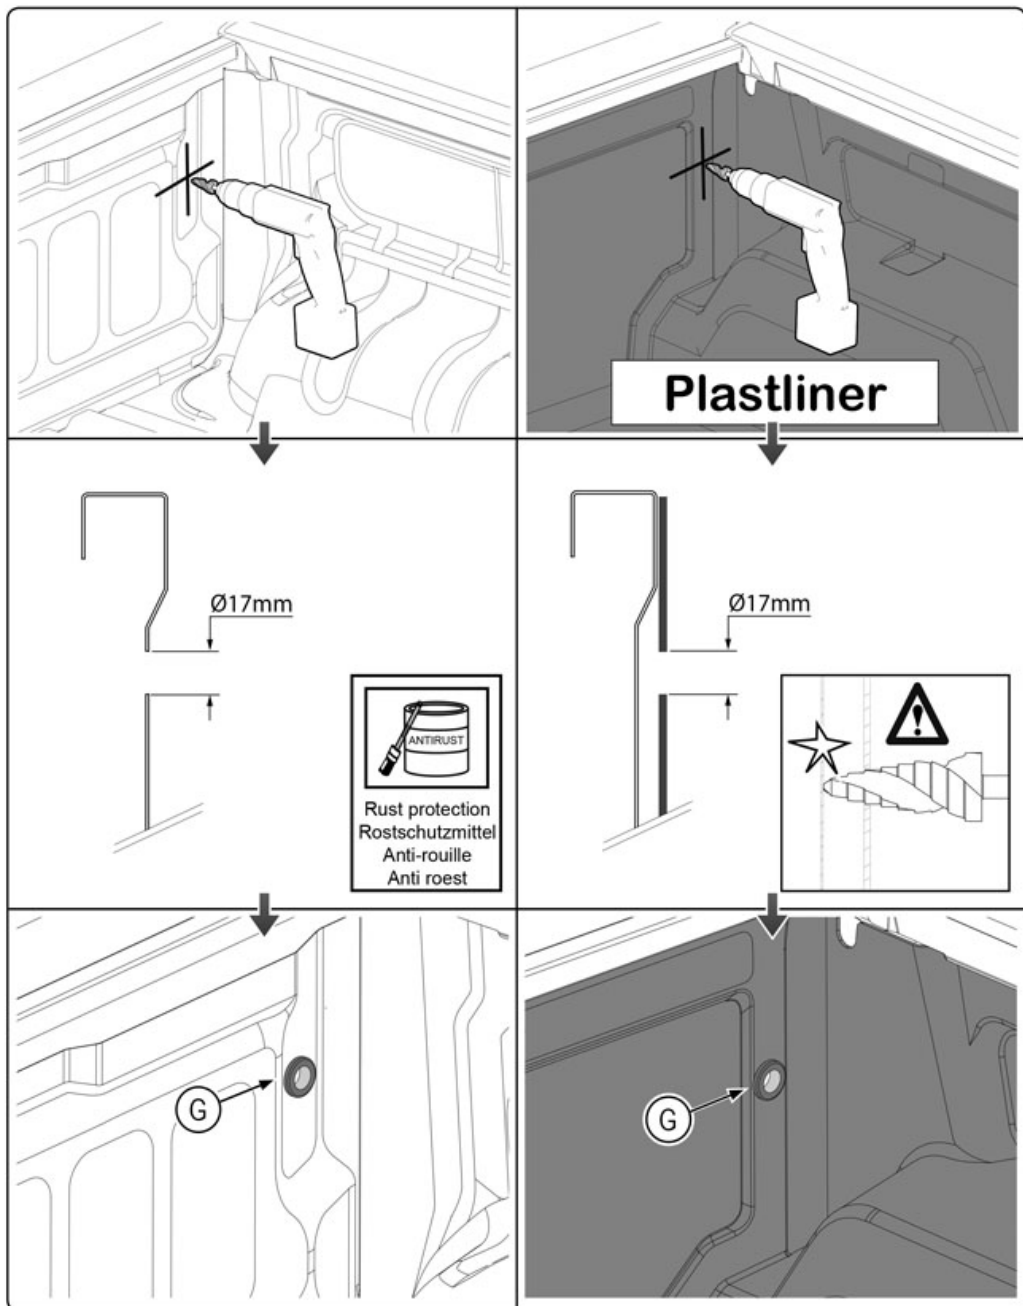


Mountain Top Roll Installation Instructions

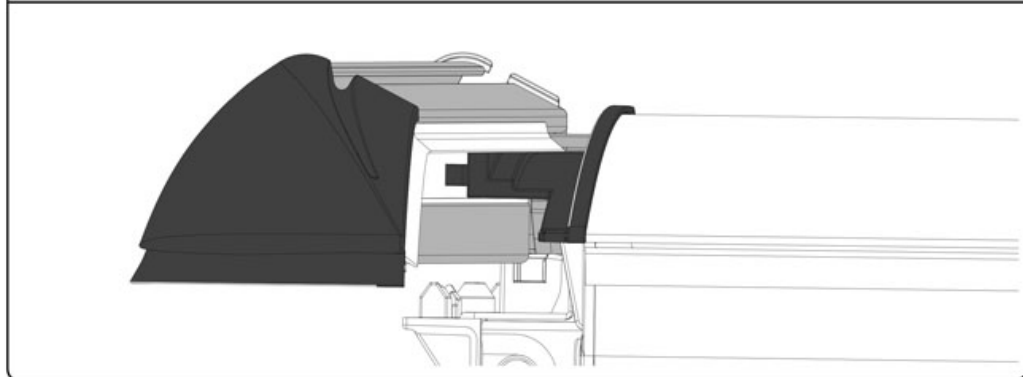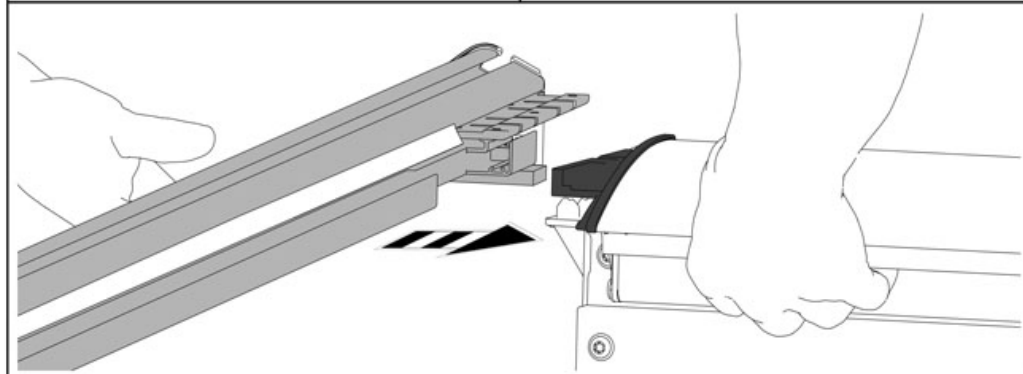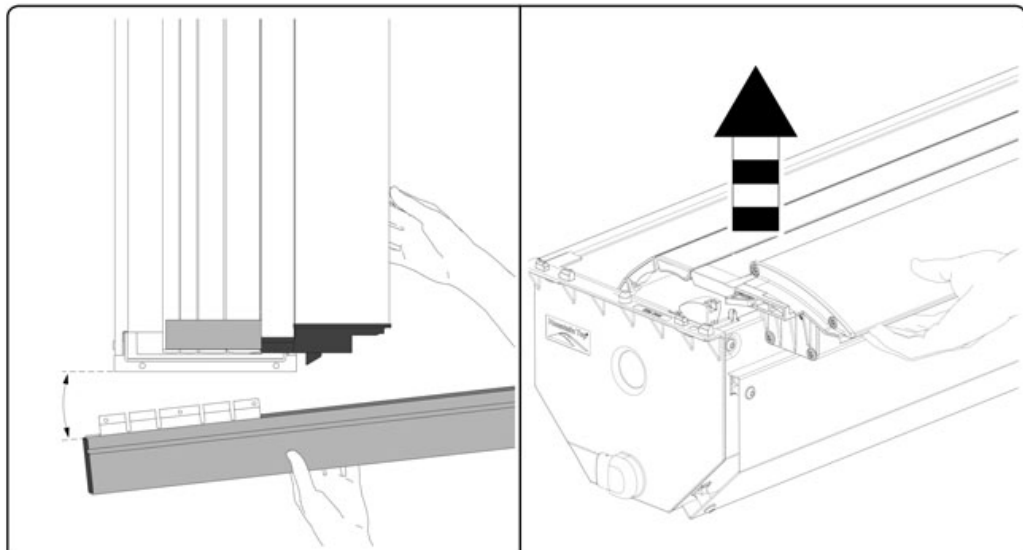

Mountain Top Roll Installation Instructions

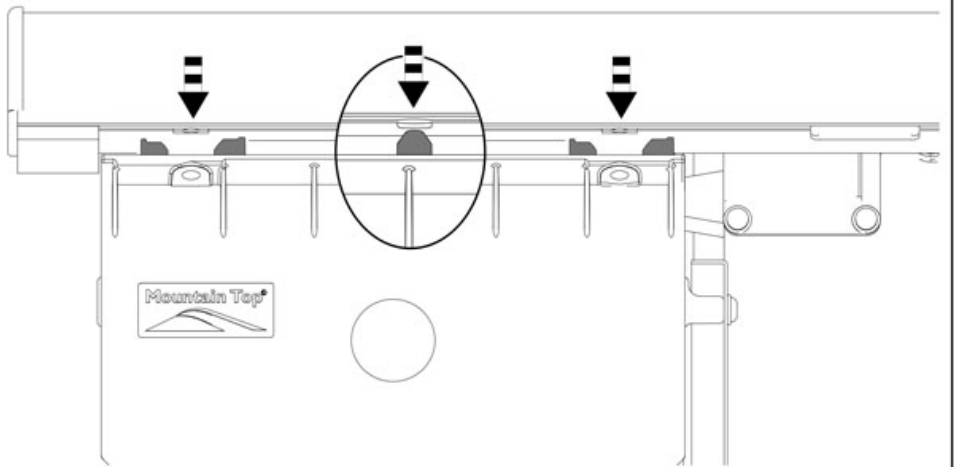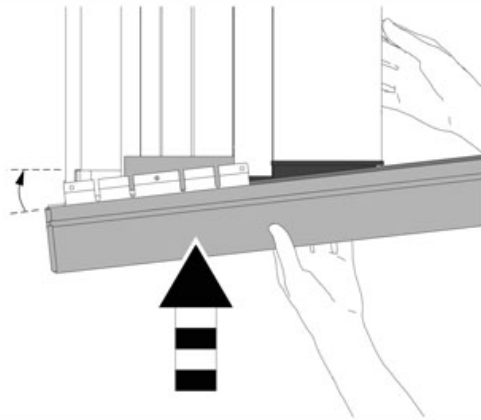

T30 4,8 +/-1Nm

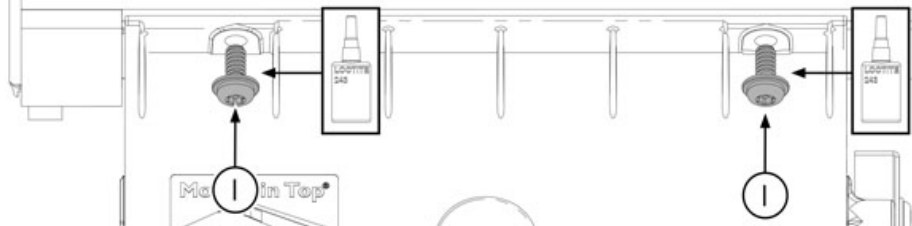

Mountain Top Roll Installation Instructions



Model Year:	TOYOTA	2005 T/D:
	FORD	2011 T/D
	ISUZU	2012 T/D
Part Number:	MTR TO80 A01	Double cab
	MTR TO81 A01	Extra cab
	MTR FO90 A01	Double cab
	MTR FO91 A01	Suber cab
	MTR IS90 A01	Double cab
	MTR IS90 S01	Double cab (black)
	MTR IS91 A01	Space cab



Weight: 31 / 36 kg.



Installation Time: 1 hr.

Video Installation intruction



<http://youtu.be/2yM2hbplCdg>

Mountain Top Roll Installation Instructions



Model Year:	TOYOTA	2005 T/D:
	FORD	2011 T/D
	ISUZU	2012 T/D
Part Number:	MTR TO80 A01	Double cab
	MTR TO81 A01	Extra cab
	MTR FO90 A01	Double cab
	MTR FO91 A01	Suber cab
	MTR IS90 A01	Double cab
	MTR IS90 S01	Double cab (black)
	MTR IS91 A01	Space cab



Weight: 31 / 36 kg.




Installation Time: 1 hr.

Video Installation intruction






<http://youtu.be/2yM2hbplCdg>




Mountain Top Roll Installation Instructions

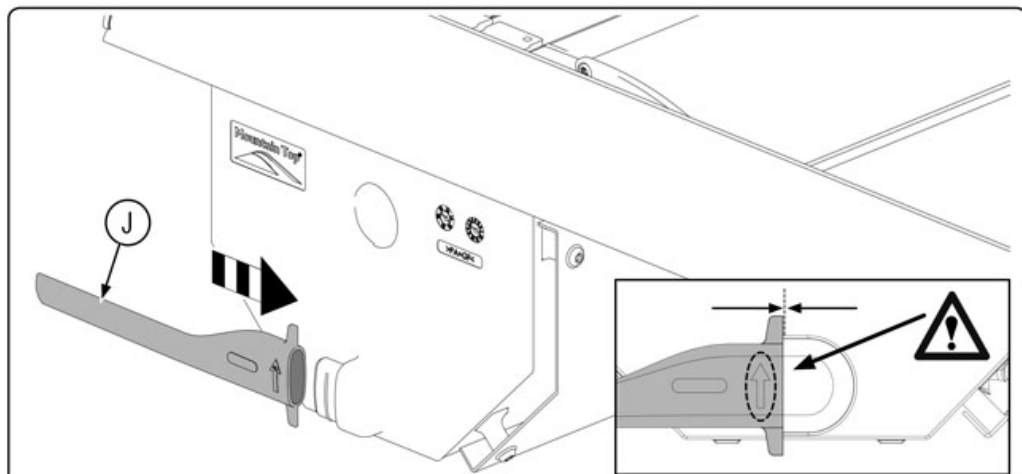




T15 1,8 +/-0,2Nm

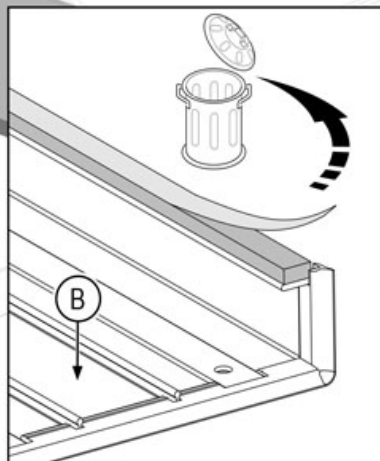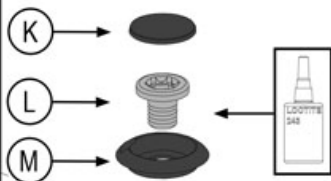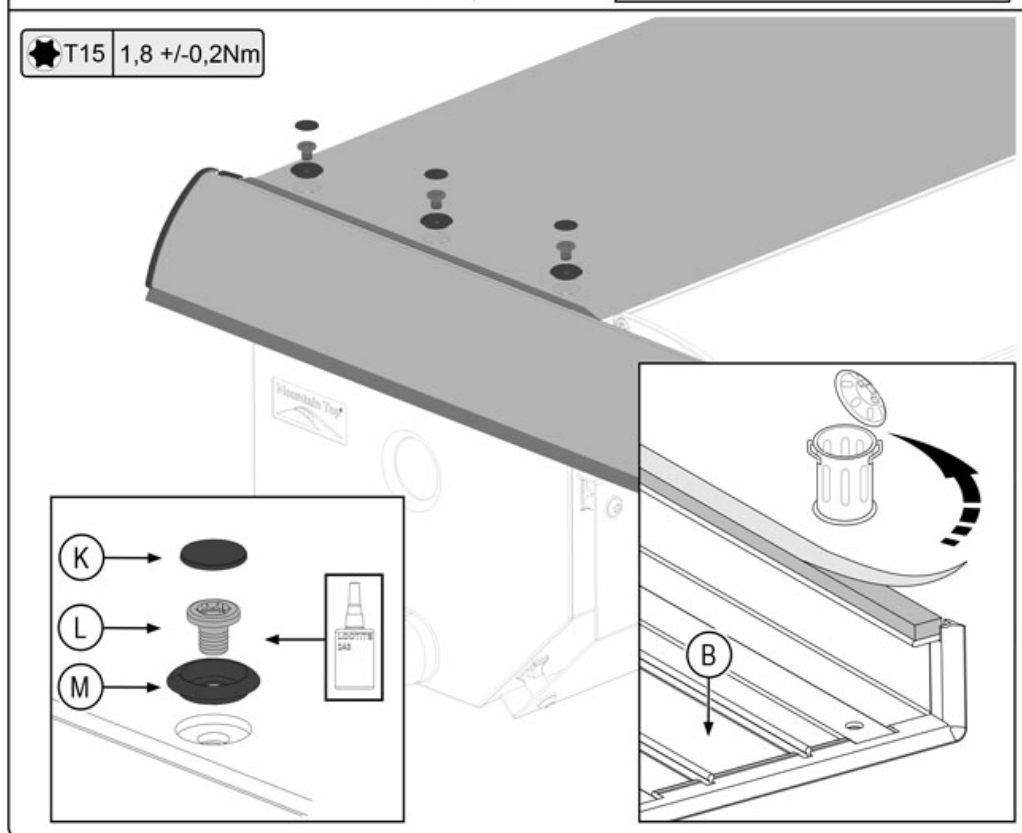




Mountain Top Roll Installation Instructions

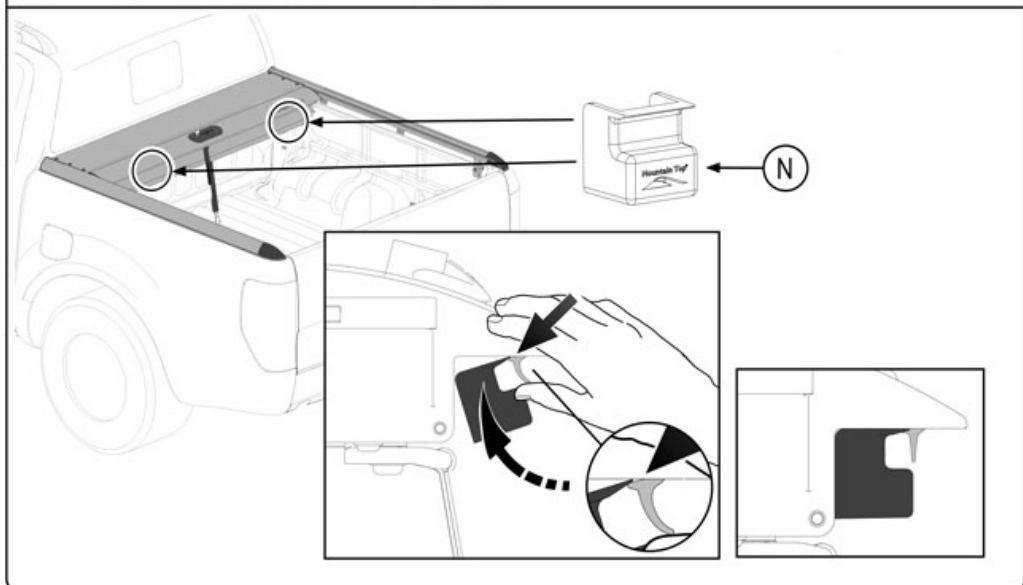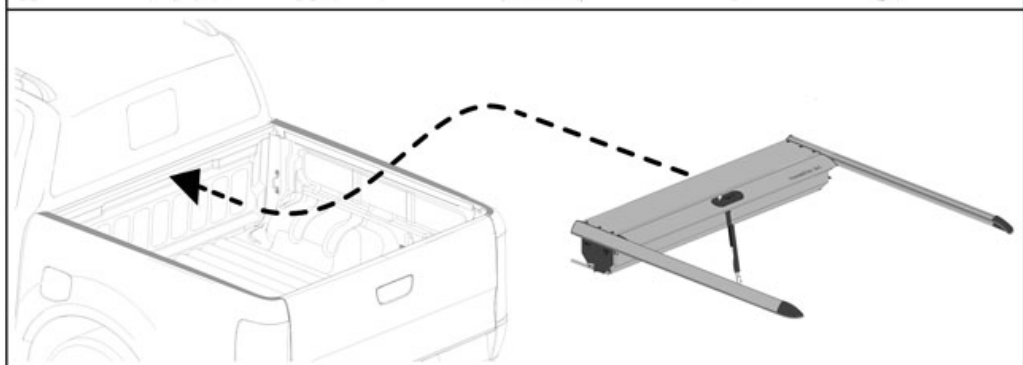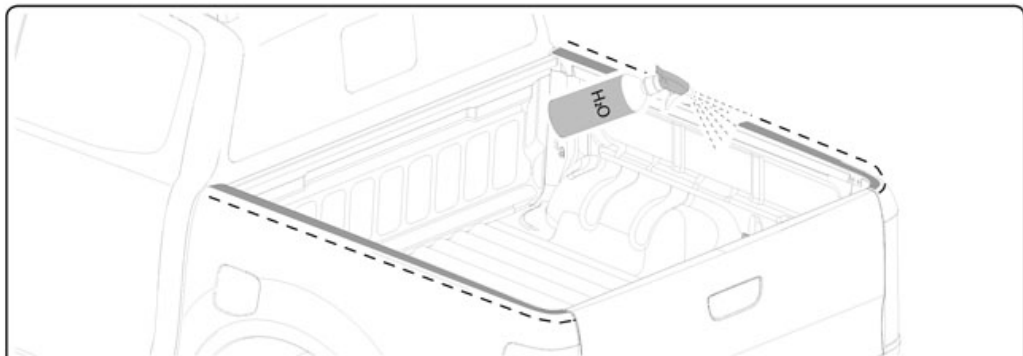



Mountain Top Roll Installation Instructions

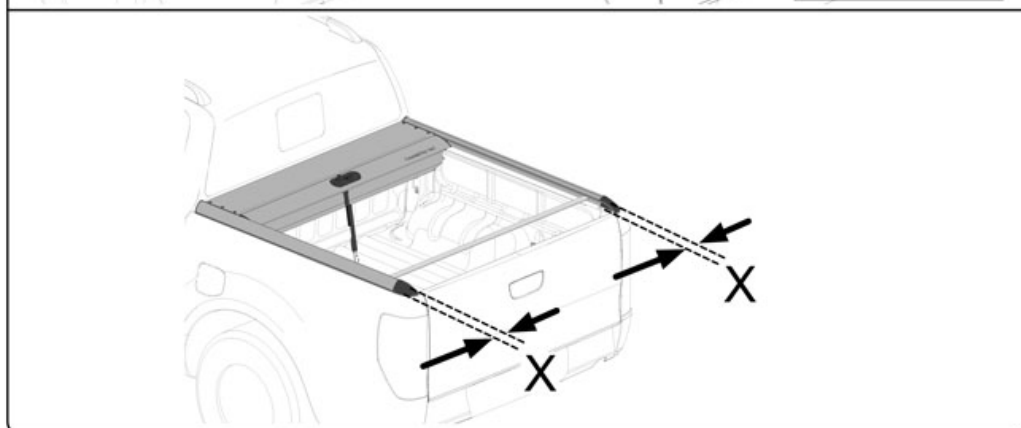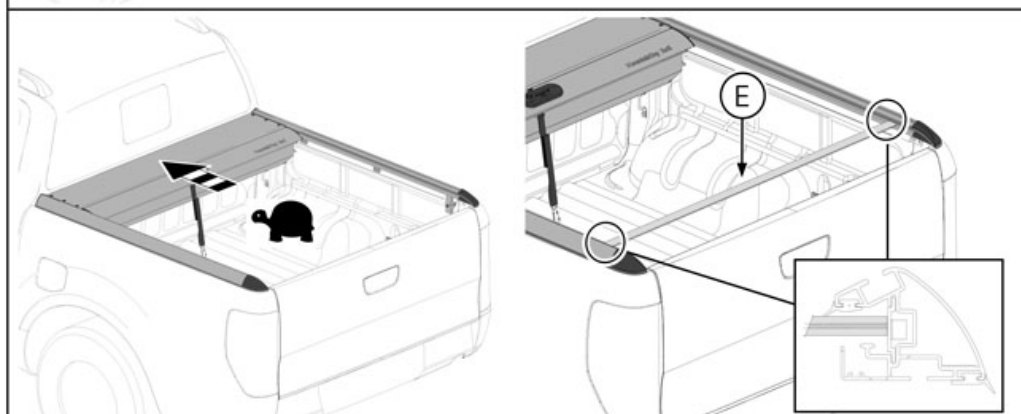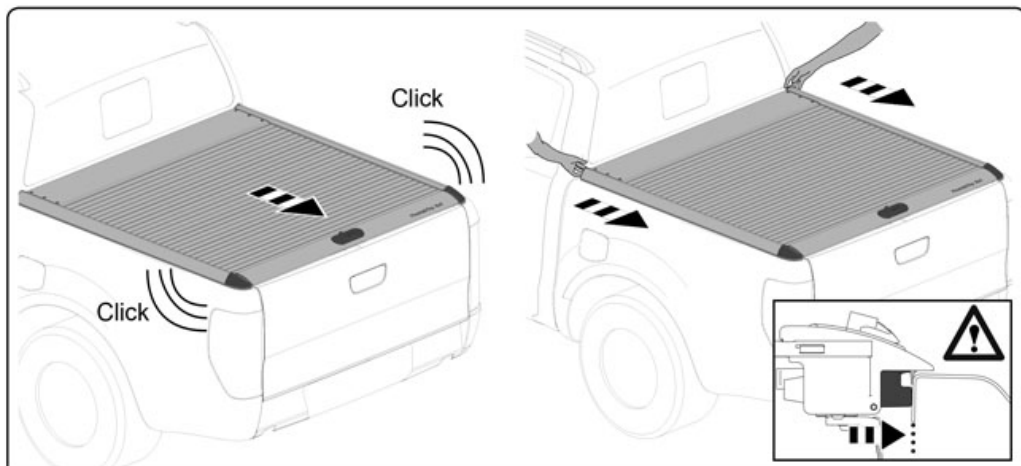


Mountain Top Roll Installation Instructions

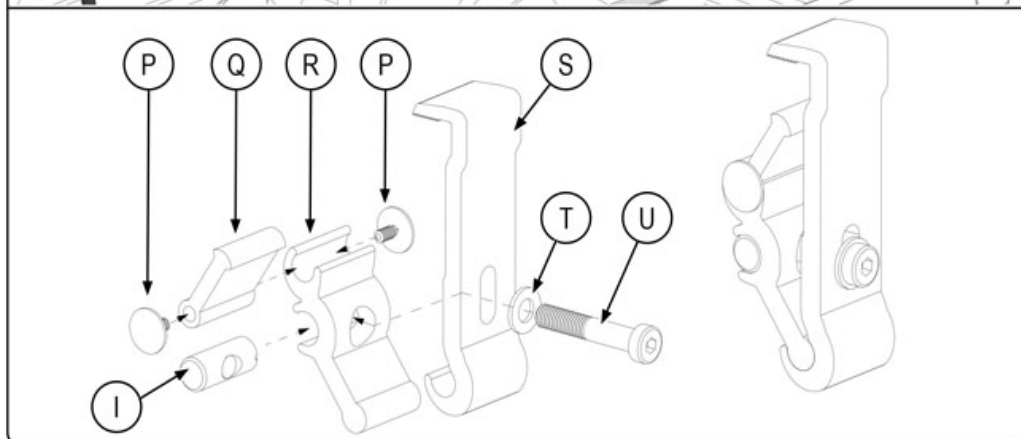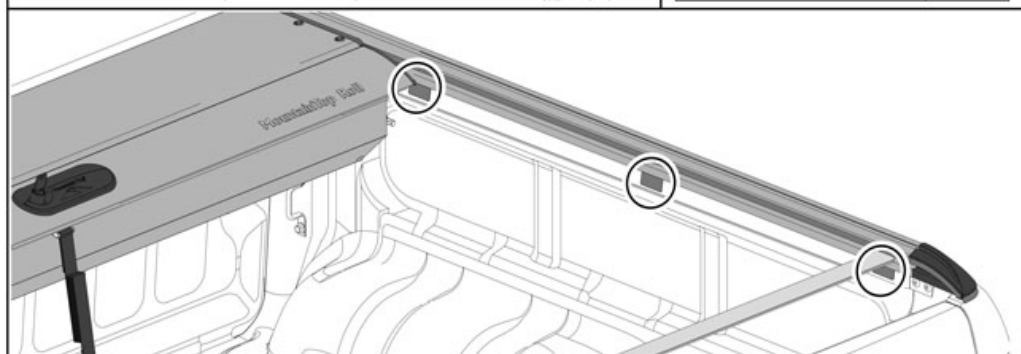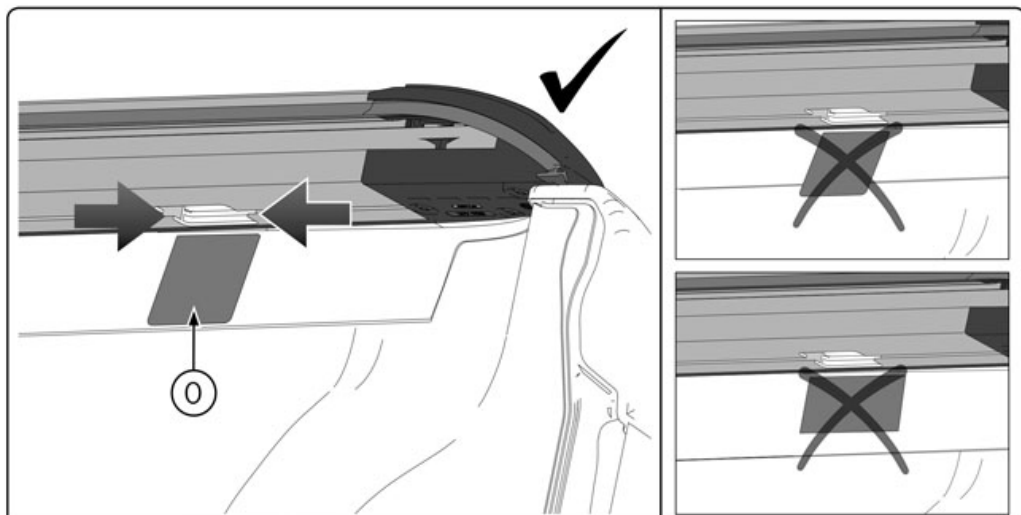

Mountain Top Roll Installation Instructions


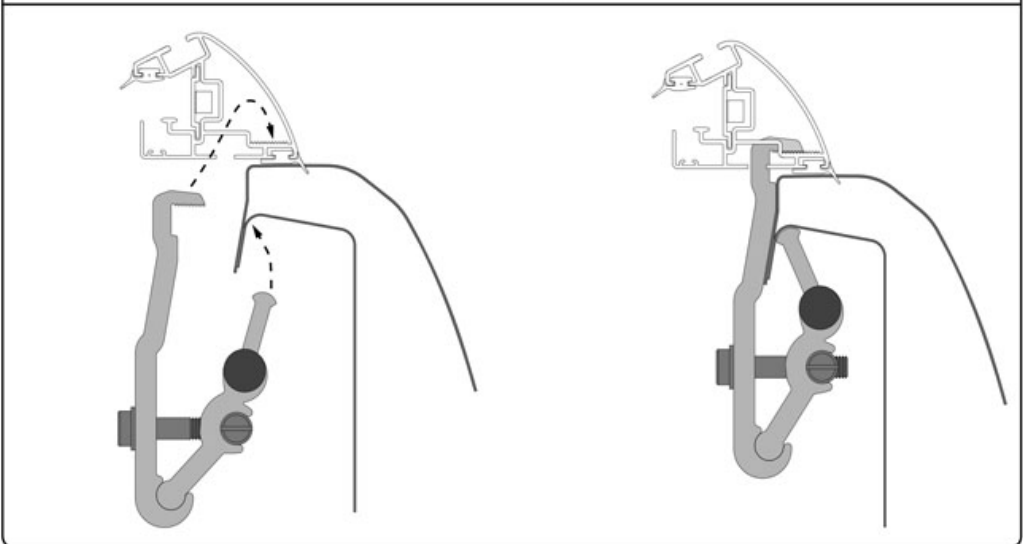
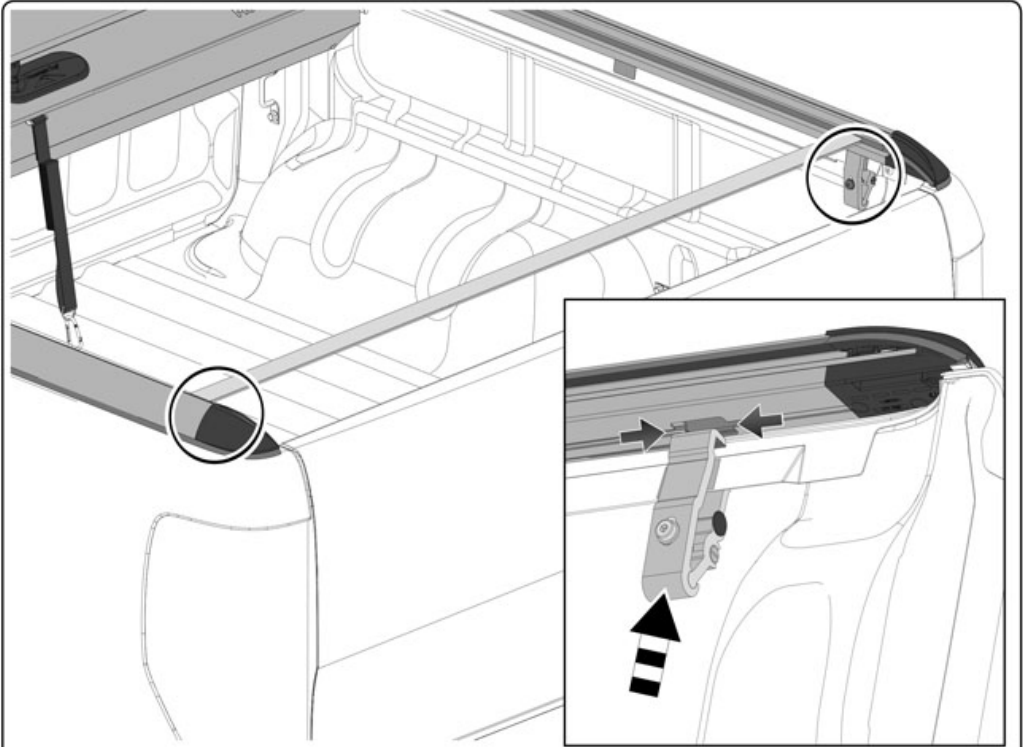


Mountain Top Roll Installation Instructions



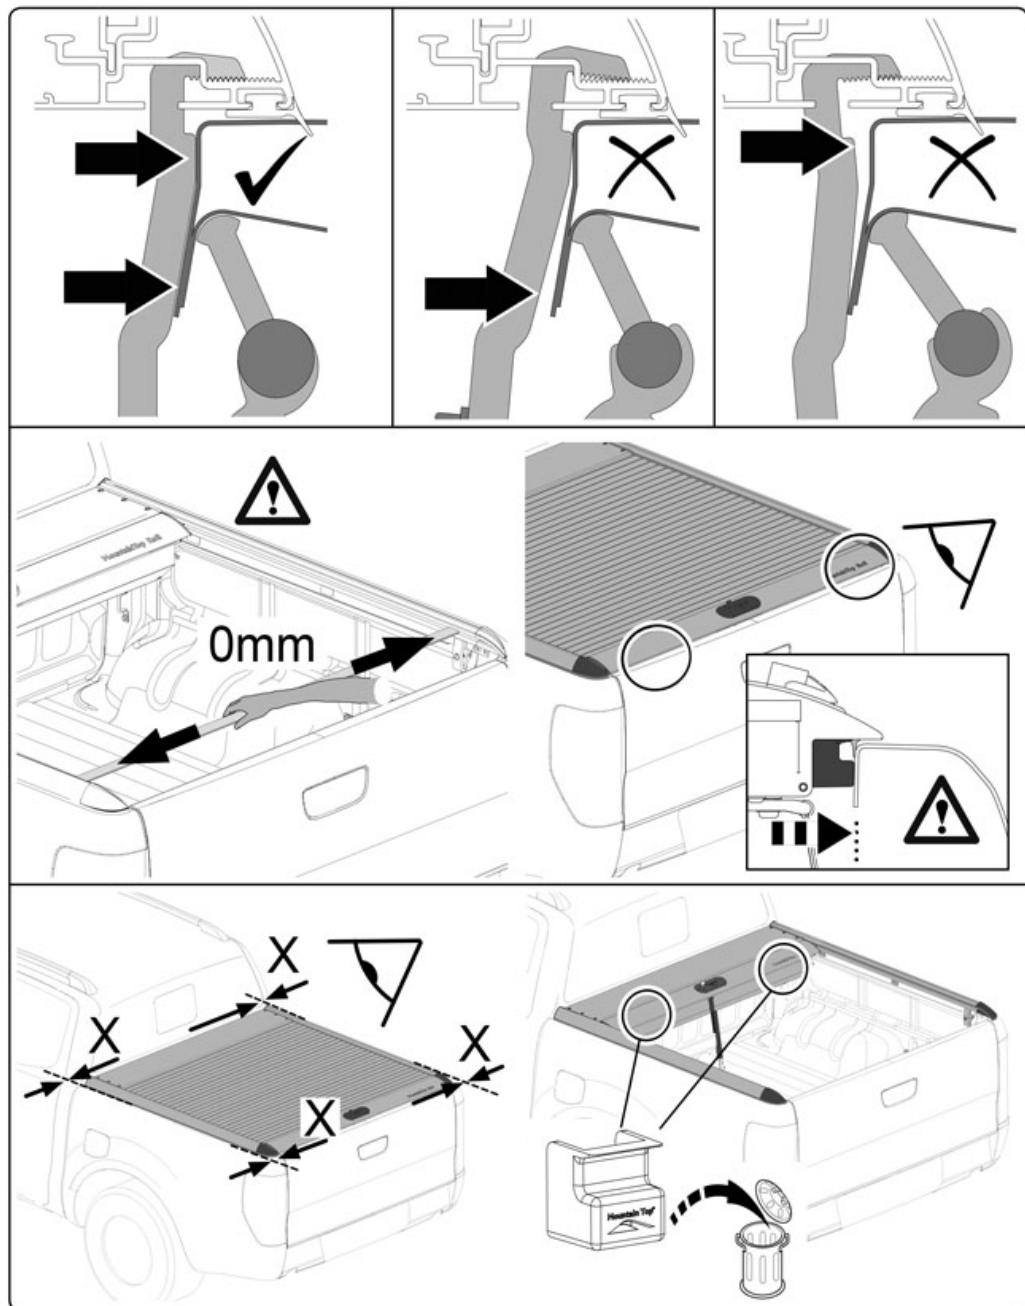


Mountain Top Roll Installation Instructions






5mm 4,0 +/-0,5Nm

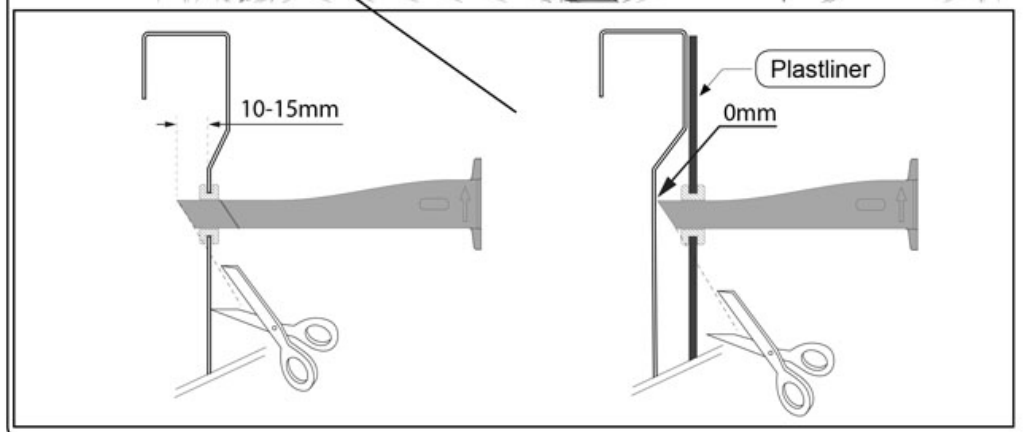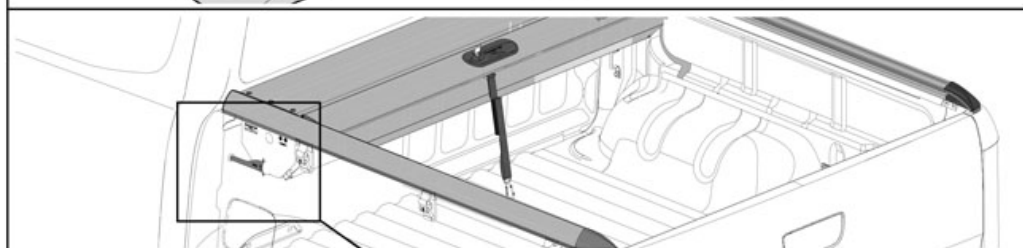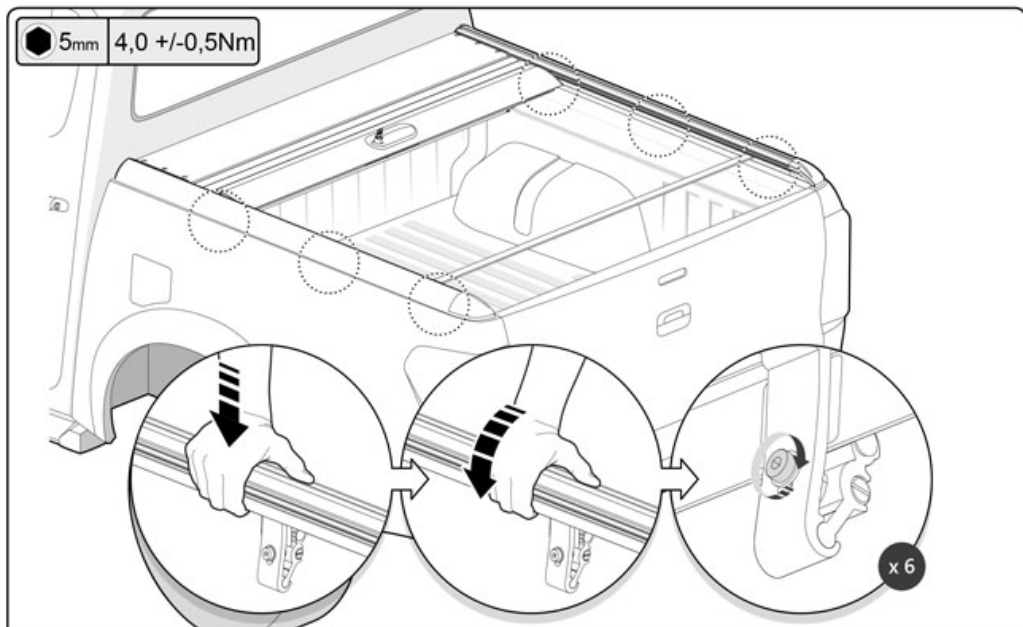

Mountain Top Roll Installation Instructions

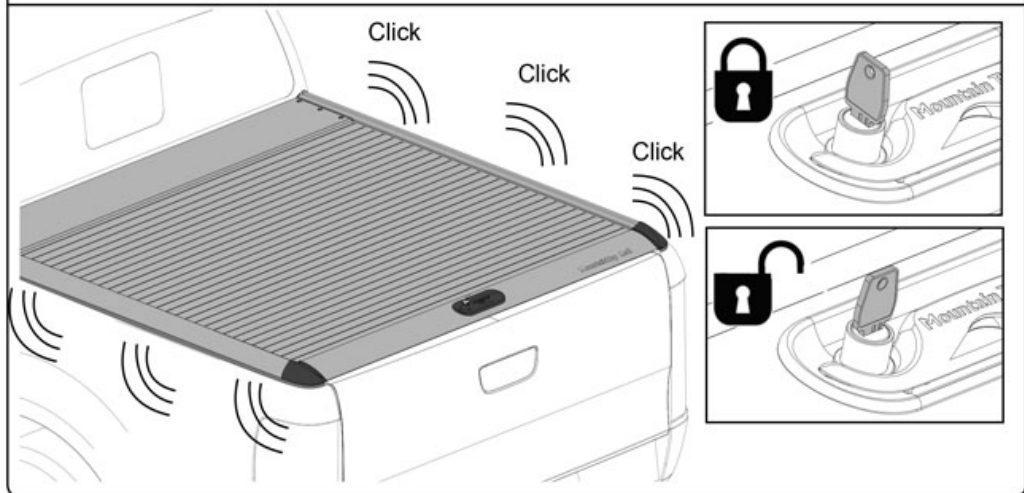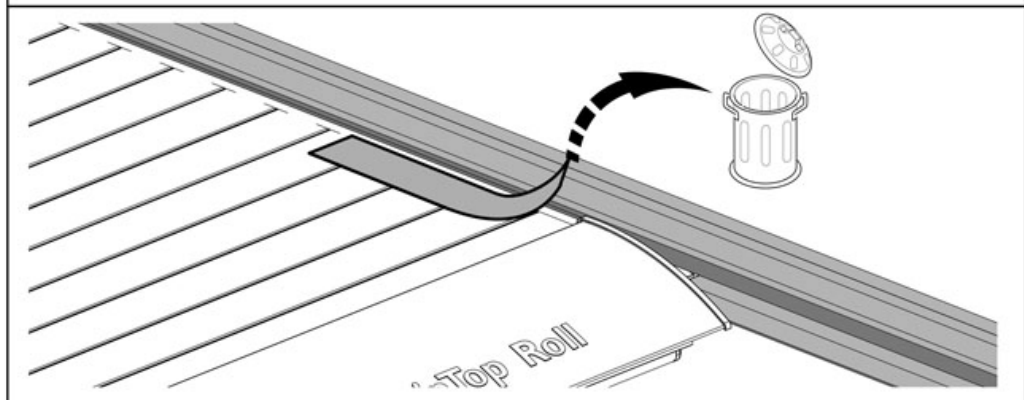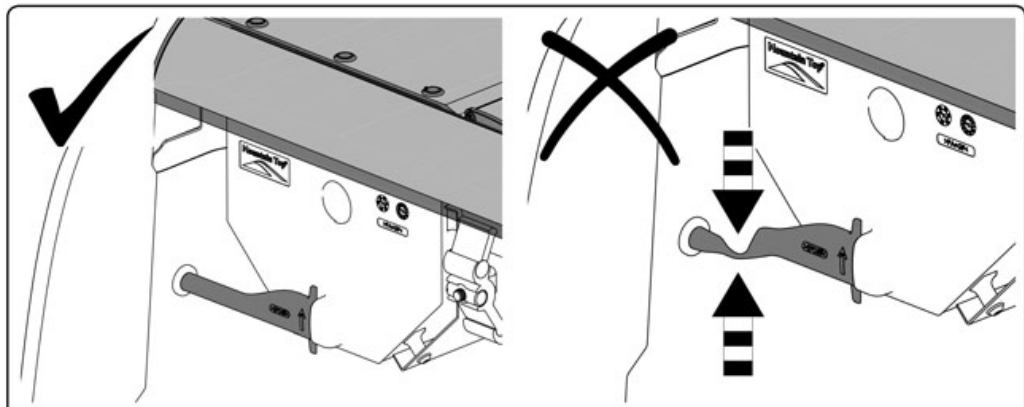

Mountain Top Roll Installation Instructions

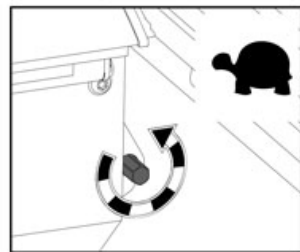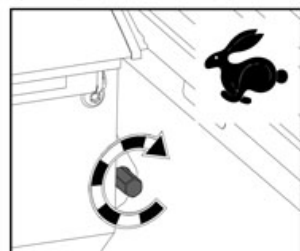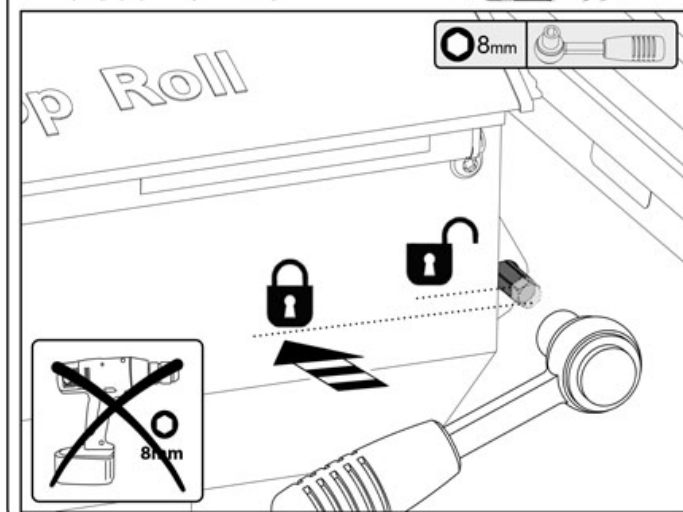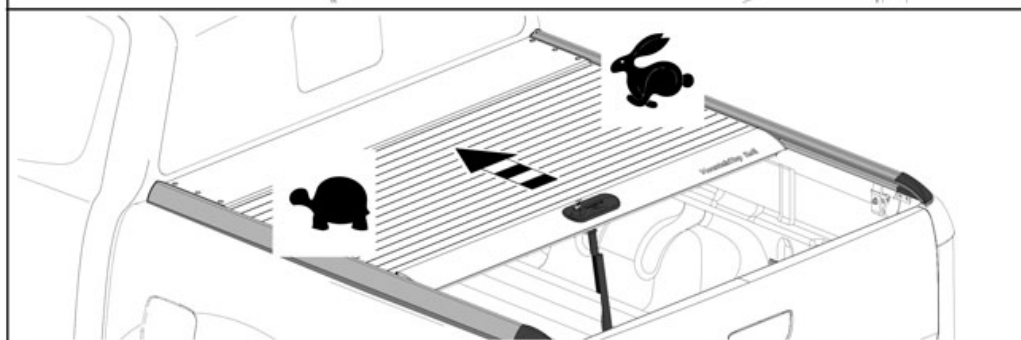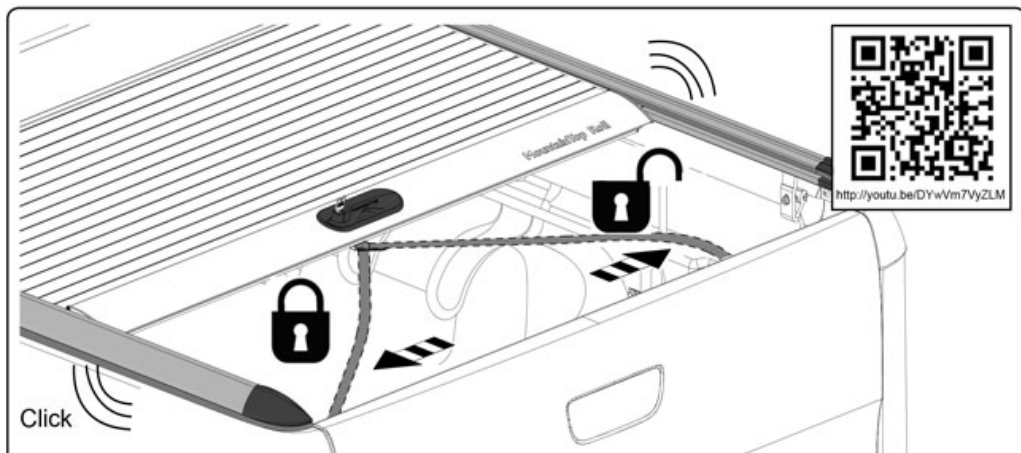

Mountain Top Roll Installation Instructions

