
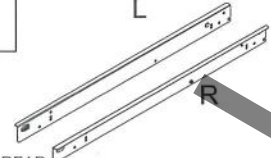
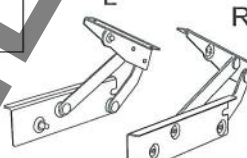

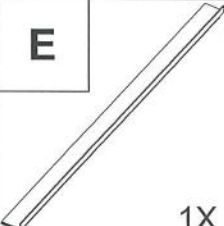

















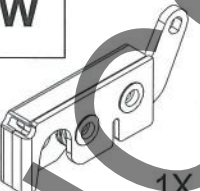
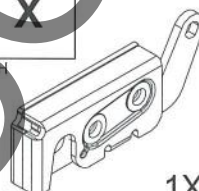





# UpStoneEvolve

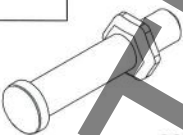
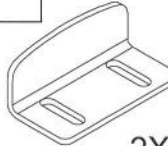
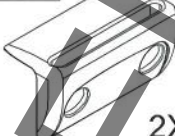
## INSTALLATION INSTRUCTIONS K403

<b>A</b>  1X	<b>B</b>  1X	<b>C</b>  1X	<b>D</b>  2X
<b>E</b>  1X	<b>F</b>  4X	<b>G</b>  4X	<b>H</b>  6X
<b>I</b>  2X	<b>J</b>  4X	<b>K</b>  2X	<b>L</b>  2X
<b>M</b>  2X	<b>N</b>  2X	<b>O</b>  2X	<b>P</b>  12X
<b>Q</b>  12X	<b>R</b>  8X	<b>S</b>  4X	<b>T</b>  4X
<b>U</b>  4X	<b>V</b>  4X	<b>W</b>  1X	<b>X</b>  1X
<b>Y</b>  2X	<b>Z</b>  2X	<b>AA</b>  2X	

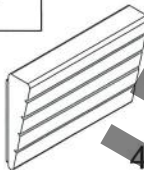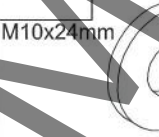
**Note 1:** If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.

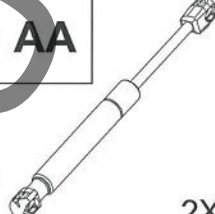**Note 2:** If required, use Under Rail Bed Liner only. **NOT FOR USE WITH OVER RAIL BED LINER!**


Tools Required:

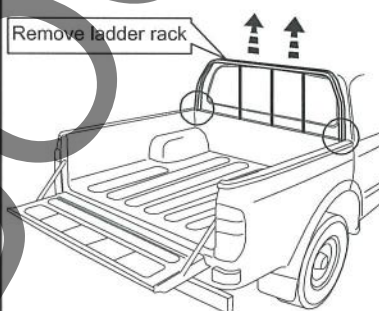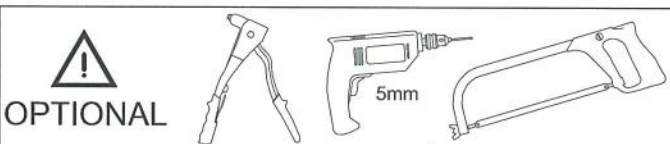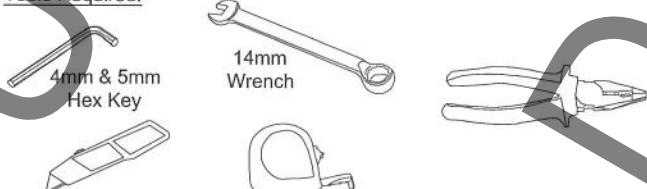

**Note 2:** If required, use Proform Under Rail Bed Liner only. Not for use with Over Rail Bed Liner.

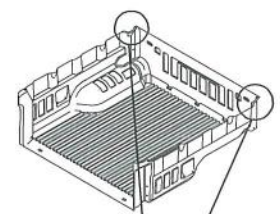

Follow guide lines to trim liner in front corners.

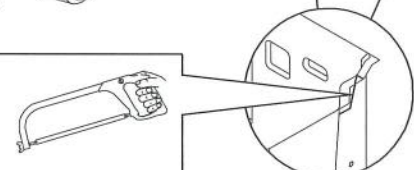

1

Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	1 of 6

2

Vehicle Model	$\alpha$
Toyota Hilux Double Cab 2005 N25S, N25T	1
Isuzu D-Max Double & Extra Cab 2012 ATFS, ATFR	N/A - Do Not Fit
Volkswagen Amarok Double Cab 2010 2H, 2HS2	1
Ford Ranger T6 Double Cab 2011 2AB	2

3

4

Place front of side mounting brackets back from inside corners of the cargo box - See table for measurement

5







6

7

Vehicle Model	$\beta$	$\delta$	$\varphi$
Toyota Hilux Double Cab 2005 N25S, N25T	70.4mm	4	2
Isuzu D-Max Double & Extra Cab 2012 ATFS, ATFR	69mm	1	2
Ford Ranger T6 Double Cab 2011 2AB	72.4mm	4	3
Volkswagen Amarok Double Cab 2010 2H, 2HS2	70.4mm	3	1






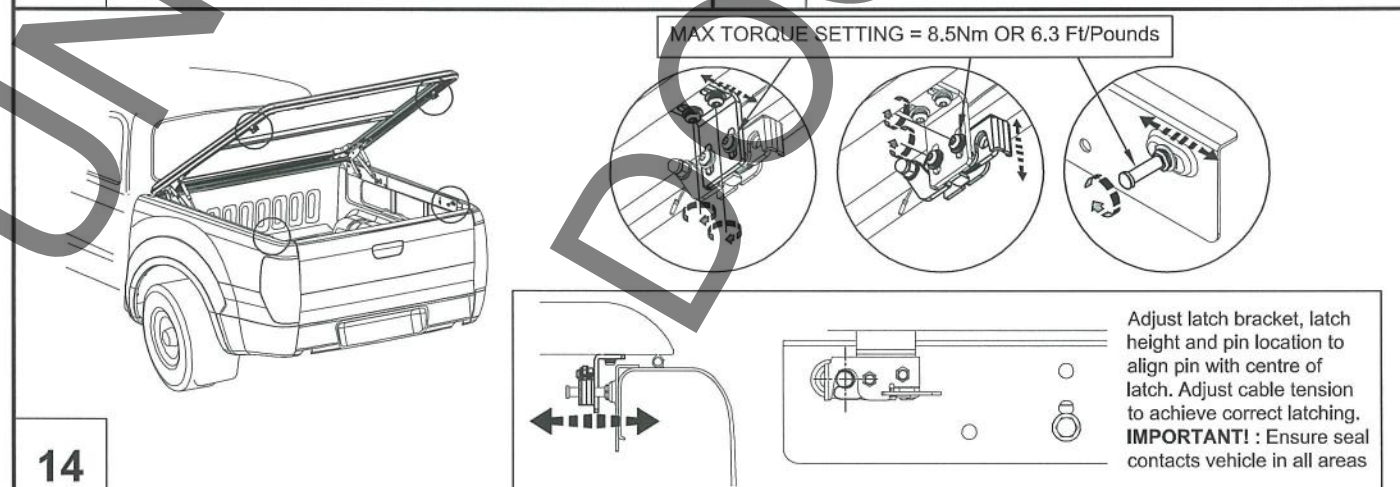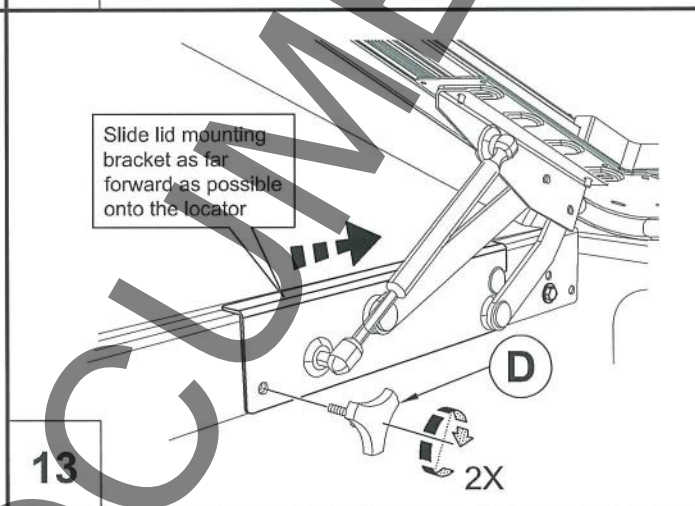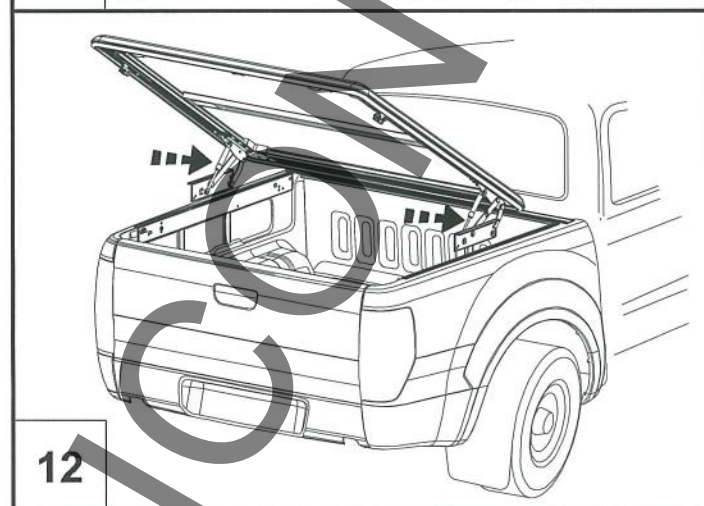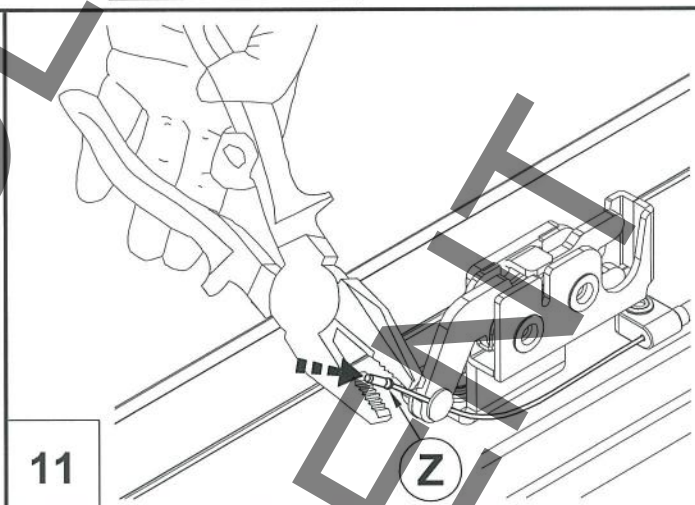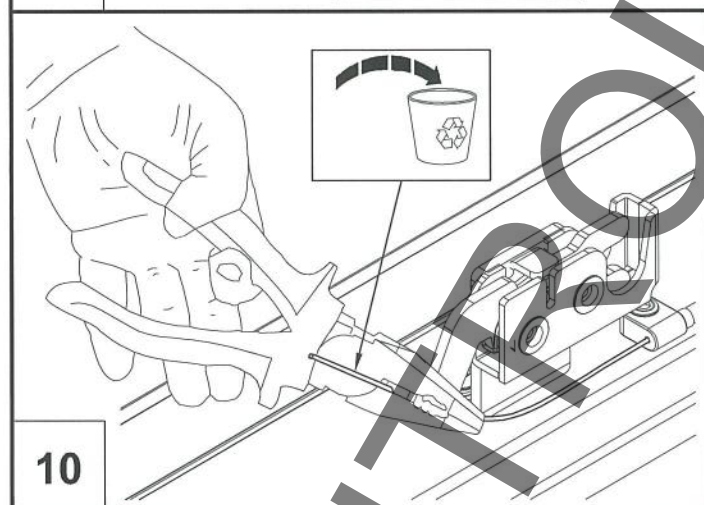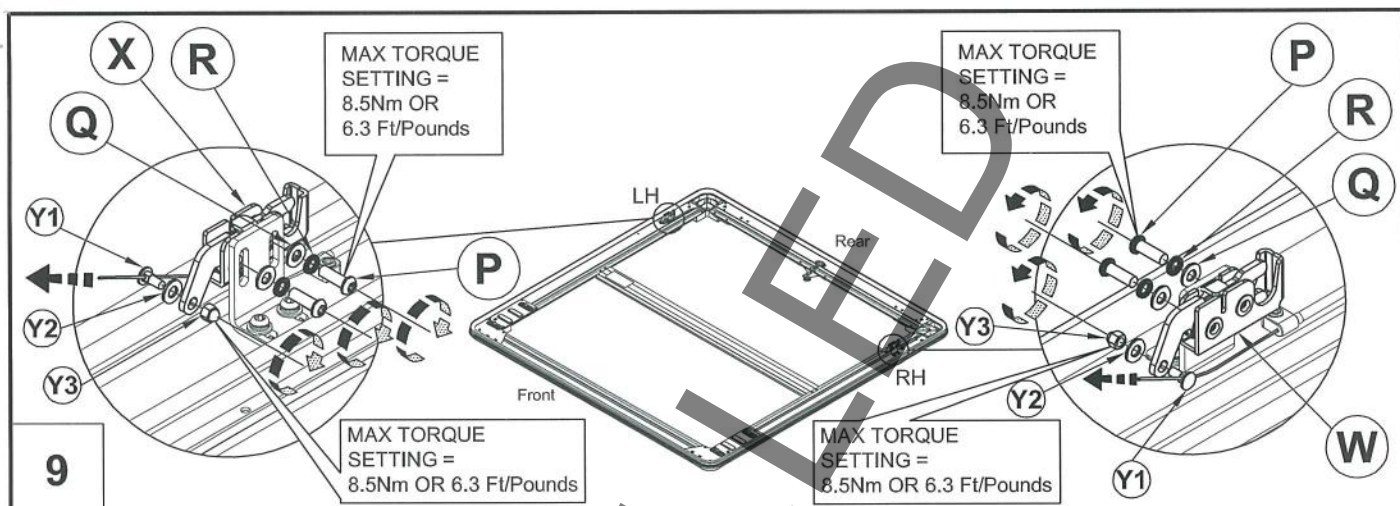


Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	4 of 6




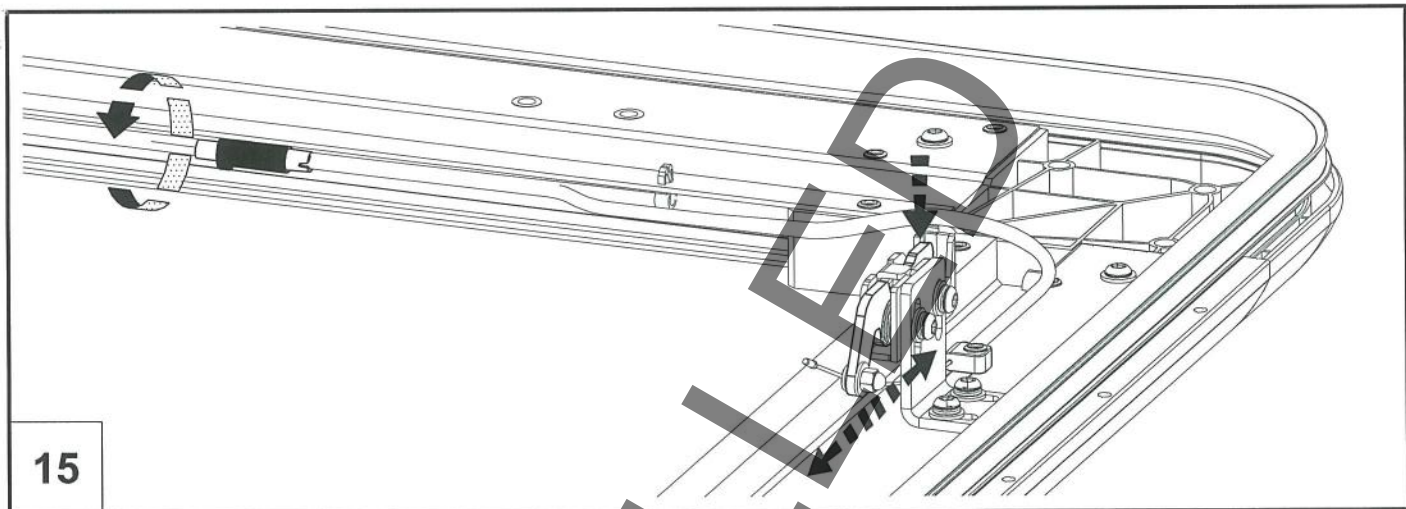


15

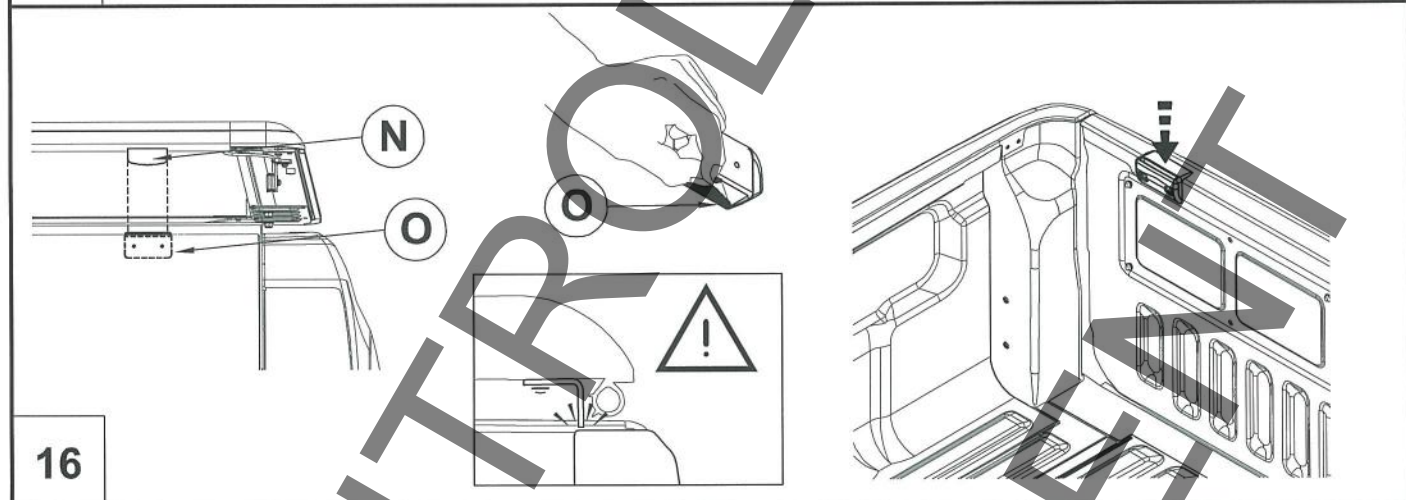

16

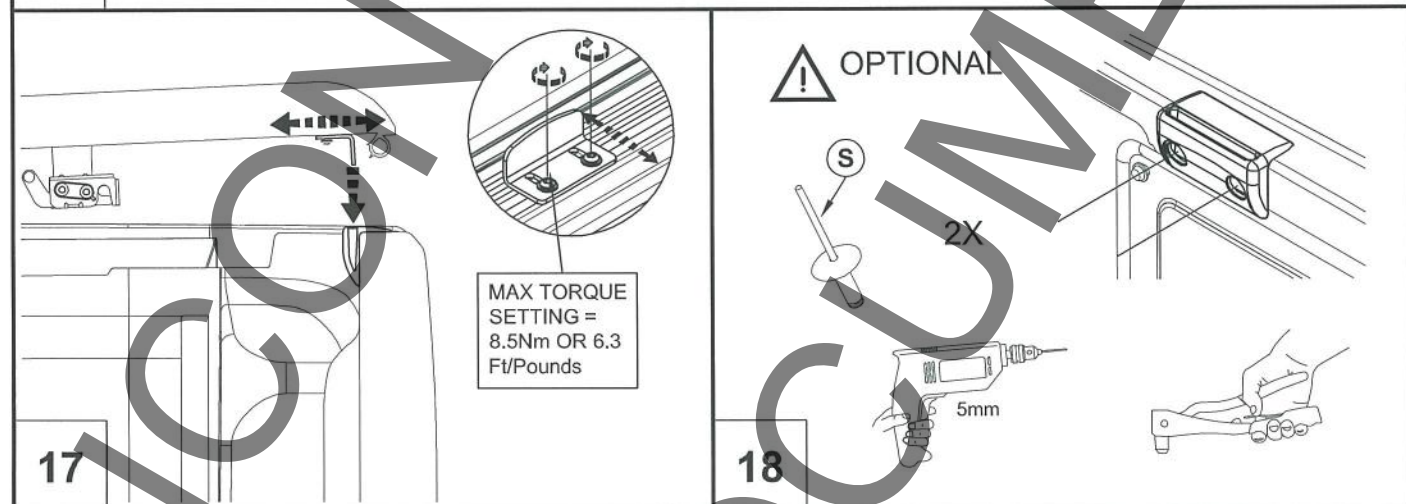

17

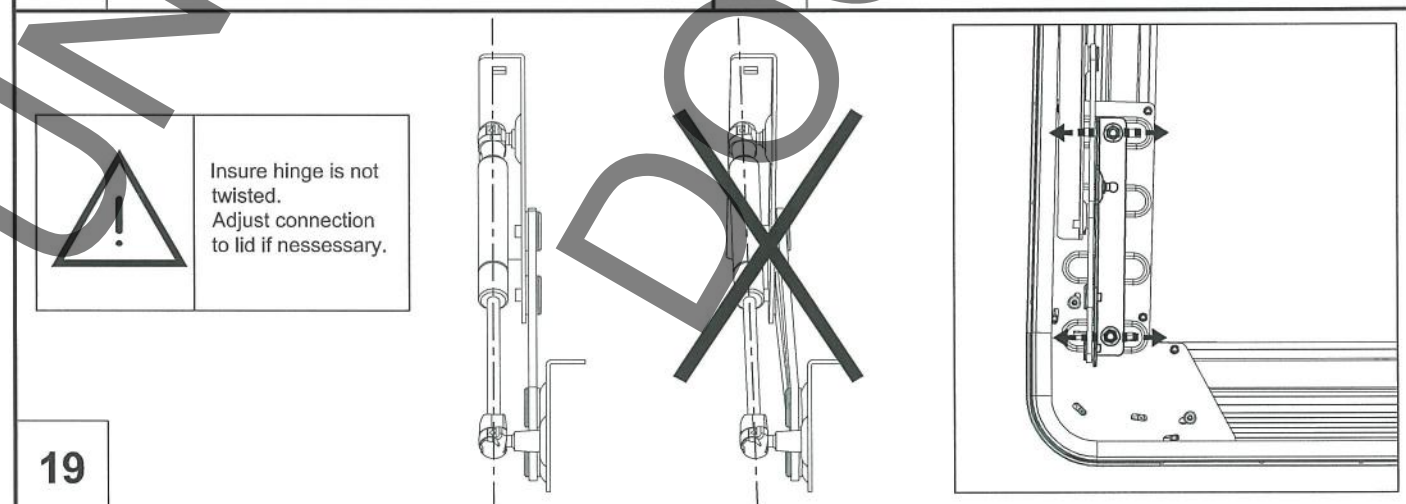


18


Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	5 of 6

19

20

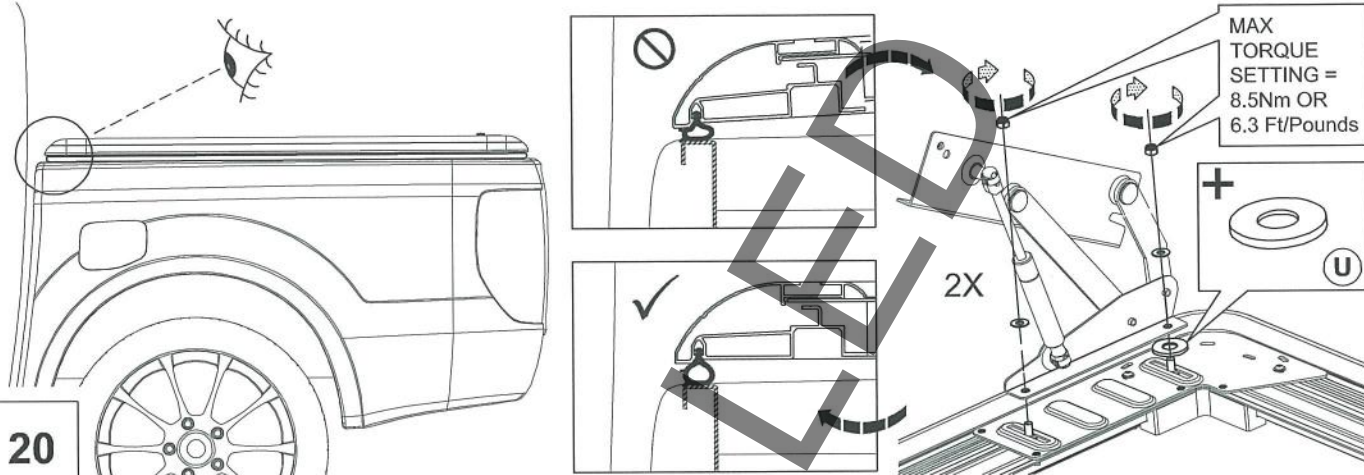

21

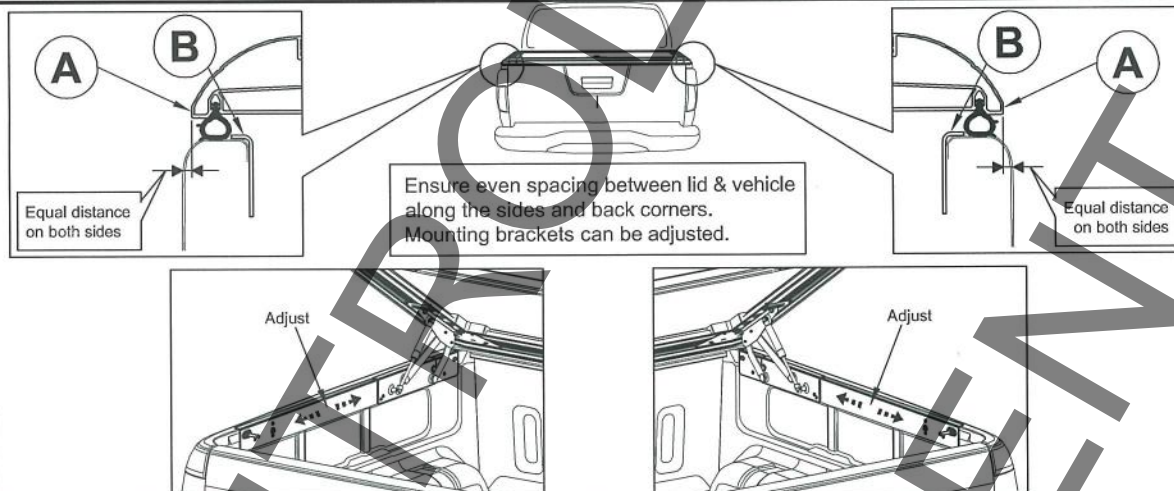

After installation carefully and thoroughly clean all debris from the inside of the cargo box.  
Retain these instructions for future reference



## CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	6 of 6