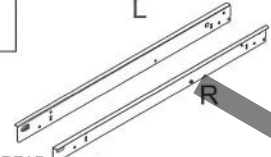
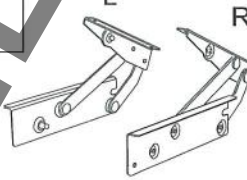
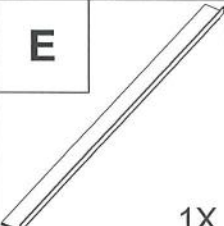
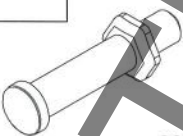

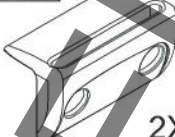
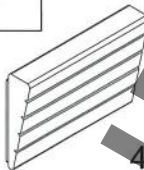
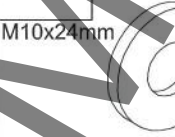
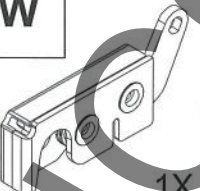
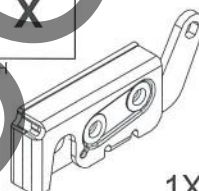
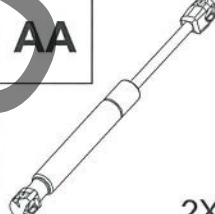


UpStoneEvolve




INSTALLATION INSTRUCTIONS K403

A  1X	B  1X	C  1X	D  2X
E  1X	F  4X	G  4X	H  6X
I  2X	J  4X	K  2X	L  2X
M  2X	N  2X	O  2X	P  12X
Q  12X	R  8X	S  4X	T  4X
U  4X	V  4X	W  1X	X  1X
Y  2X	Z  2X	AA  2X	





Note 1: If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.







Note 2: If required, use Under Rail Bed Liner only. **NOT FOR USE WITH OVER RAIL BED LINER!**

Tools Required:

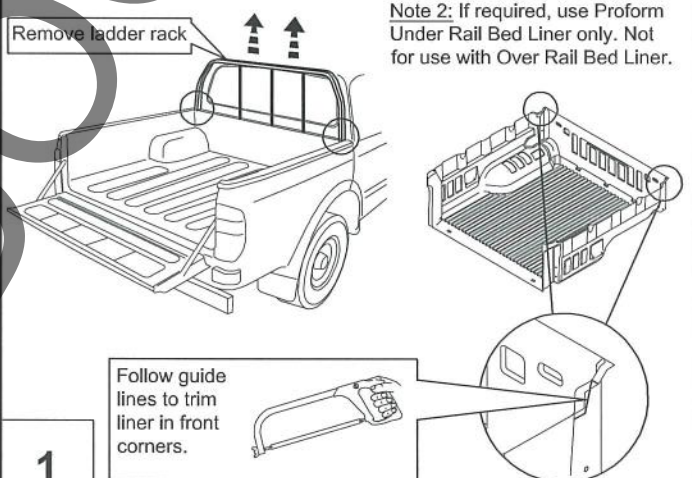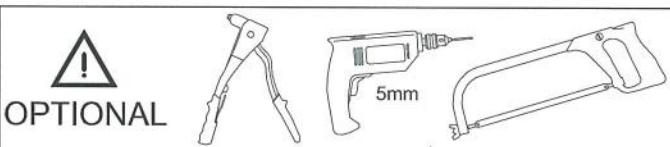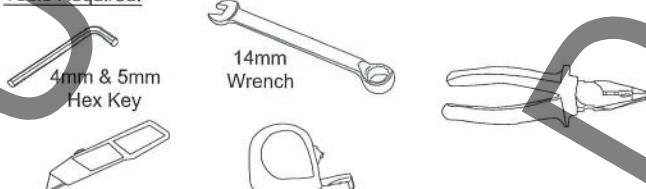


Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	1 of 6

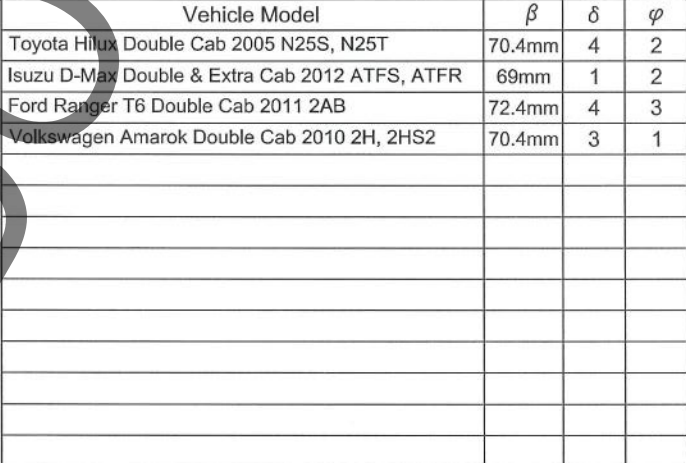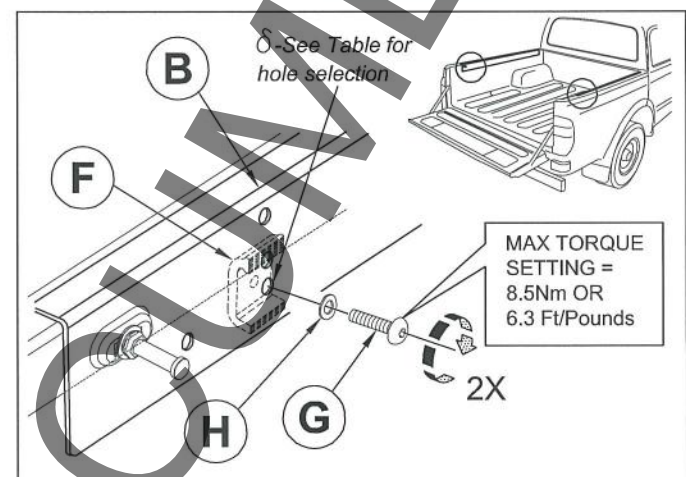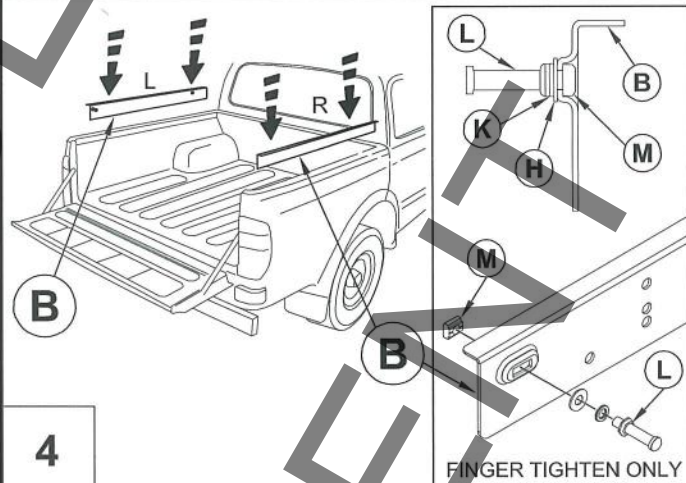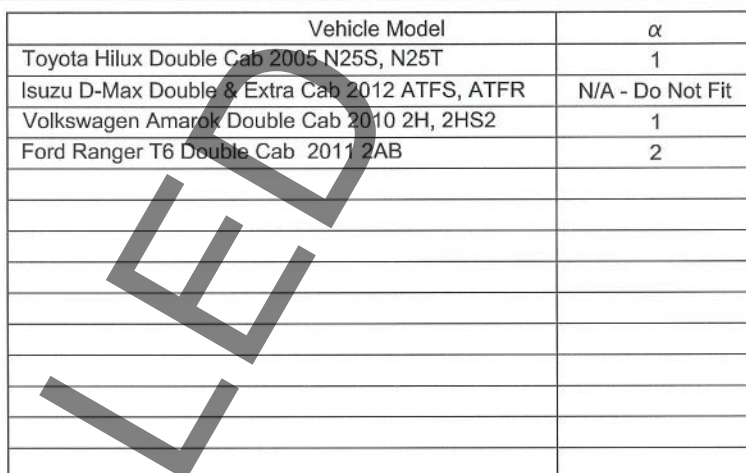


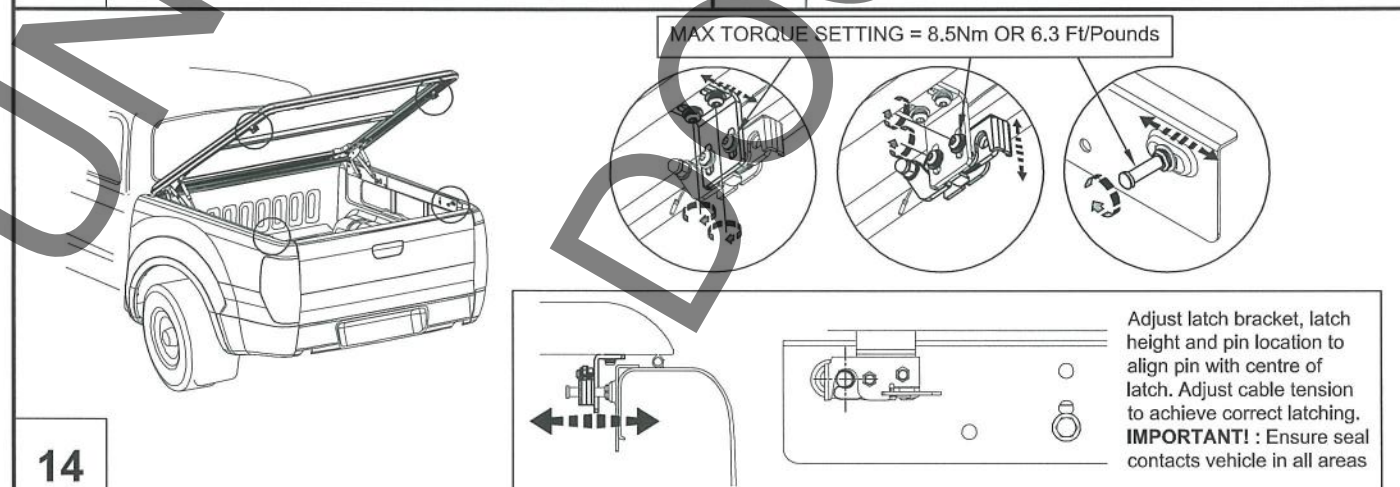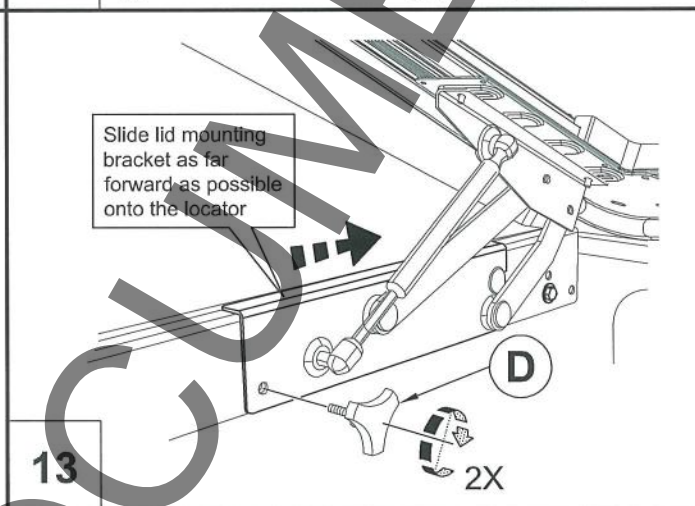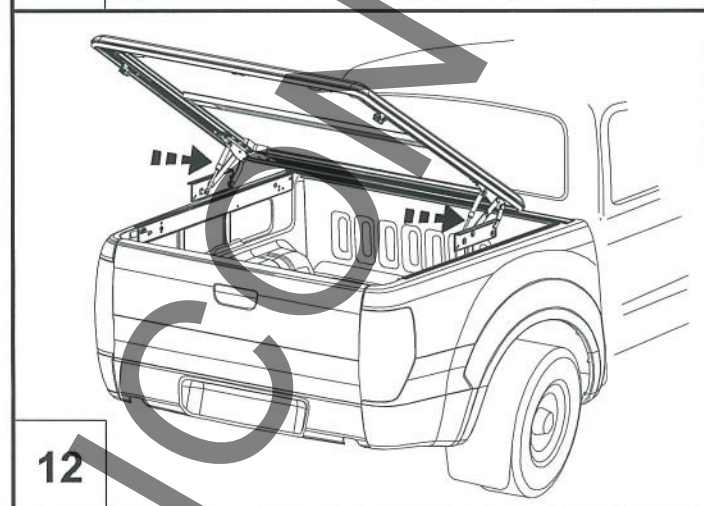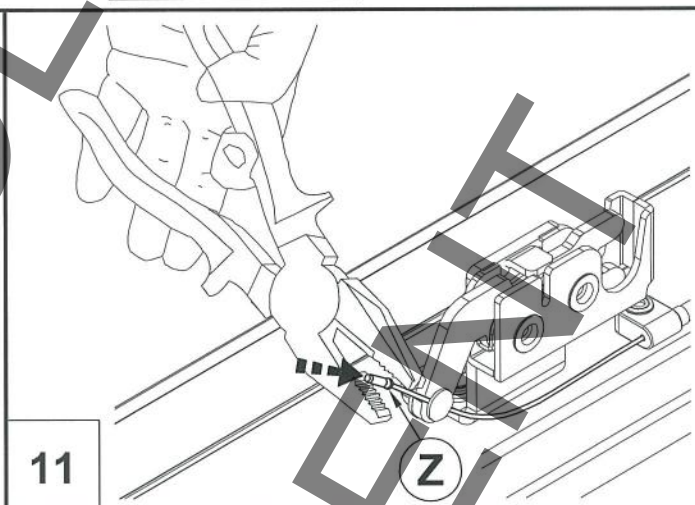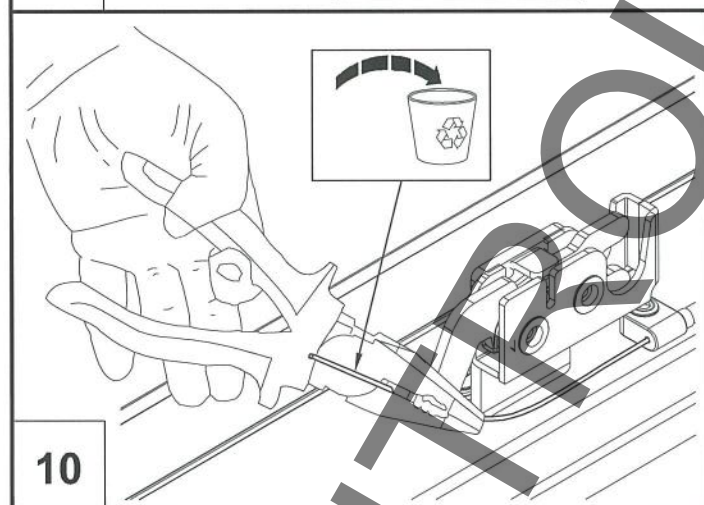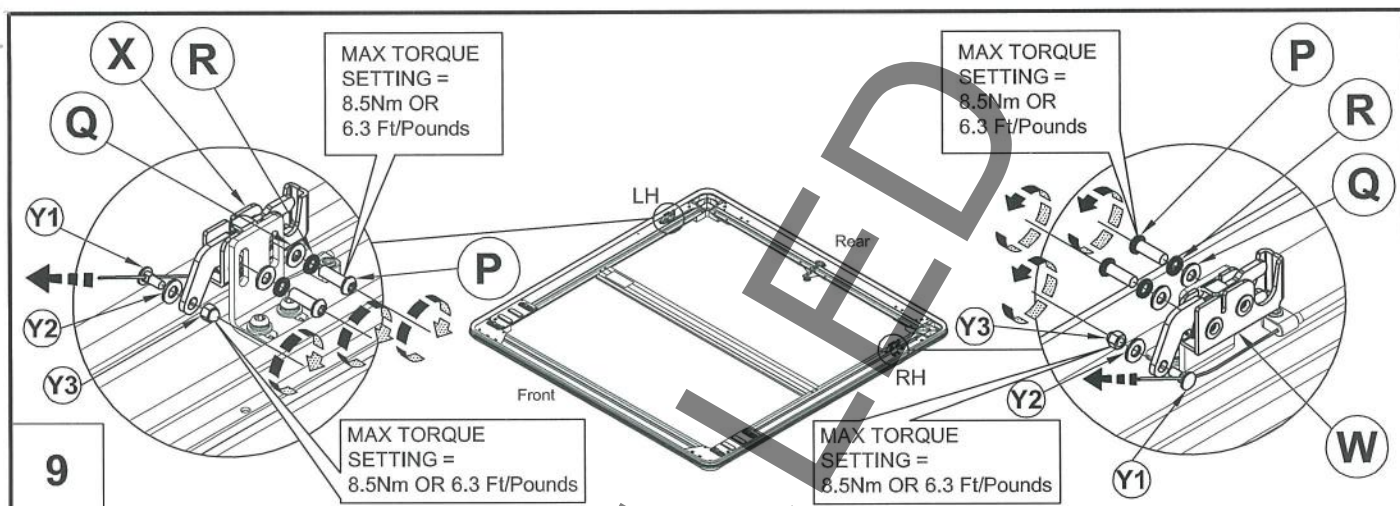


Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	4 of 6

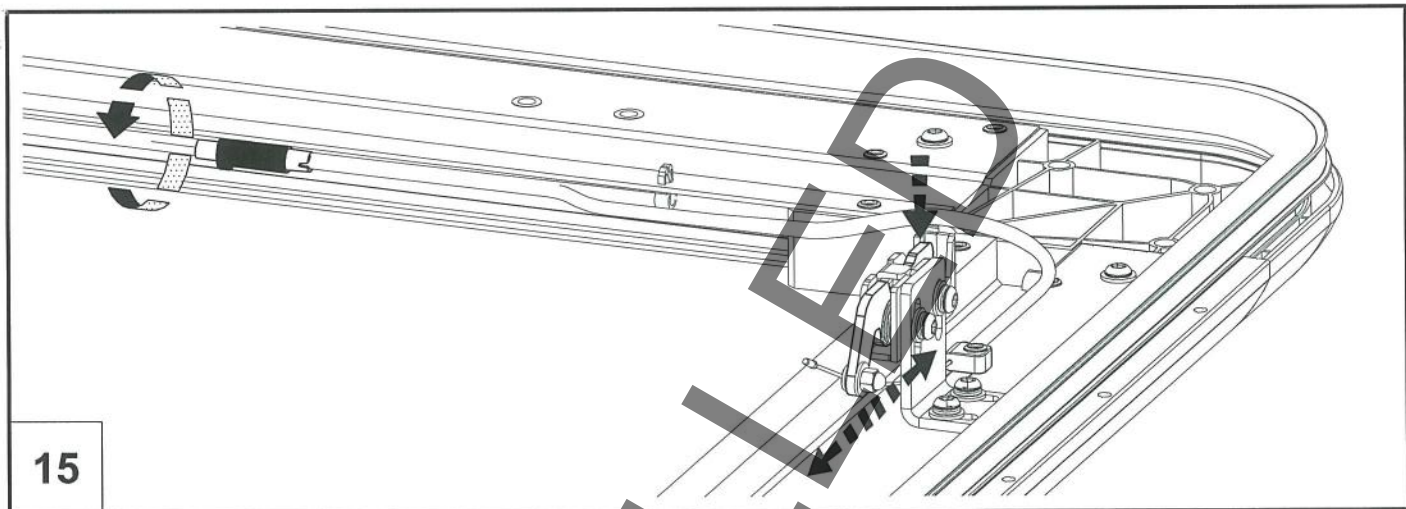


15

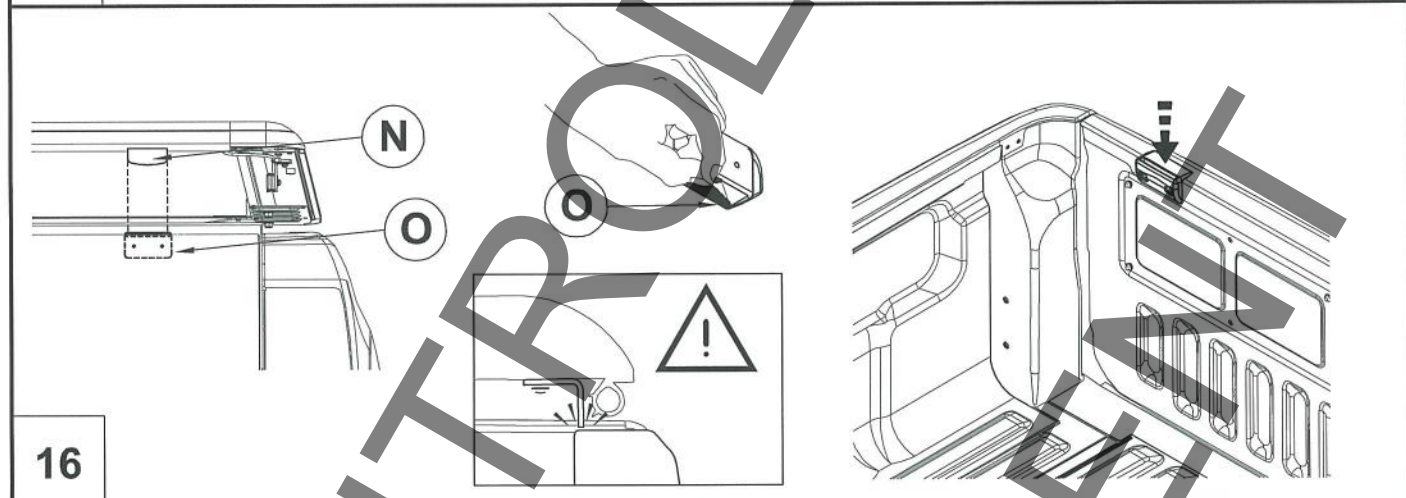

16

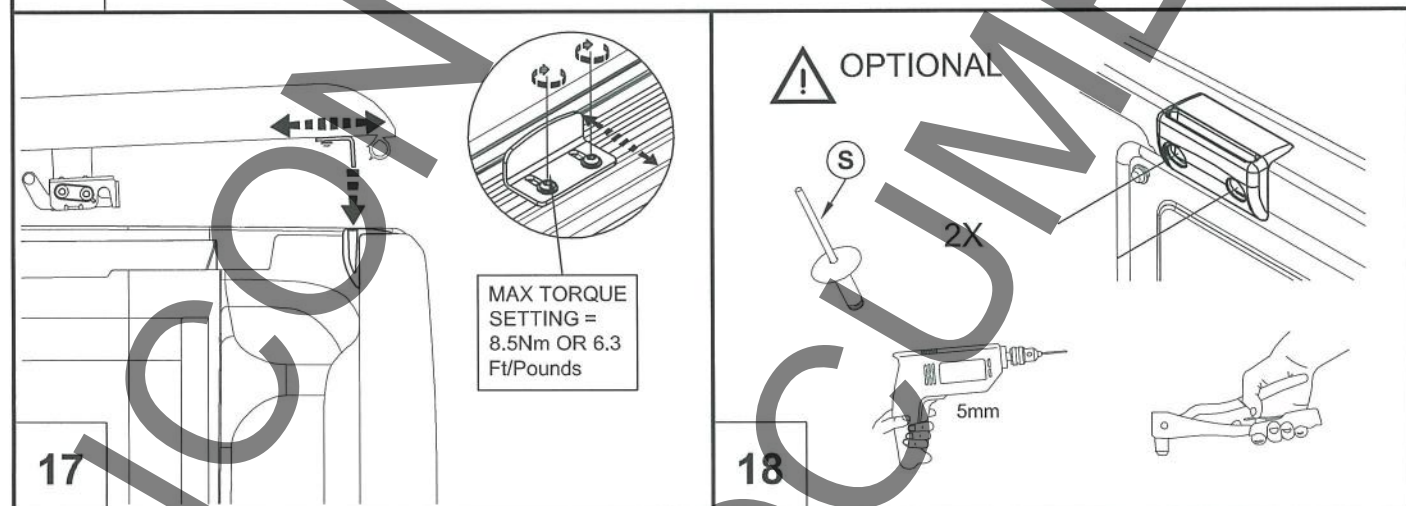

17

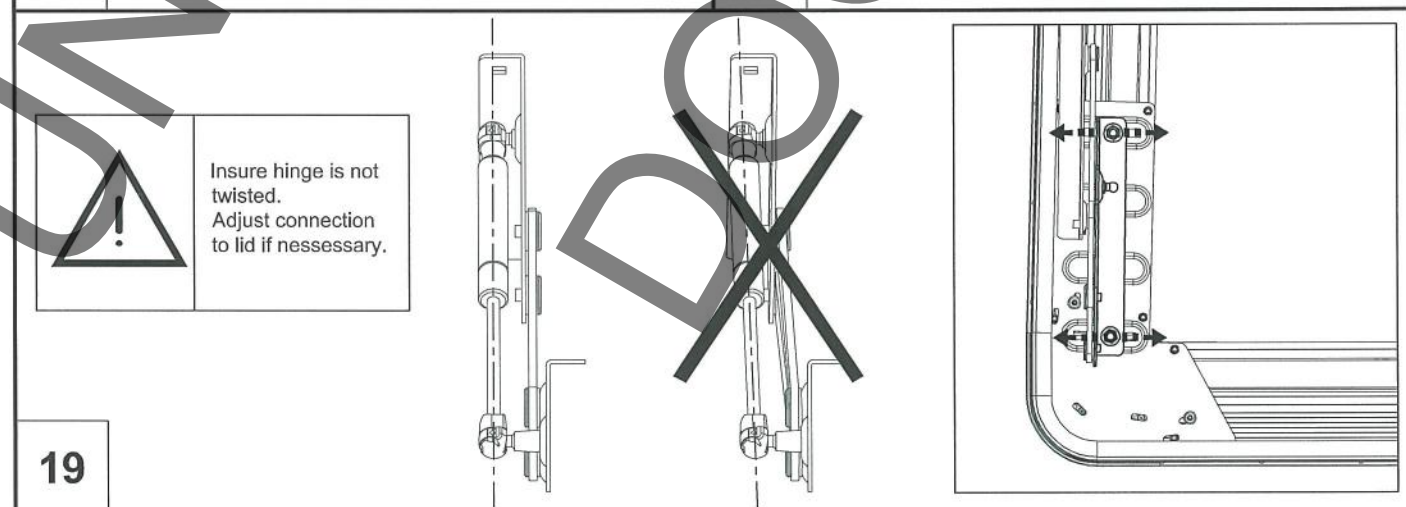


18


Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	5 of 6

19

20

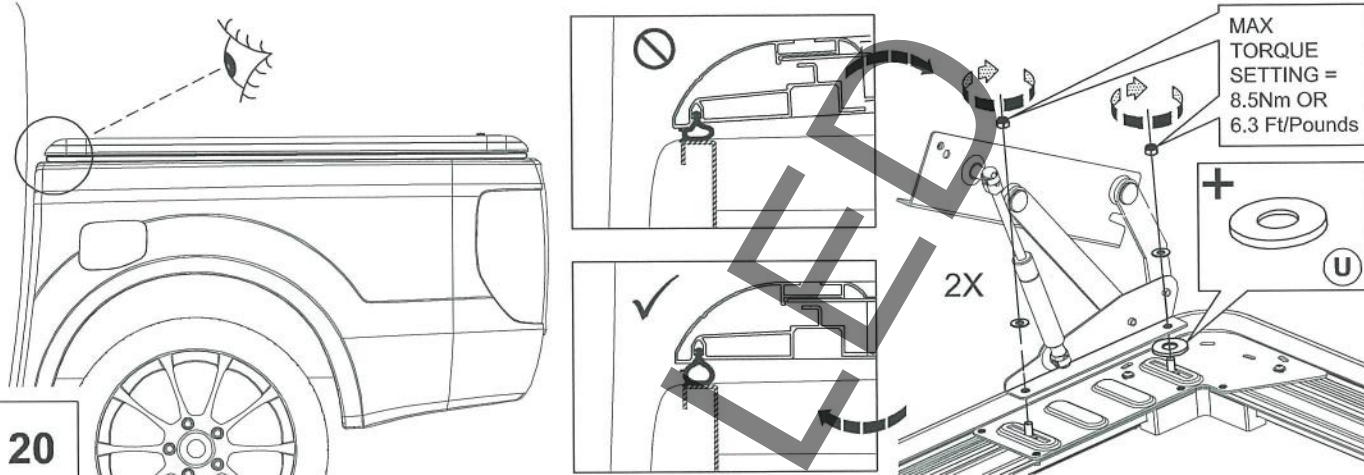

21

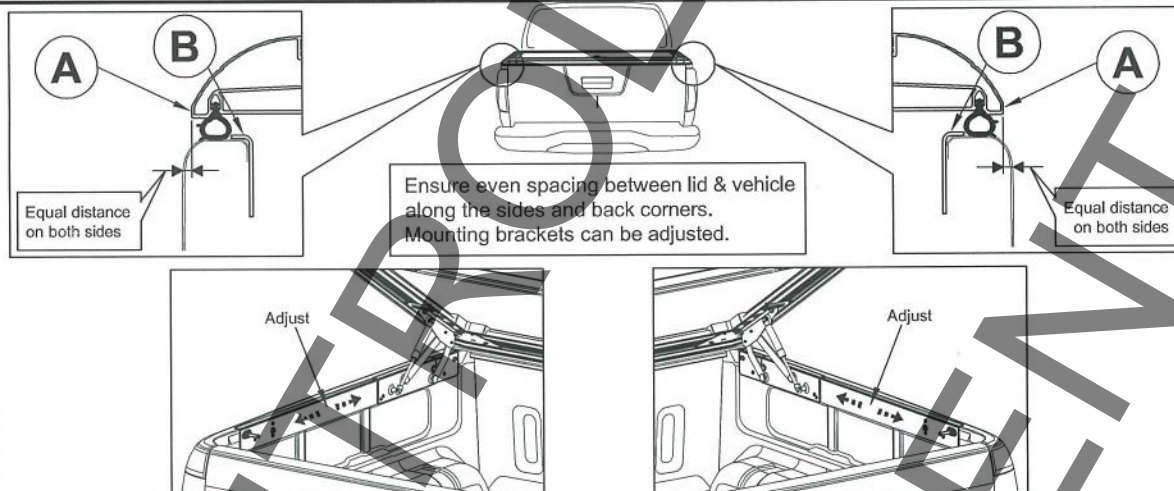

After installation carefully and thoroughly clean all debris from the inside of the cargo box.
Retain these instructions for future reference



CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

Fitting Kit Number	Product	Revision	Date	Page
K403	Upstone Lid	2	11-04-2013	6 of 6