








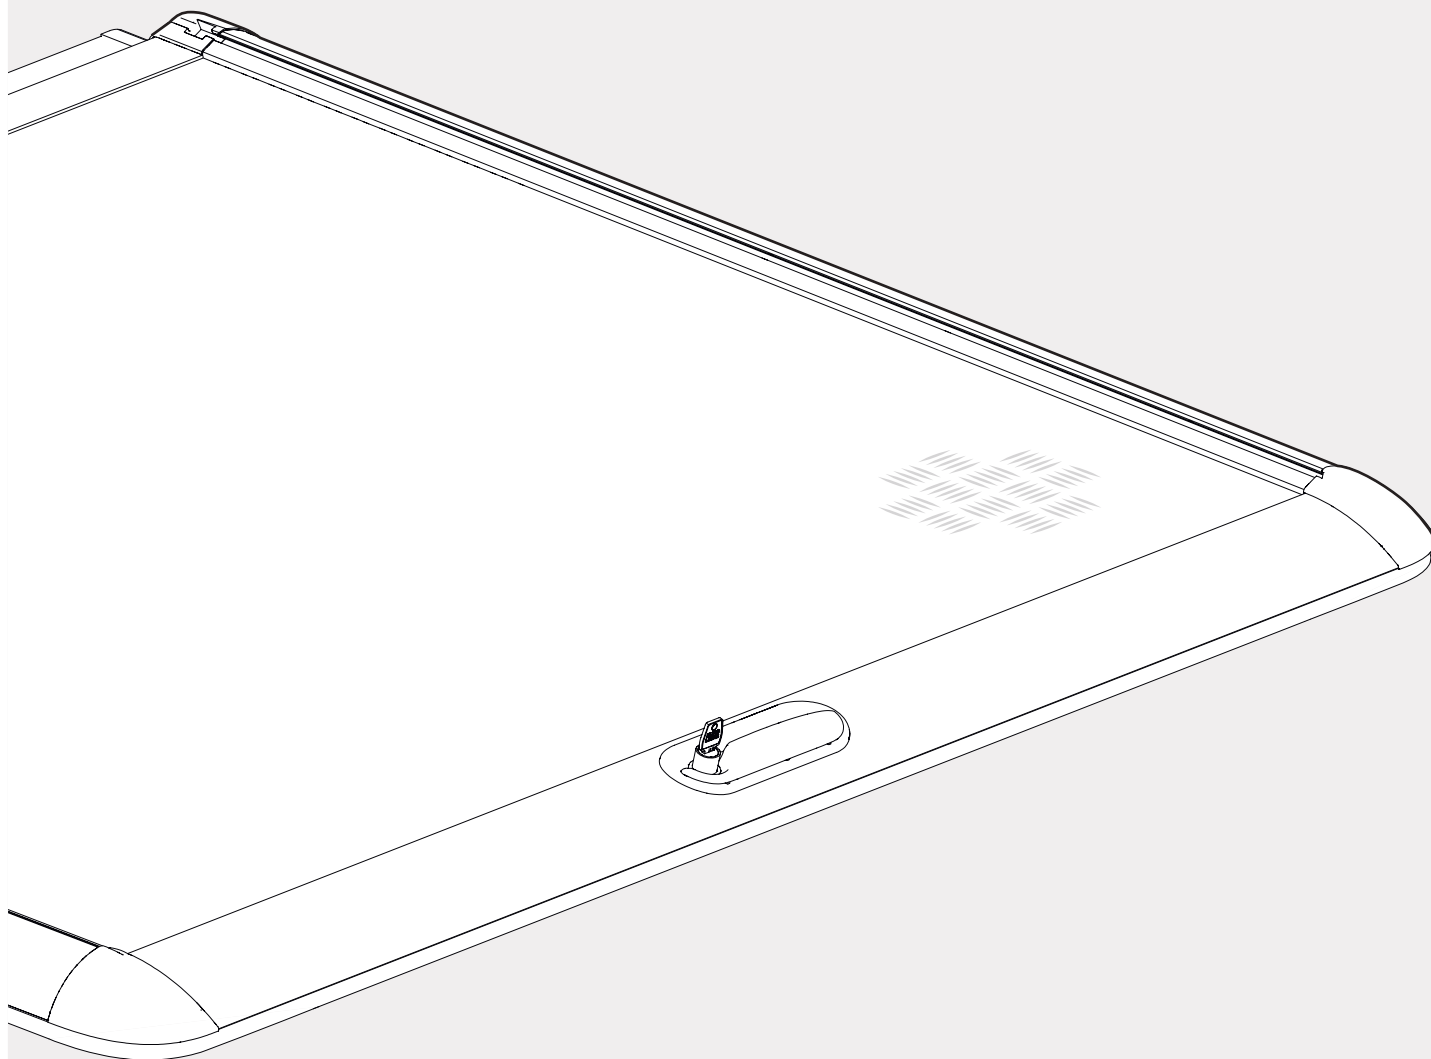




Mountain Top® Style






Installation manual









DOWNLOAD PDF

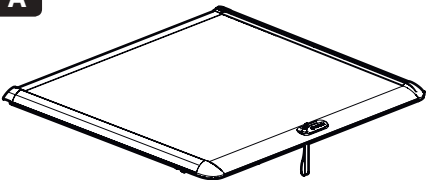
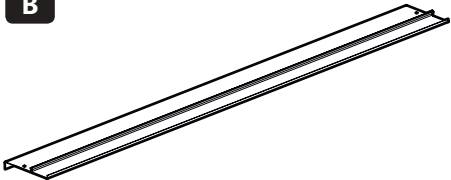
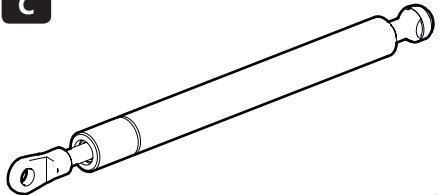
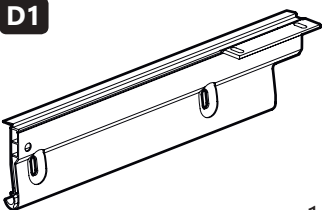
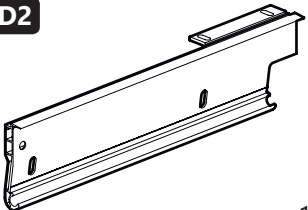
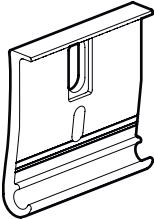
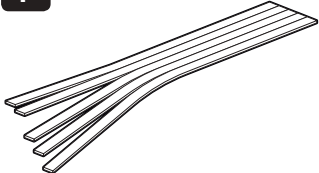
 Parts			
A  x 1	B  x 1	C  x 2	
D1  x 1	D2  x 1	E  x 2	F  5 x 1m


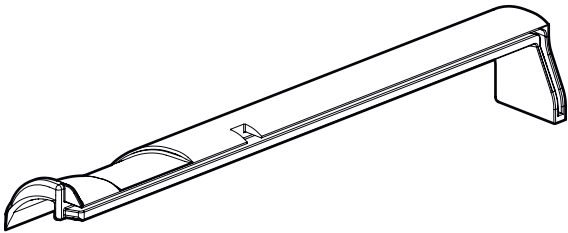
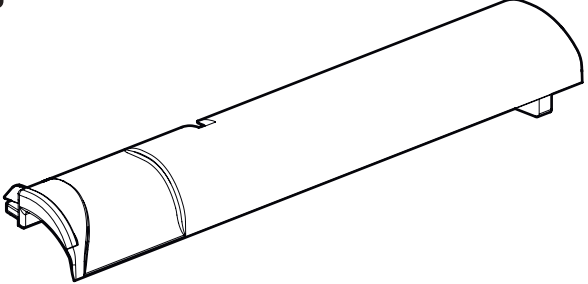
 Kit	
G1  x 1	G2  x 1

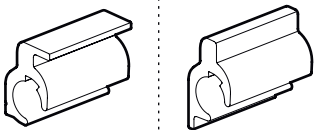
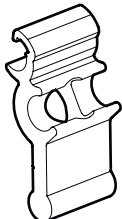
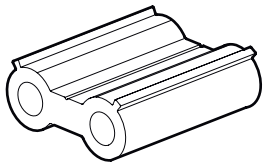

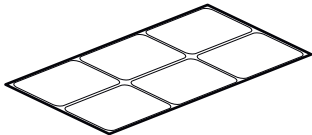
 Kit		
H  x 6	I  x 6	
J  x 6	K  x 24	K2  x 1



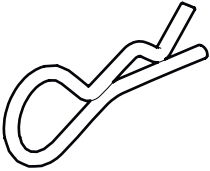
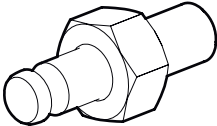

 Kit			
L  x 2	M  x 2	N  x 2	O  x 2

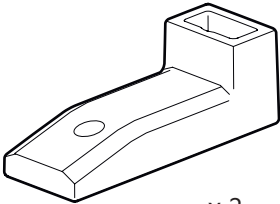
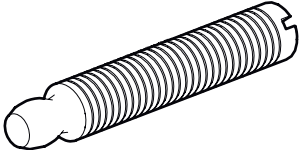

 Kit		
P  x 2	Q  x 4	R  x 4

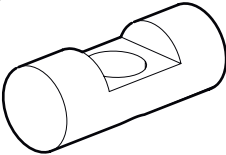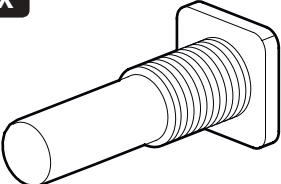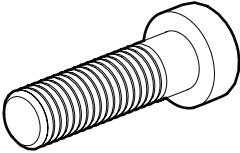
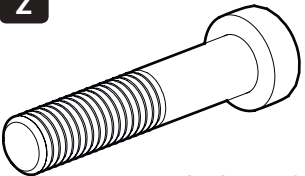
 Kit			
S  x 2	T  x 6	U  x 6	V  x 6
W  x 2	X  x 2	Y  x 6 TOYOTA x 4	Z  TOYOTA x 2

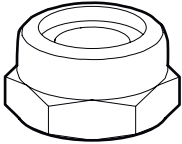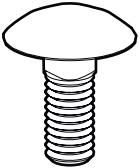
 Kit			
A2  x 4	B2  x 4	C2  x 4	D2  x 4

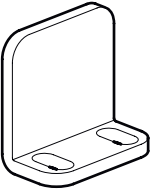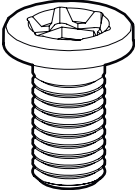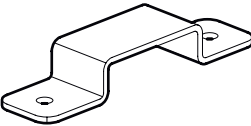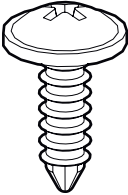 Kit				
E2  x 2	F2  x 4	G2  x 4	H2  x 2	I2  x 4

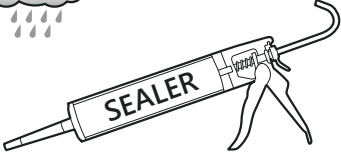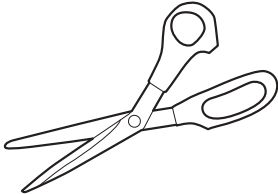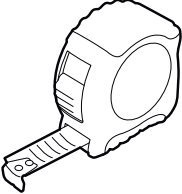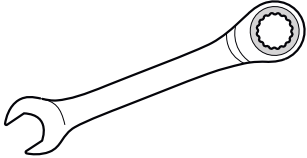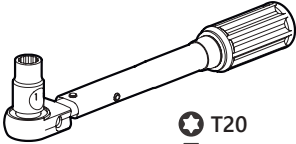
 Tools and materials needed		
 		
	  10, 13, 19mm	1-25 Nm   T20  10, 13, 19mm  5mm

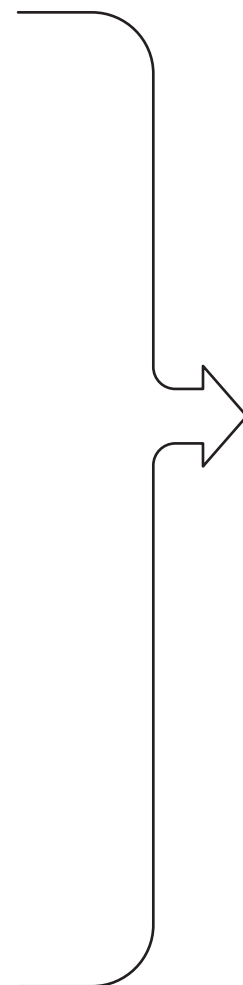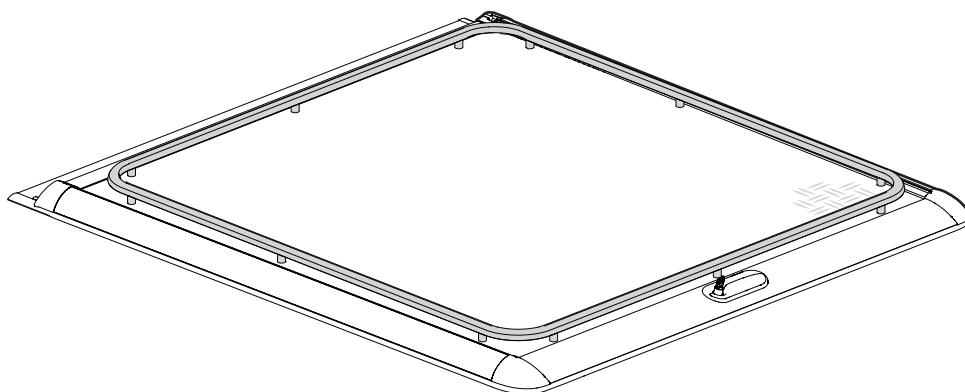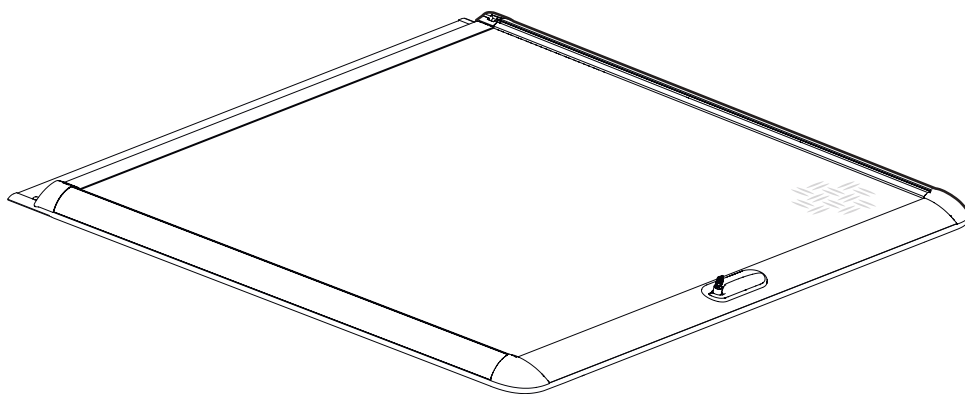

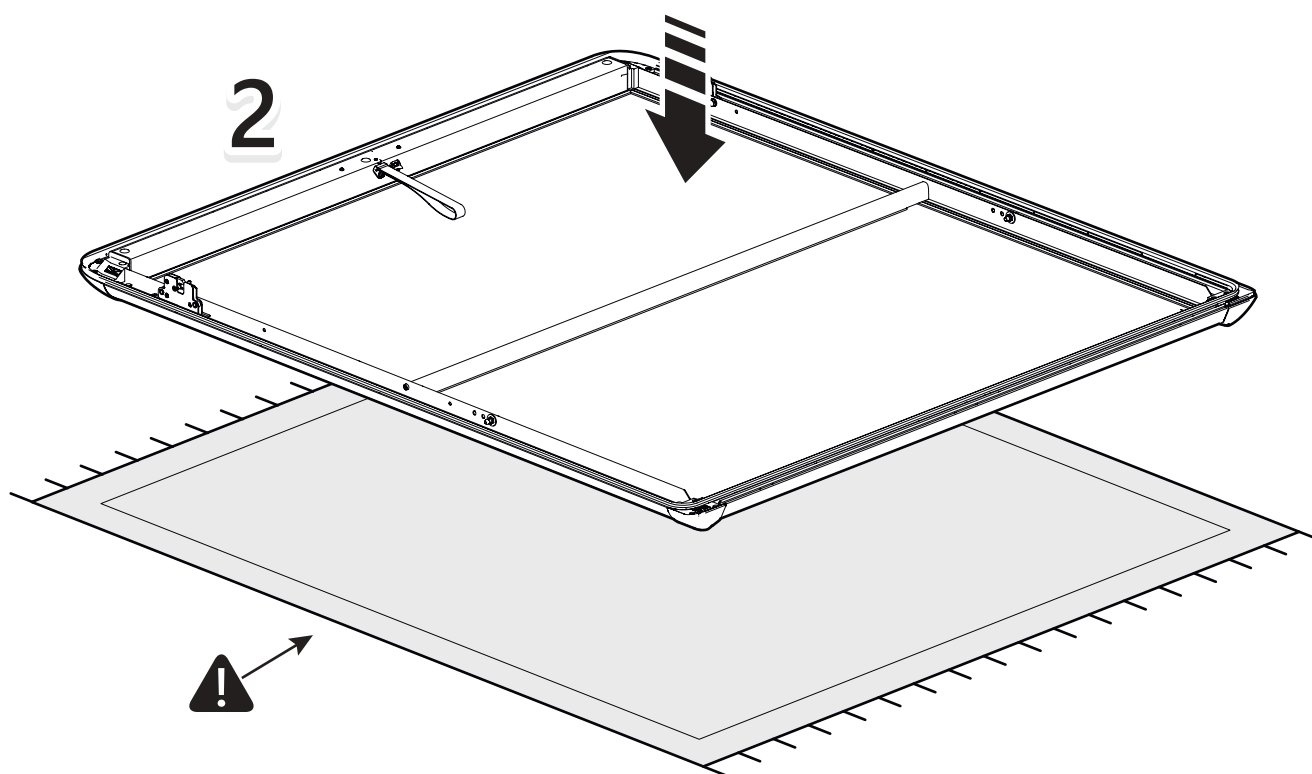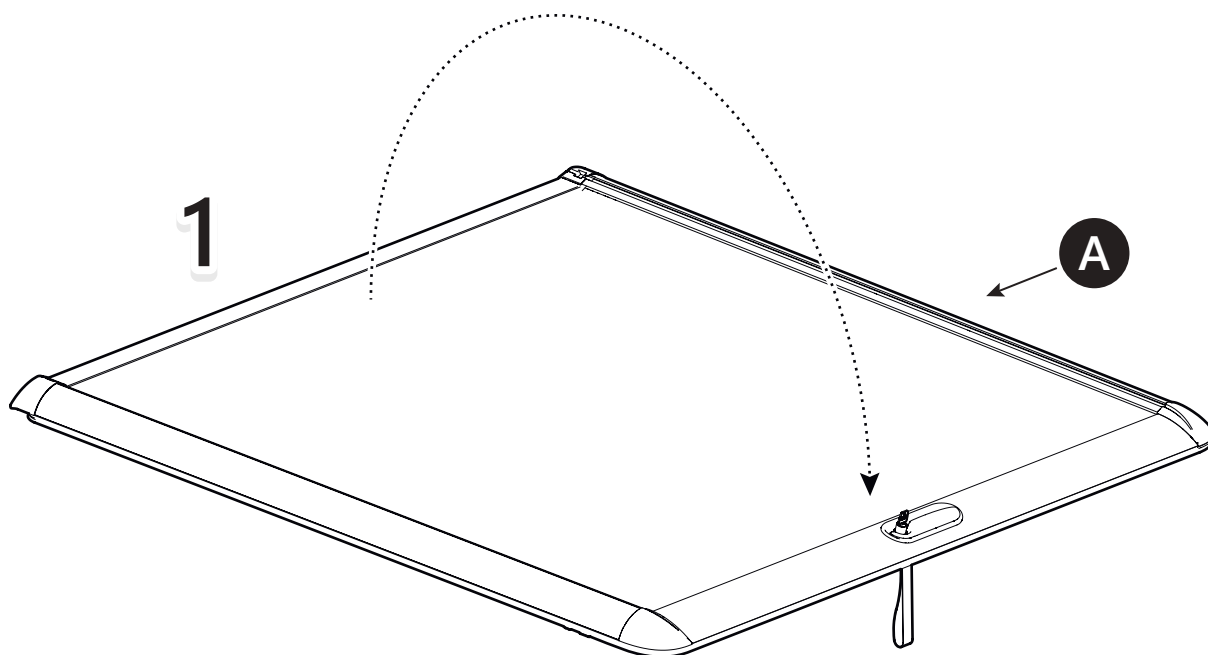


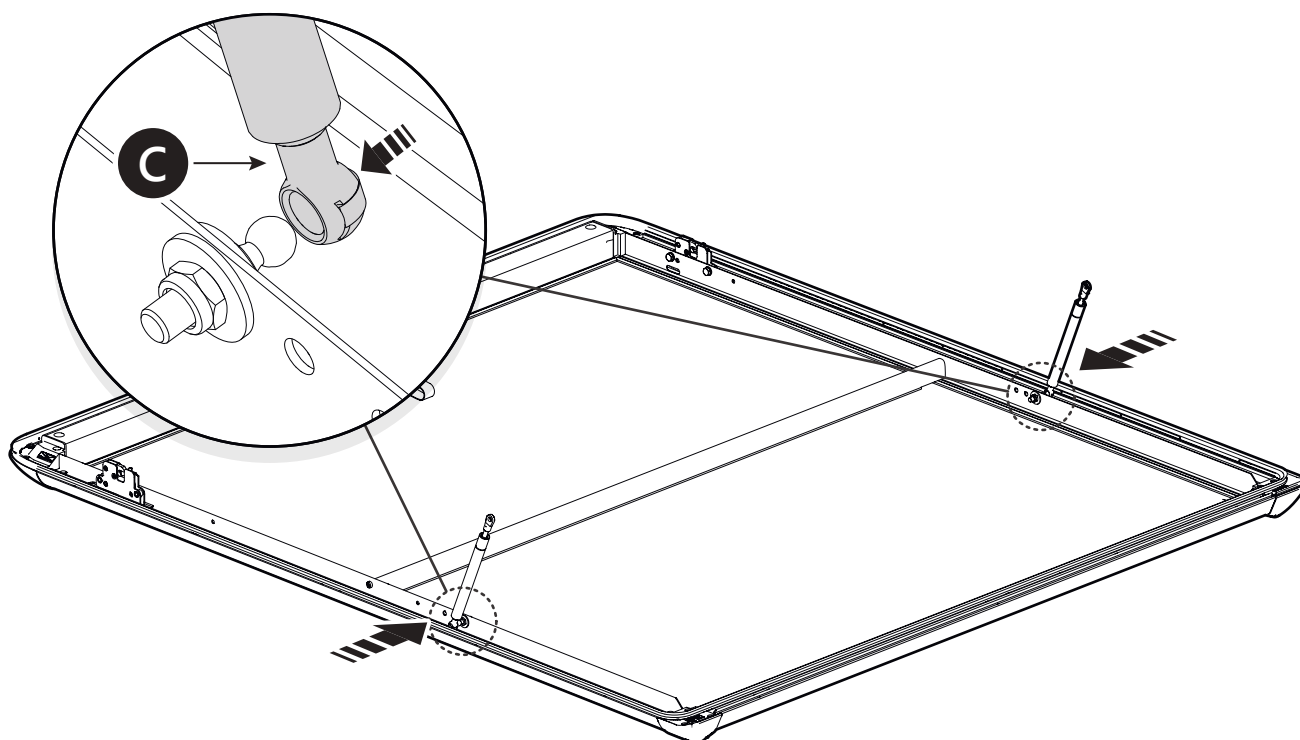


10mm


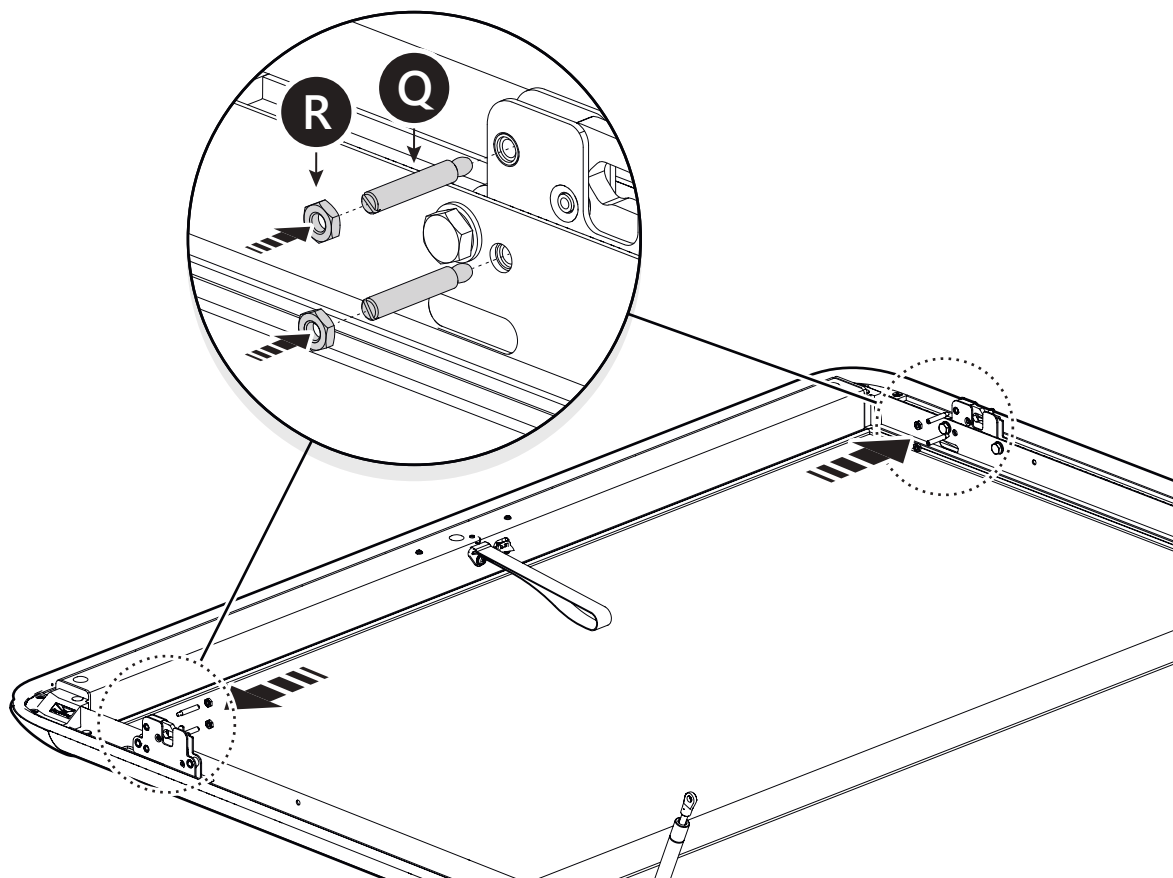



4

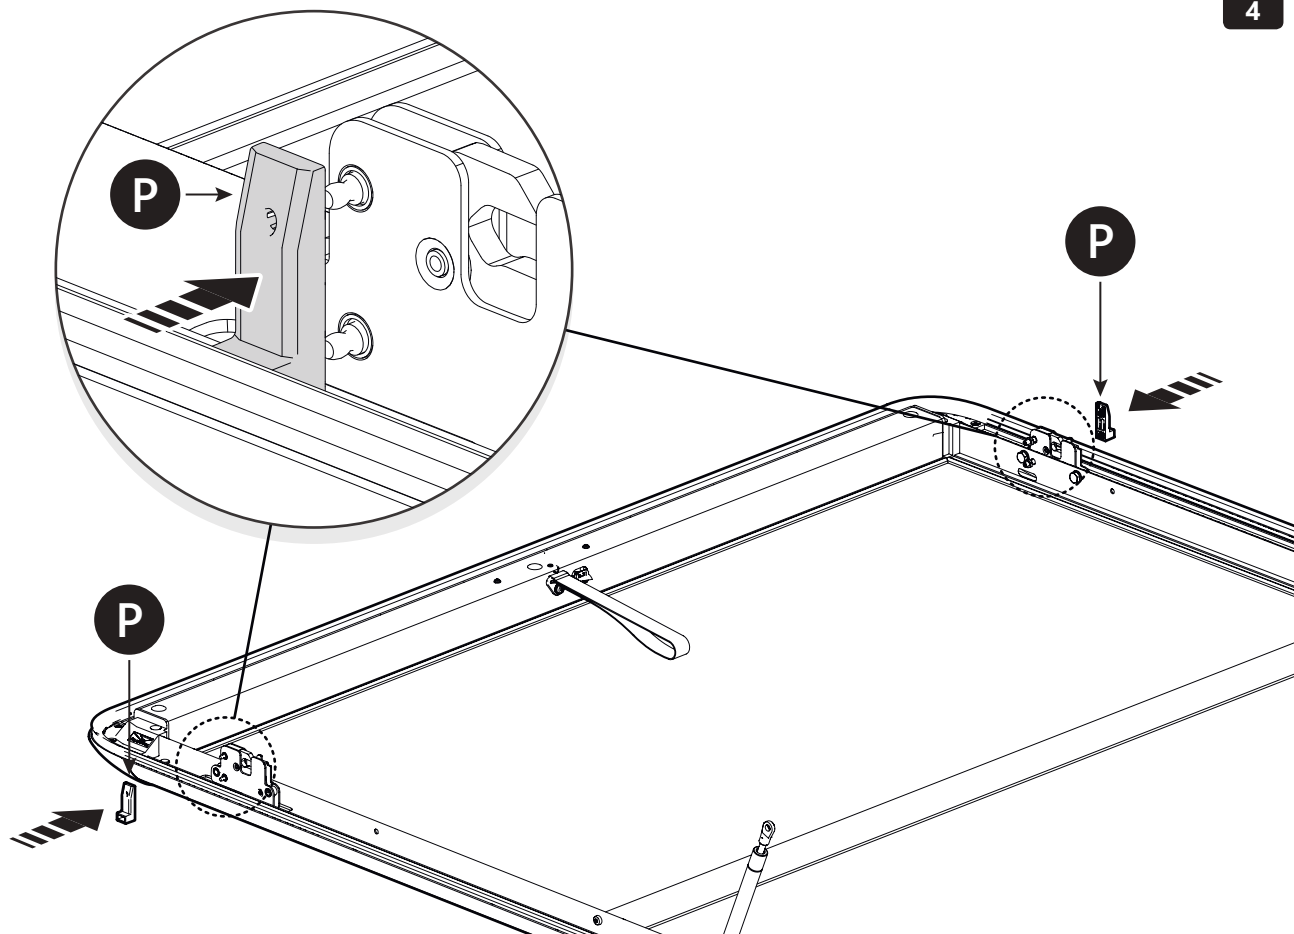



5

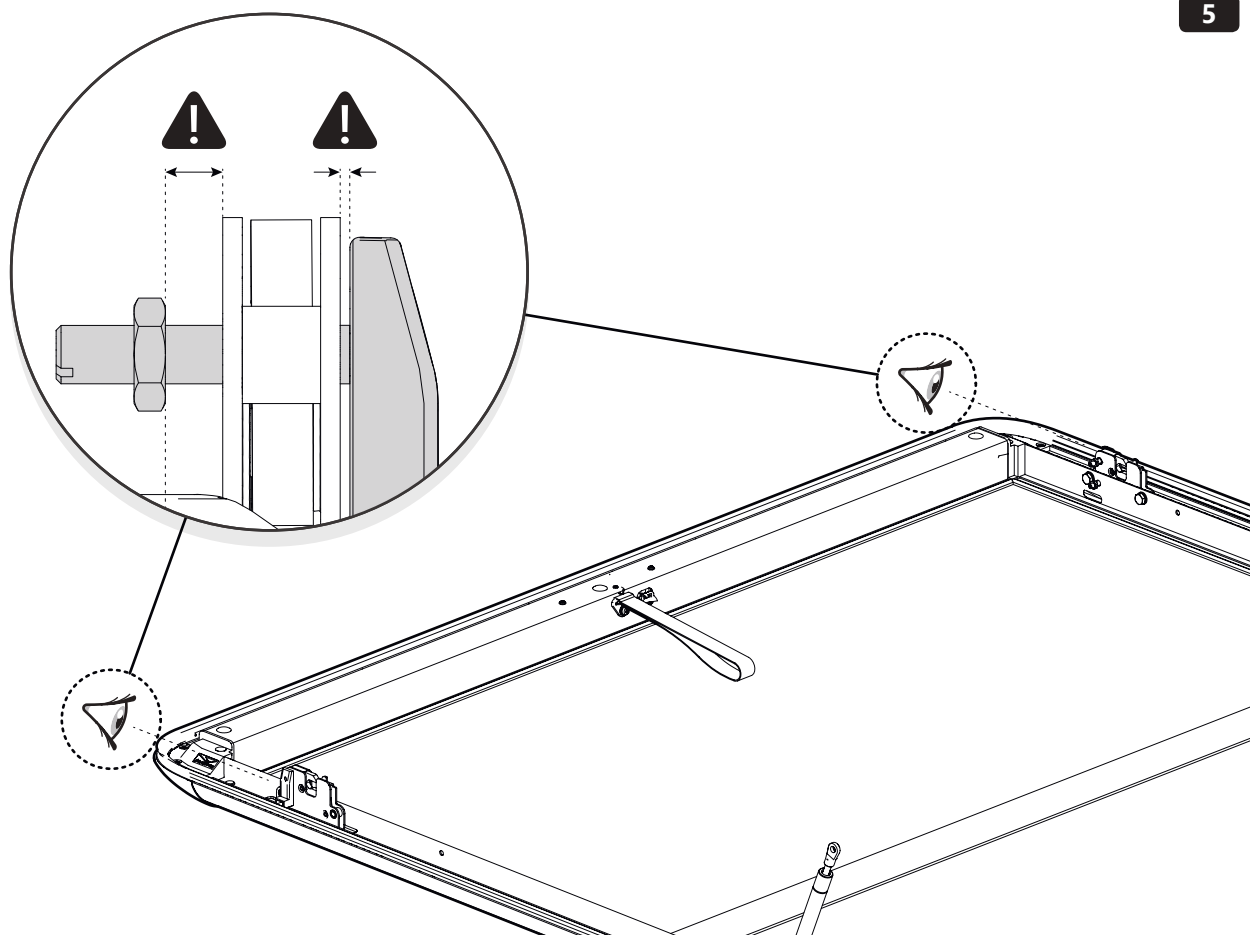

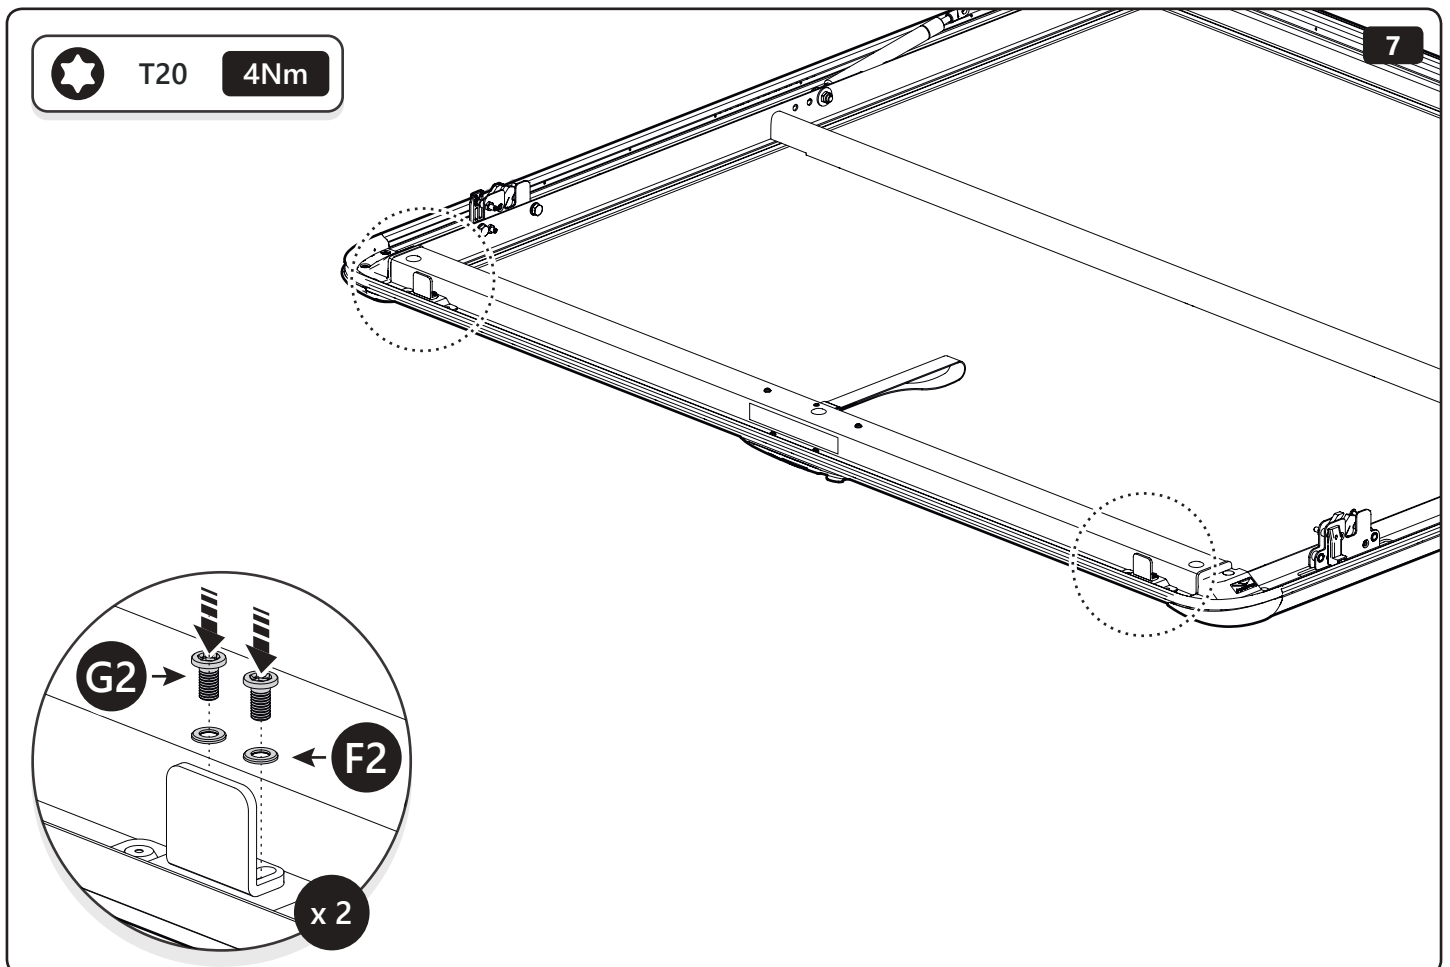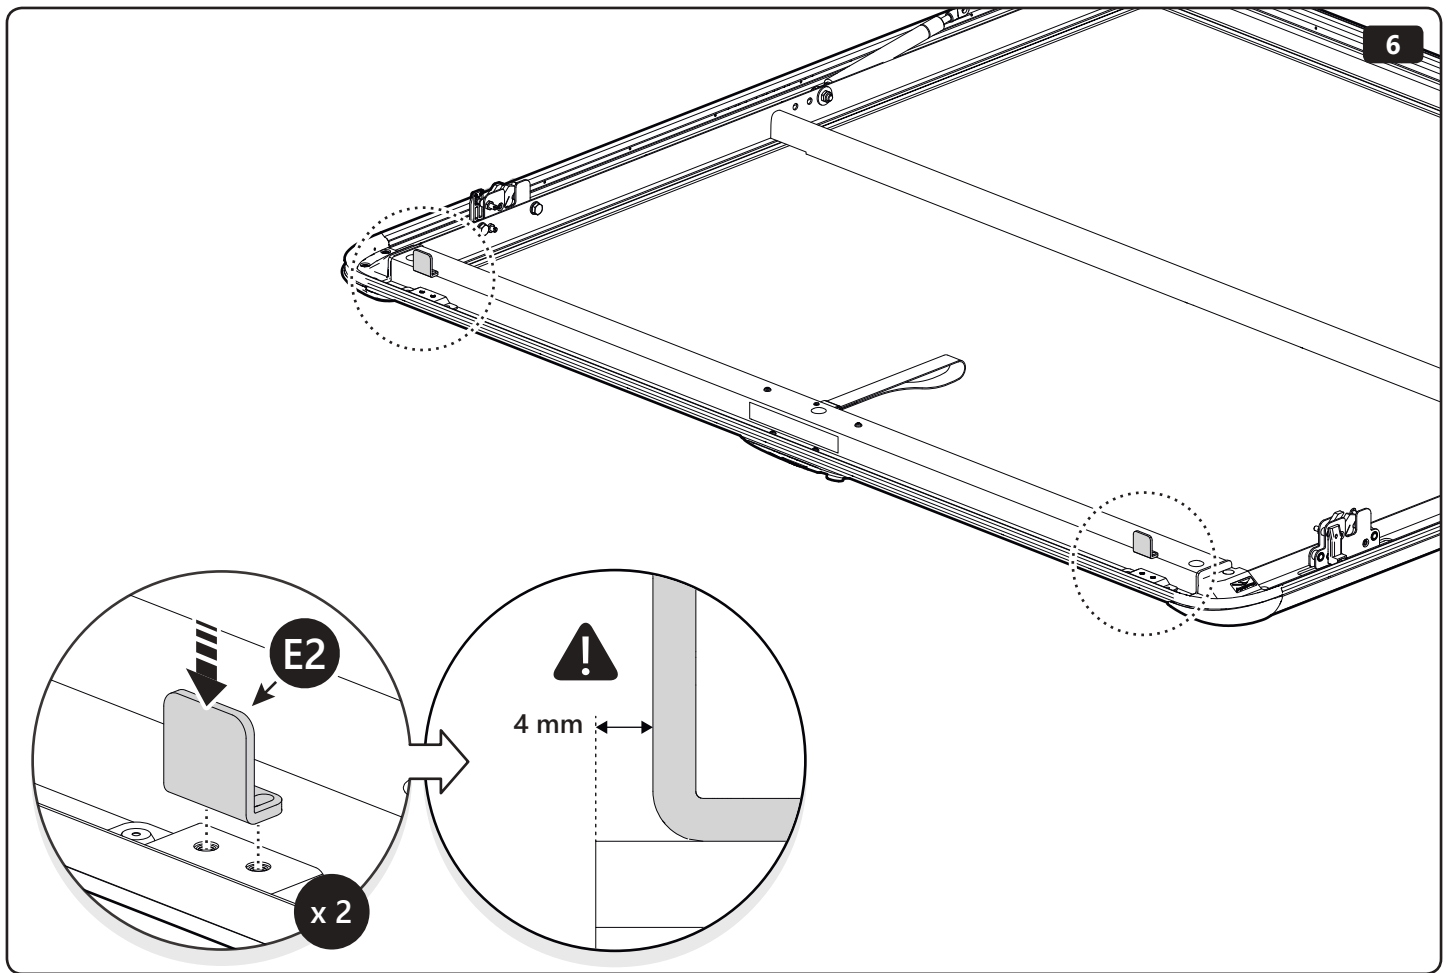

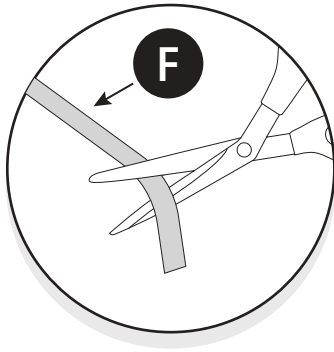


E →

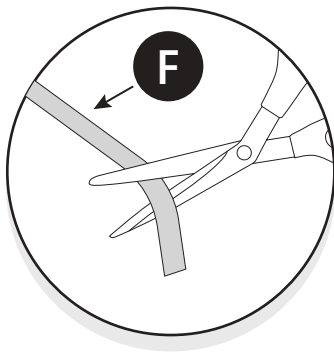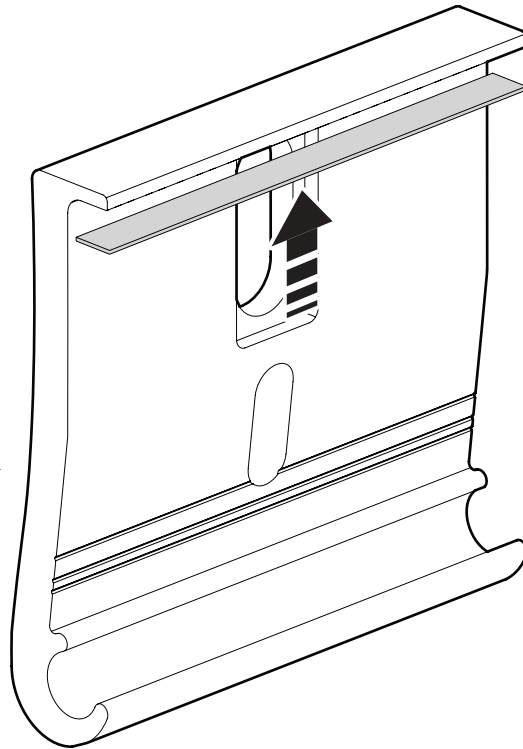


F


E →

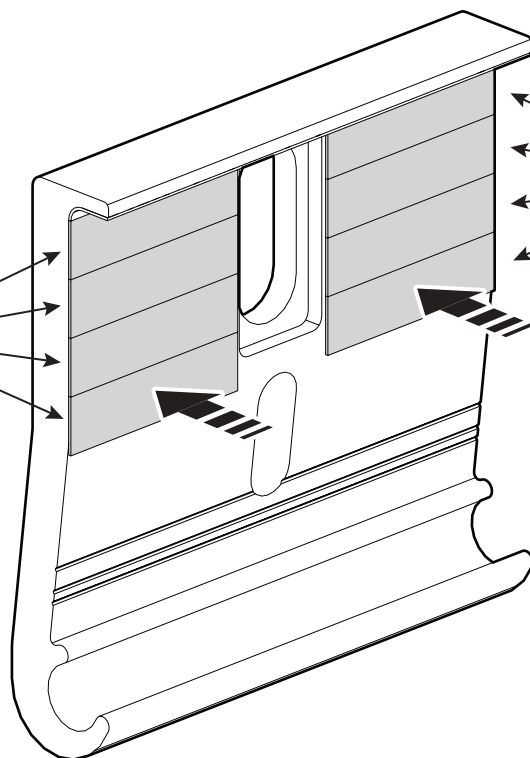


19mm

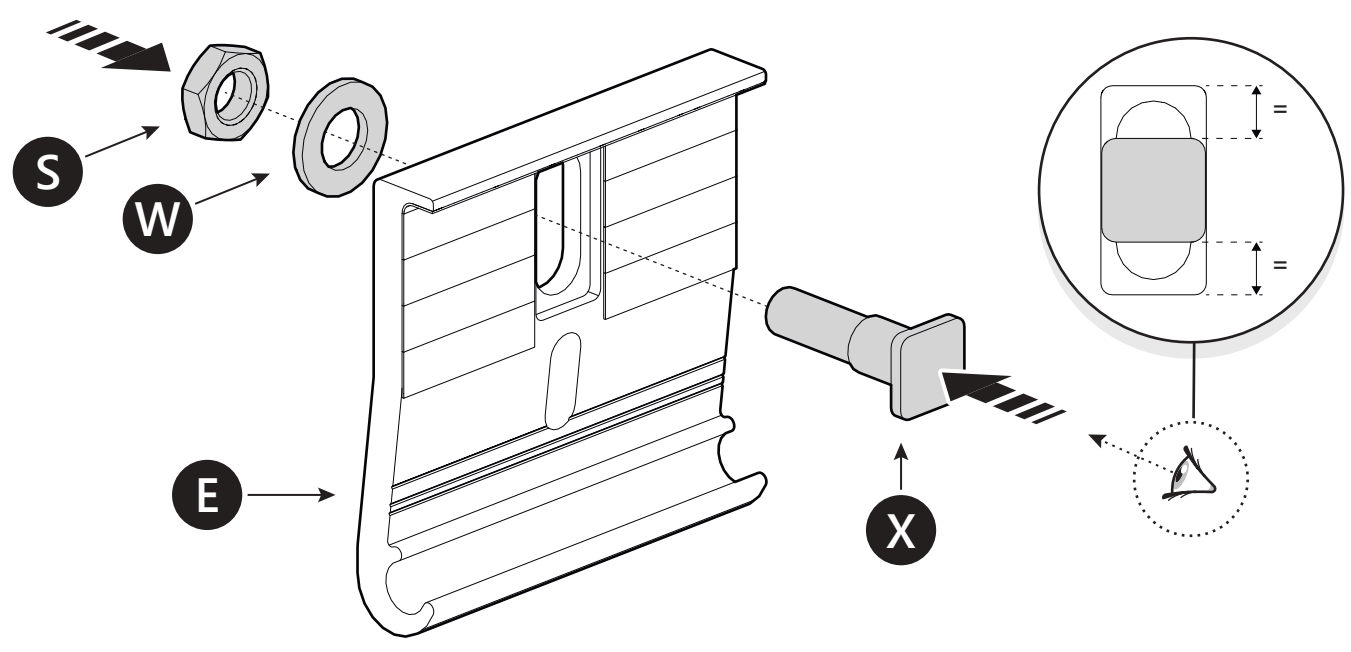

5mm

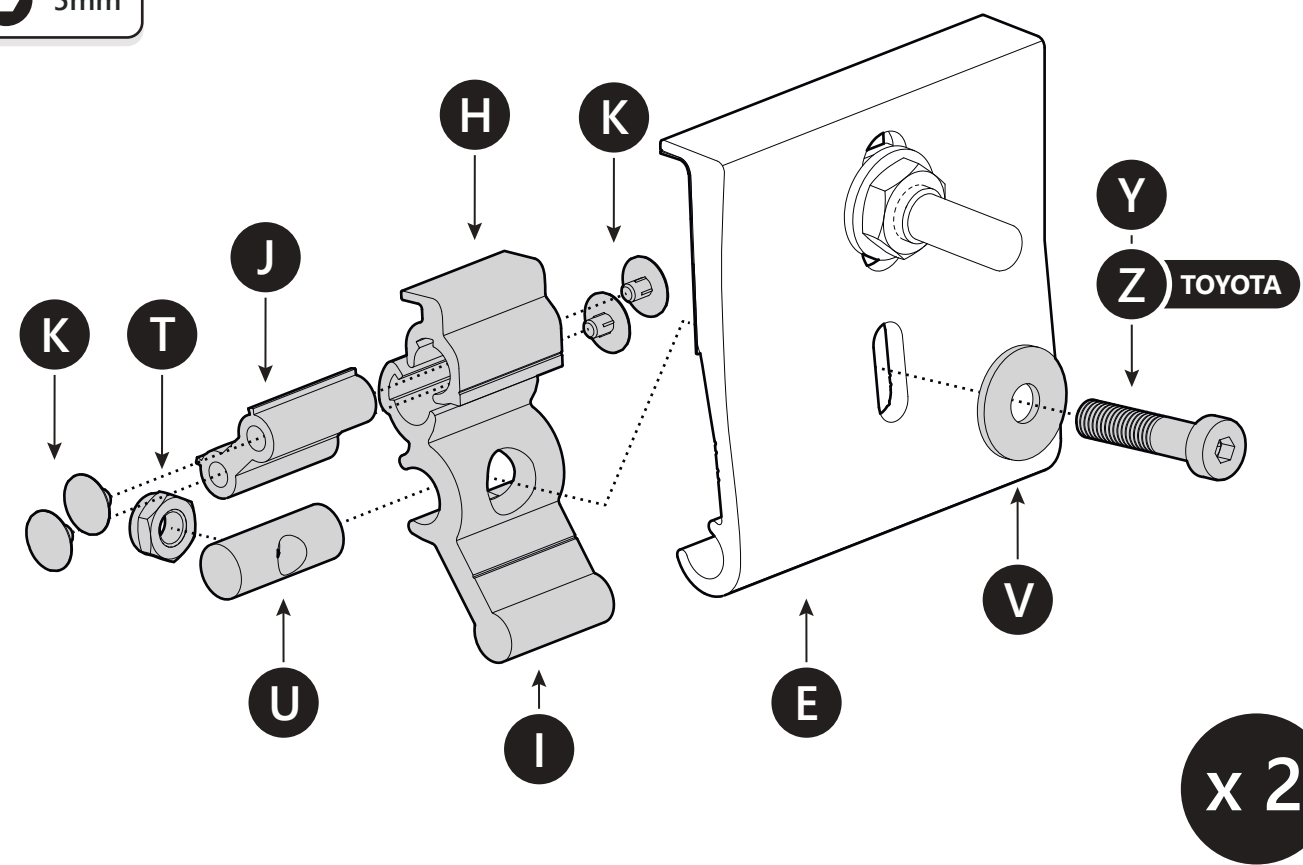


13mm 23Nm


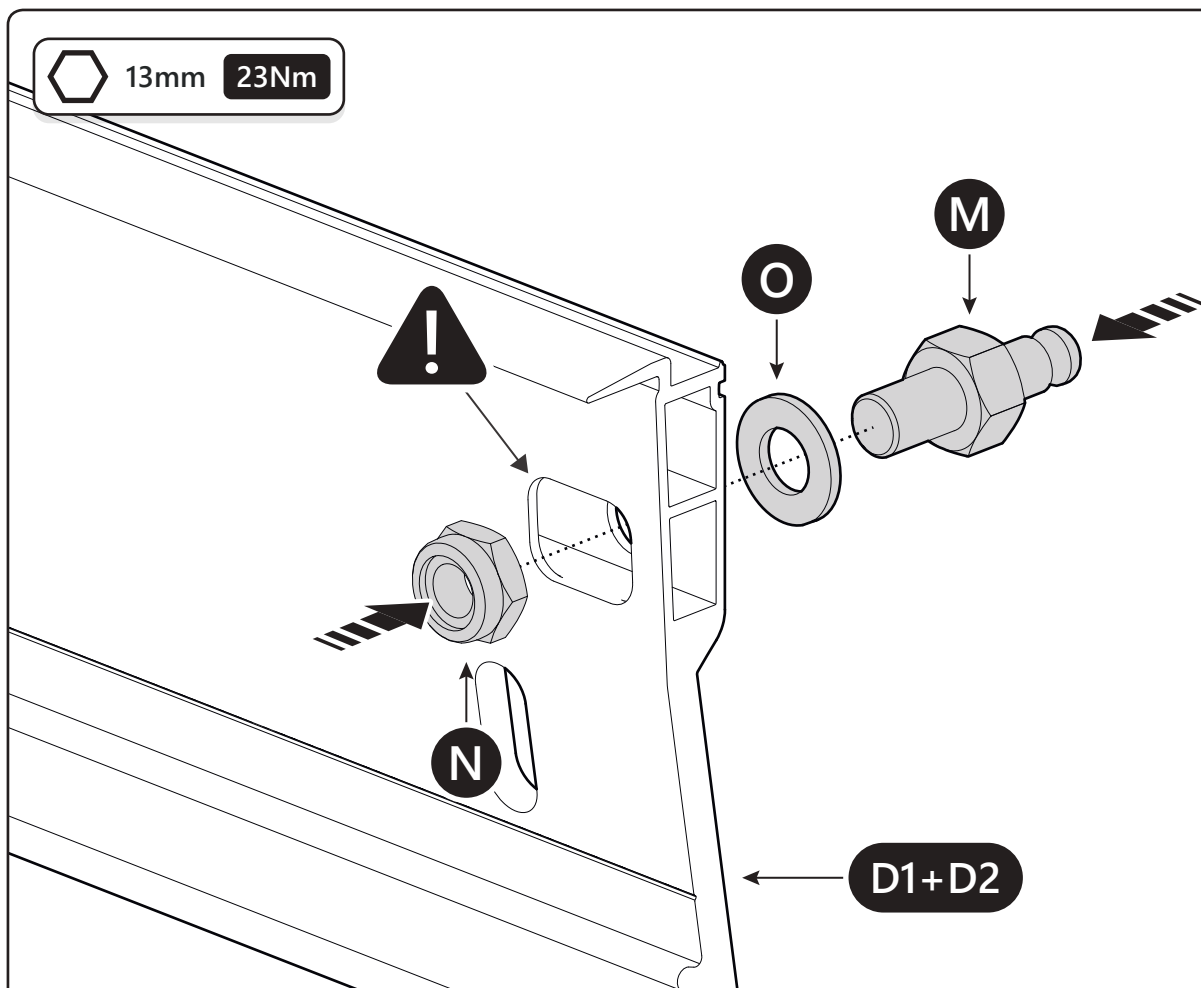


TOYOTA



13mm 23Nm

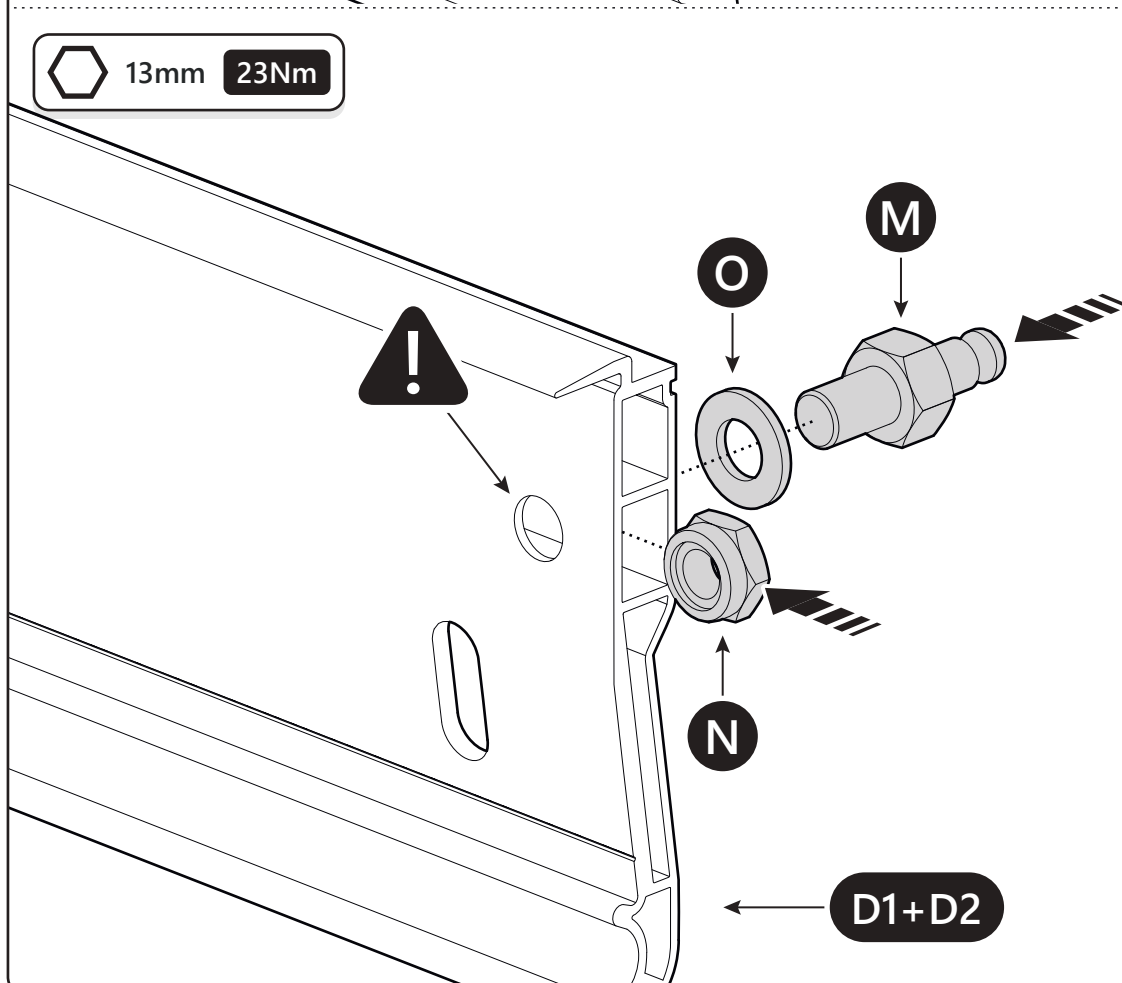

13

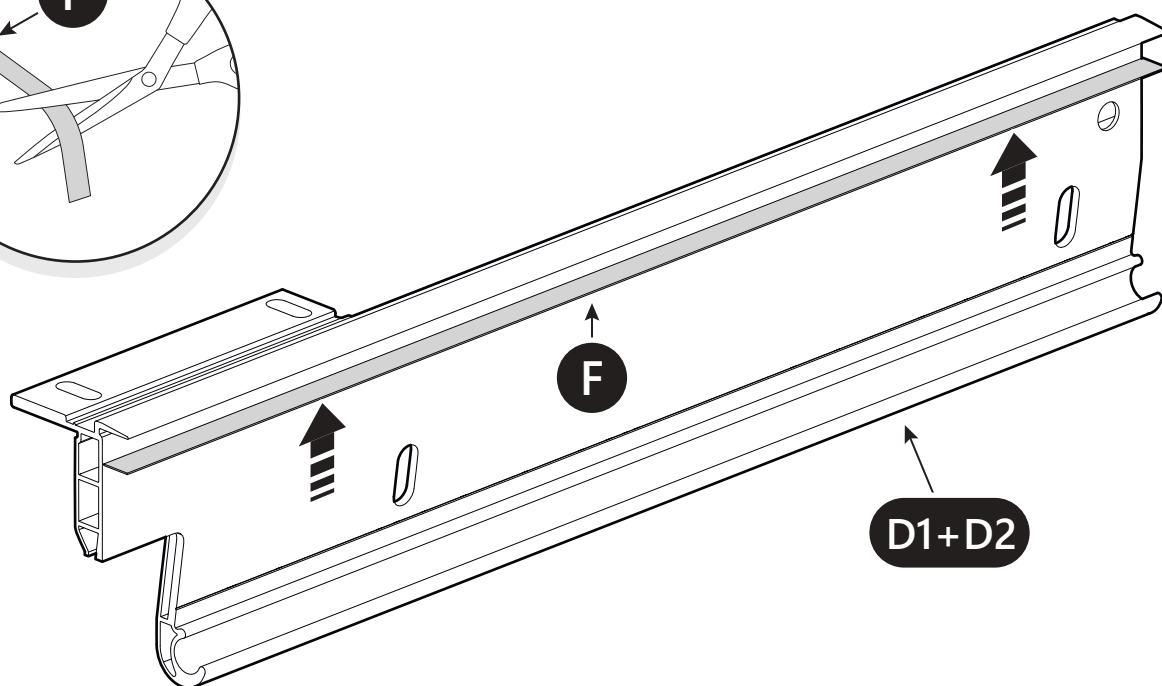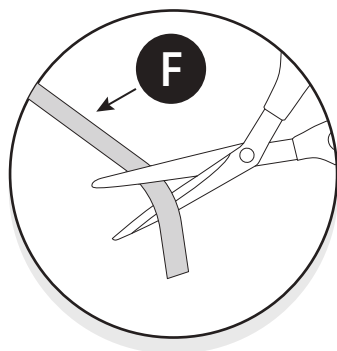


14

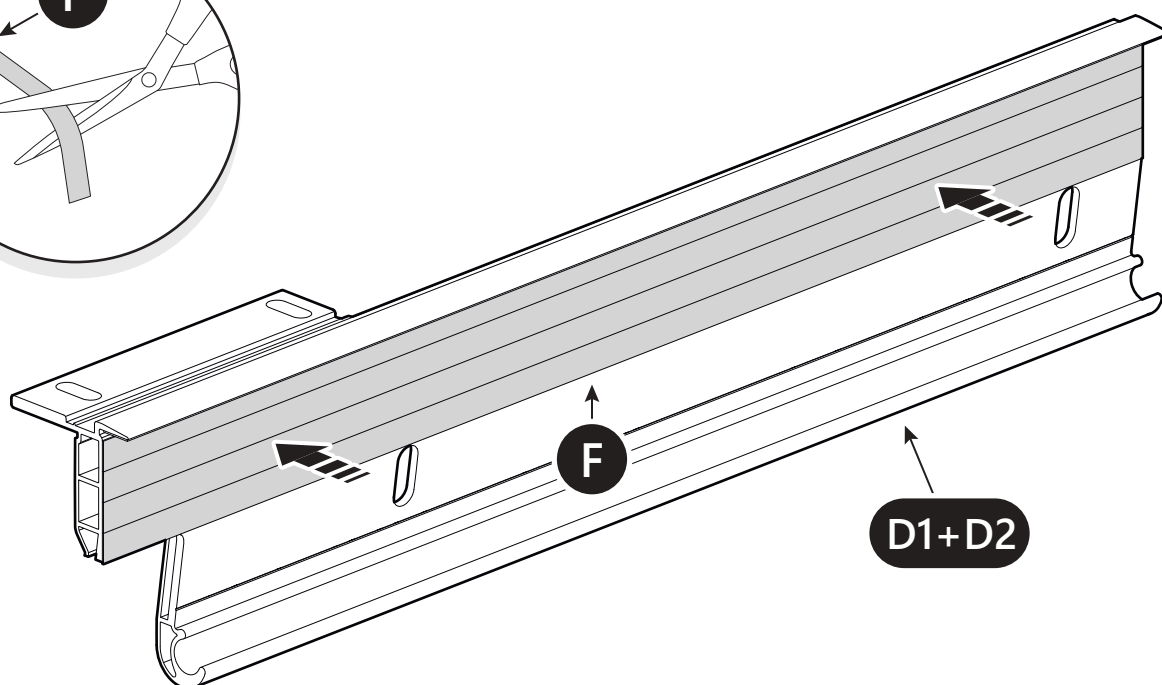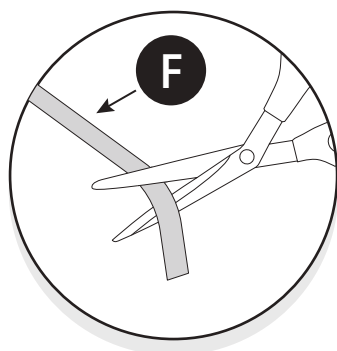









5mm



15

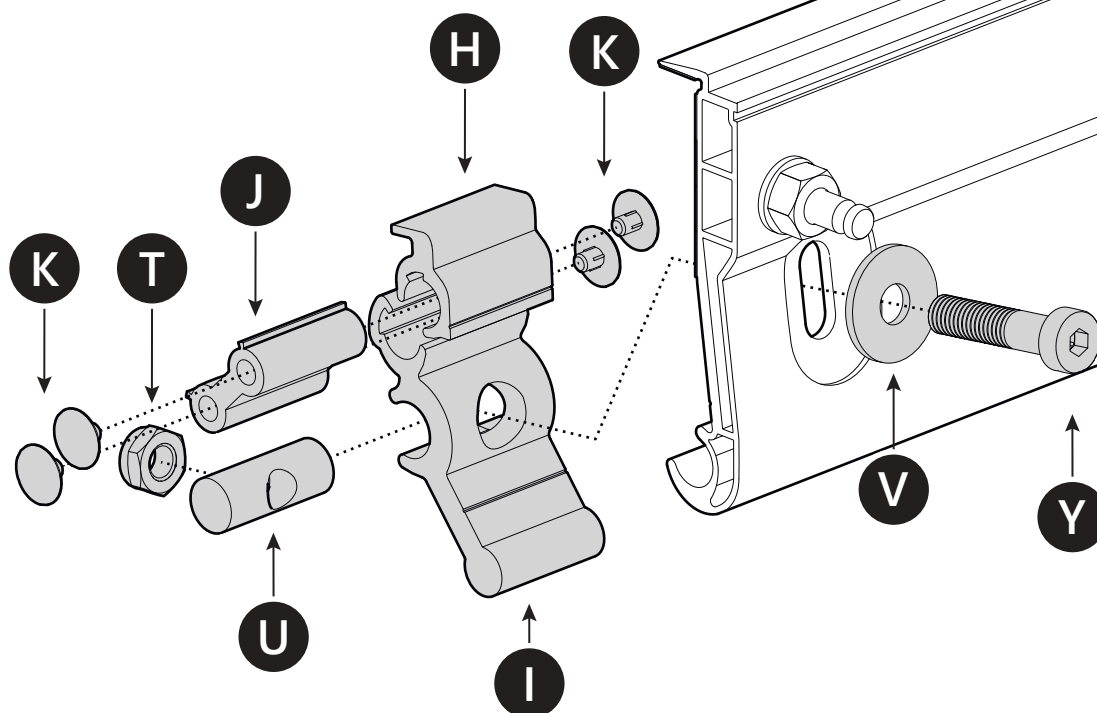


x 2

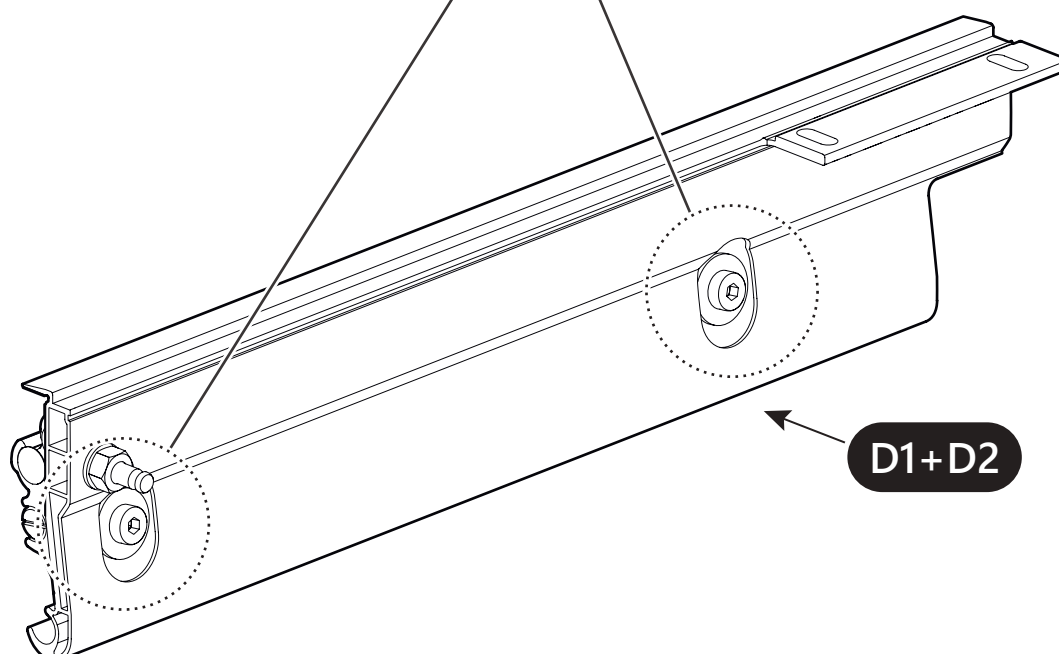

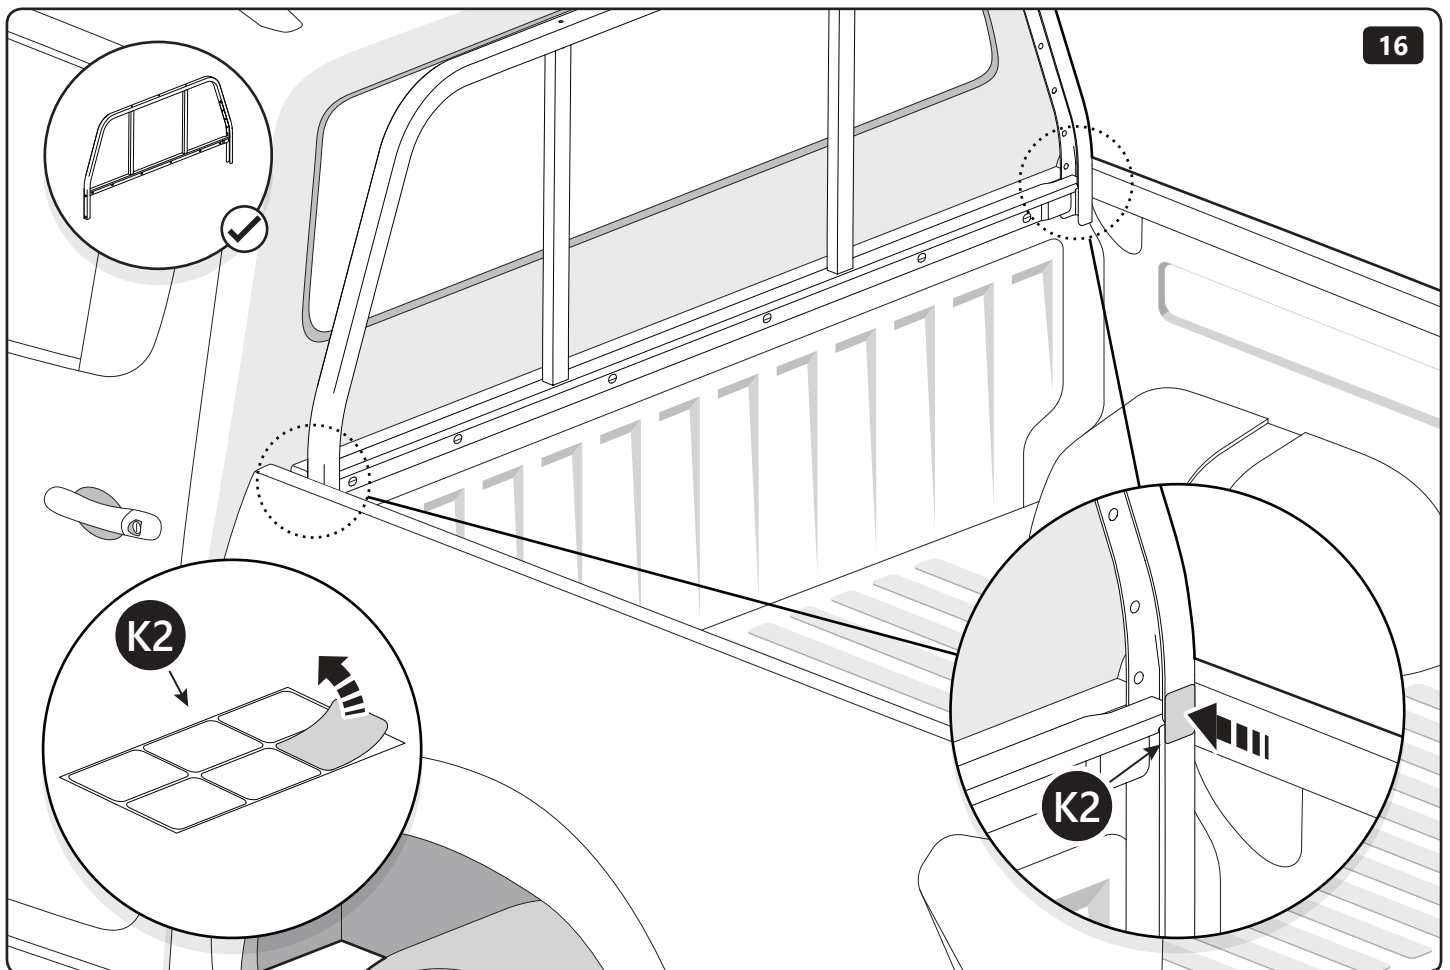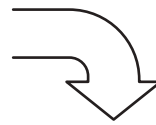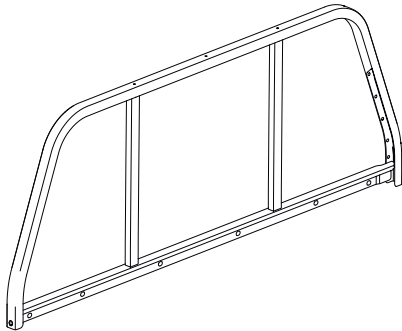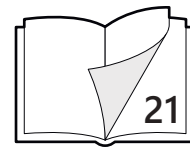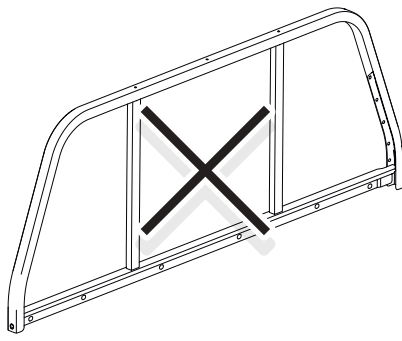


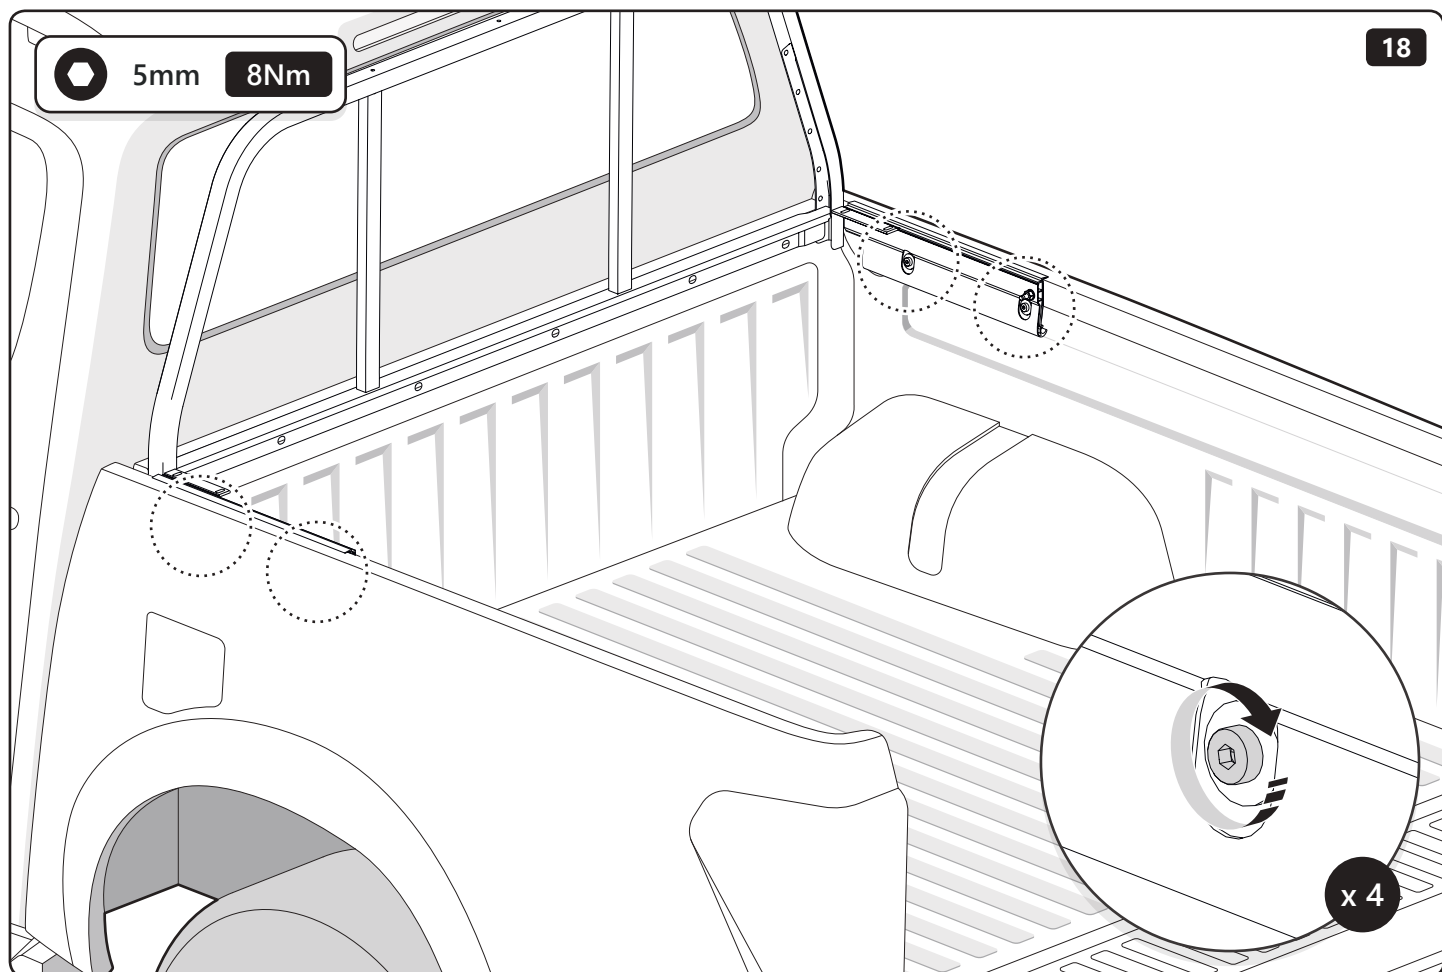
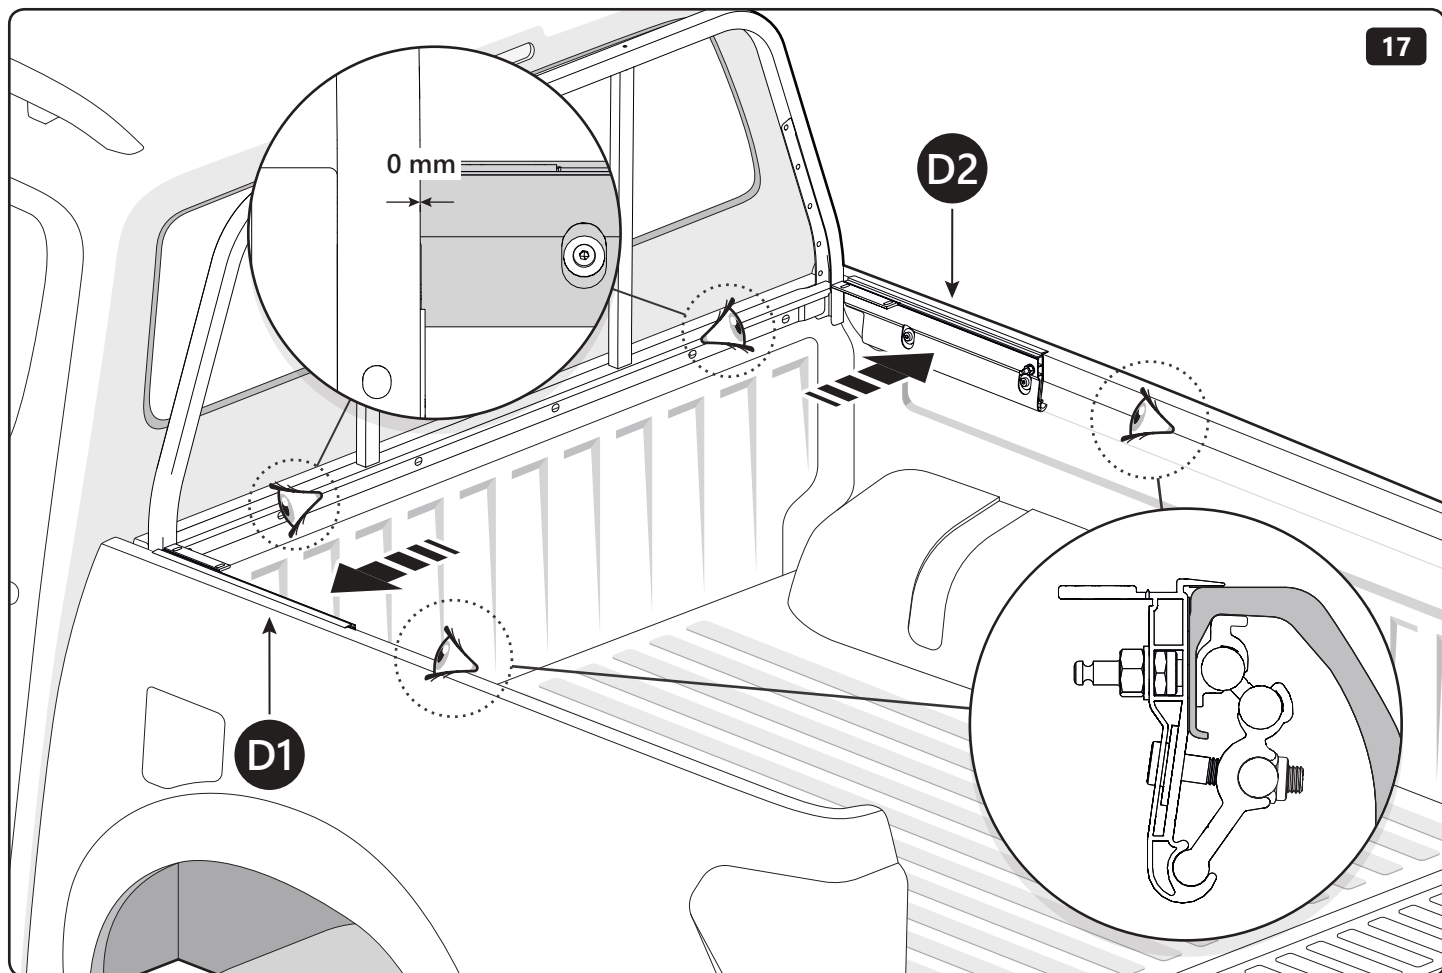



19





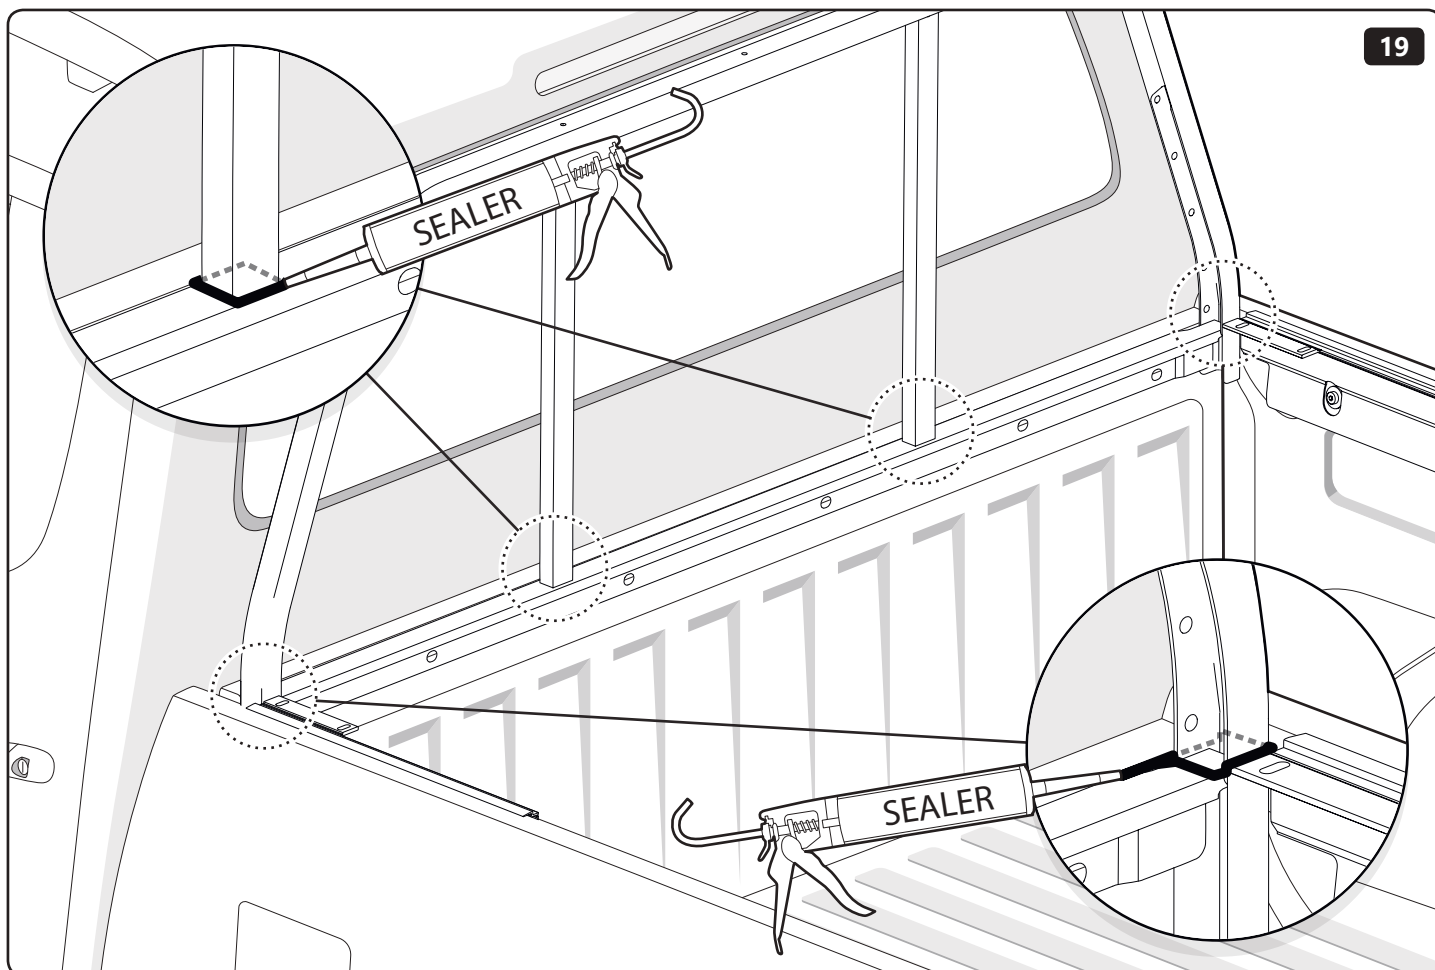




20


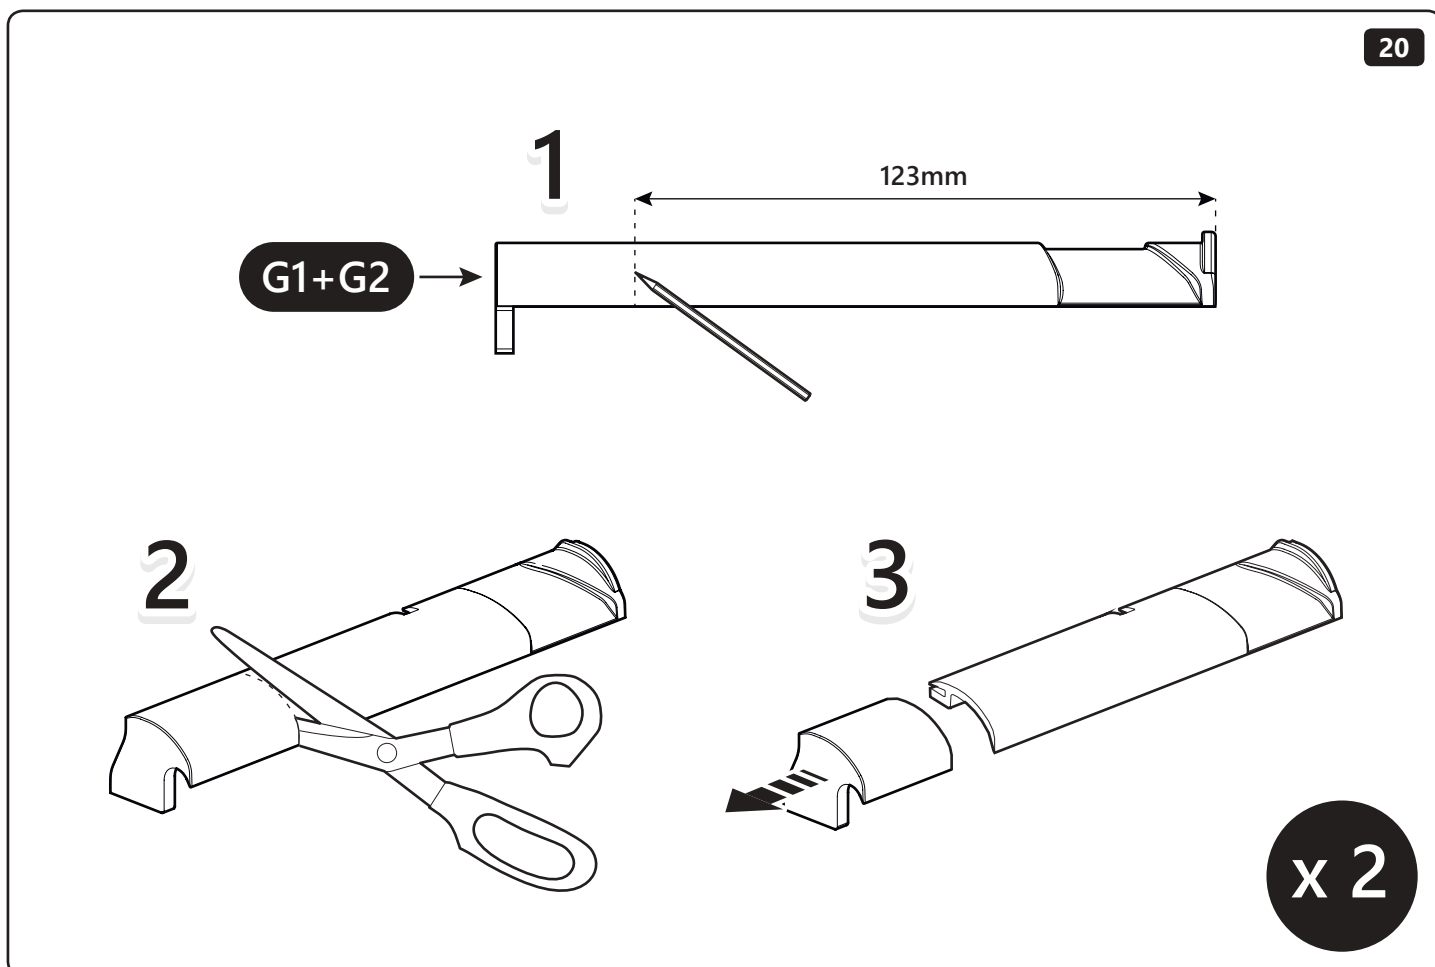


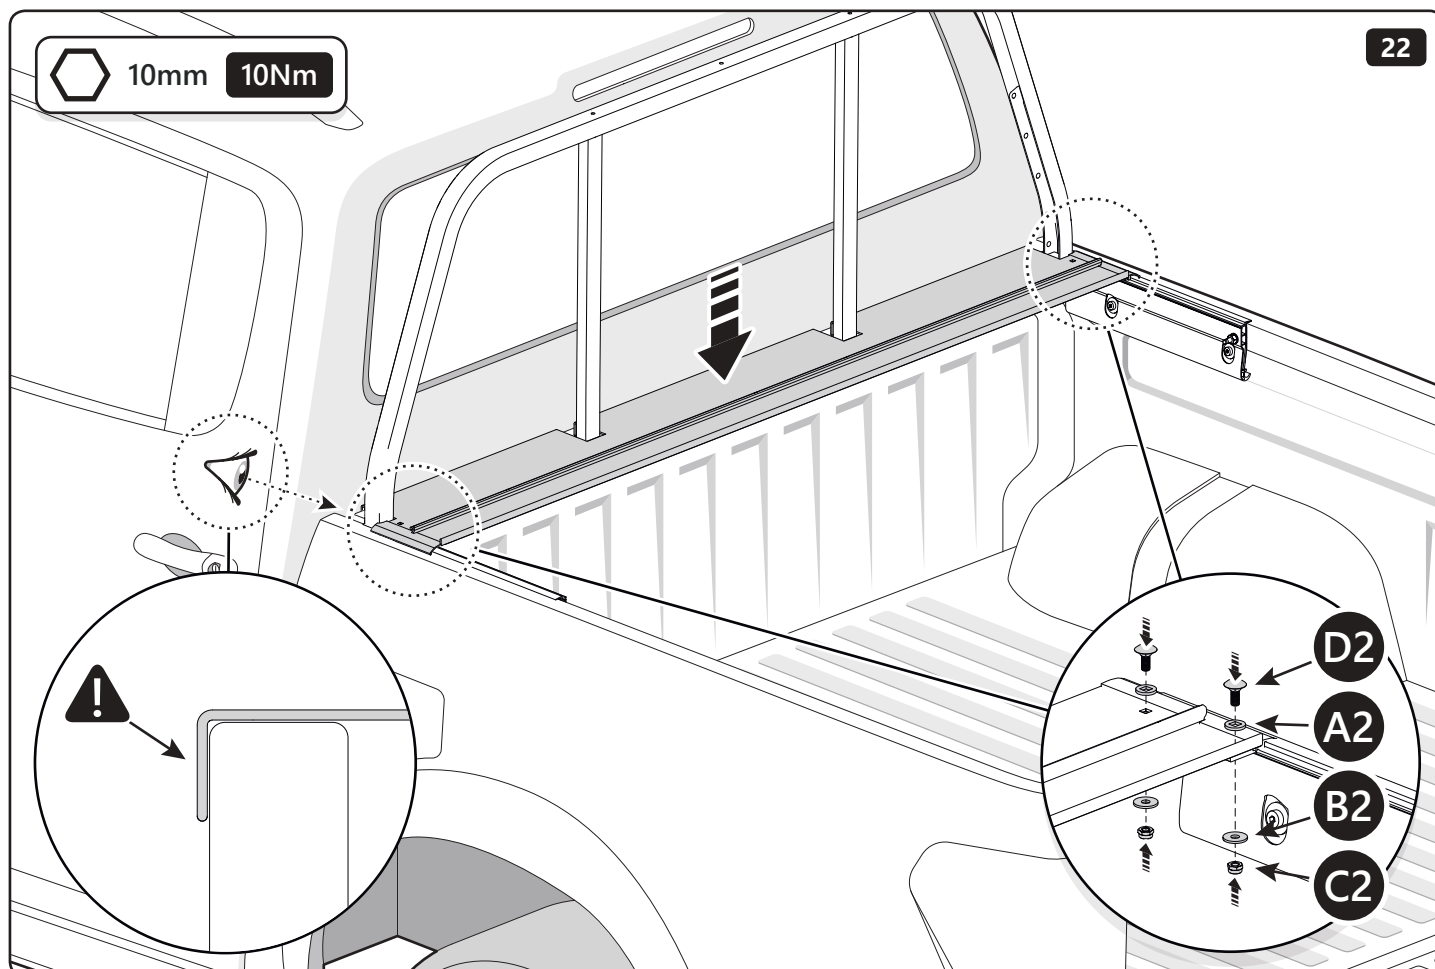
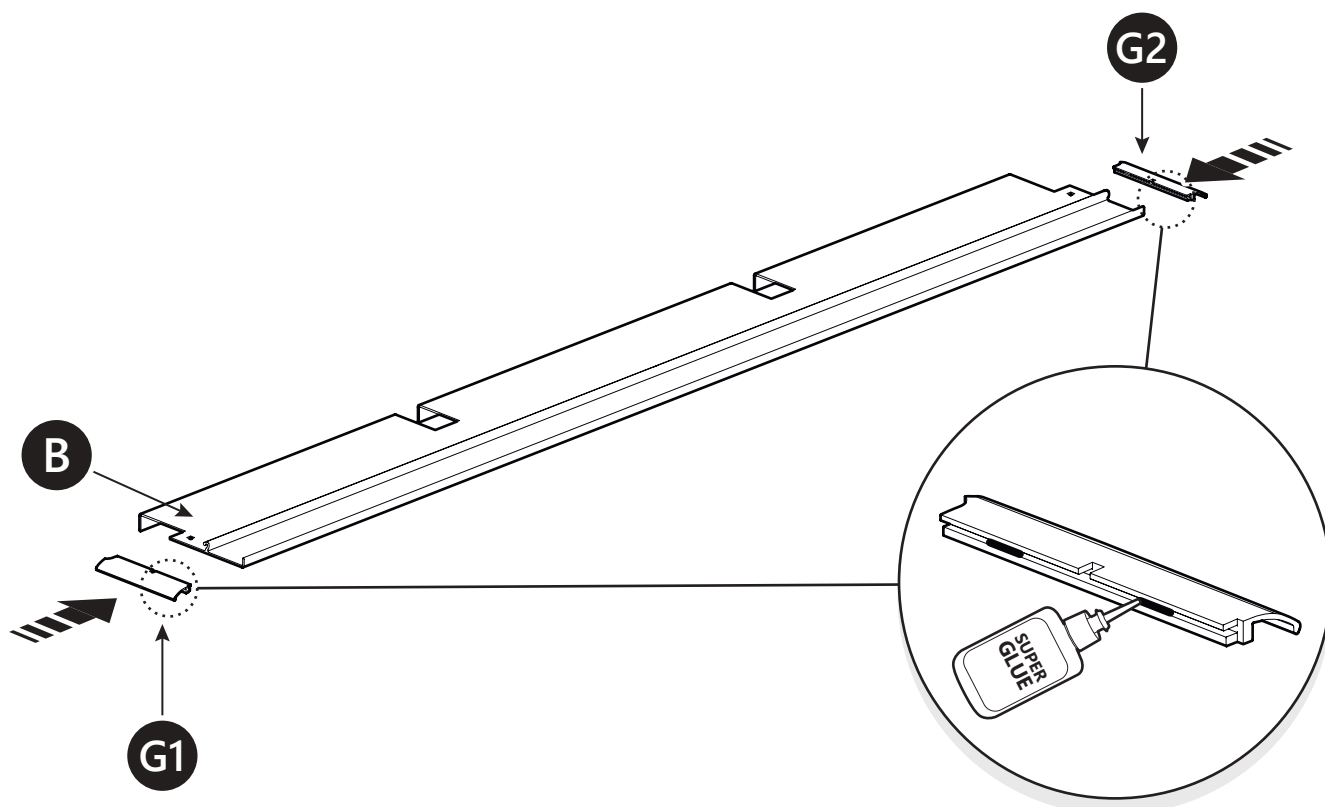



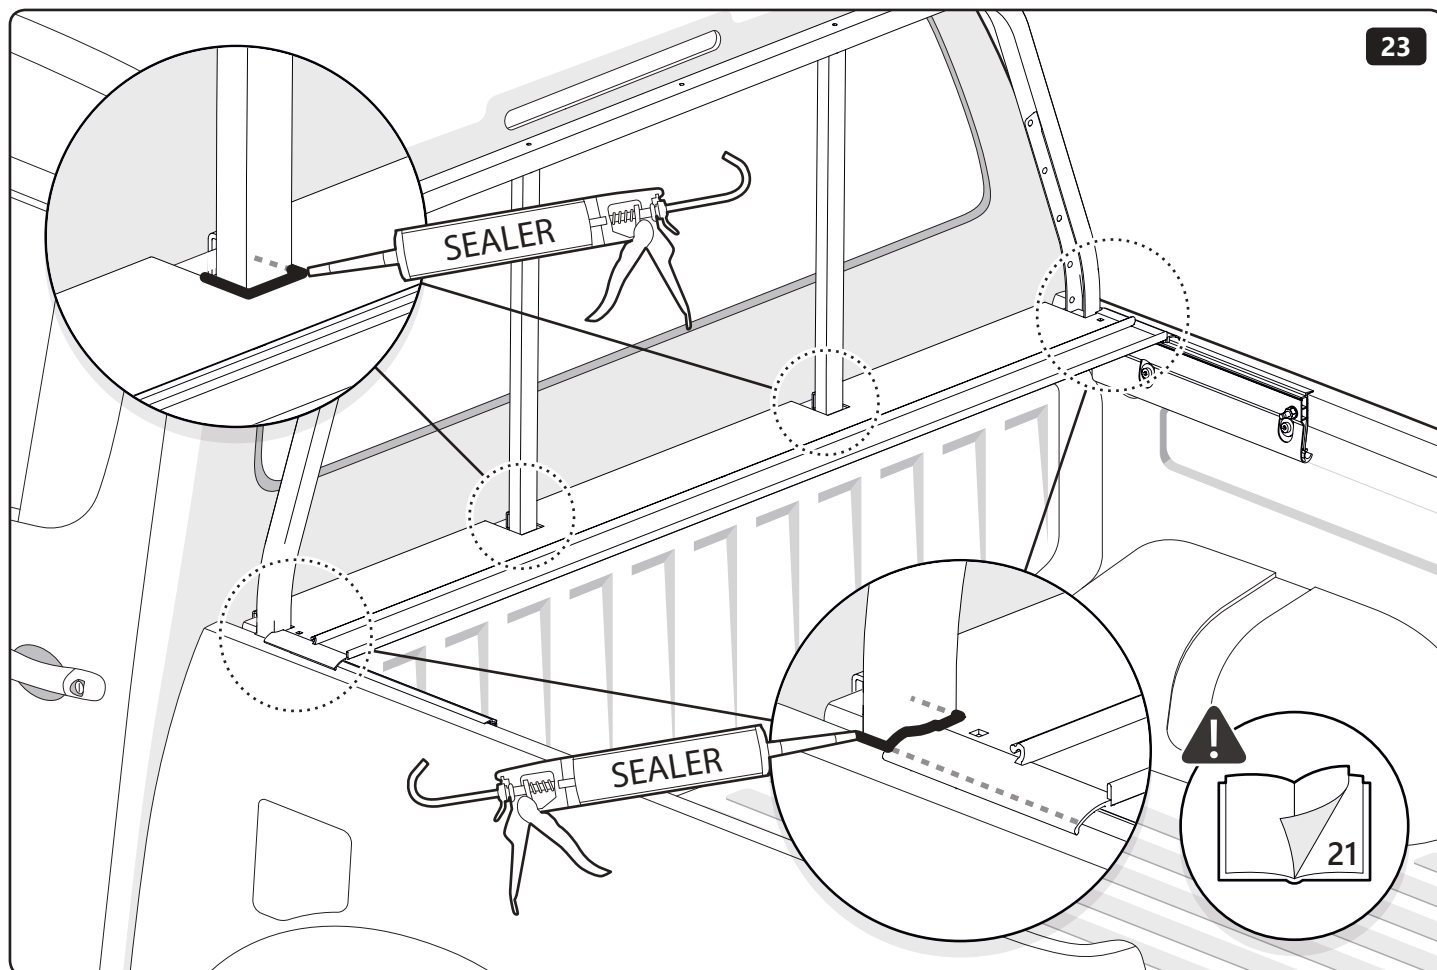


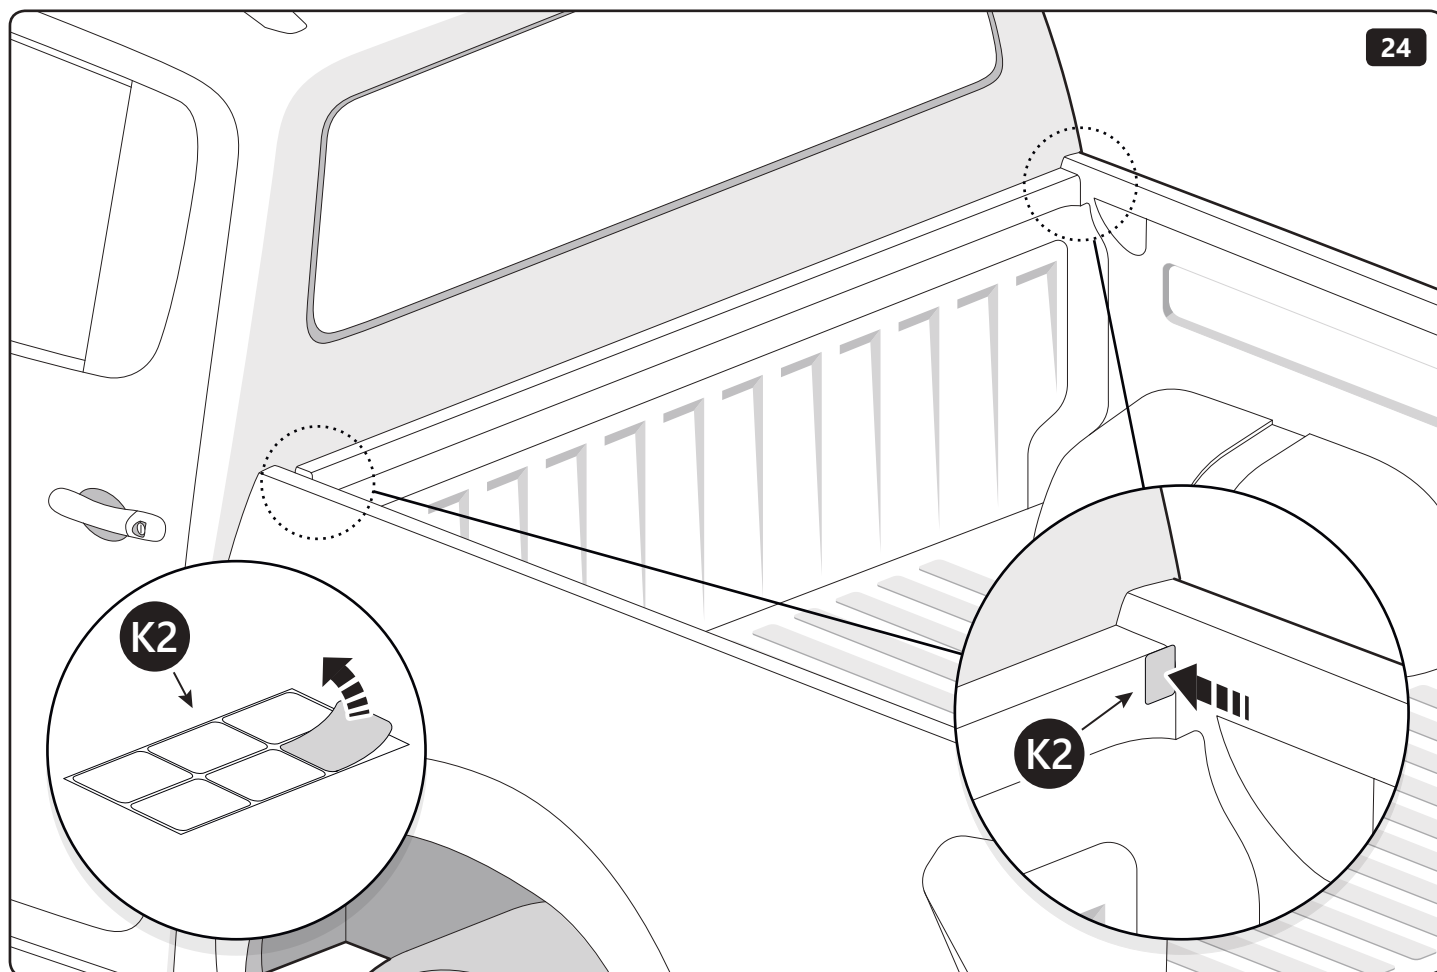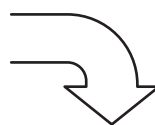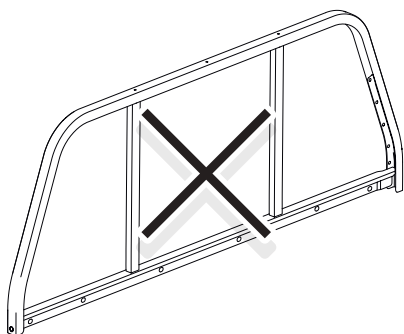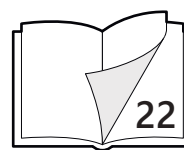
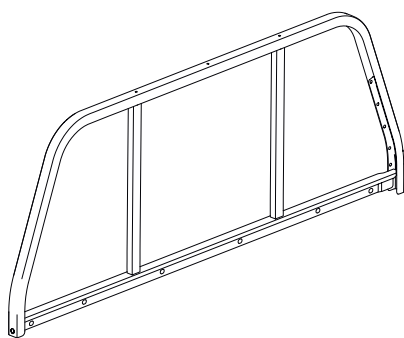


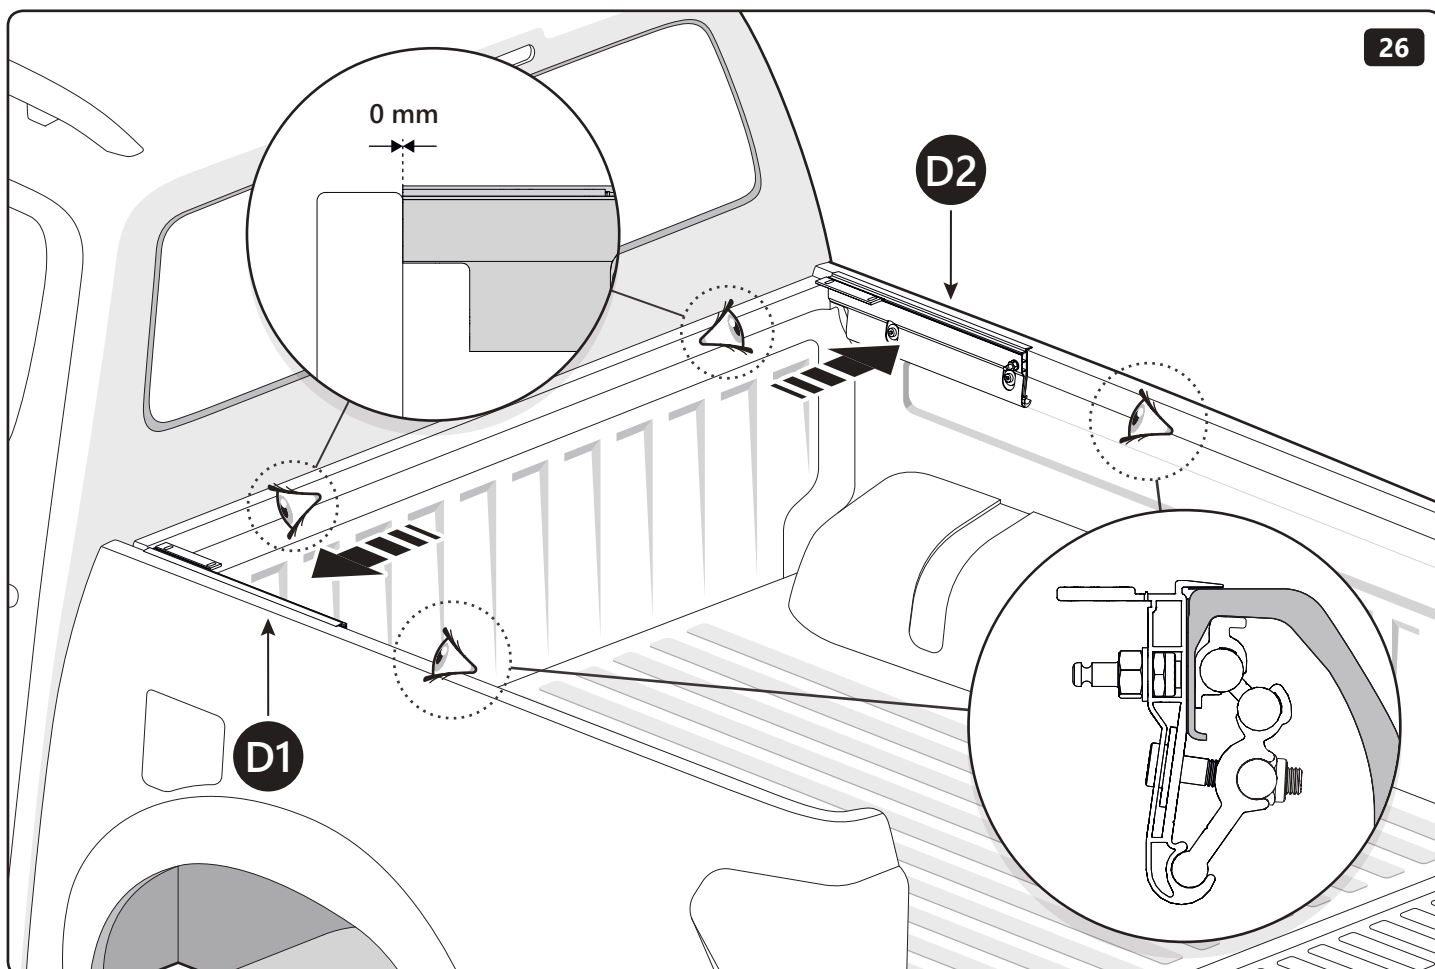
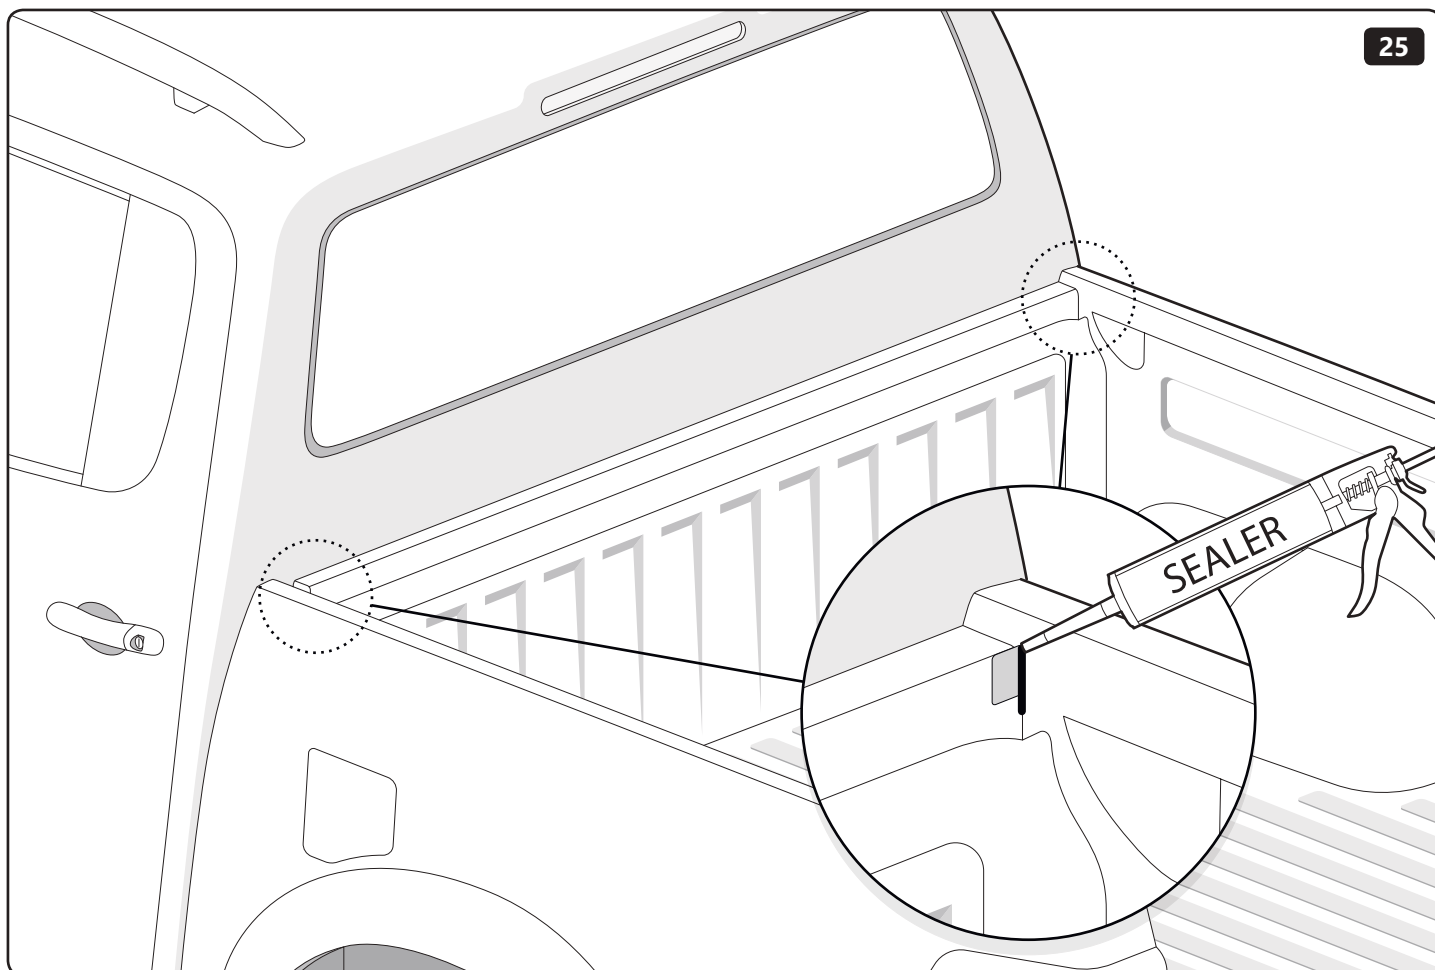


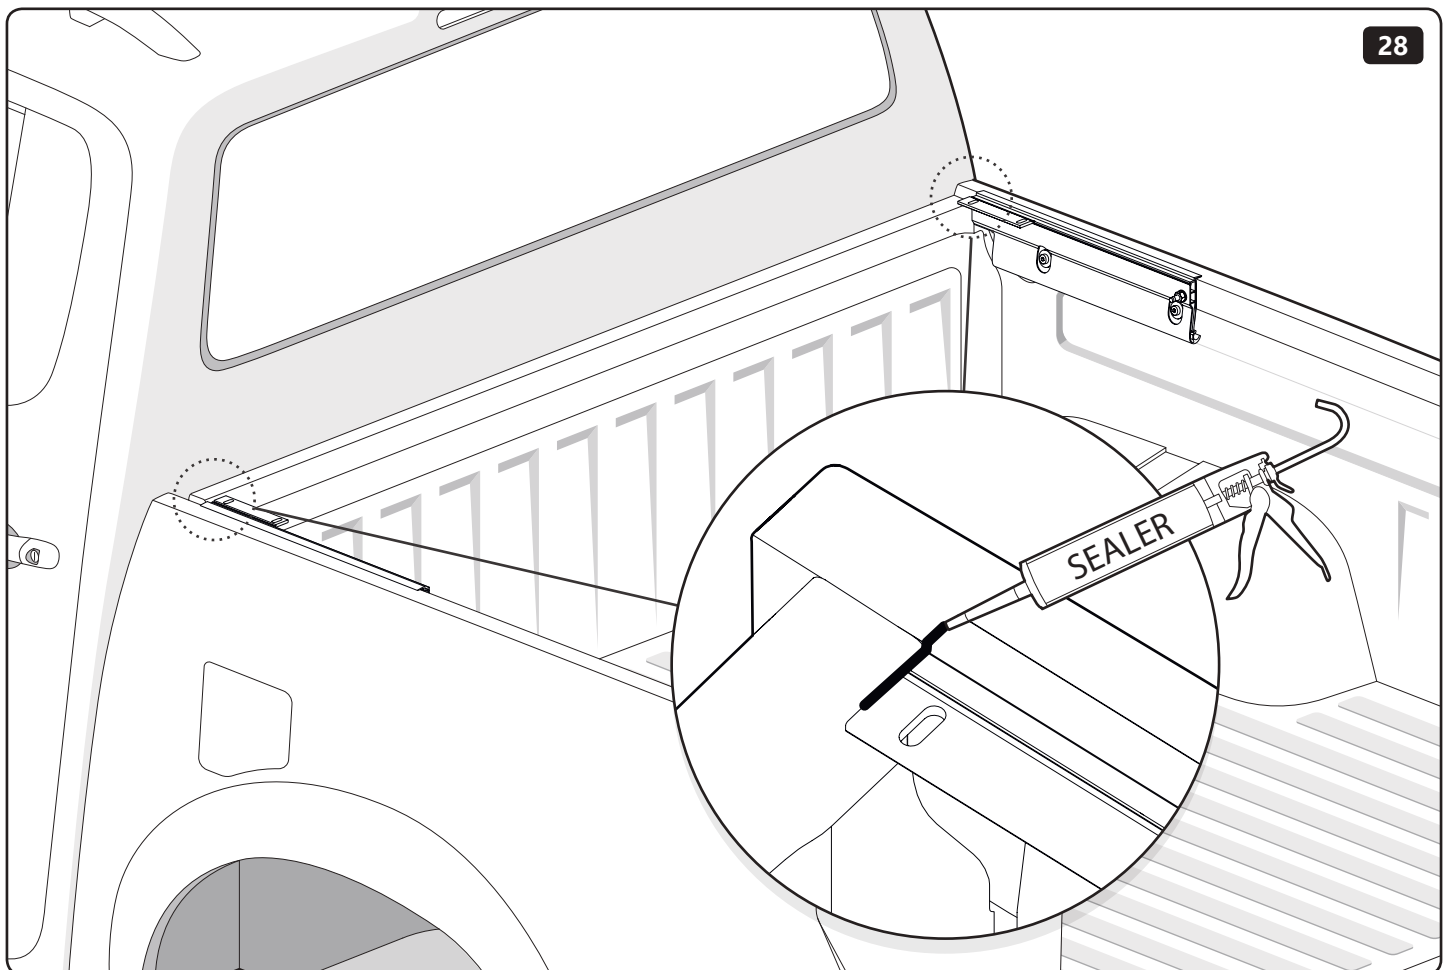
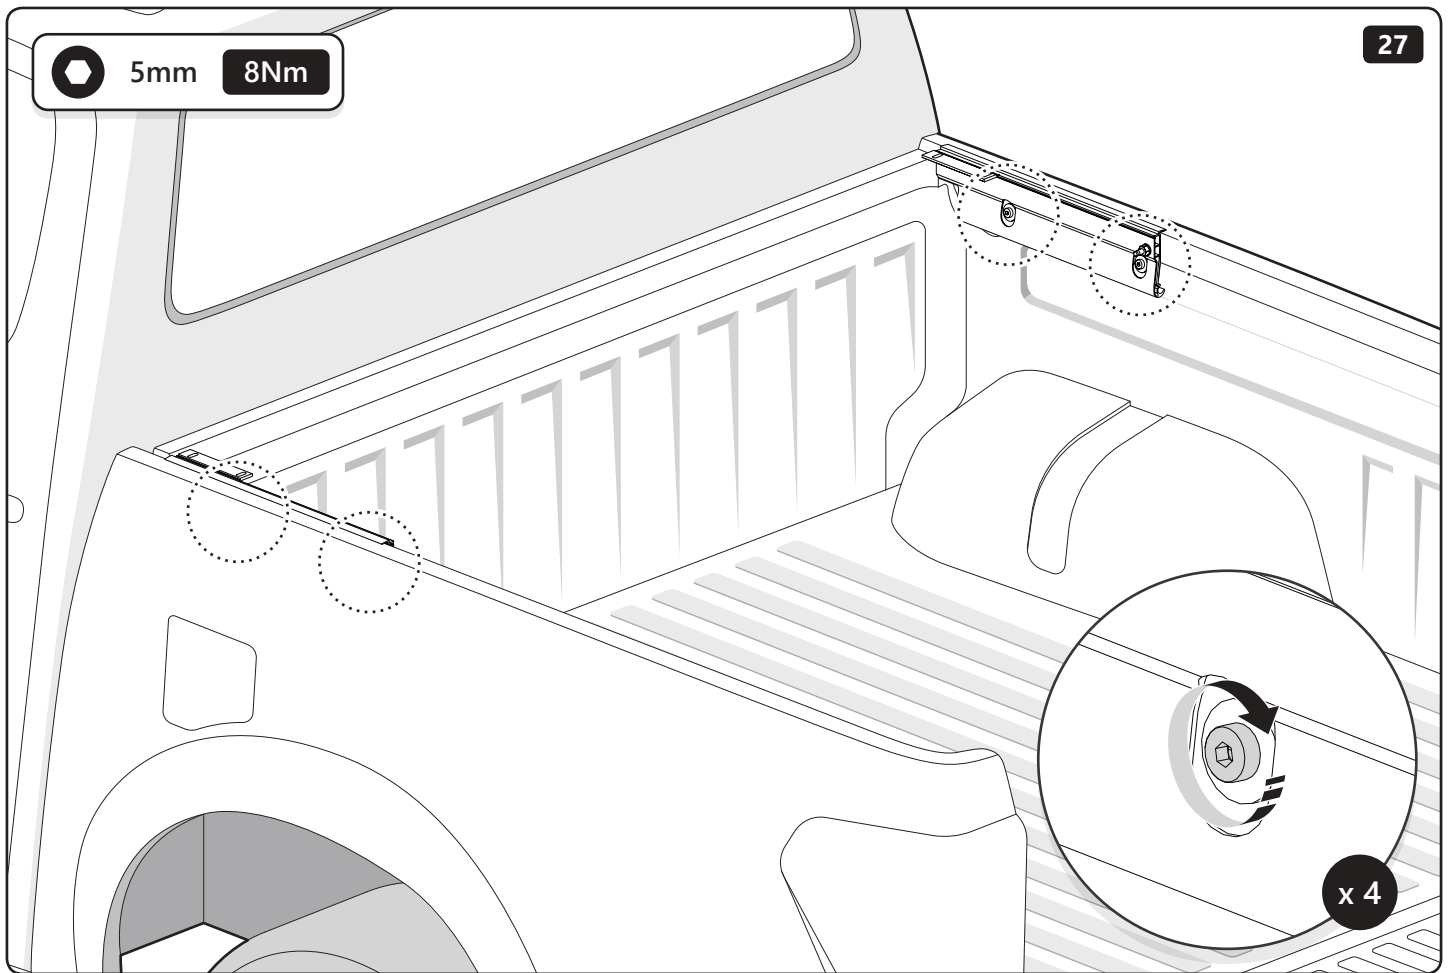


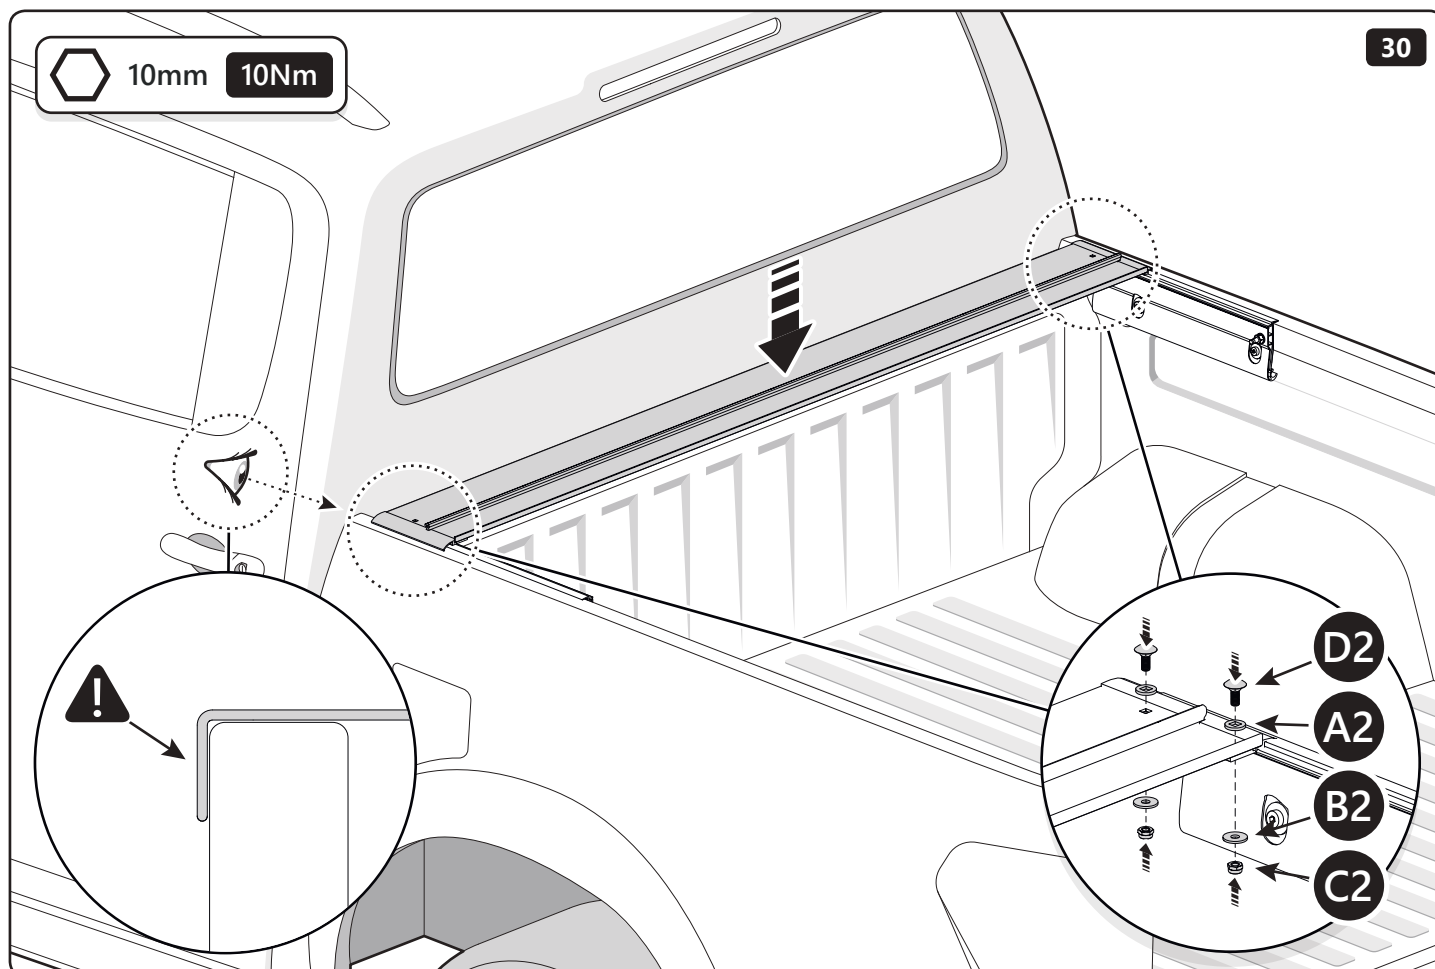
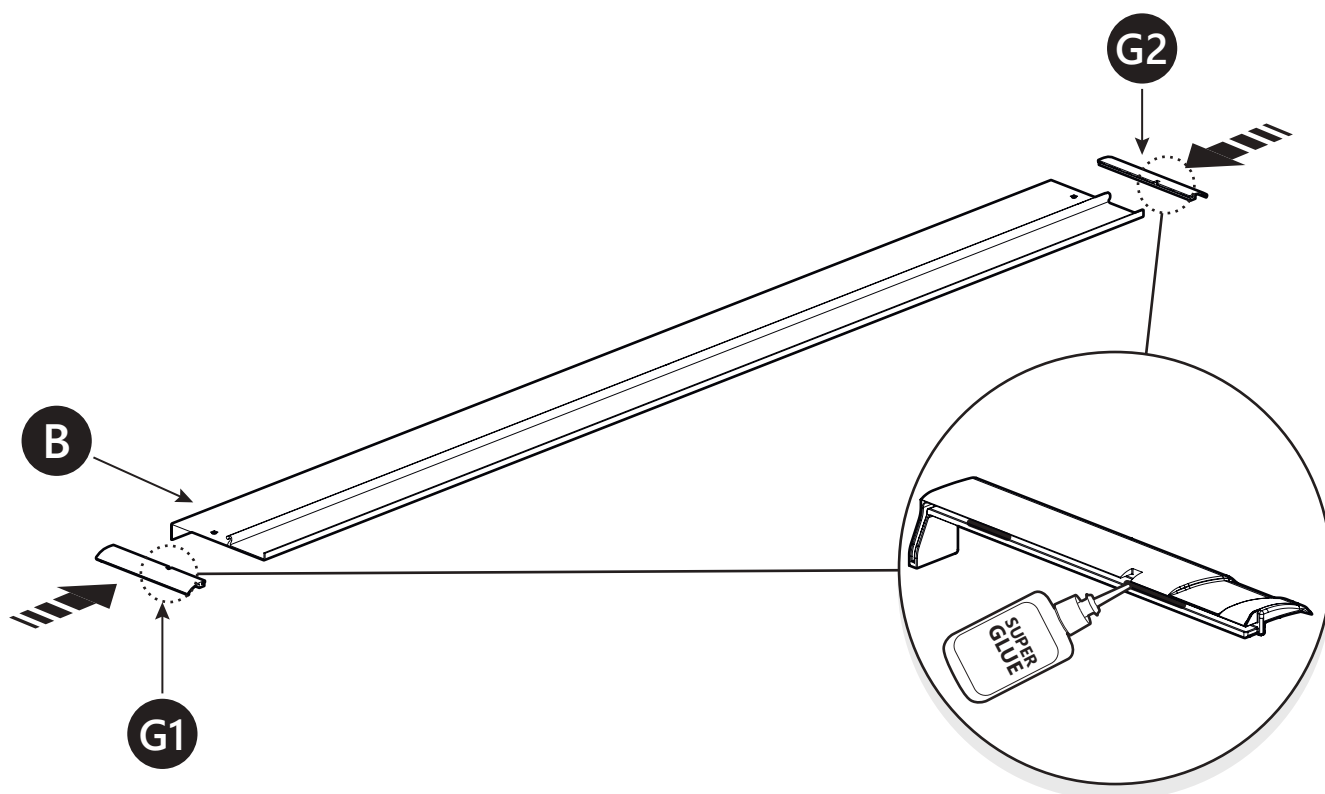


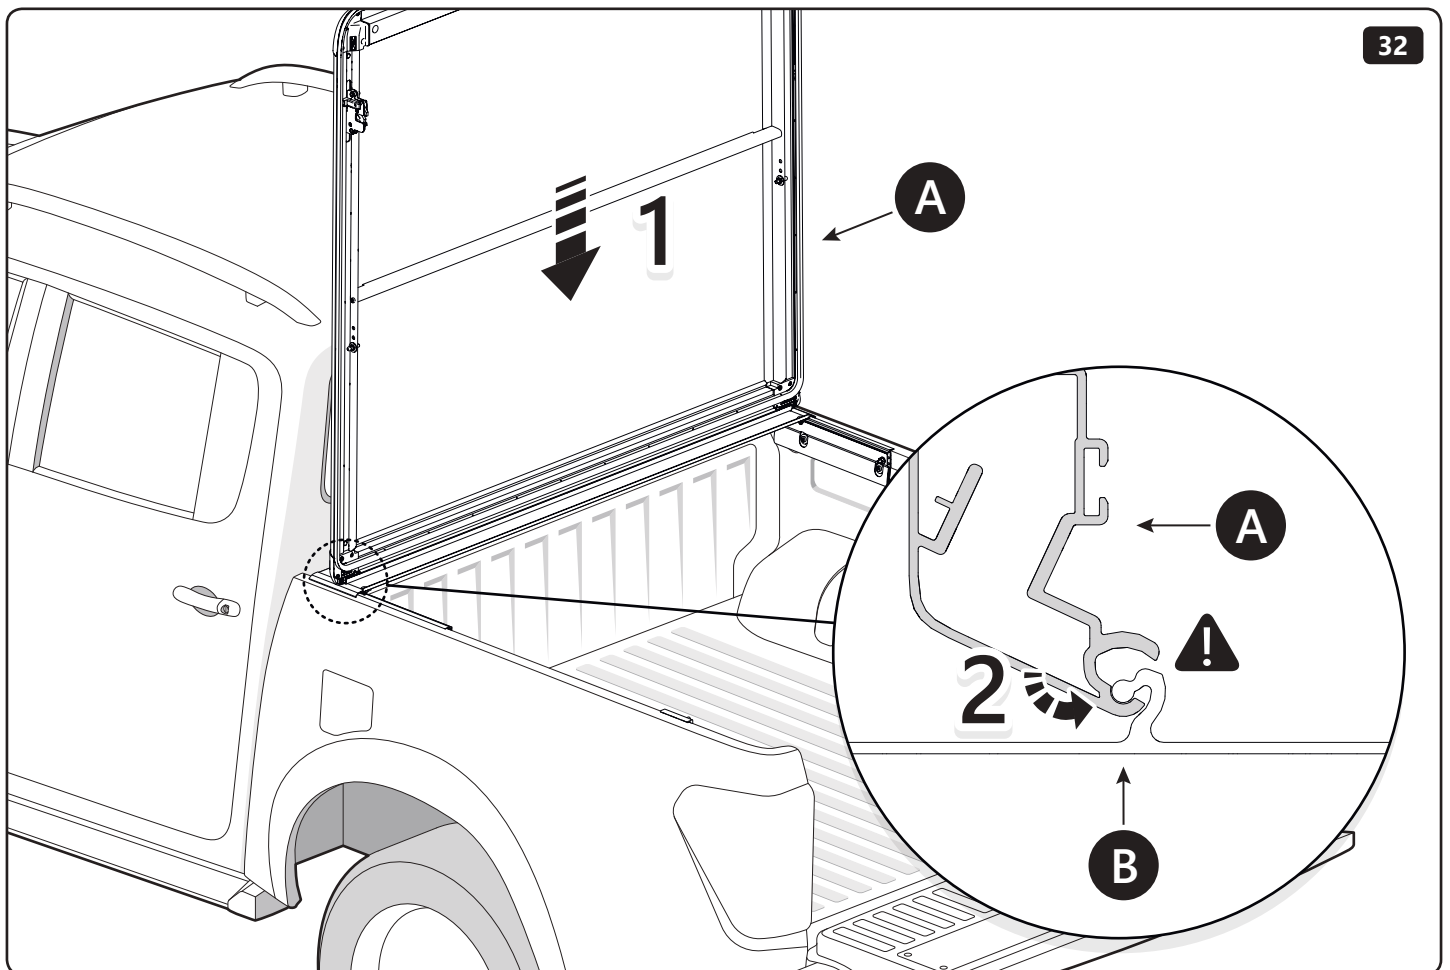
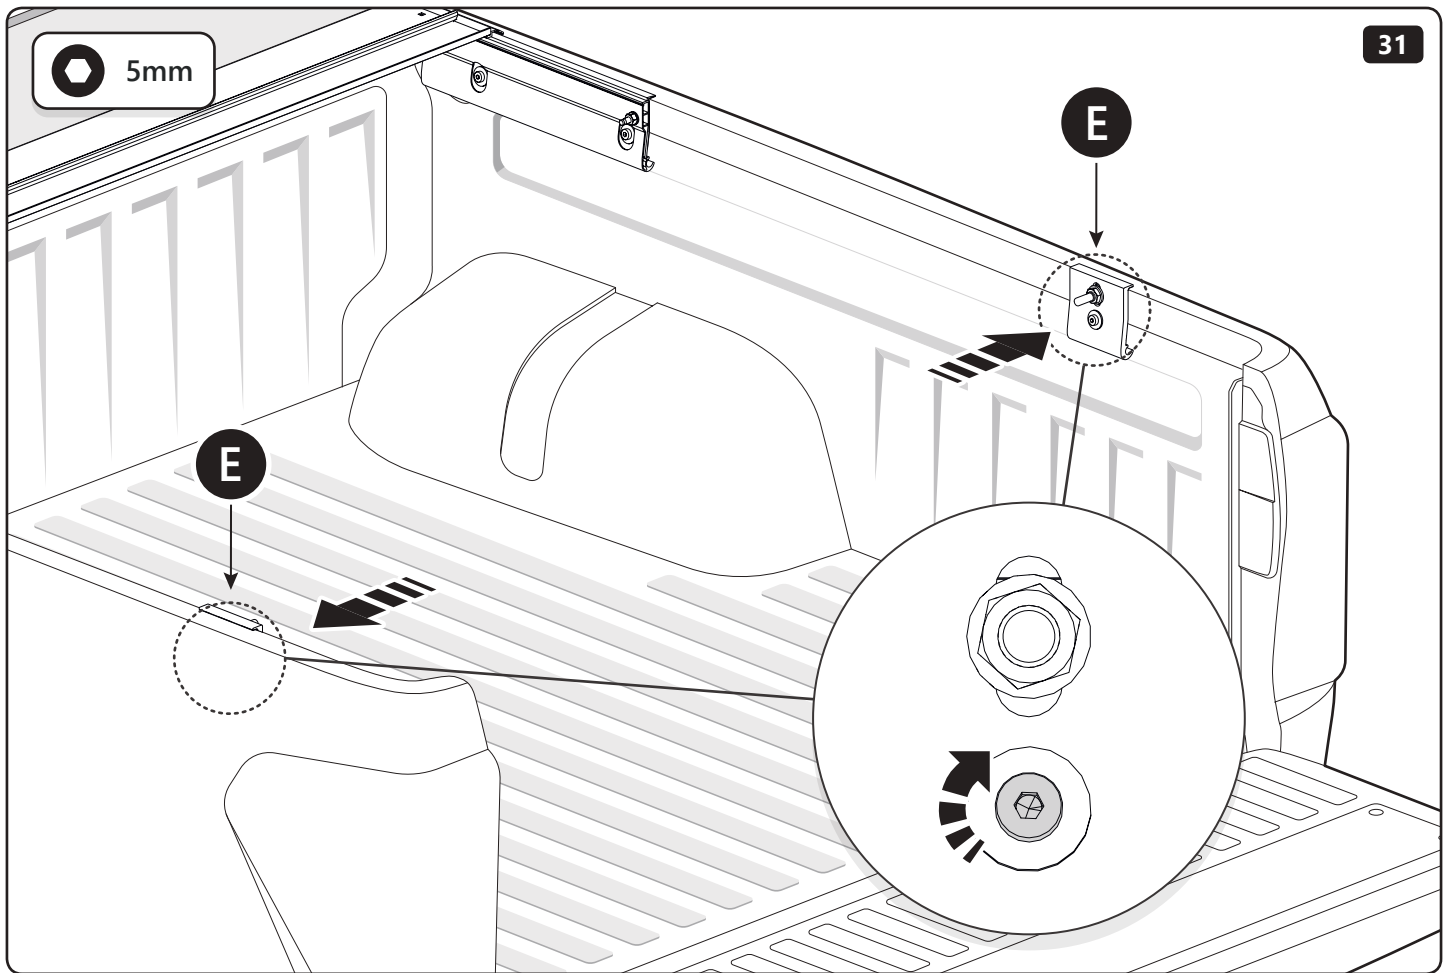


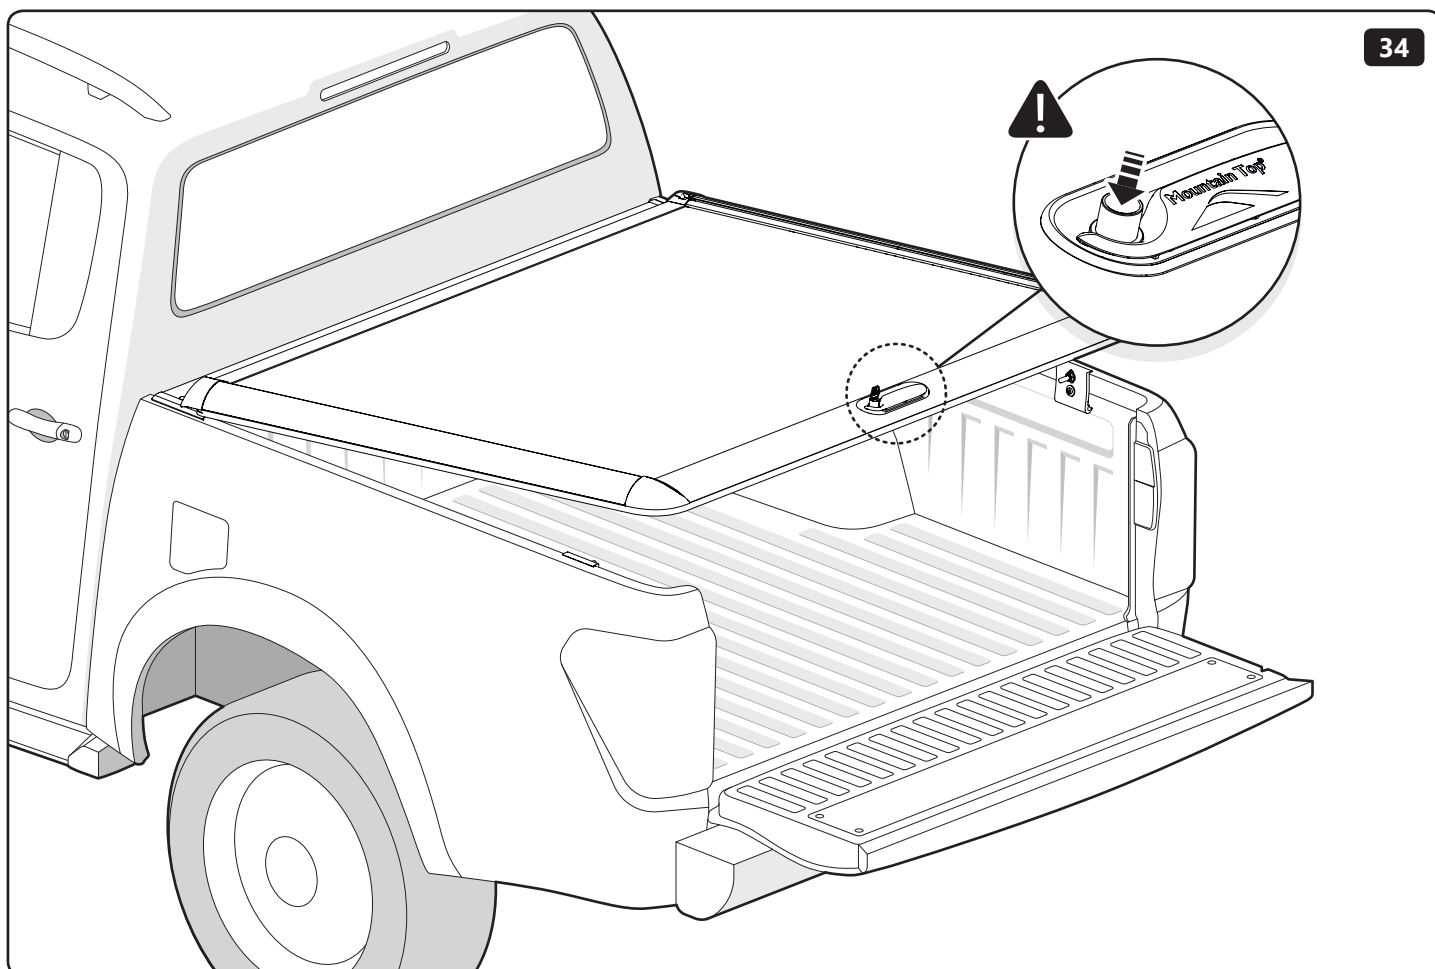
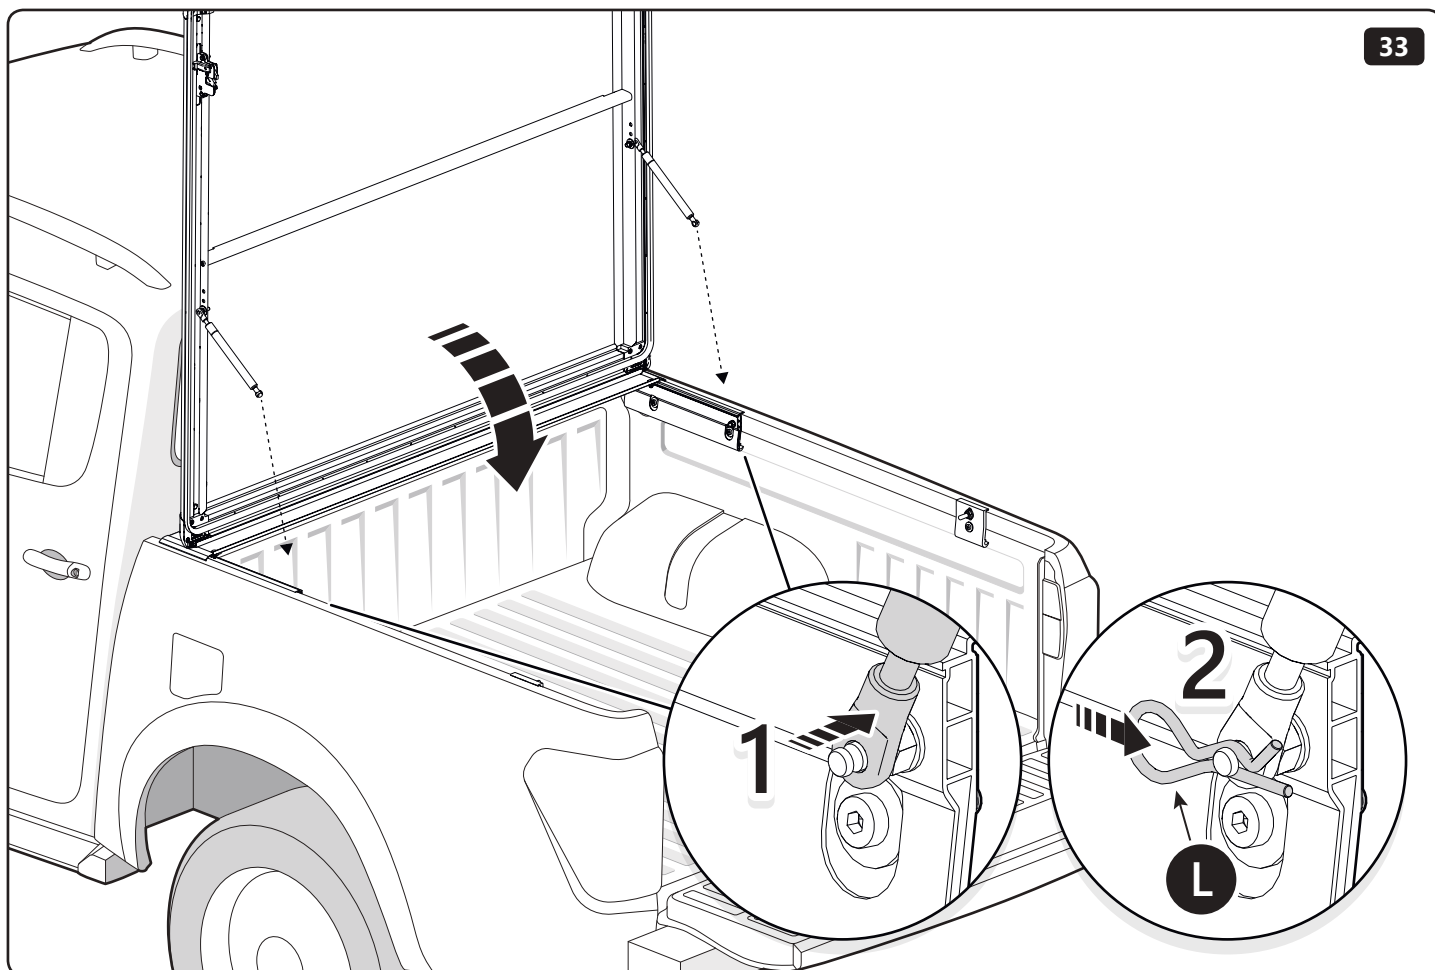


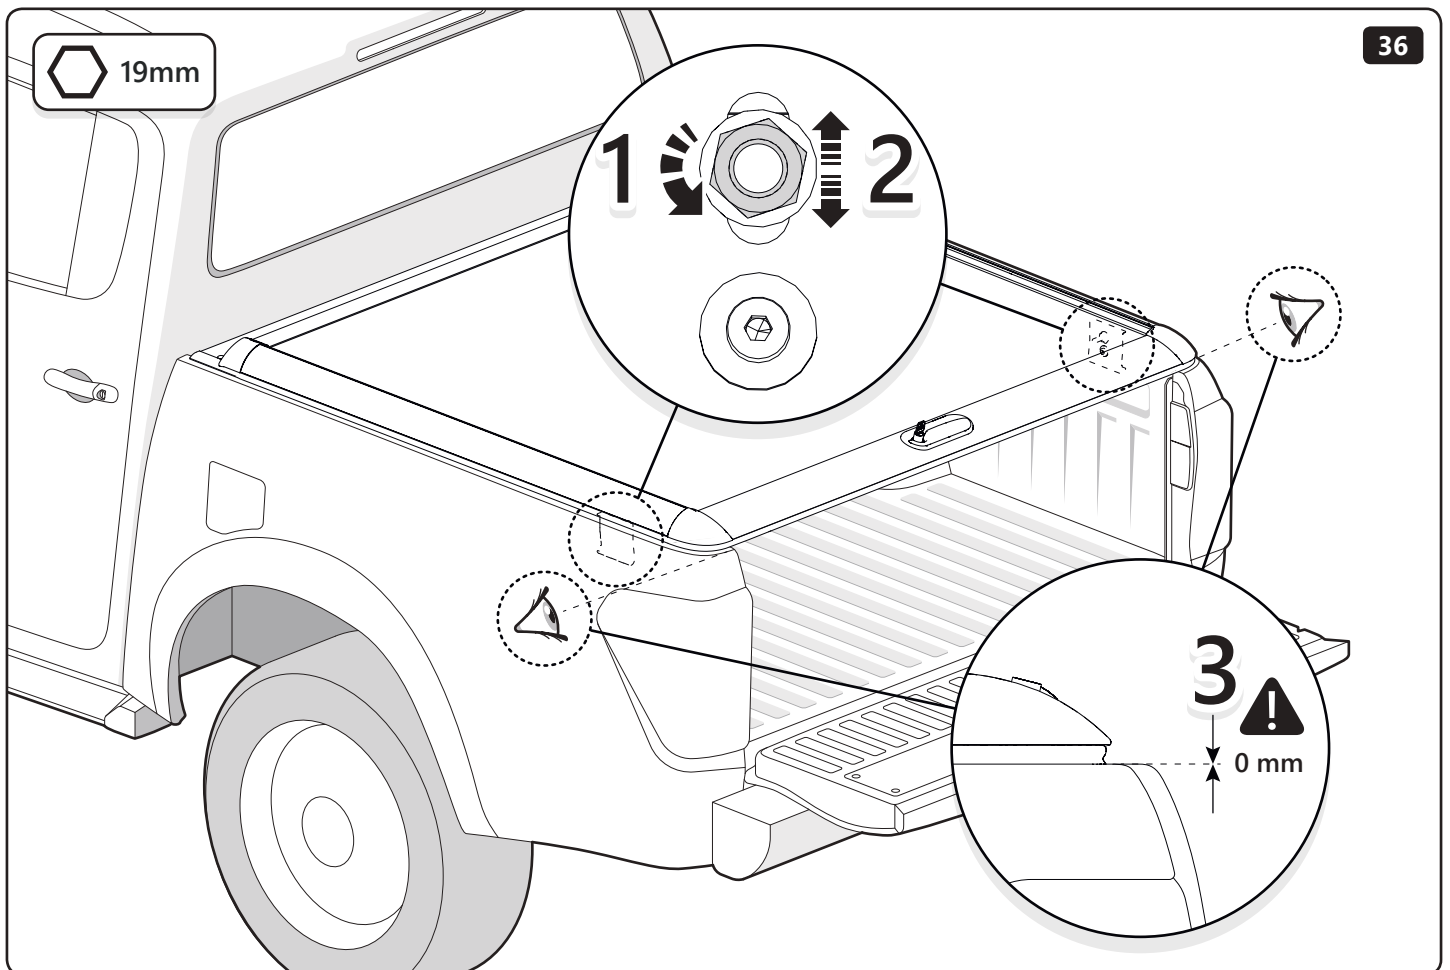
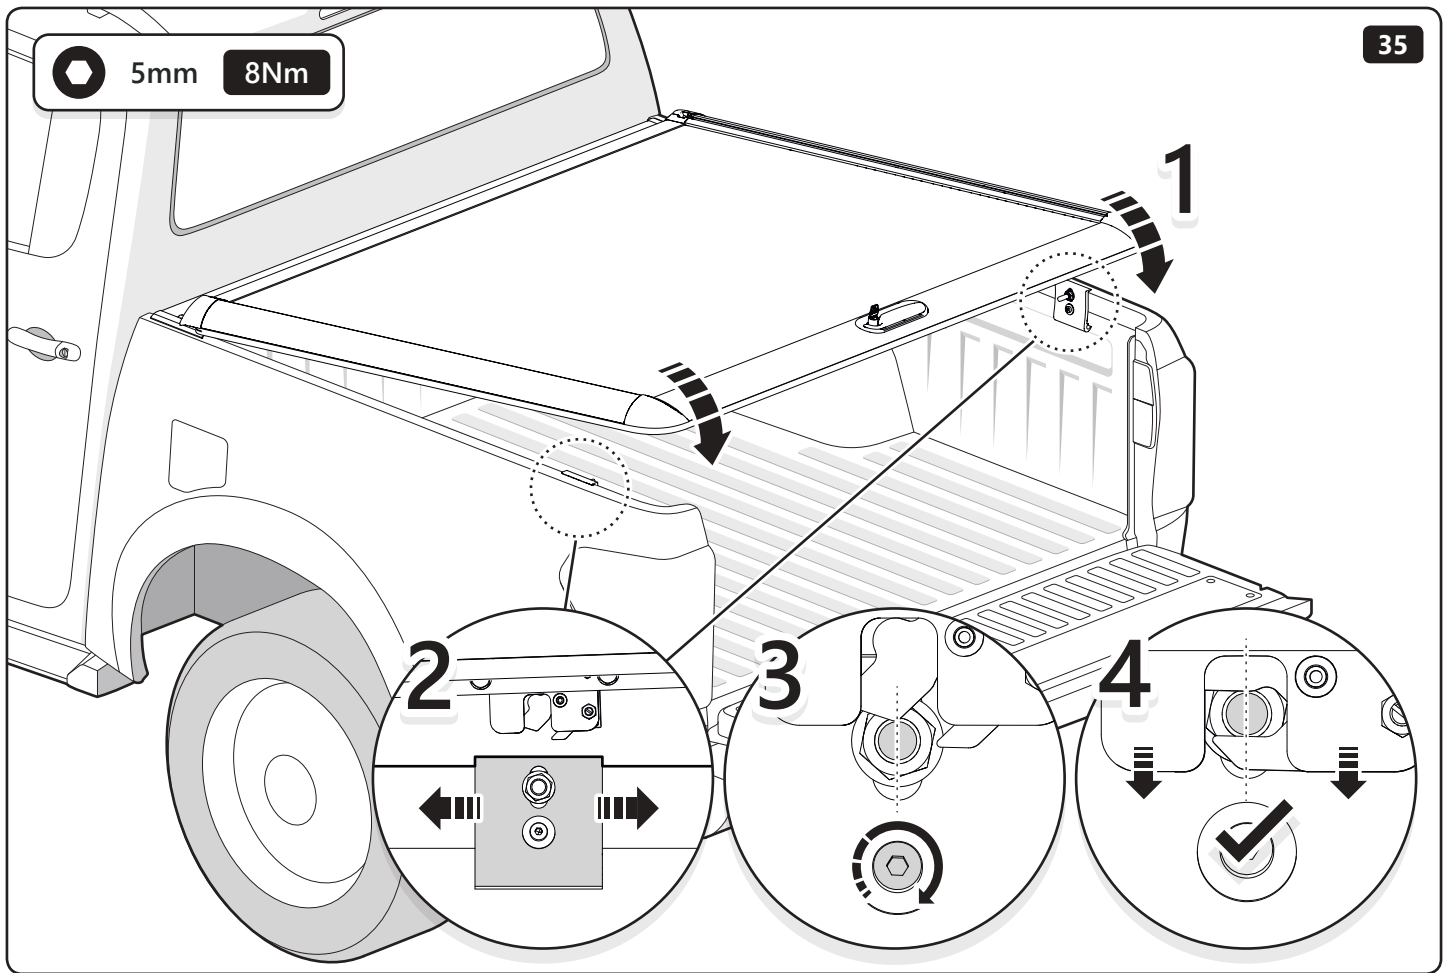


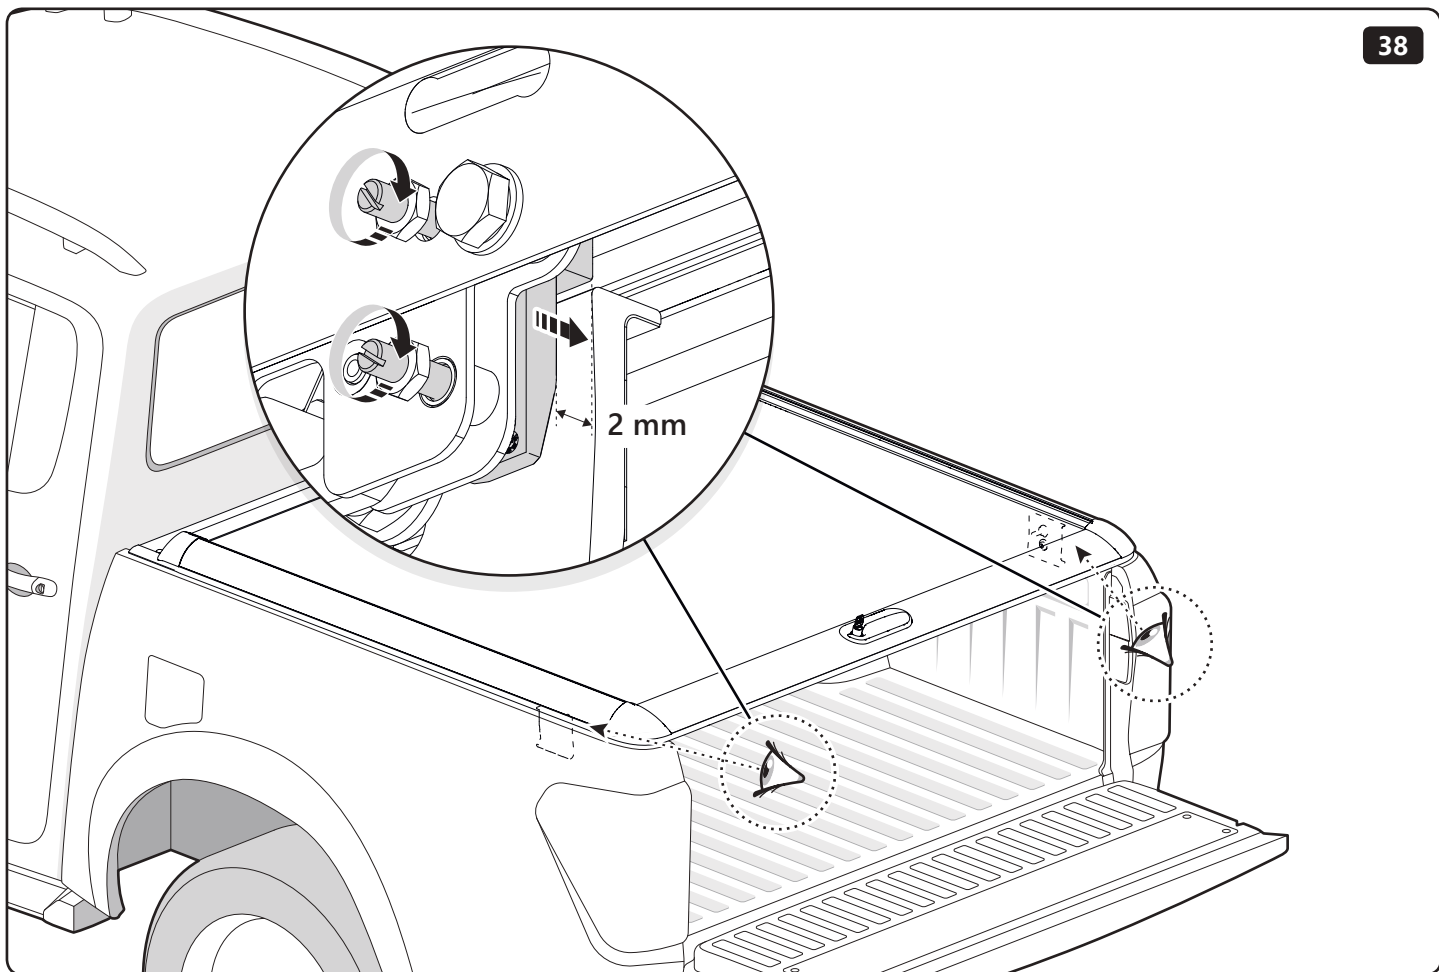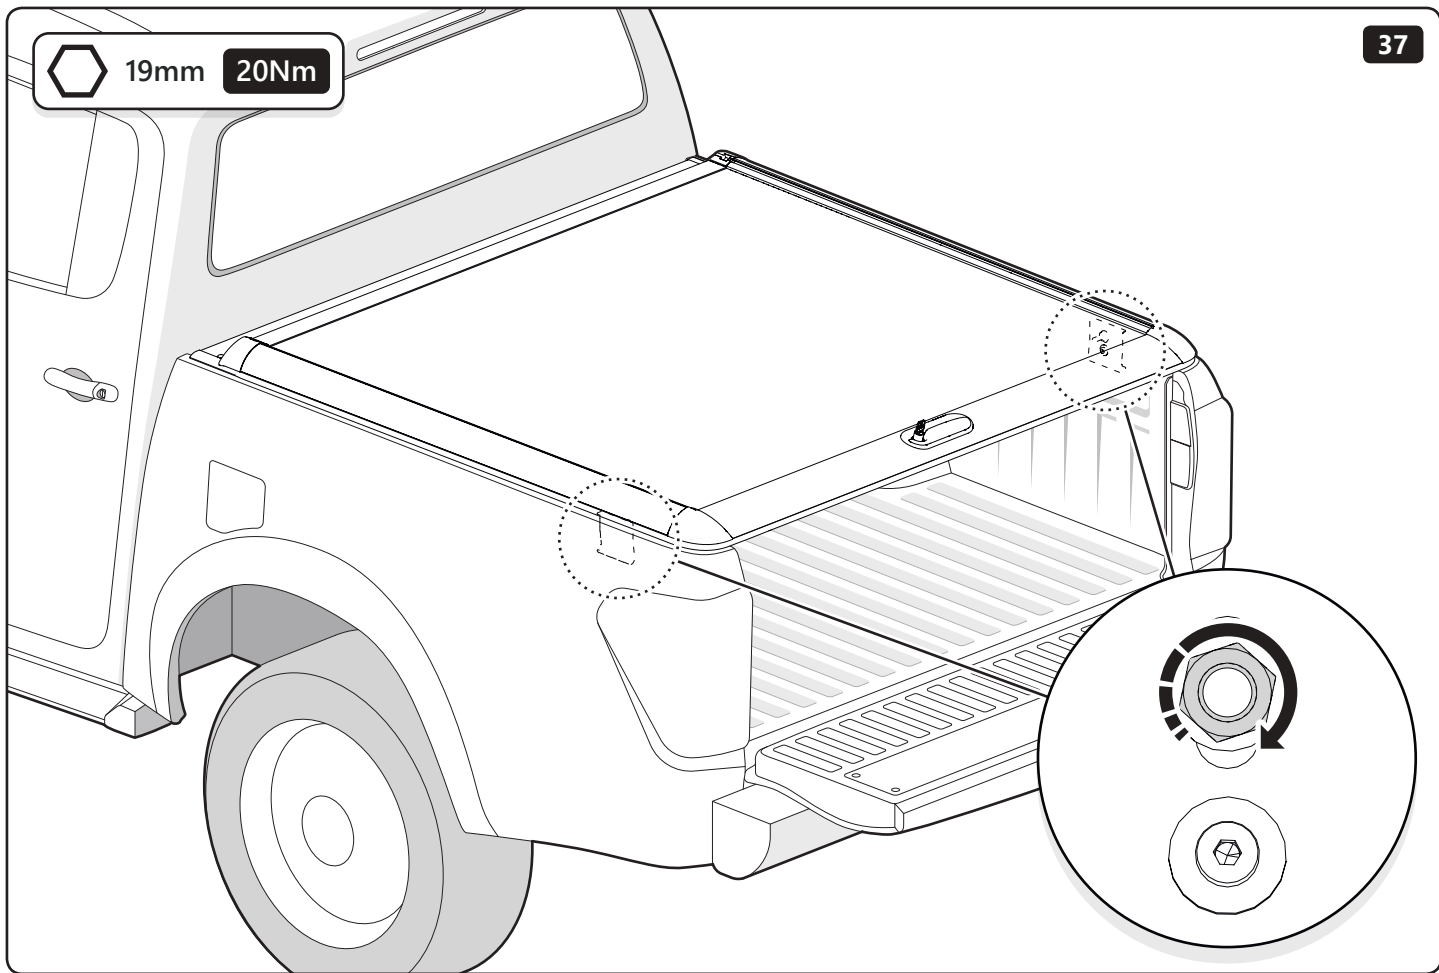

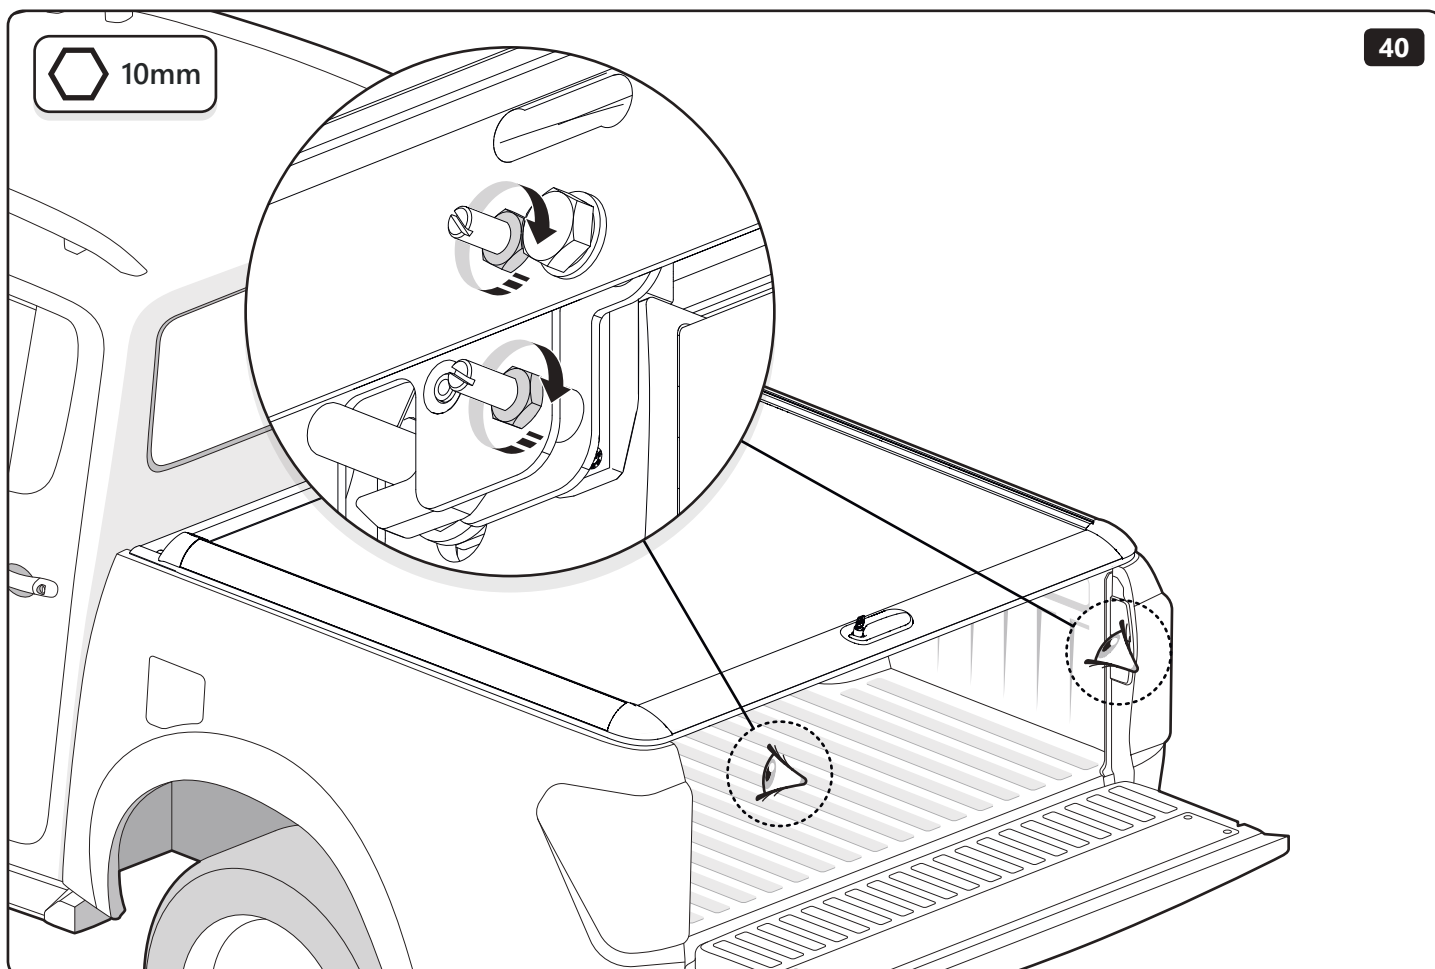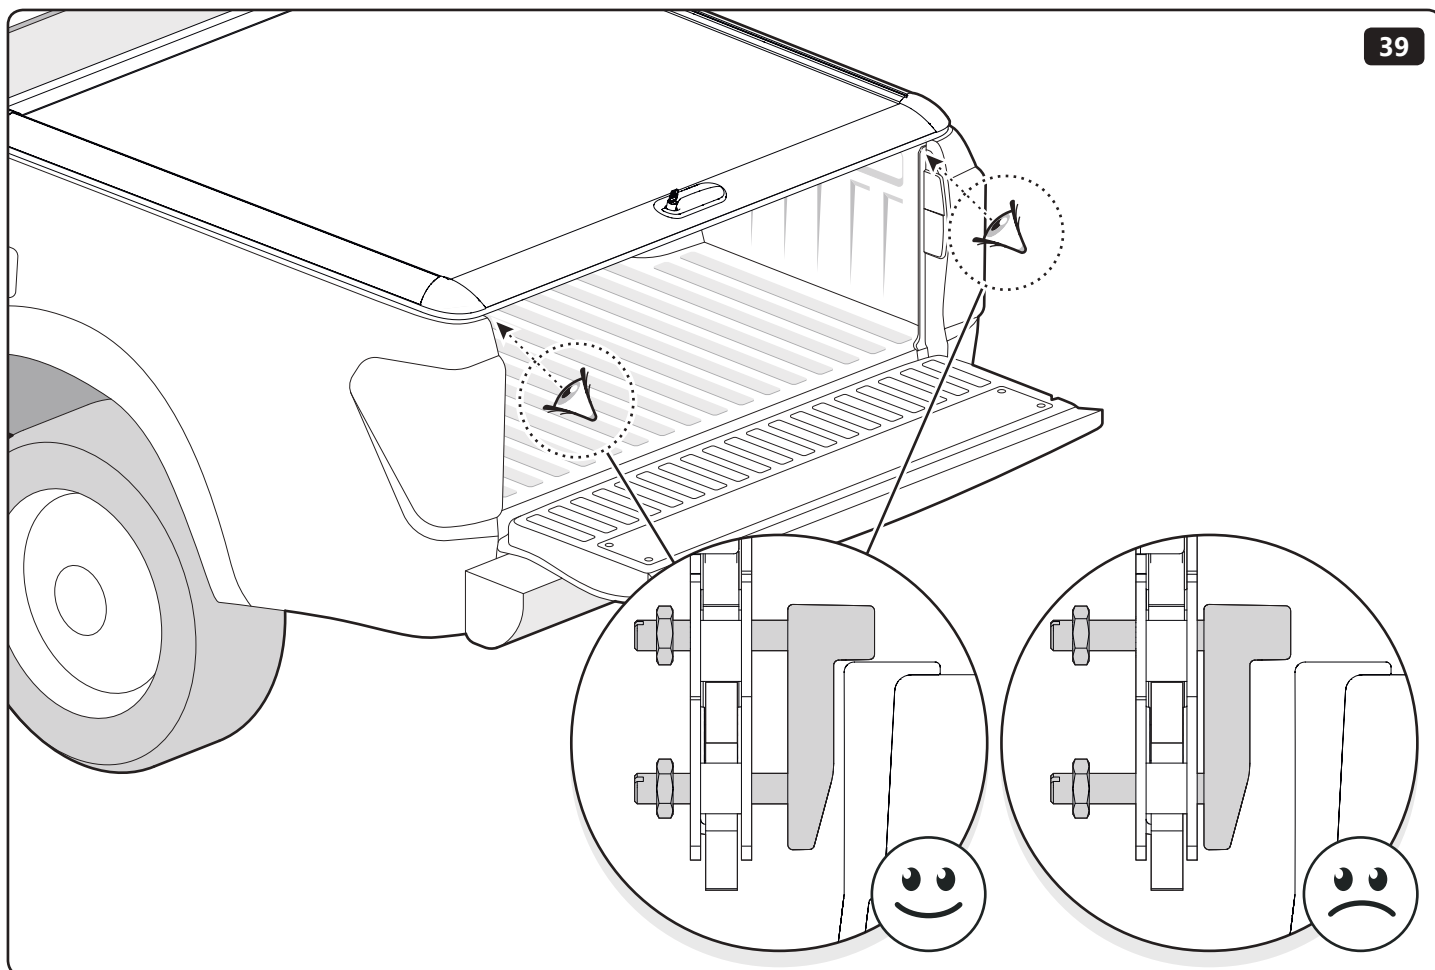

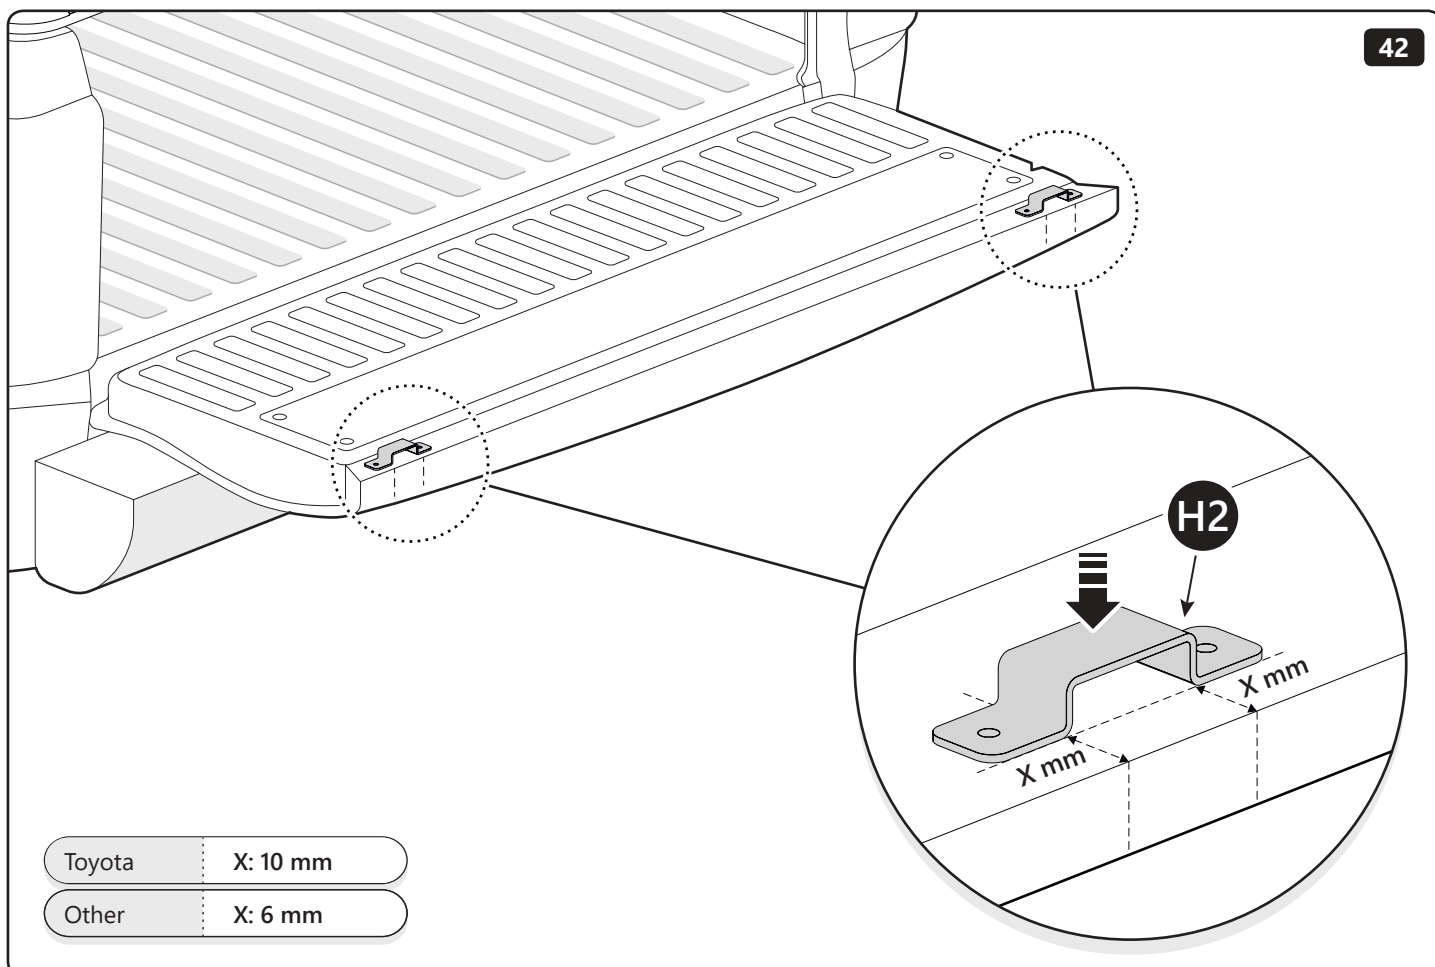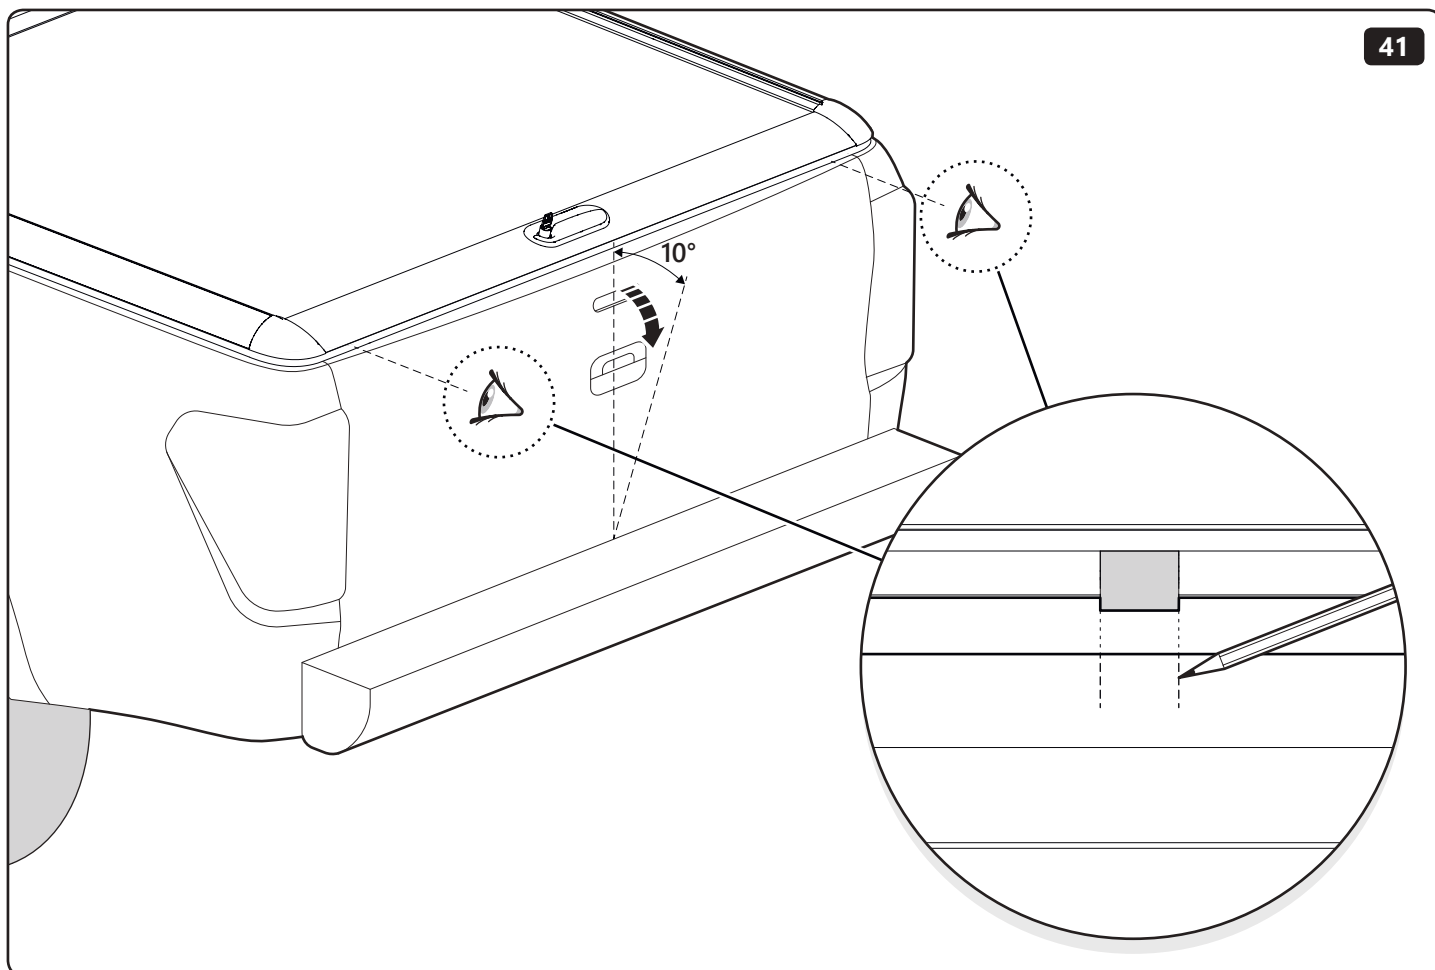

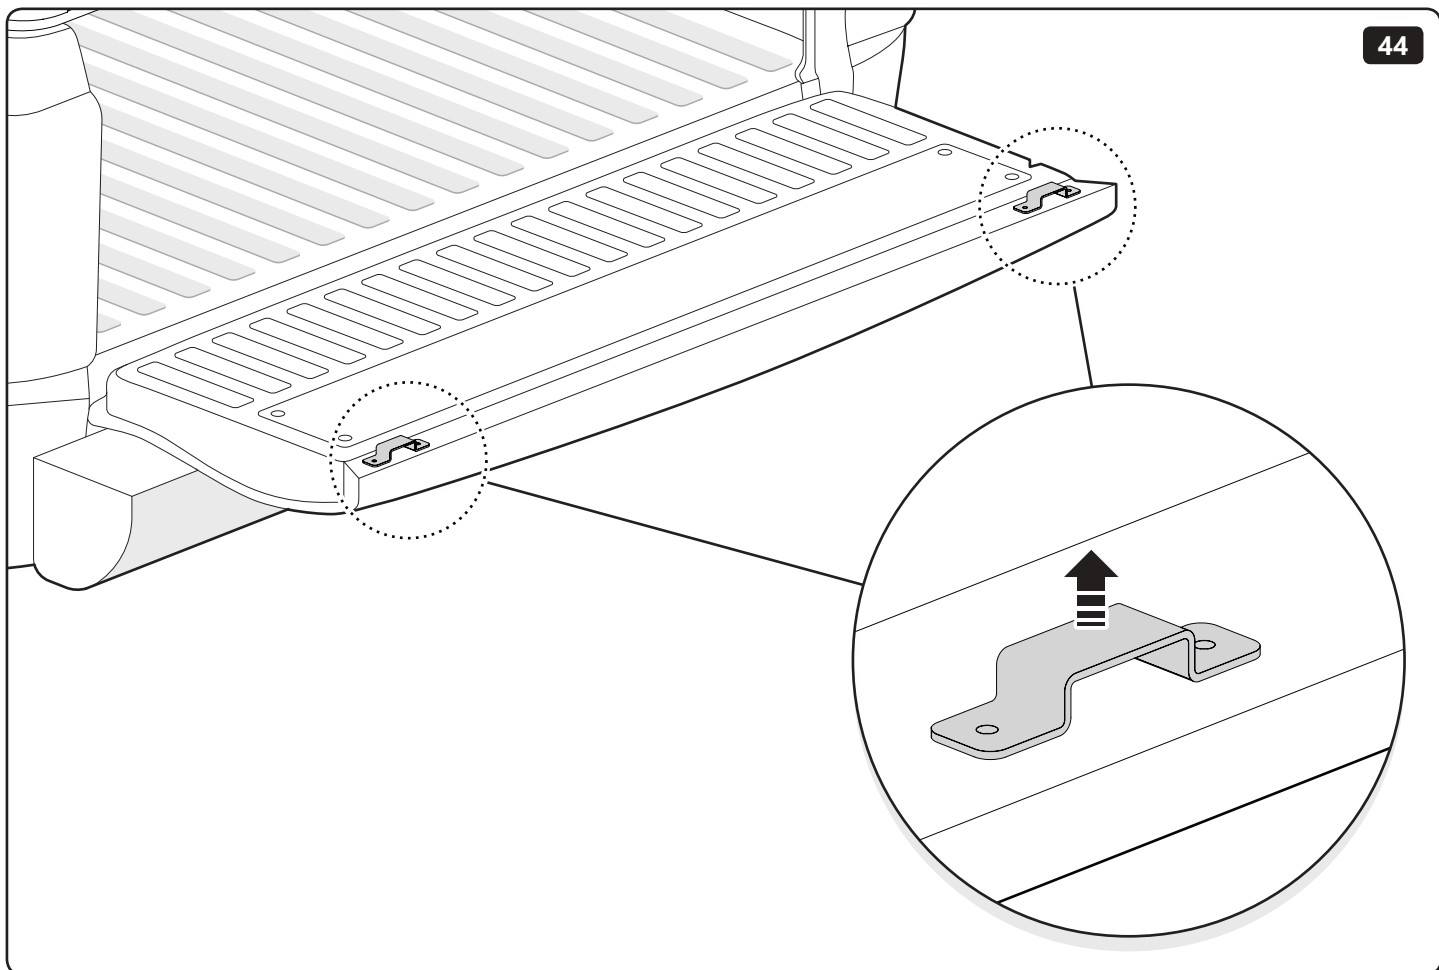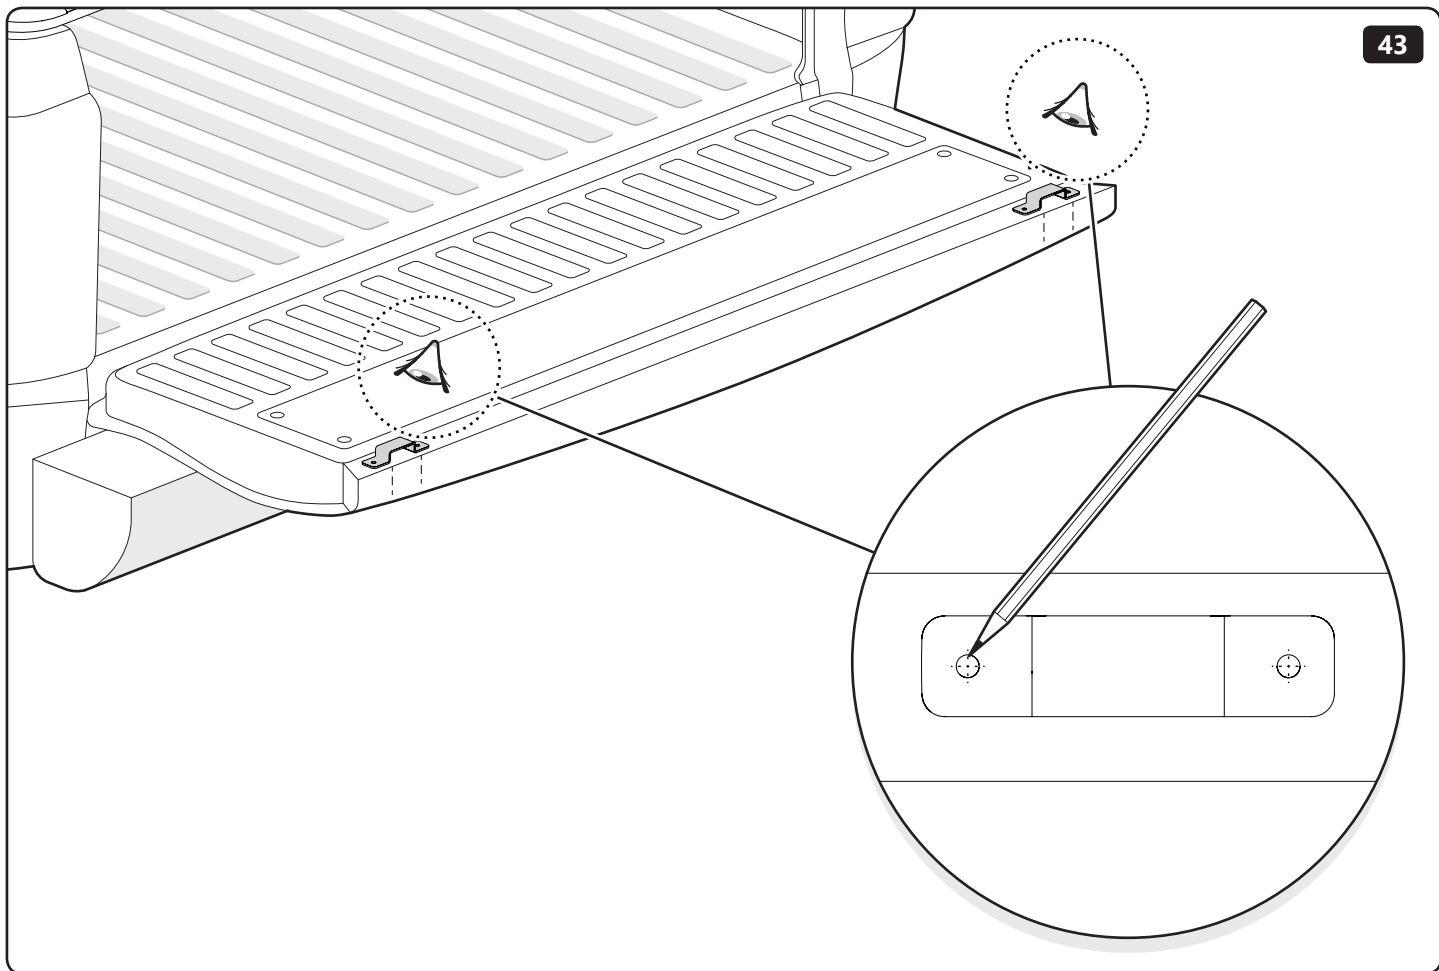

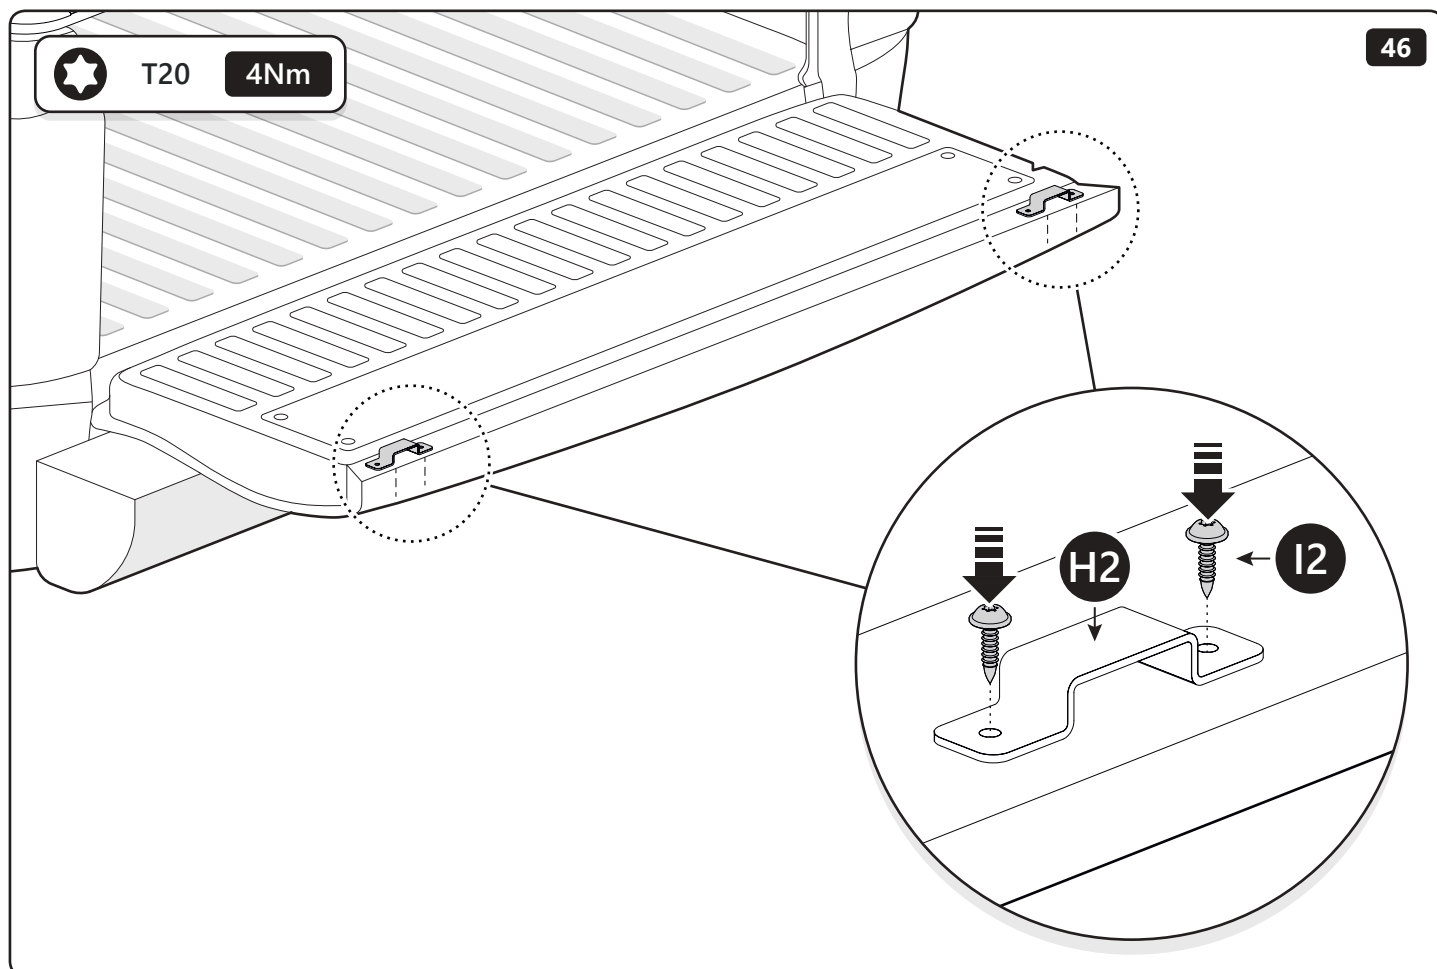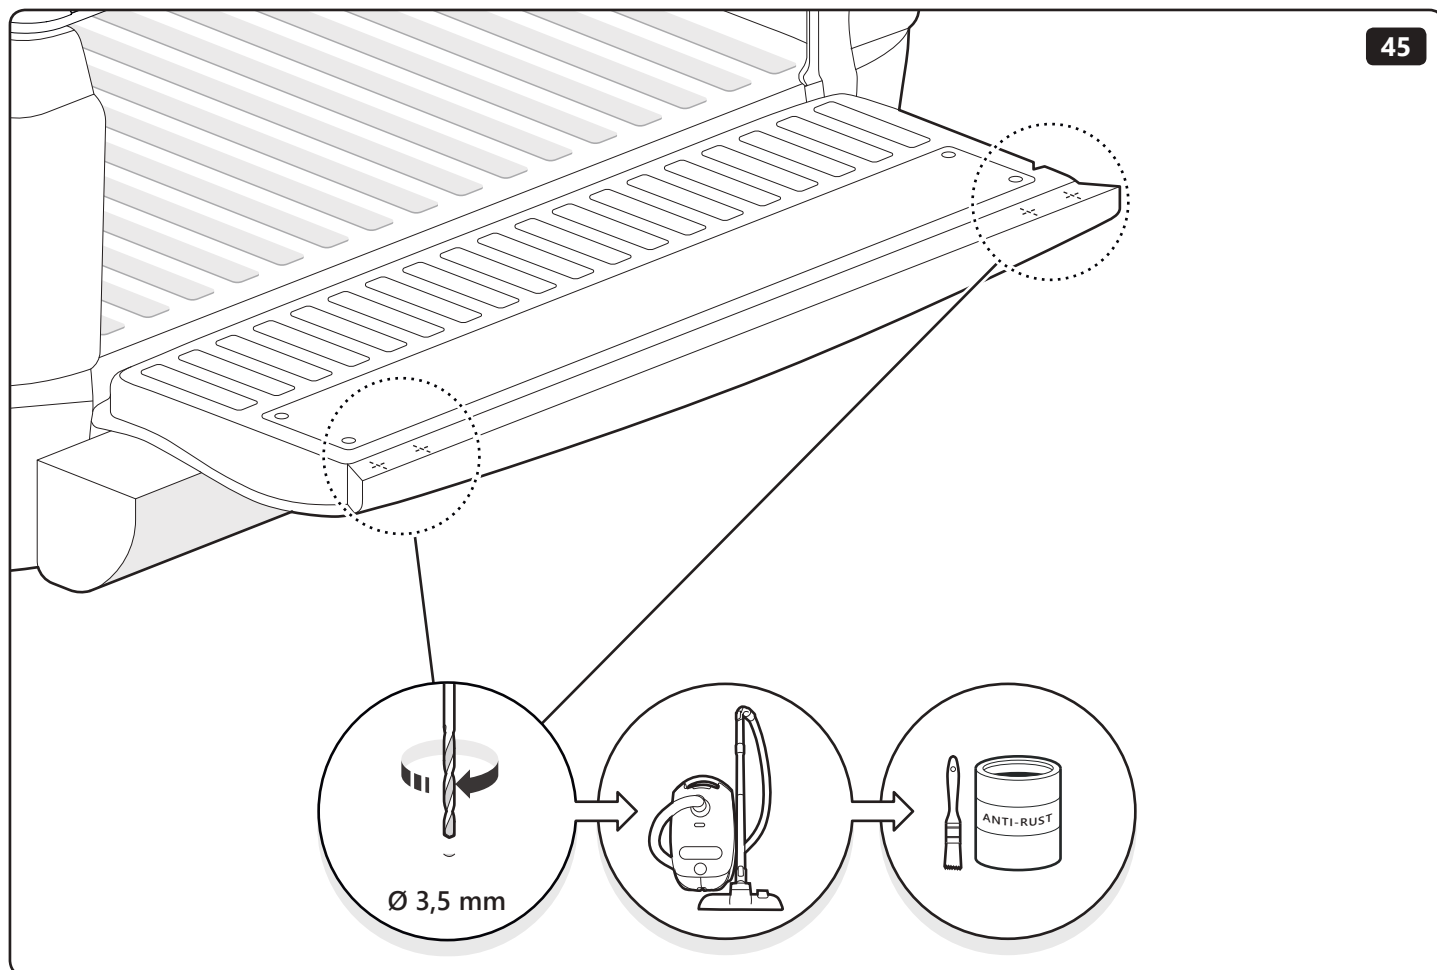



Customer Service	+45 4810 2950 (08:00 - 16:00 CET)
Fax	+45 4810 2960
Support	info@mountaintop.dk
Website	www.mountaintop.dk
Address	Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MT2 TO90/91	Toyota / 2015 →	Double / Extra	1 hour(s)	29 - 40 Kg
MT2 IS90/91	Isuzu / 2006 - 2011	Double / Space	1 hour(s)	29 - 40 Kg
MT2 FO90/91	Ford / 2011 →	Double / Super	1 hour(s)	29 - 40 Kg
MT2 MI91	Mitsubishi / 2015 →	Club	1 hour(s)	29 - 40 Kg
MT2 VW80	Volkswagen / 2010 →	Double	1 hour(s)	29 - 40 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare