

# Mountain Top® Style

Installation manual










DOWNLOAD PDF












Parts

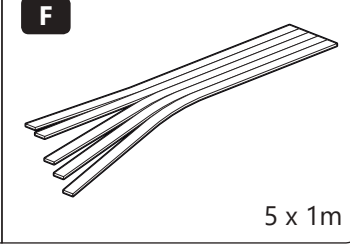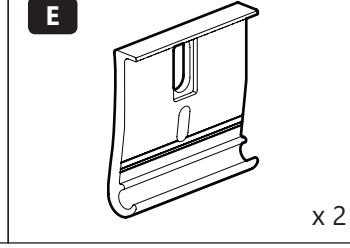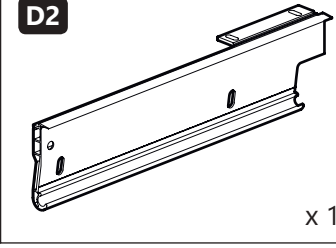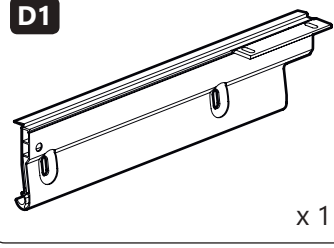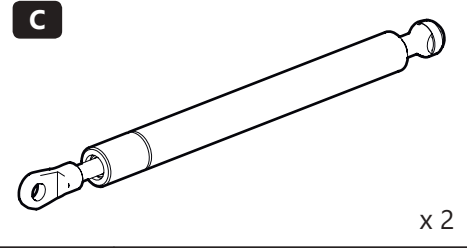
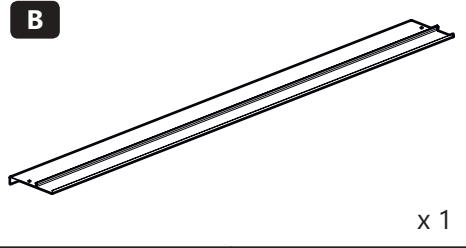
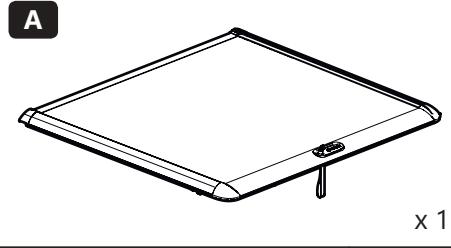



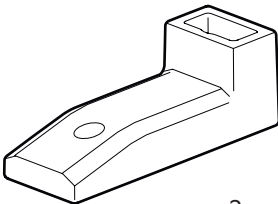
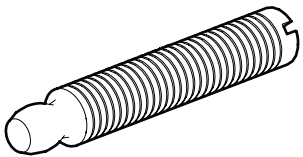
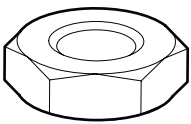
Kit


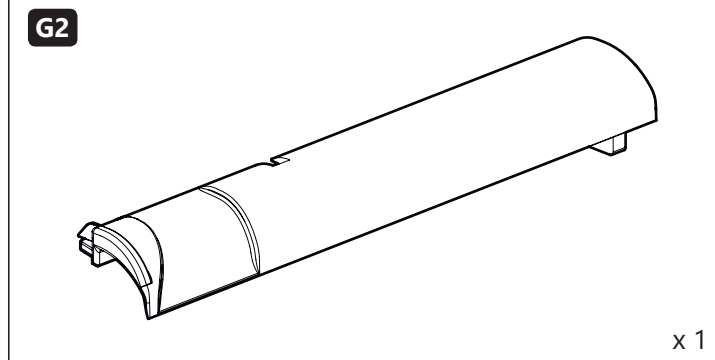
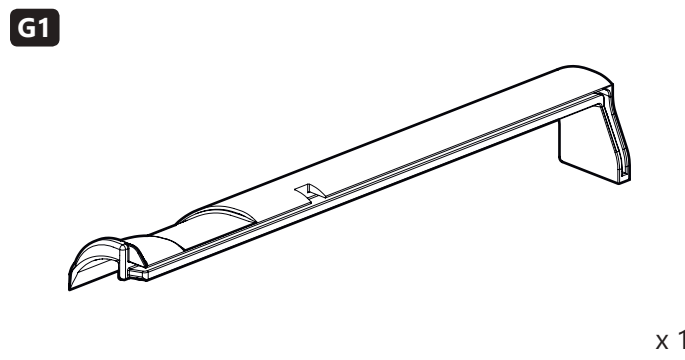


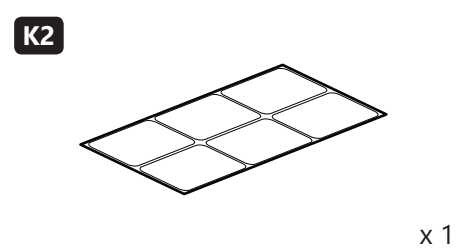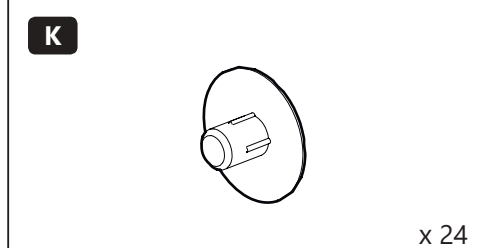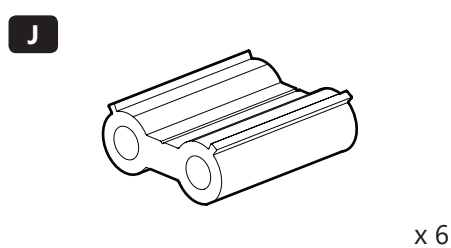
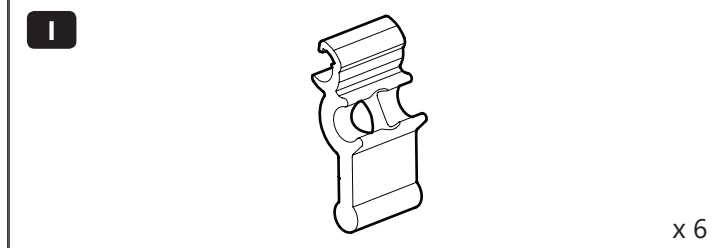
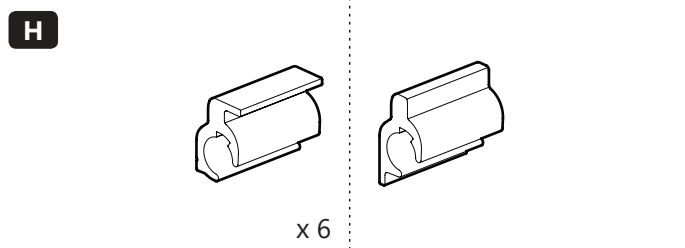






Kit

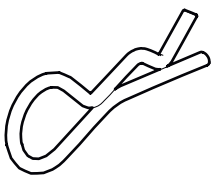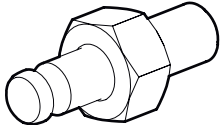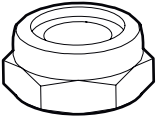

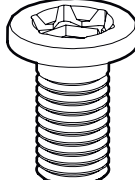
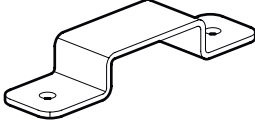
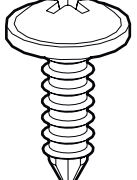



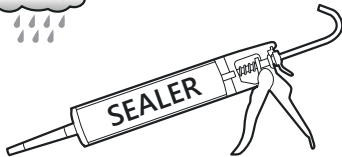
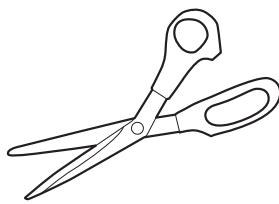

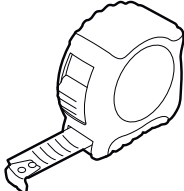
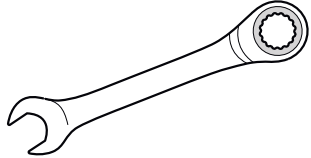
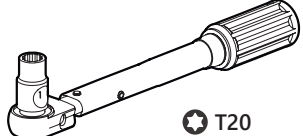


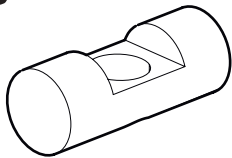
Kit			
<b>L</b>  x 2	<b>M</b>  x 2	<b>N</b>  x 2	<b>O</b>  x 2

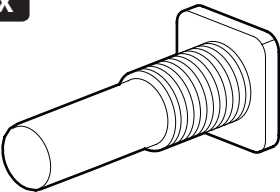
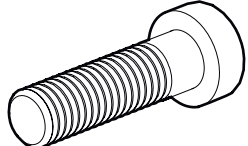
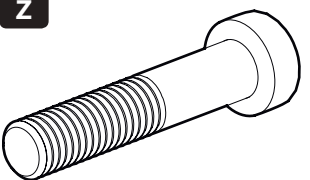
Kit		
<b>P</b>  x 2	<b>Q</b>  x 4	<b>R</b>  x 4

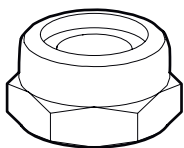
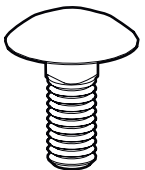
Kit			
<b>S</b>  x 2	<b>T</b>  x 6	<b>U</b>  x 6	<b>V</b>  x 6
<b>W</b>  x 2	<b>X</b>  x 2	<b>Y</b>  x 6 TOYOTA x 4	<b>Z</b>  TOYOTA x 2

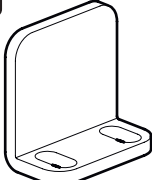Kit			
<b>A2</b>  x 4	<b>B2</b>  x 4	<b>C2</b>  x 4	<b>D2</b>  x 4


Kit				
 <p><b>E2</b></p> <p>x 2</p>	 <p><b>F2</b></p> <p>x 4</p>	 <p><b>G2</b></p> <p>x 4</p>	 <p><b>H2</b></p> <p>x 2</p>	 <p><b>I2</b></p> <p>x 4</p>

Tools and materials needed		
 		
	 <p>10, 13, 19mm</p>	<p>1-25 Nm</p>  <ul style="list-style-type: none"> <li> T20</li> <li> 10, 13, 19mm</li> <li> 5mm</li> </ul>

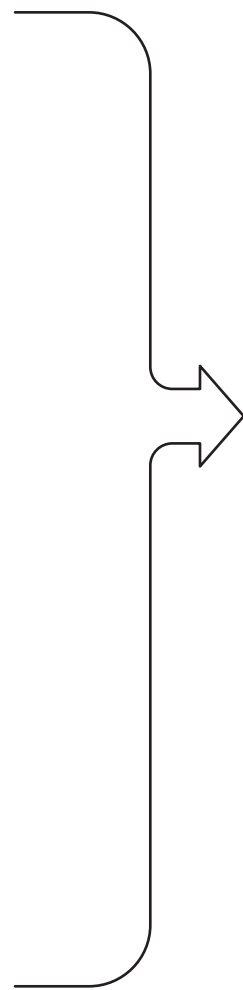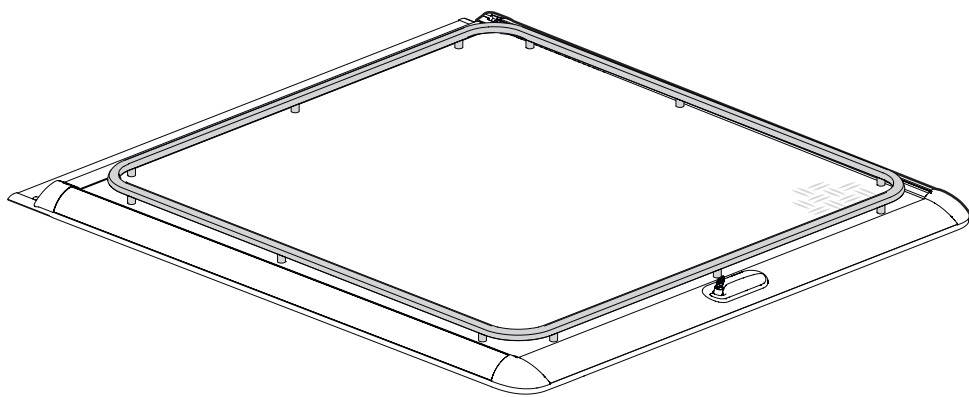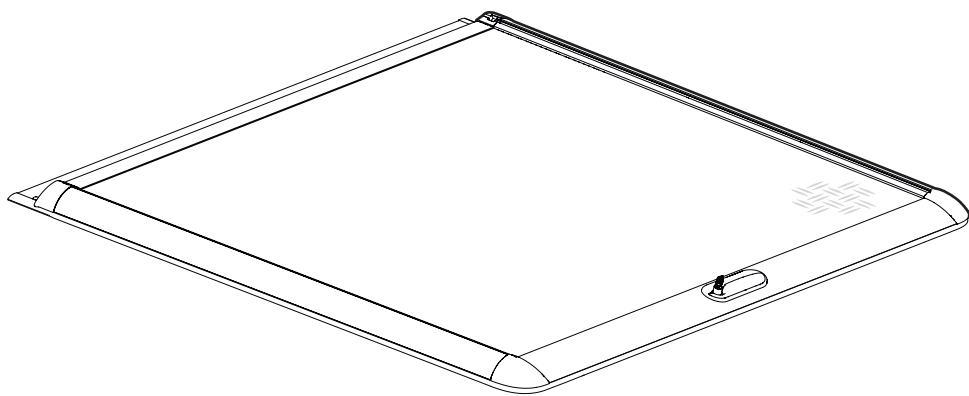

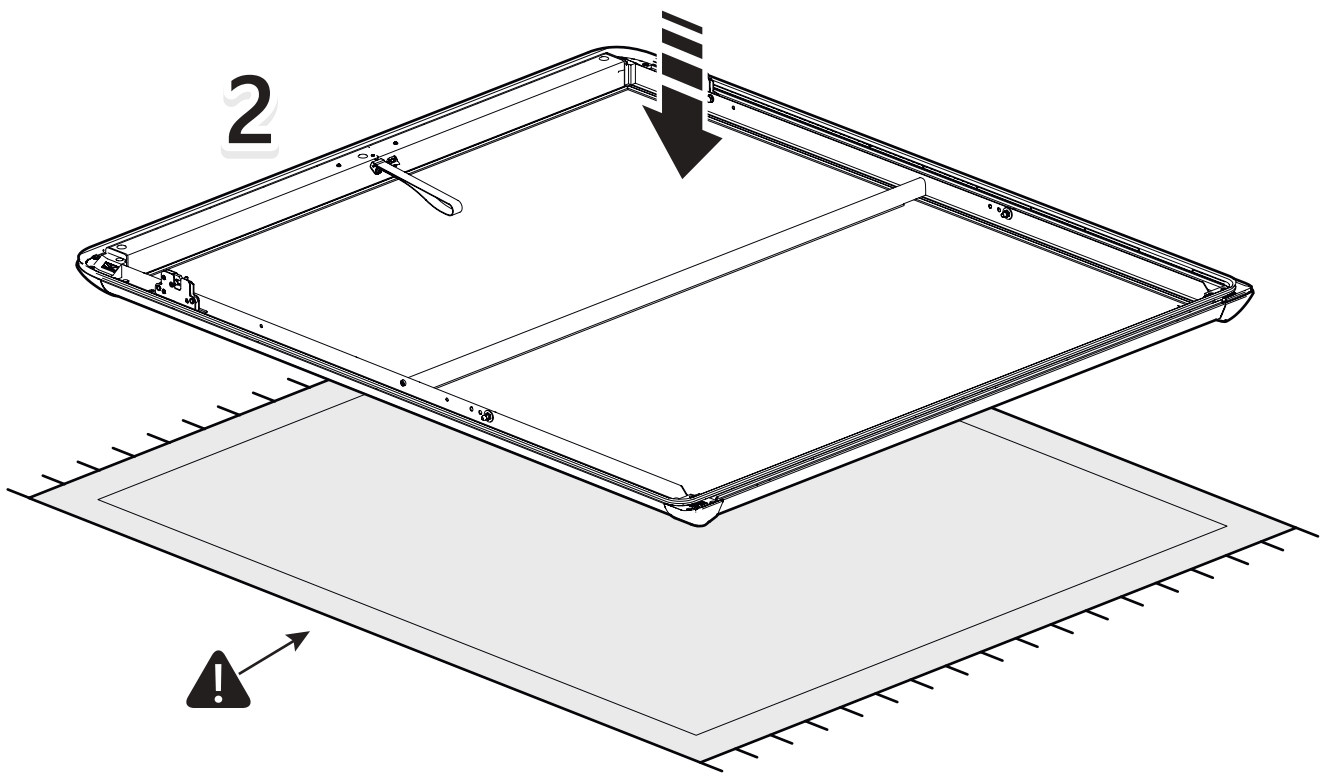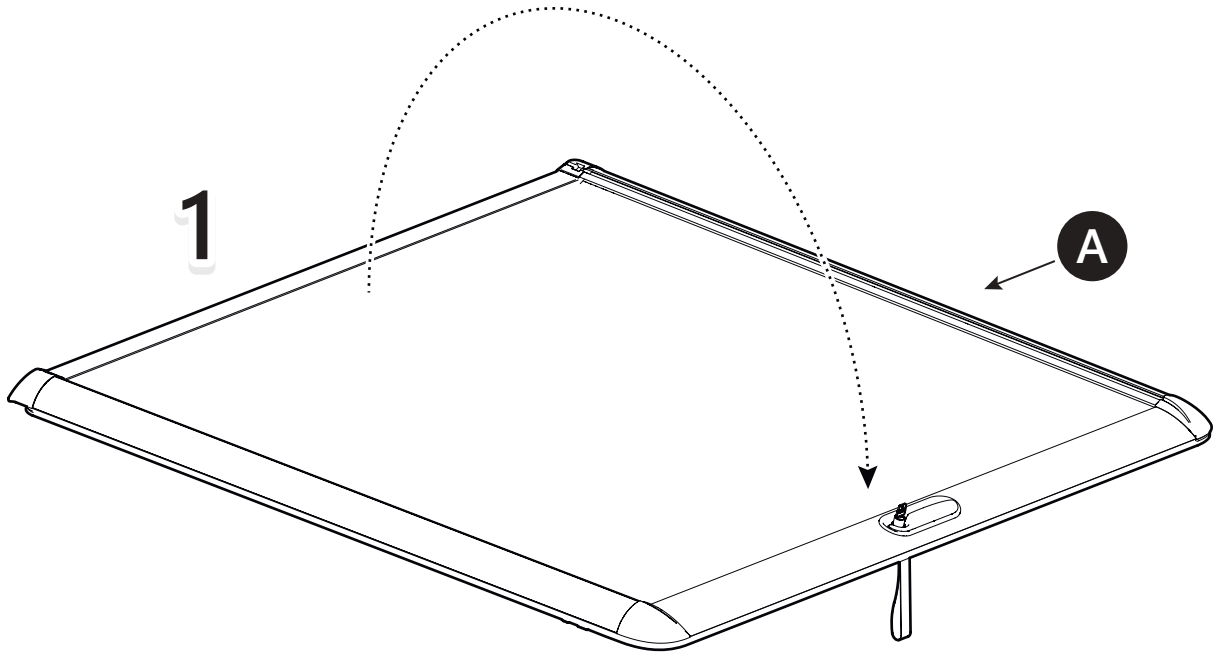


2

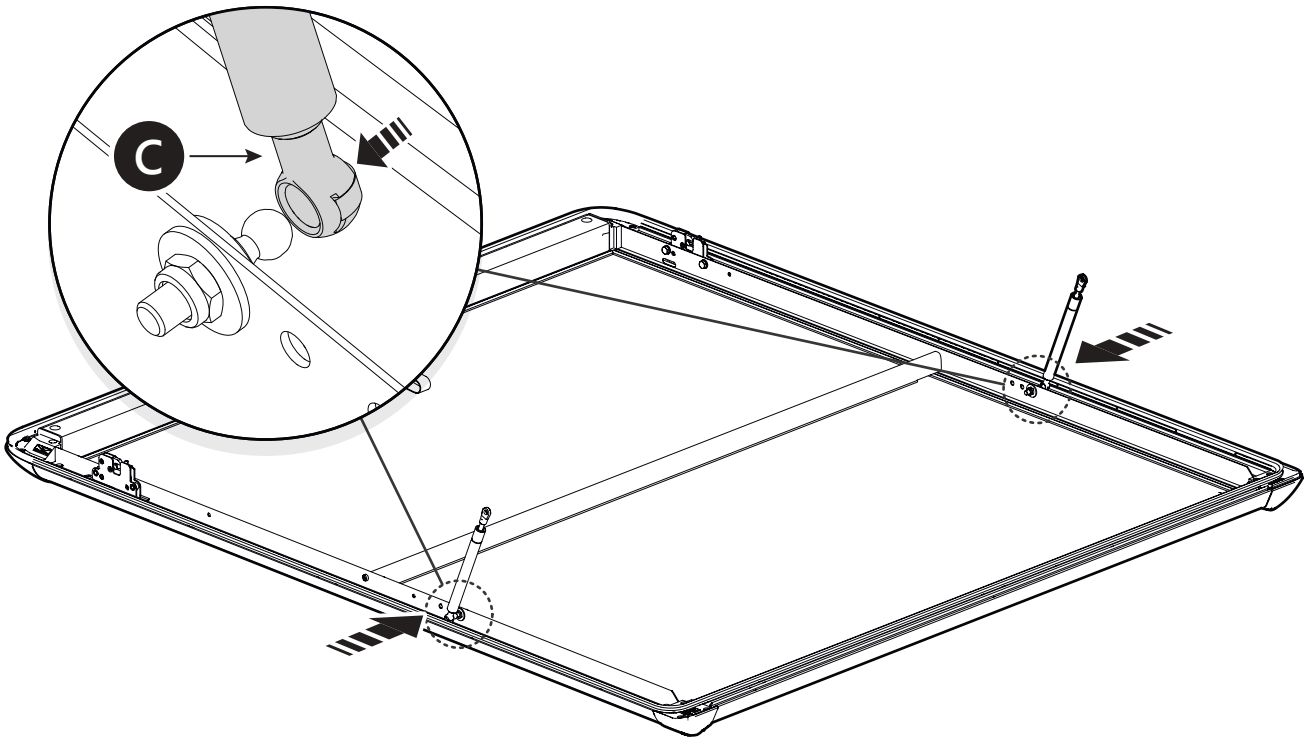


3

10mm

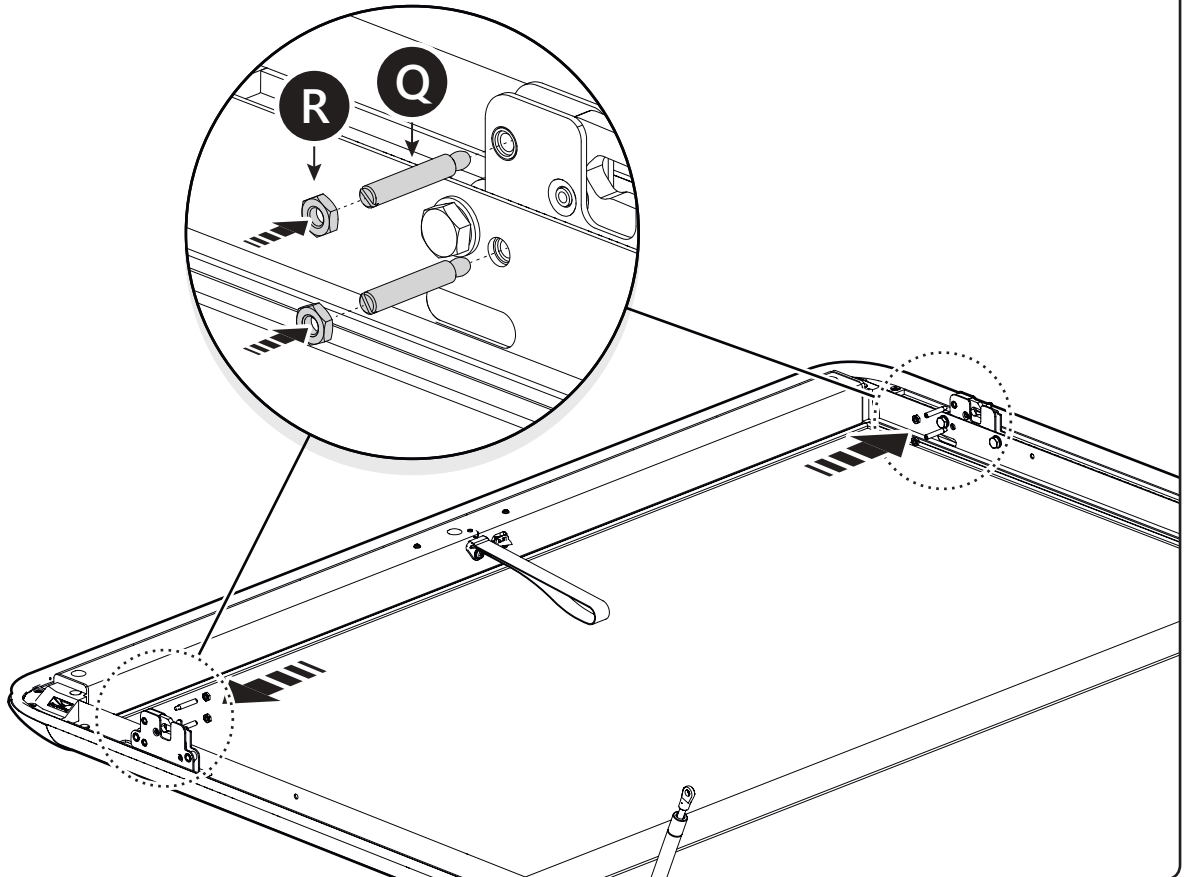







4

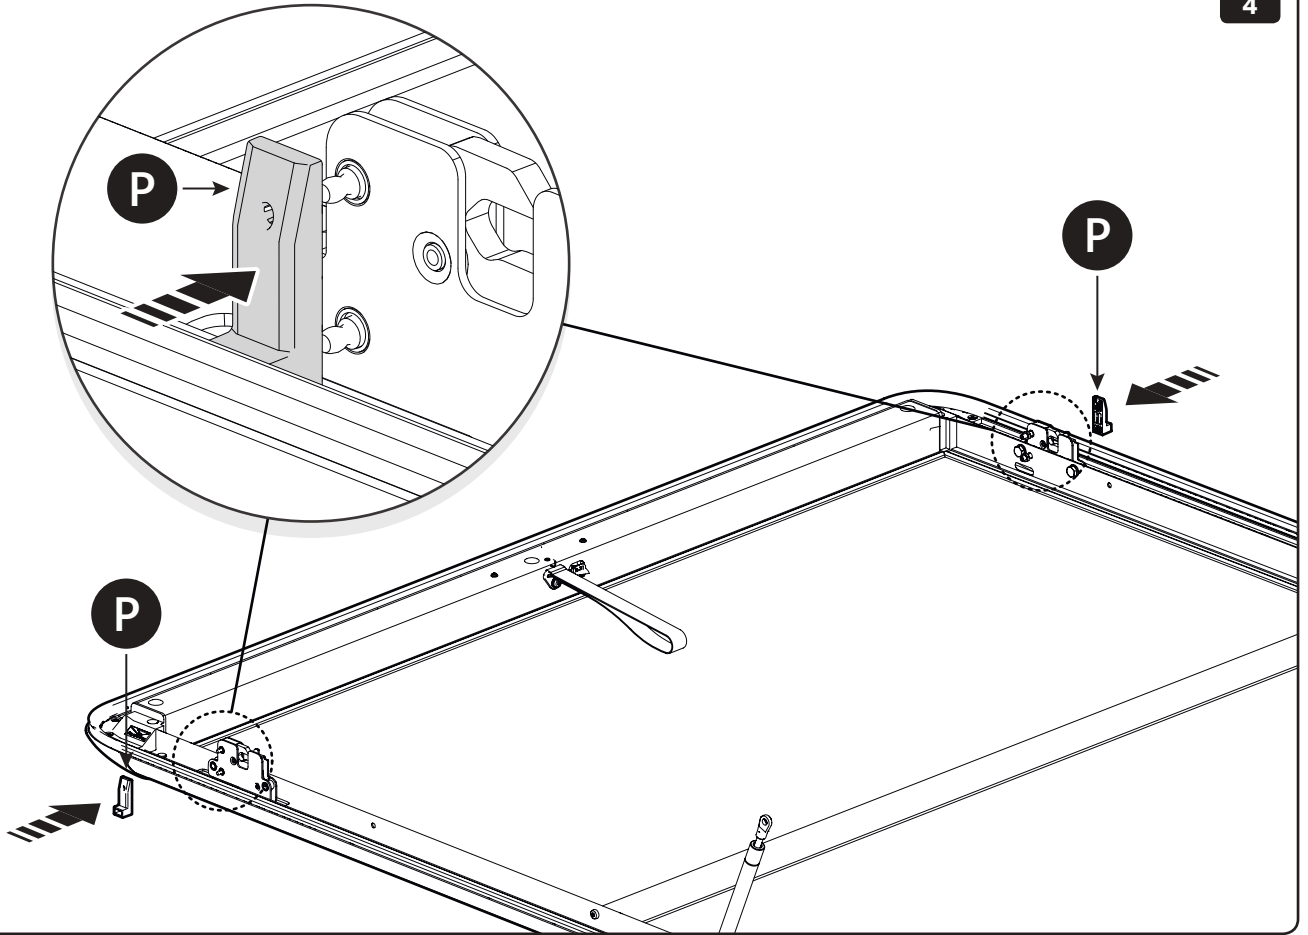



5

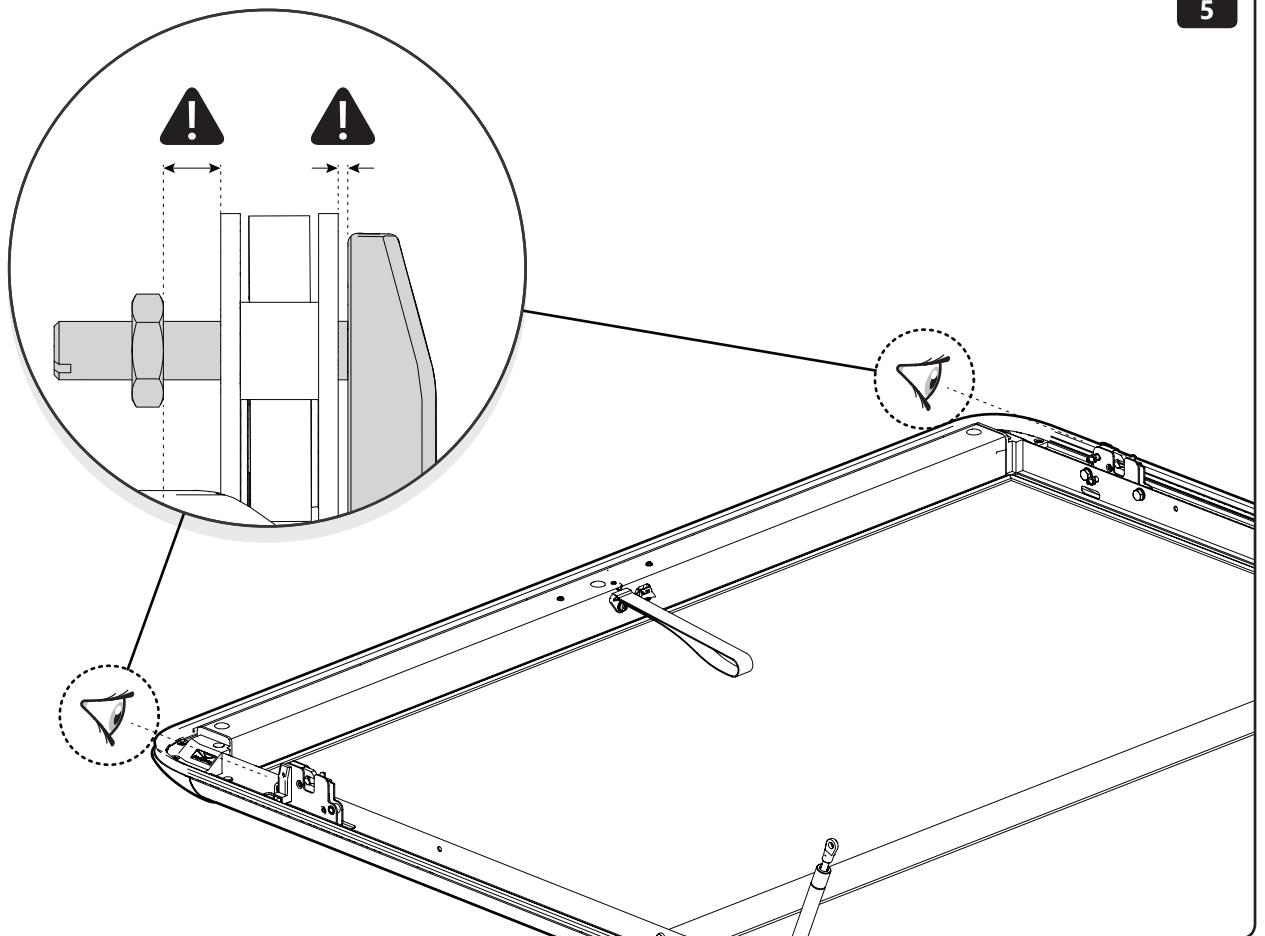

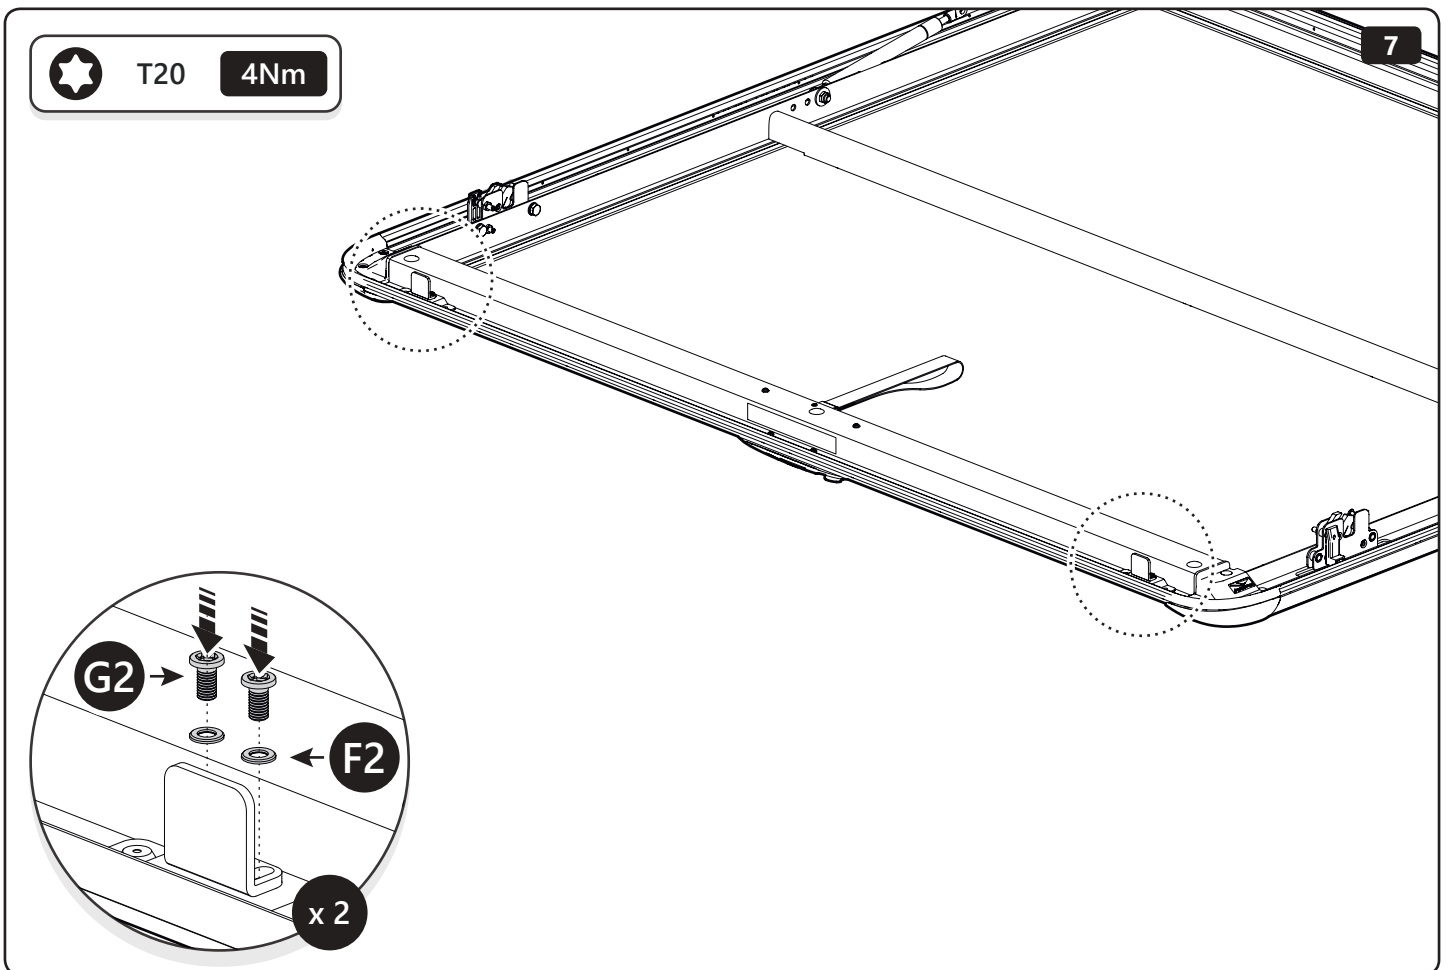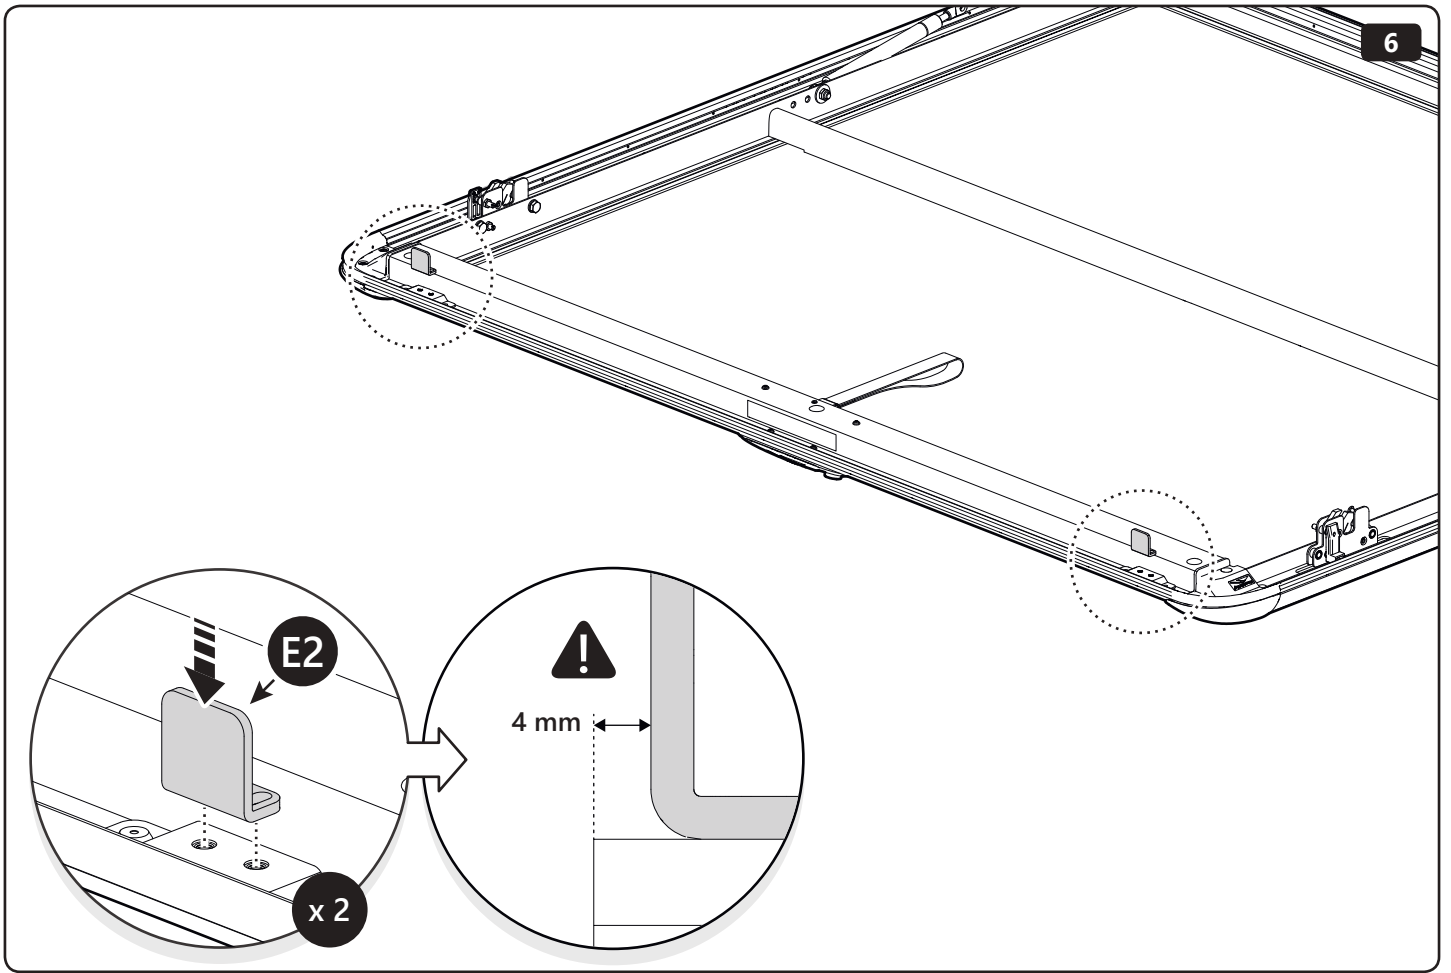

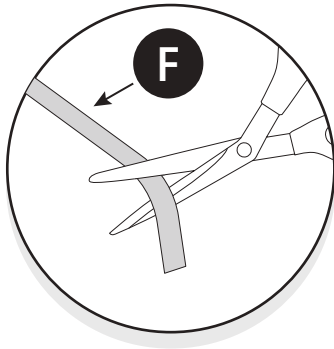


**E** →

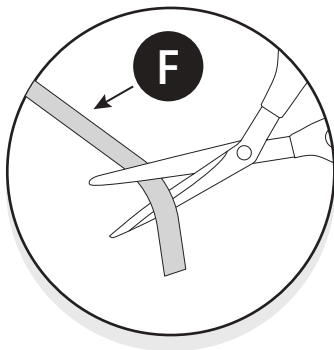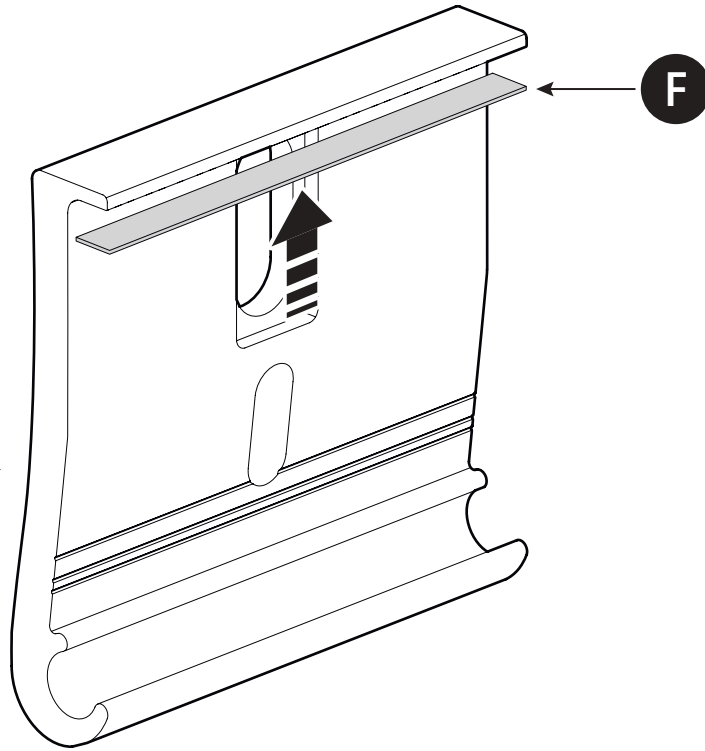


**F**


**E** →

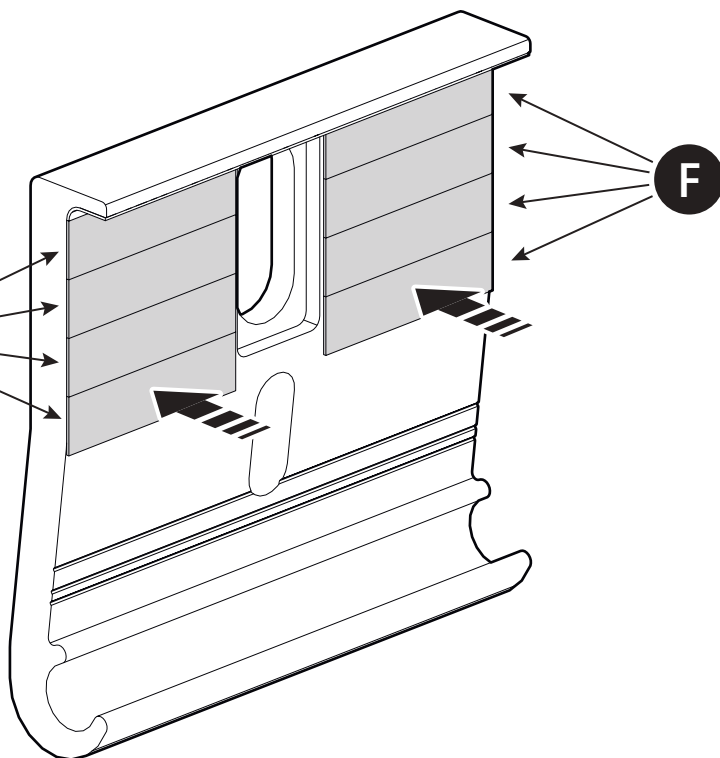


19mm

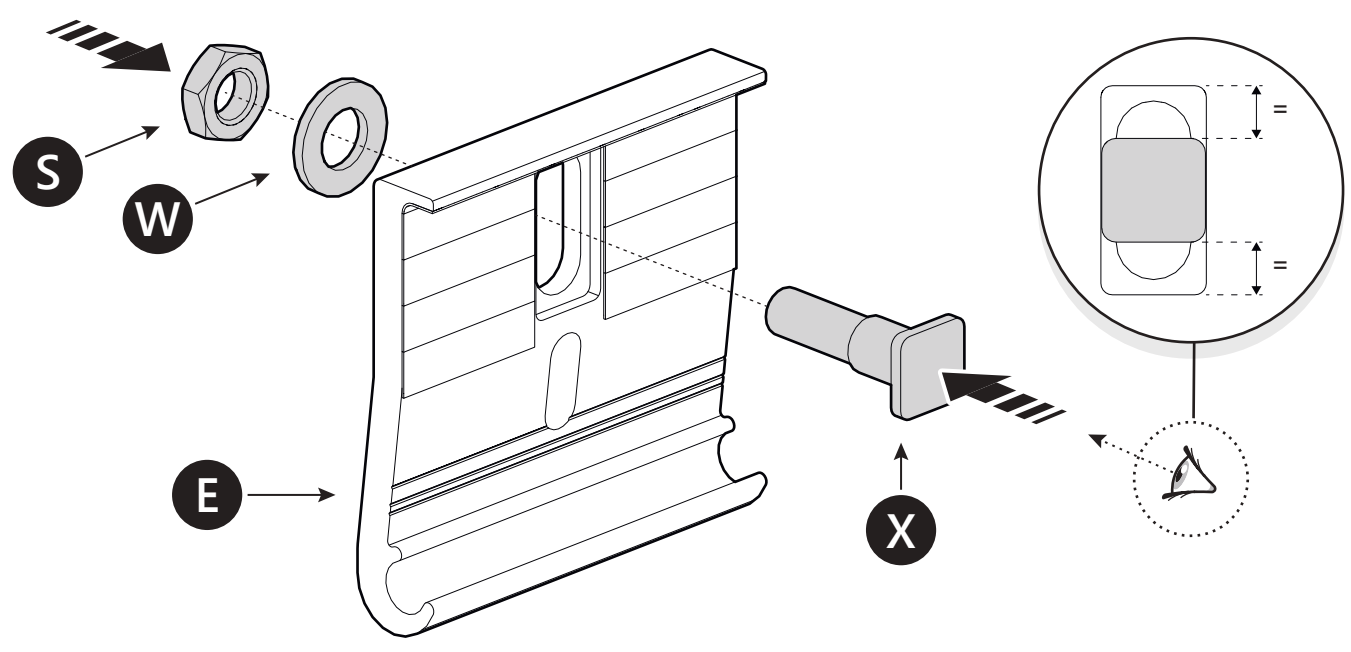

5mm

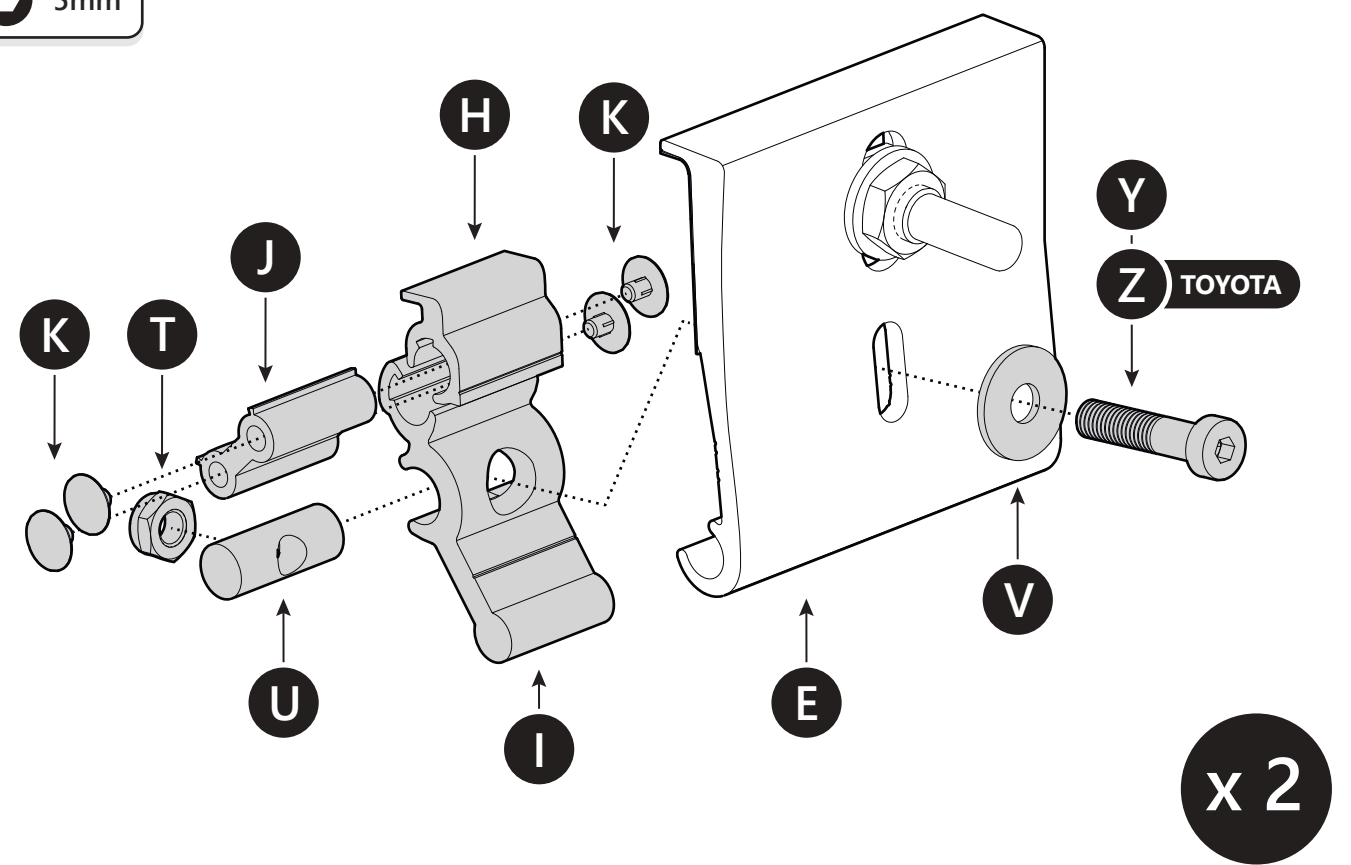






13mm 23Nm

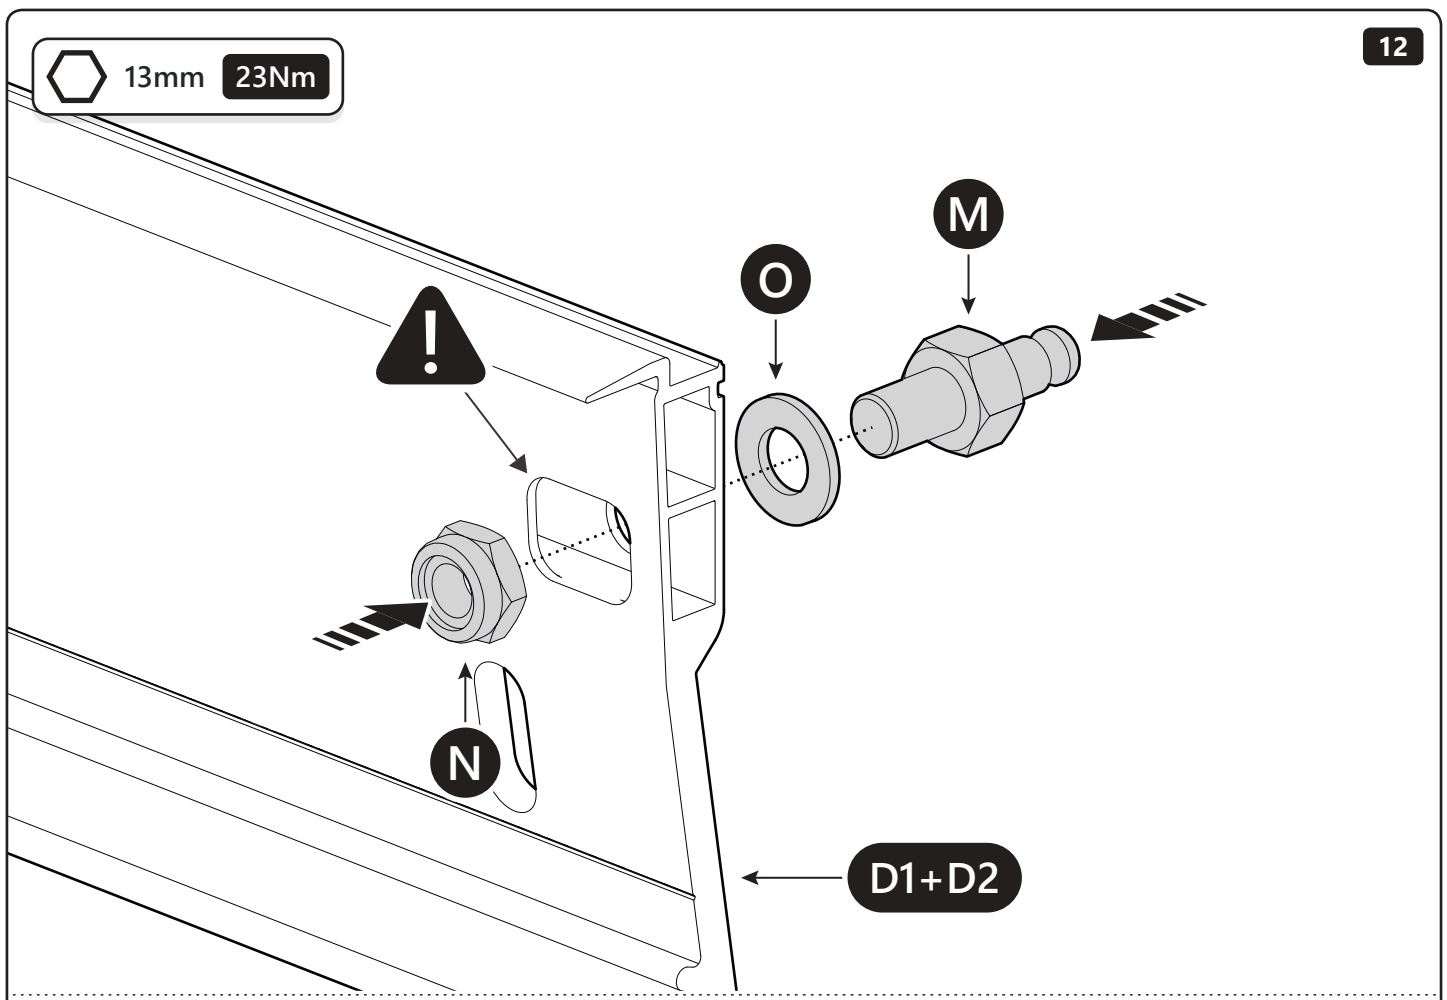


TOYOTA

13mm 23Nm

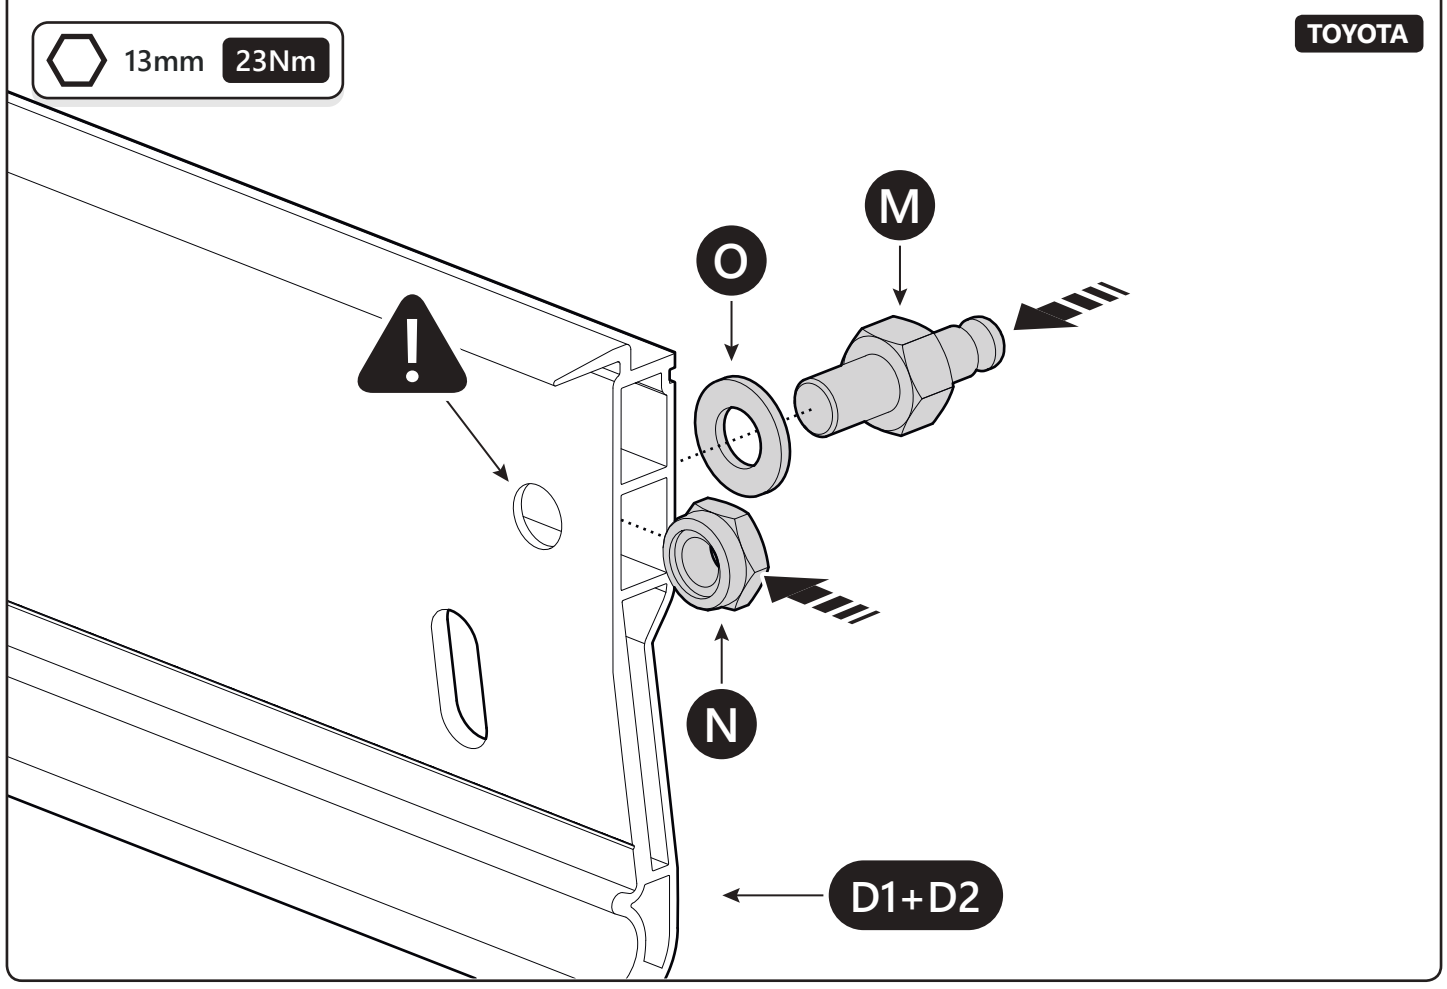



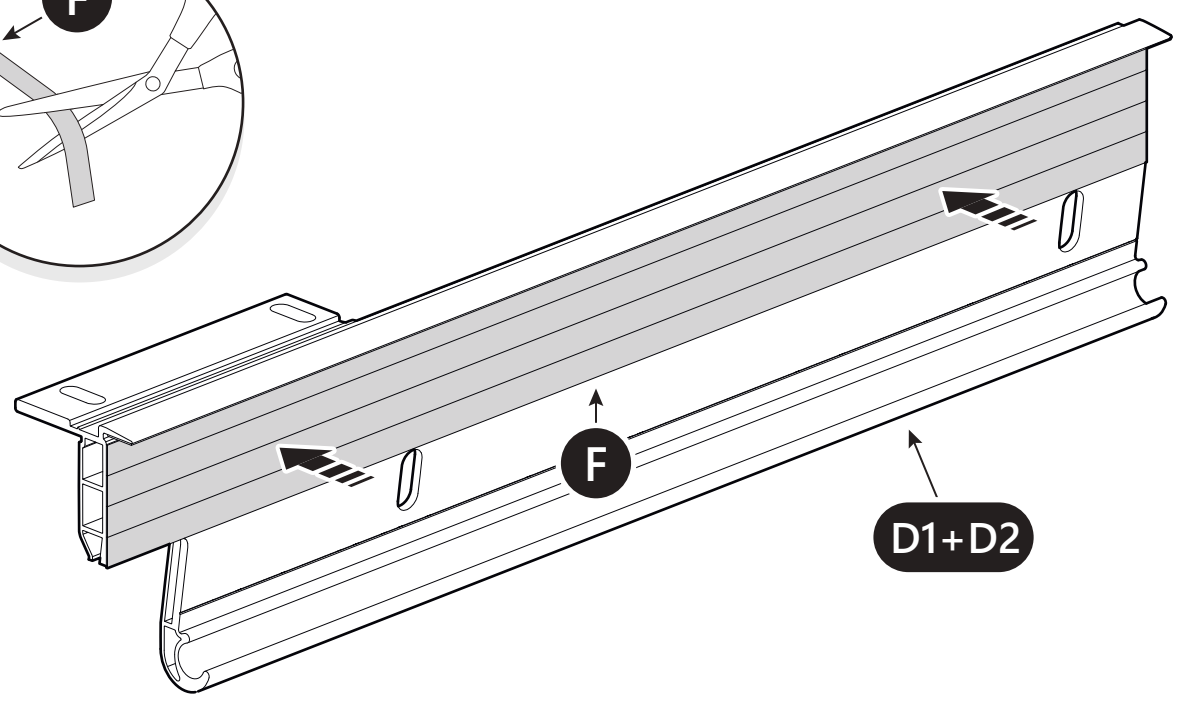
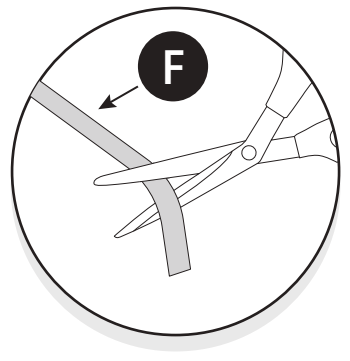
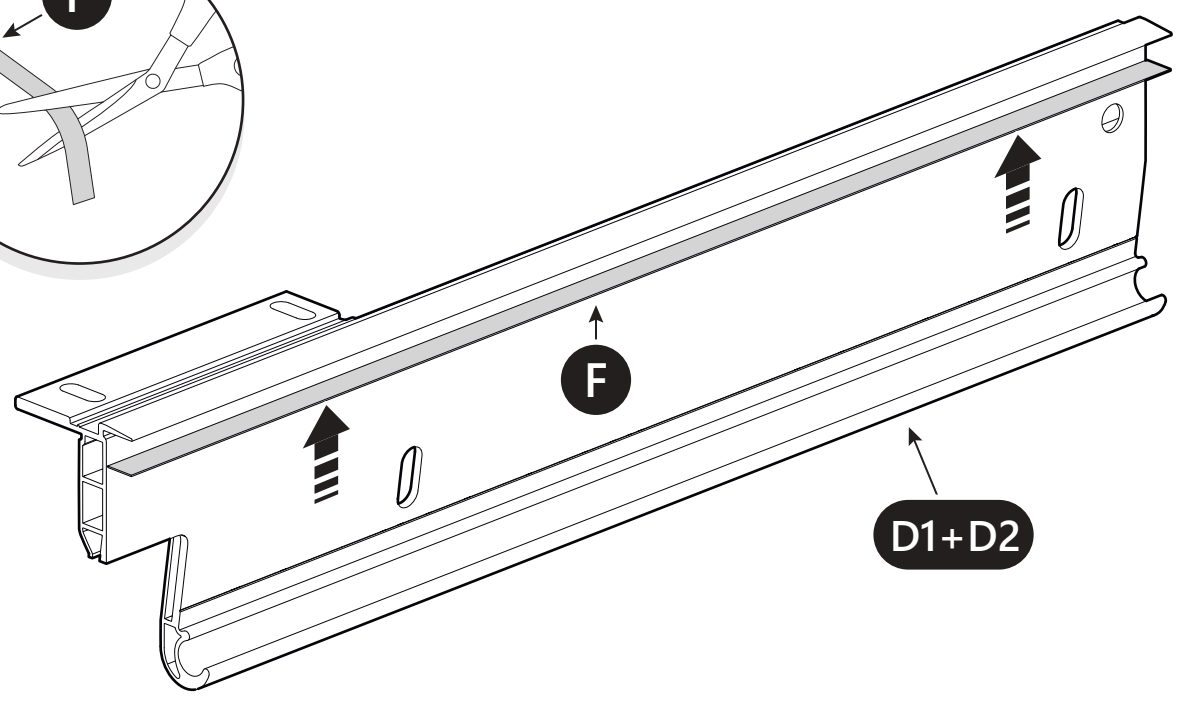
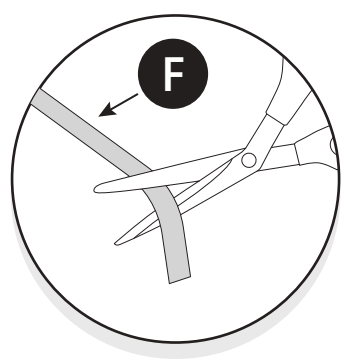


5mm


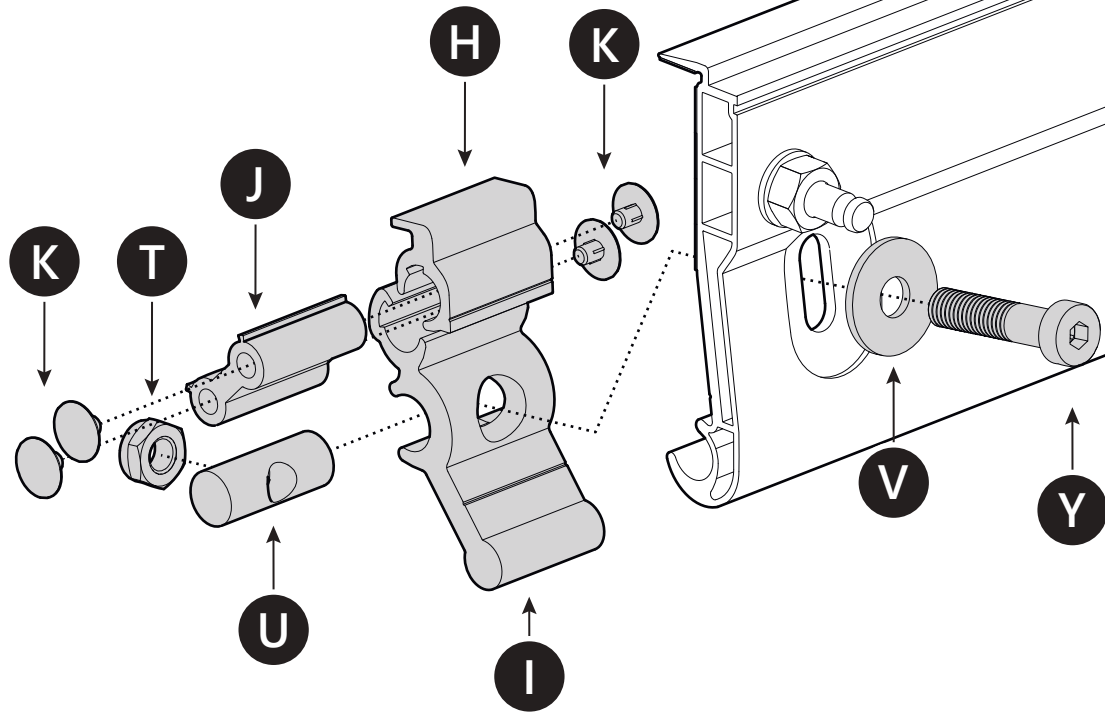




x 2


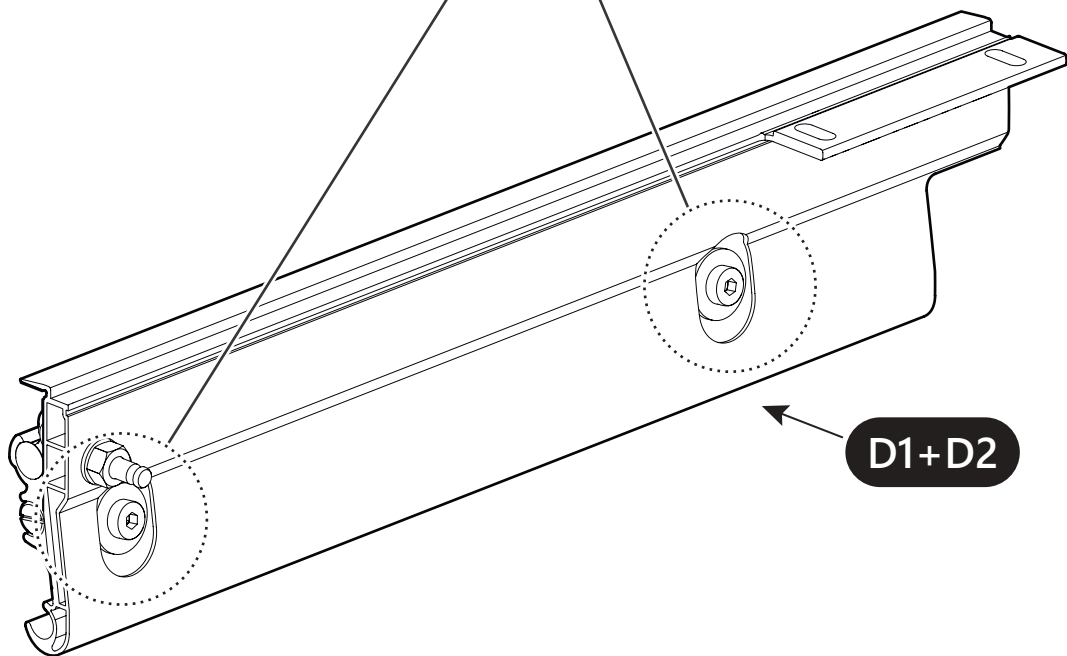


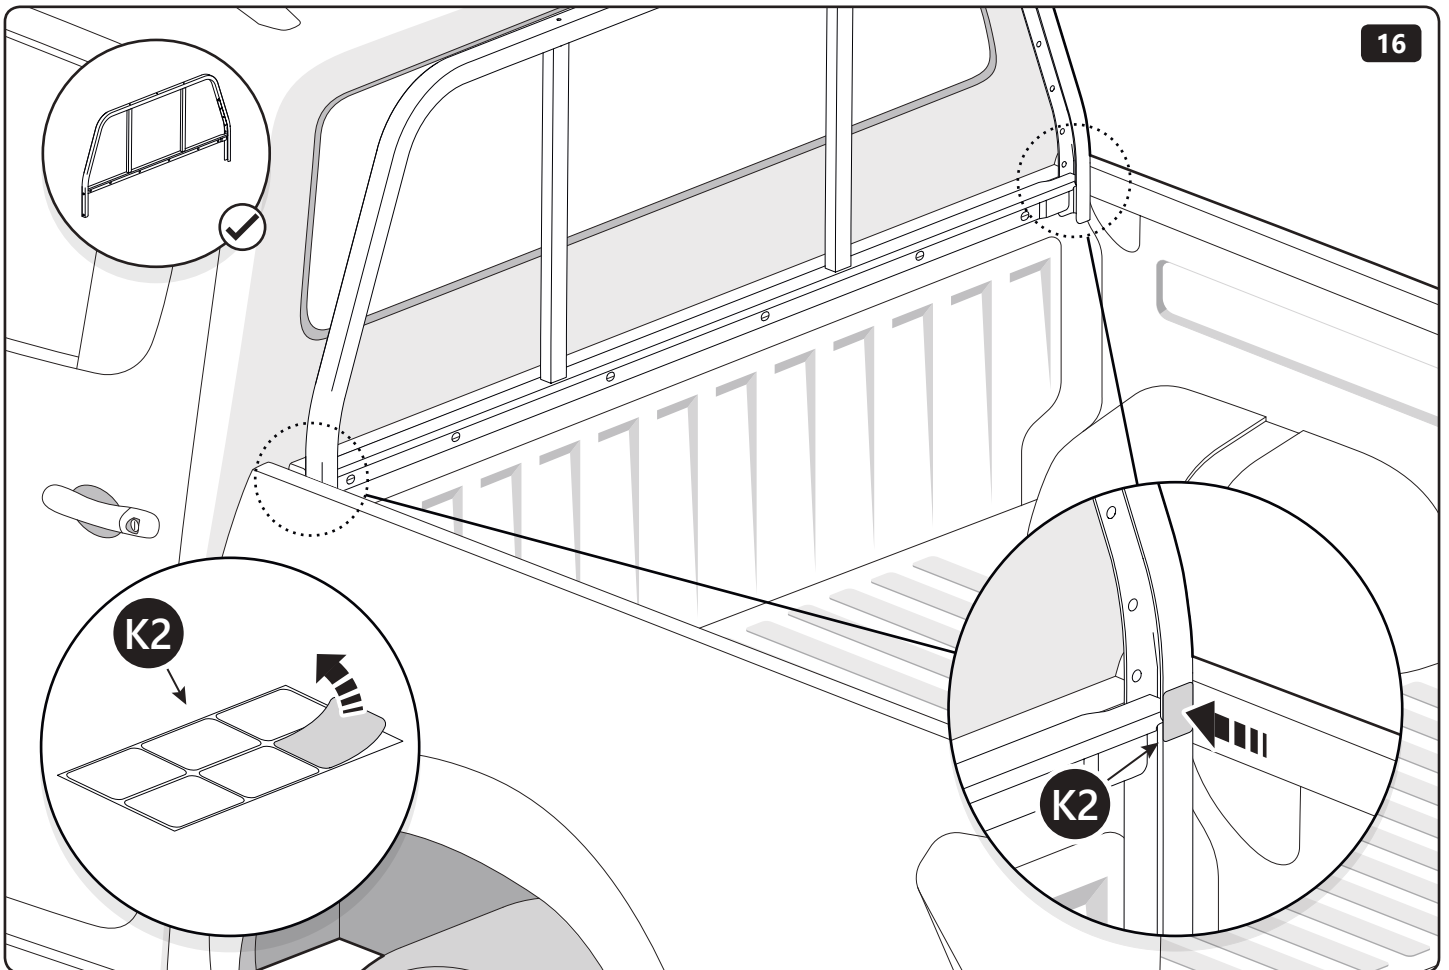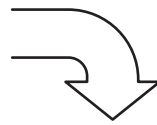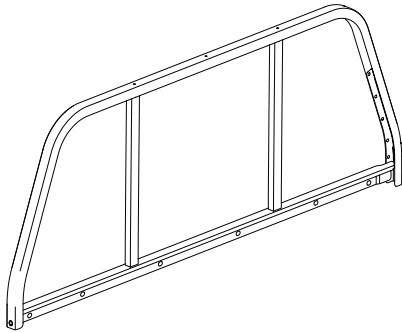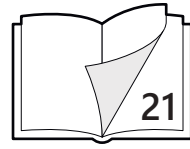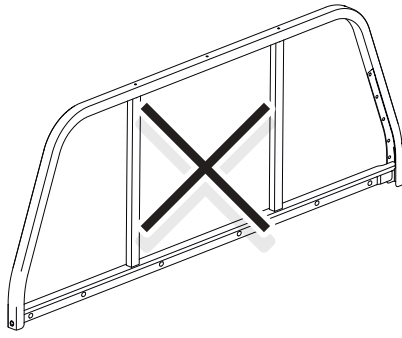









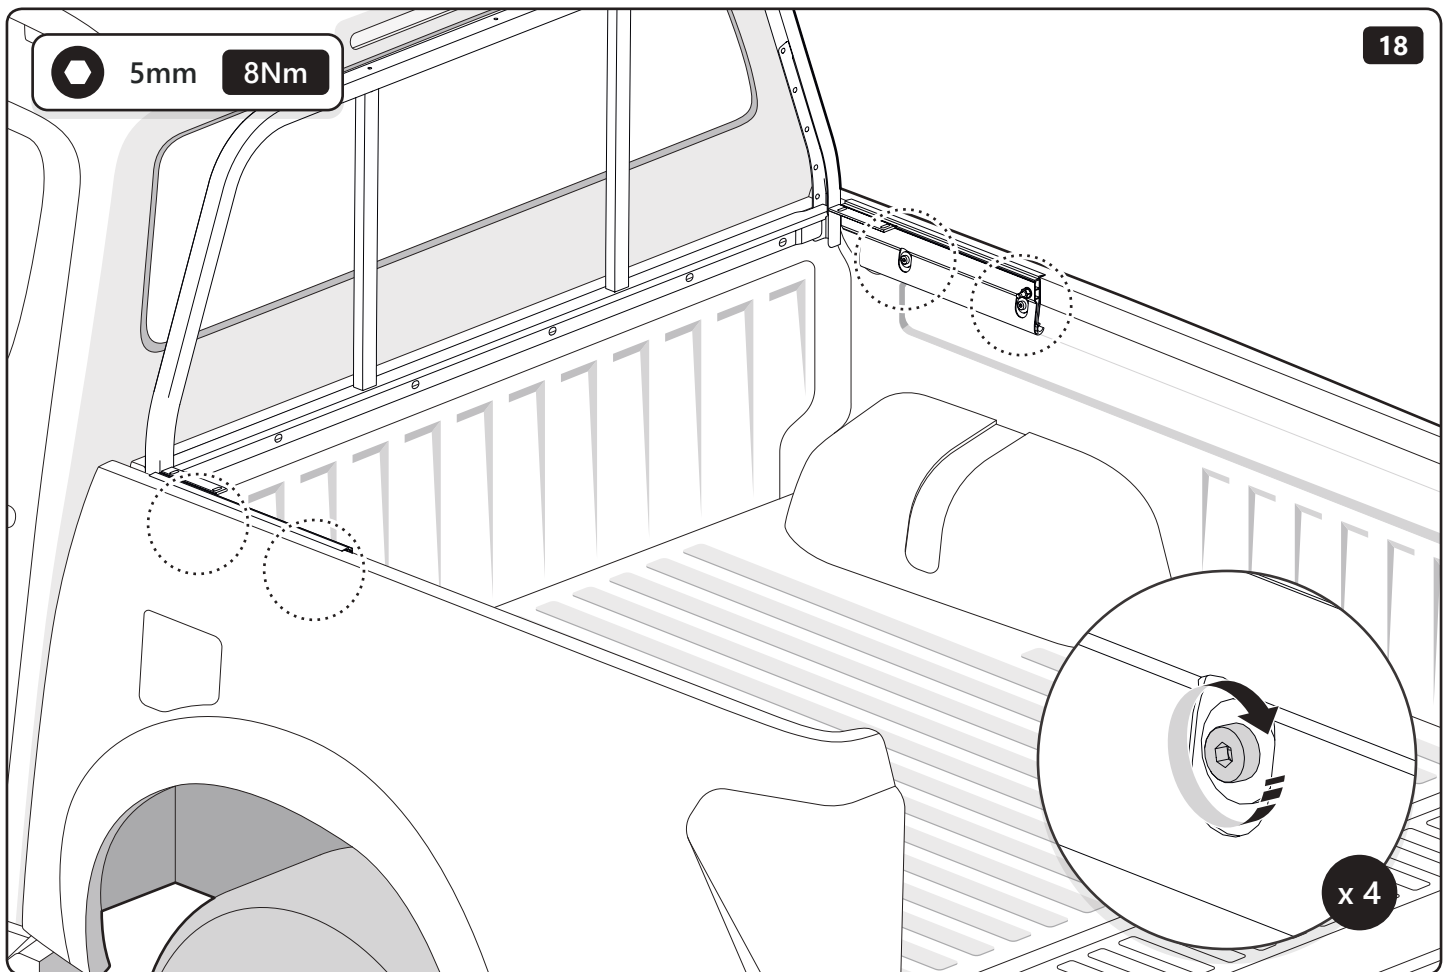
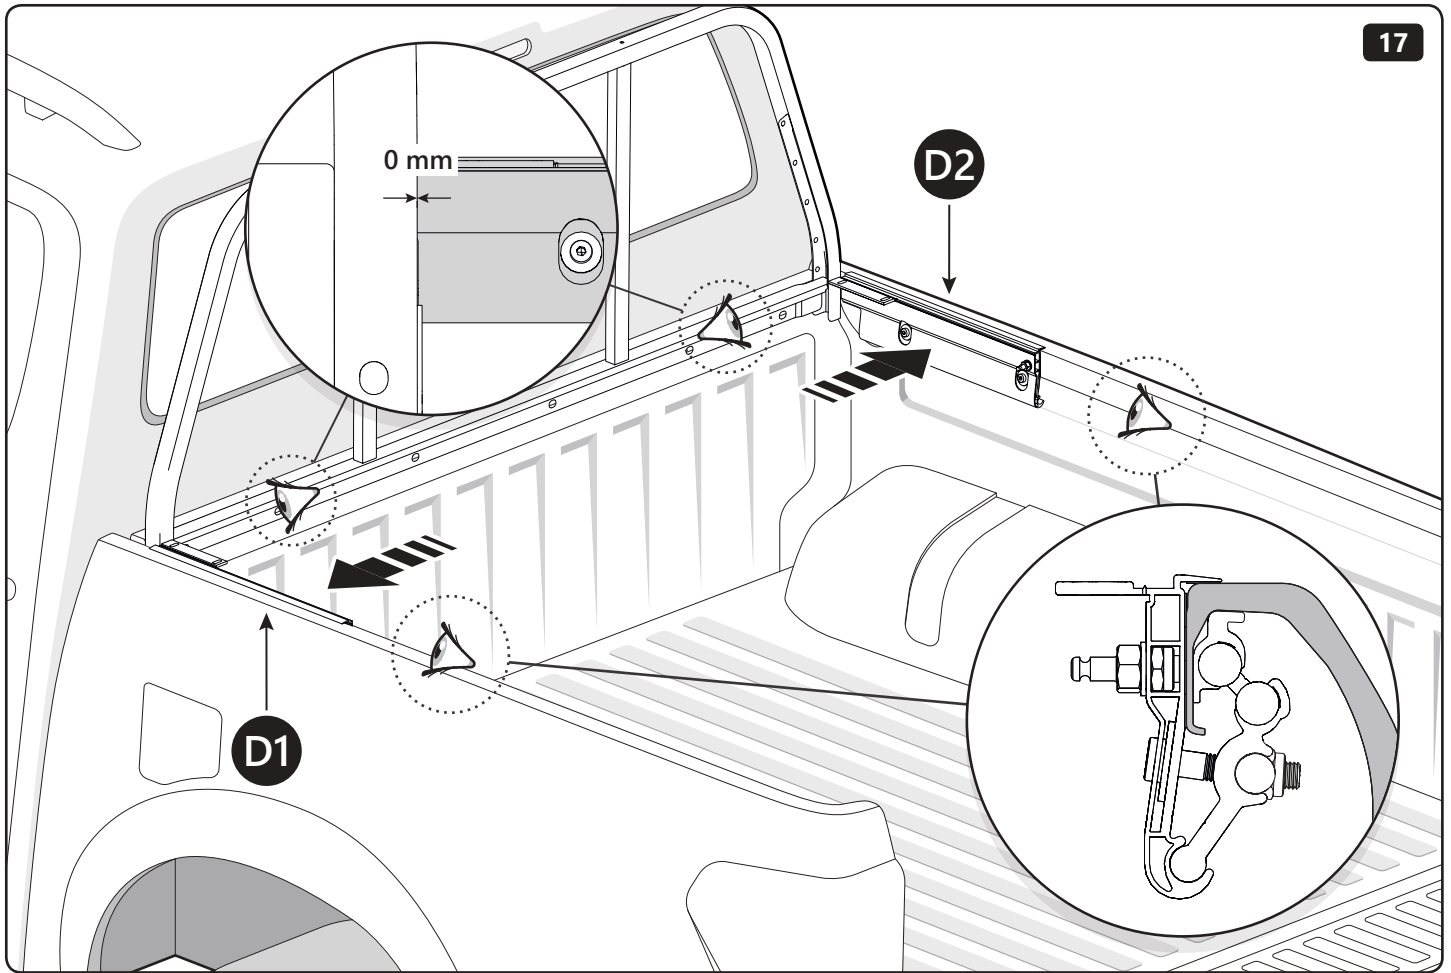


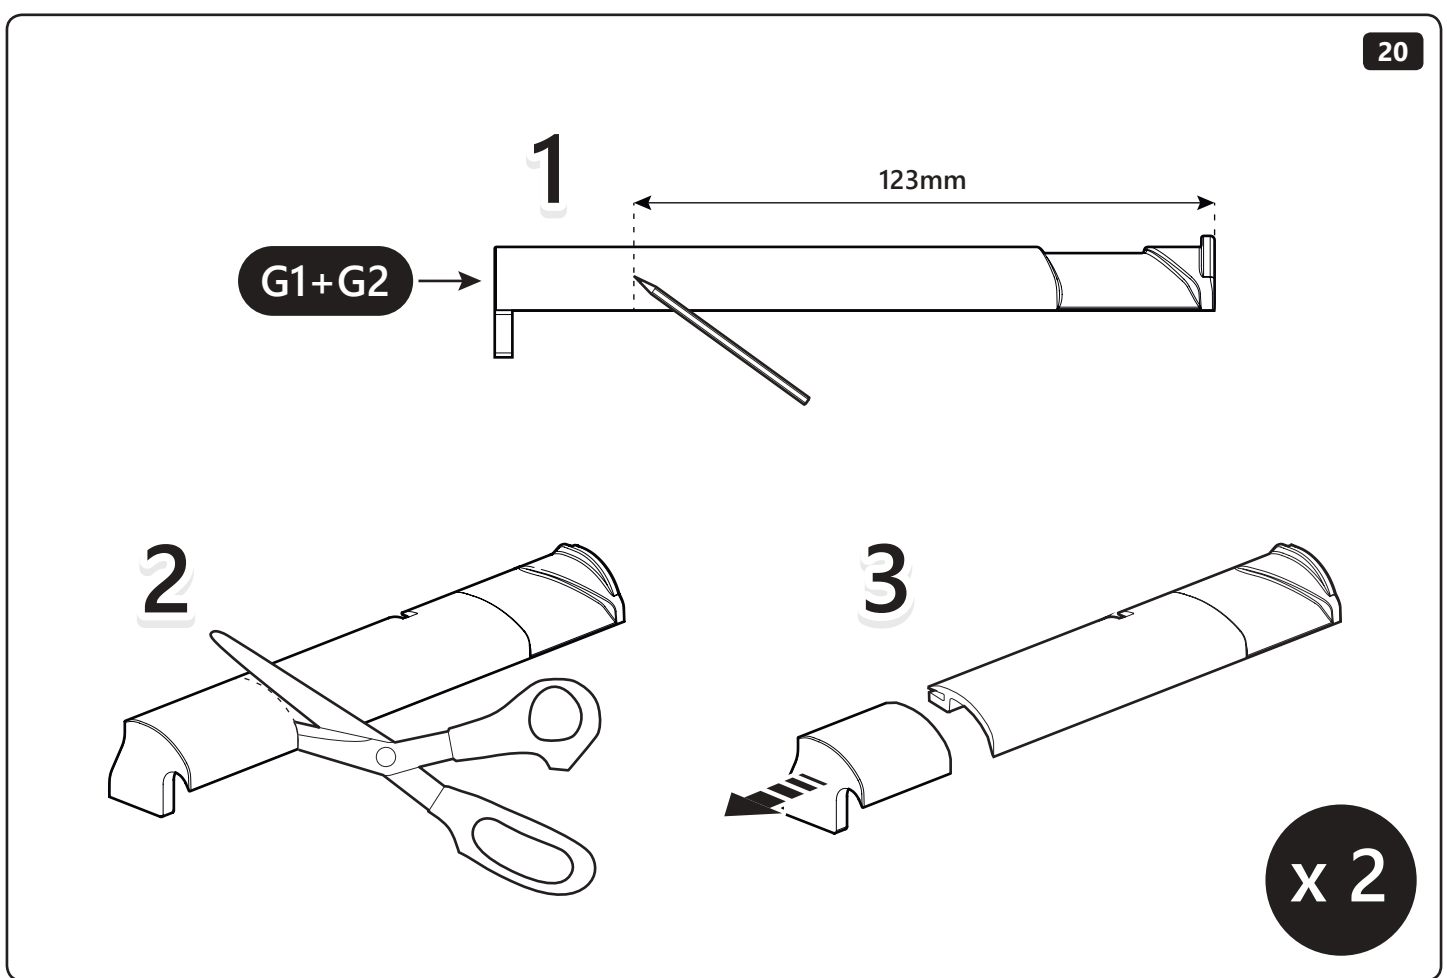
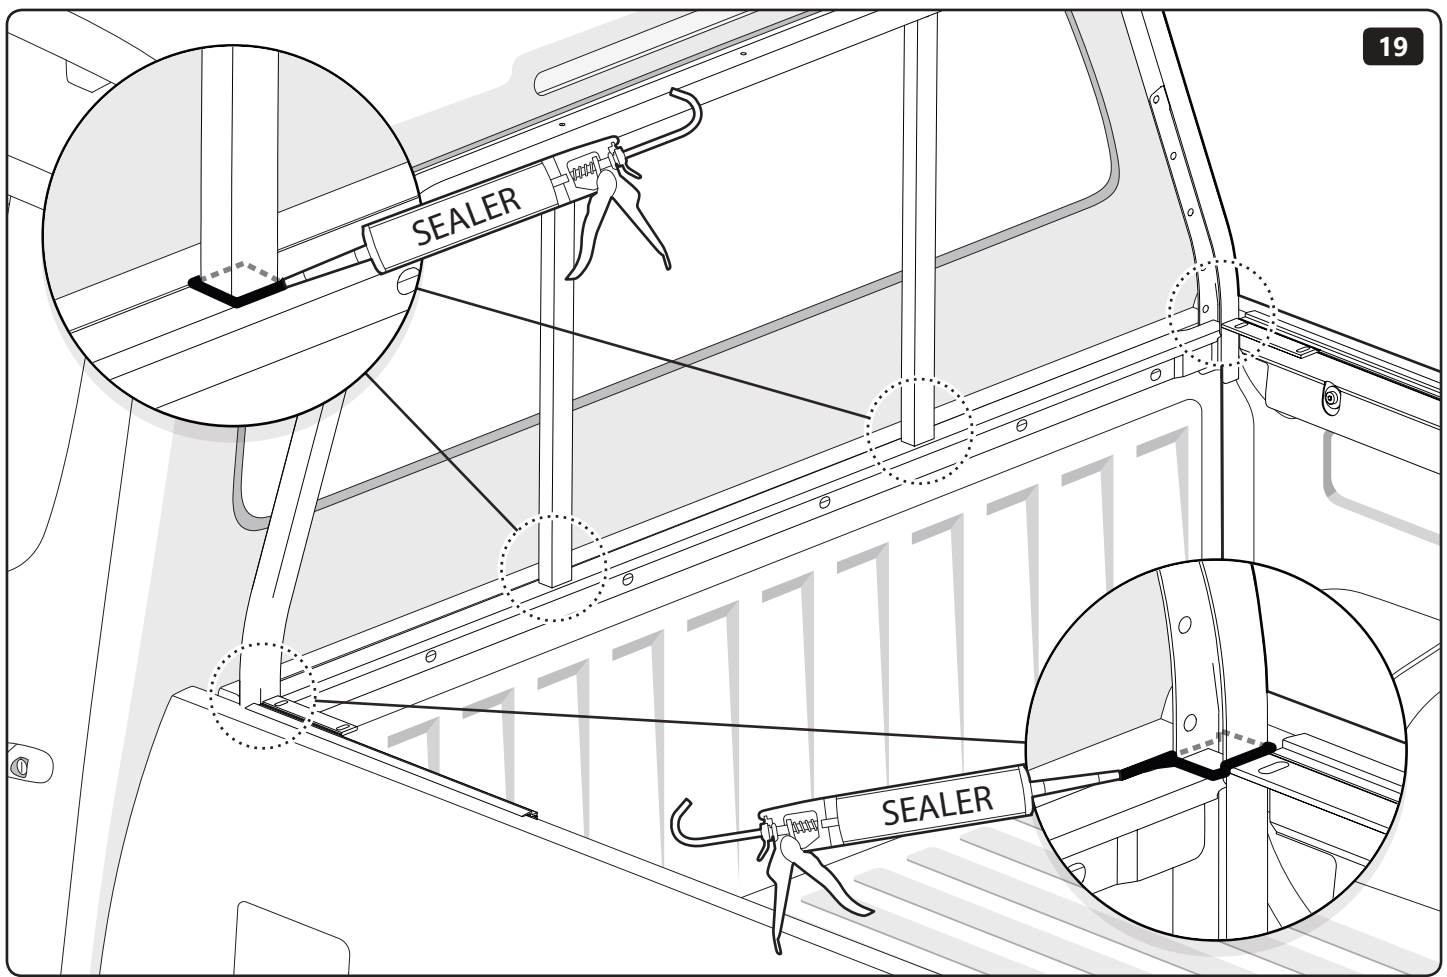


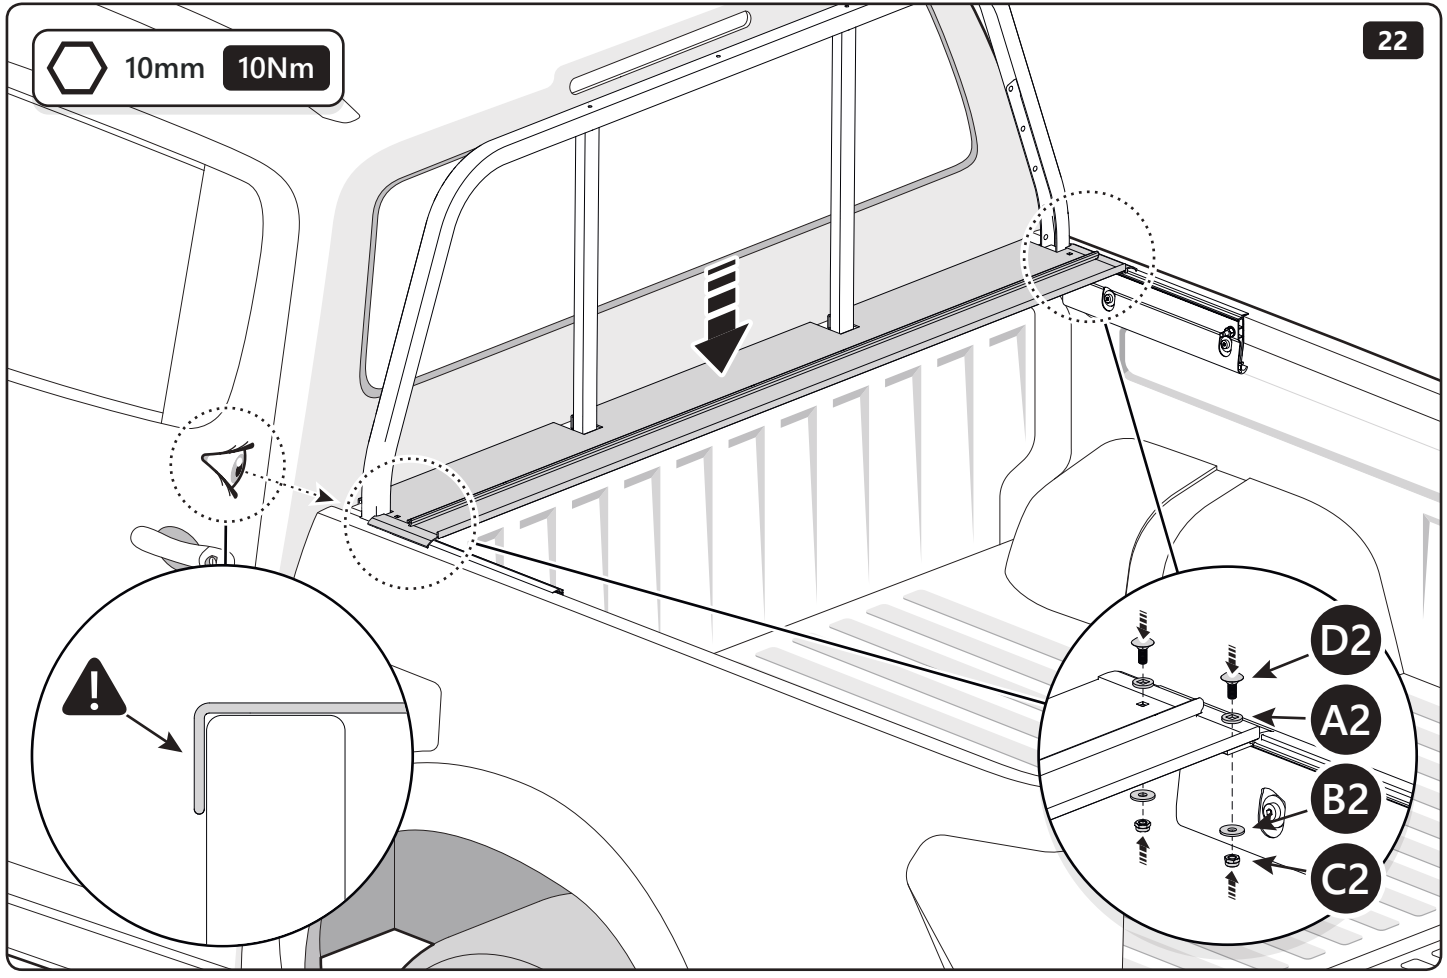
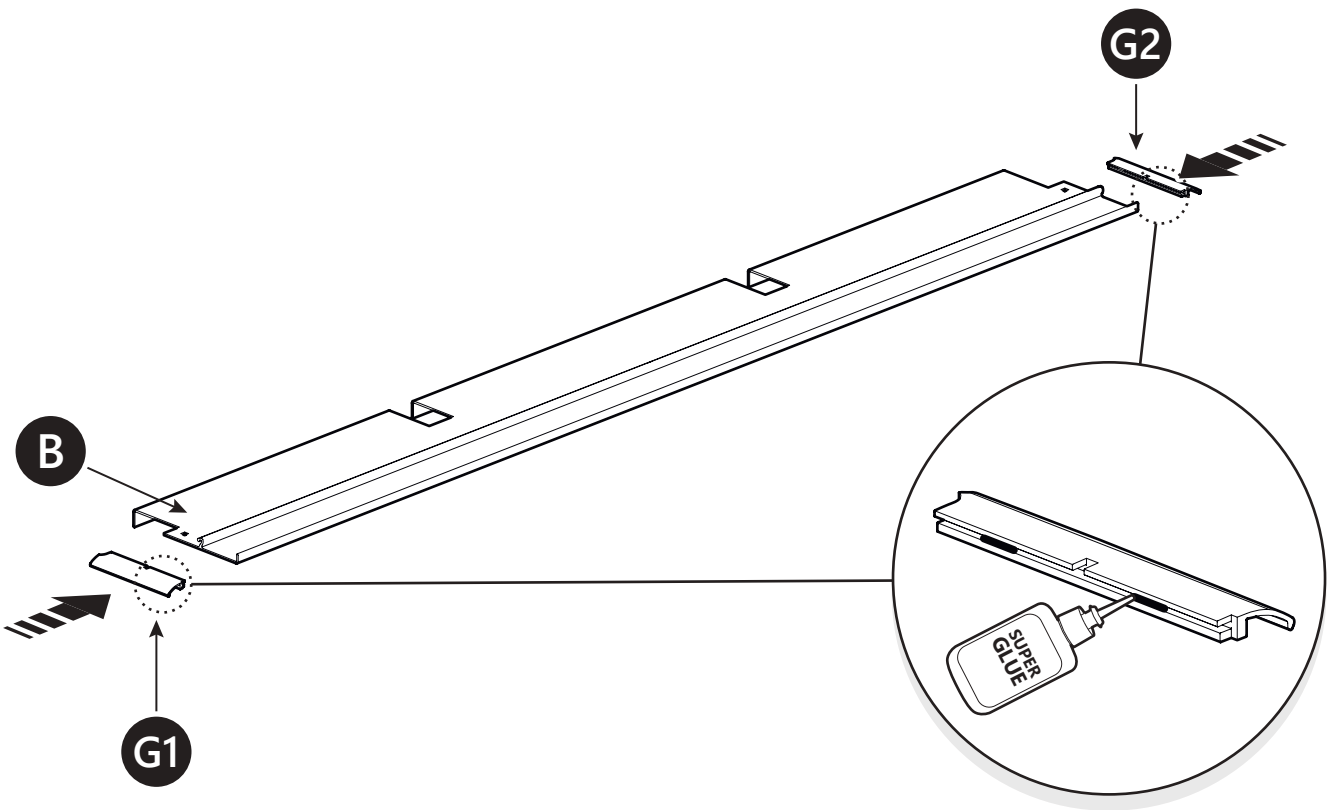


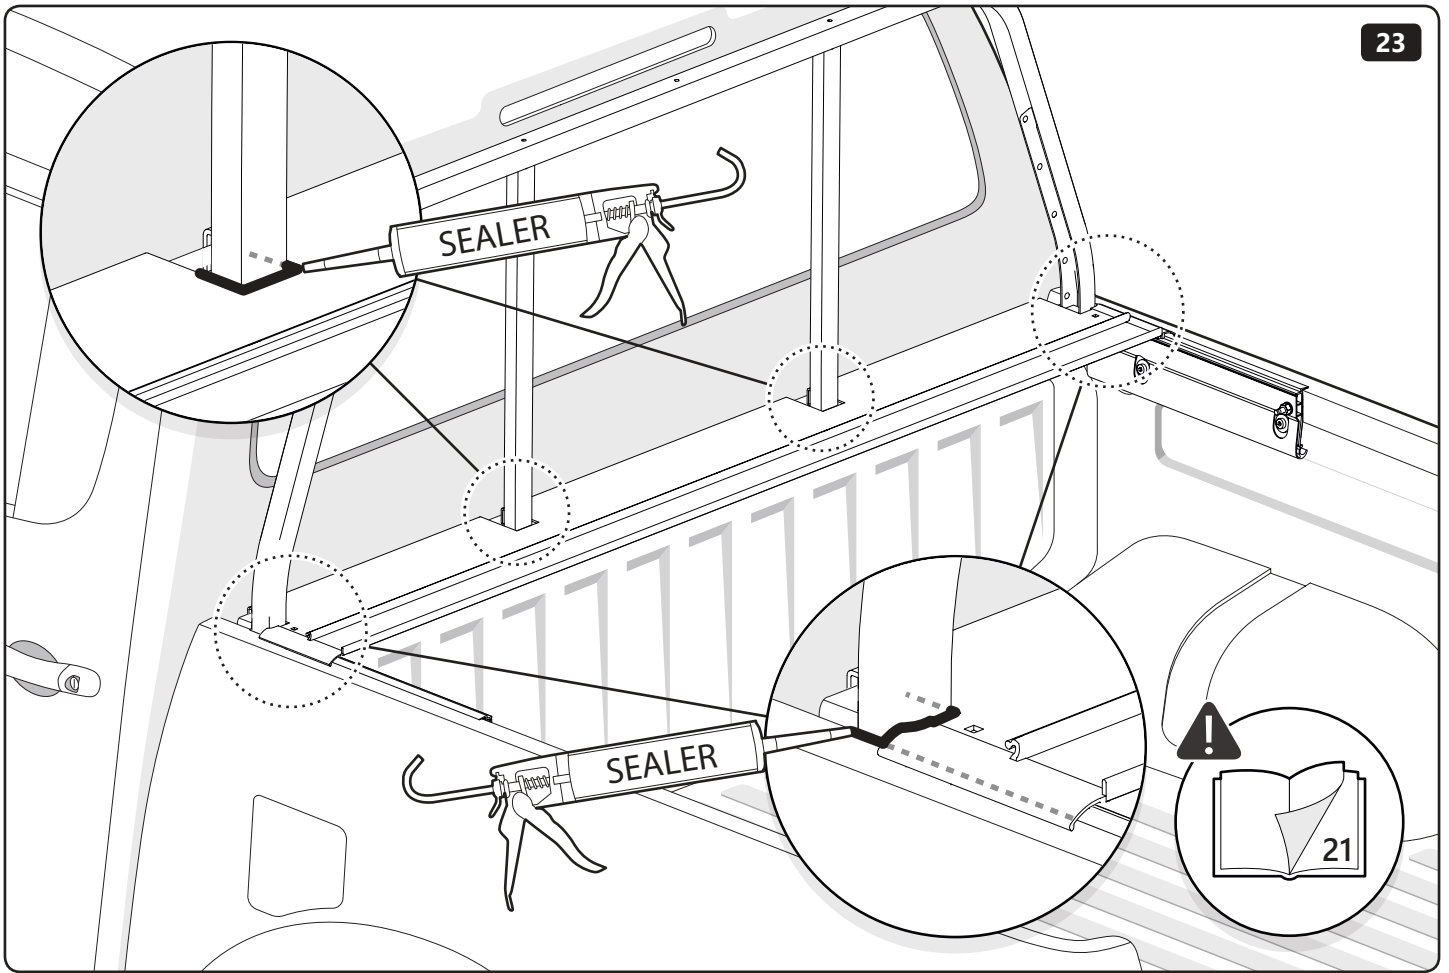

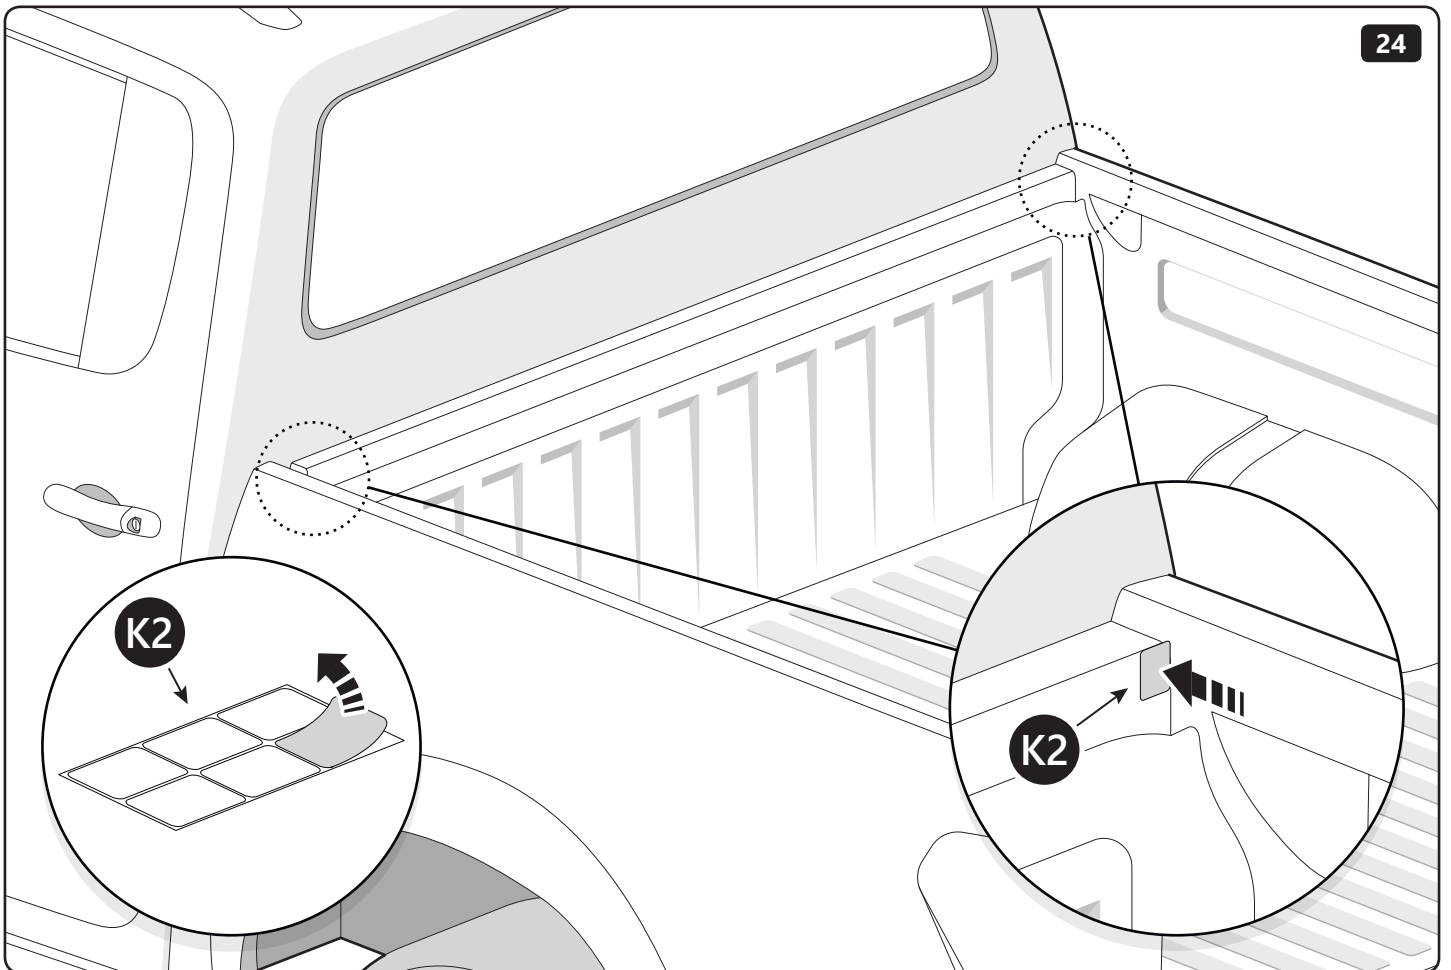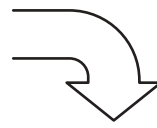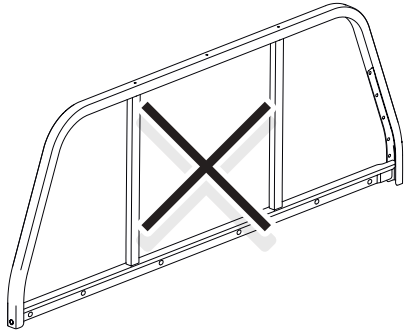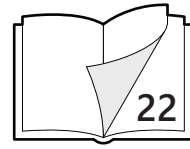
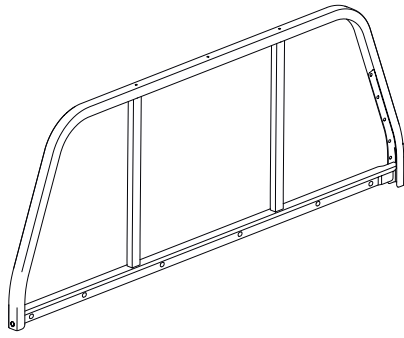


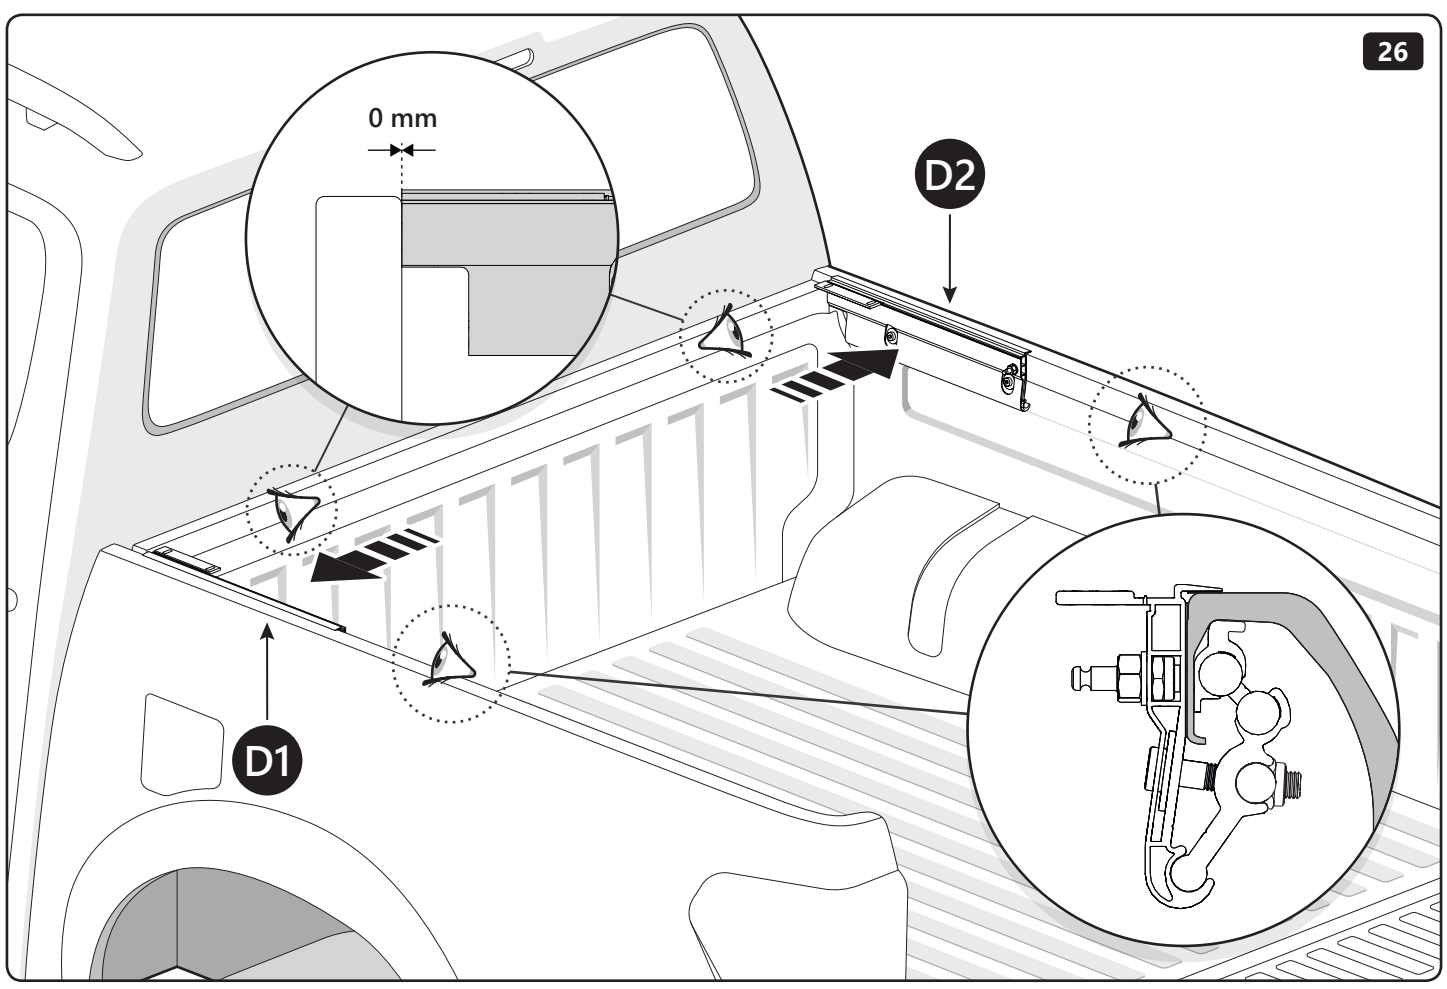
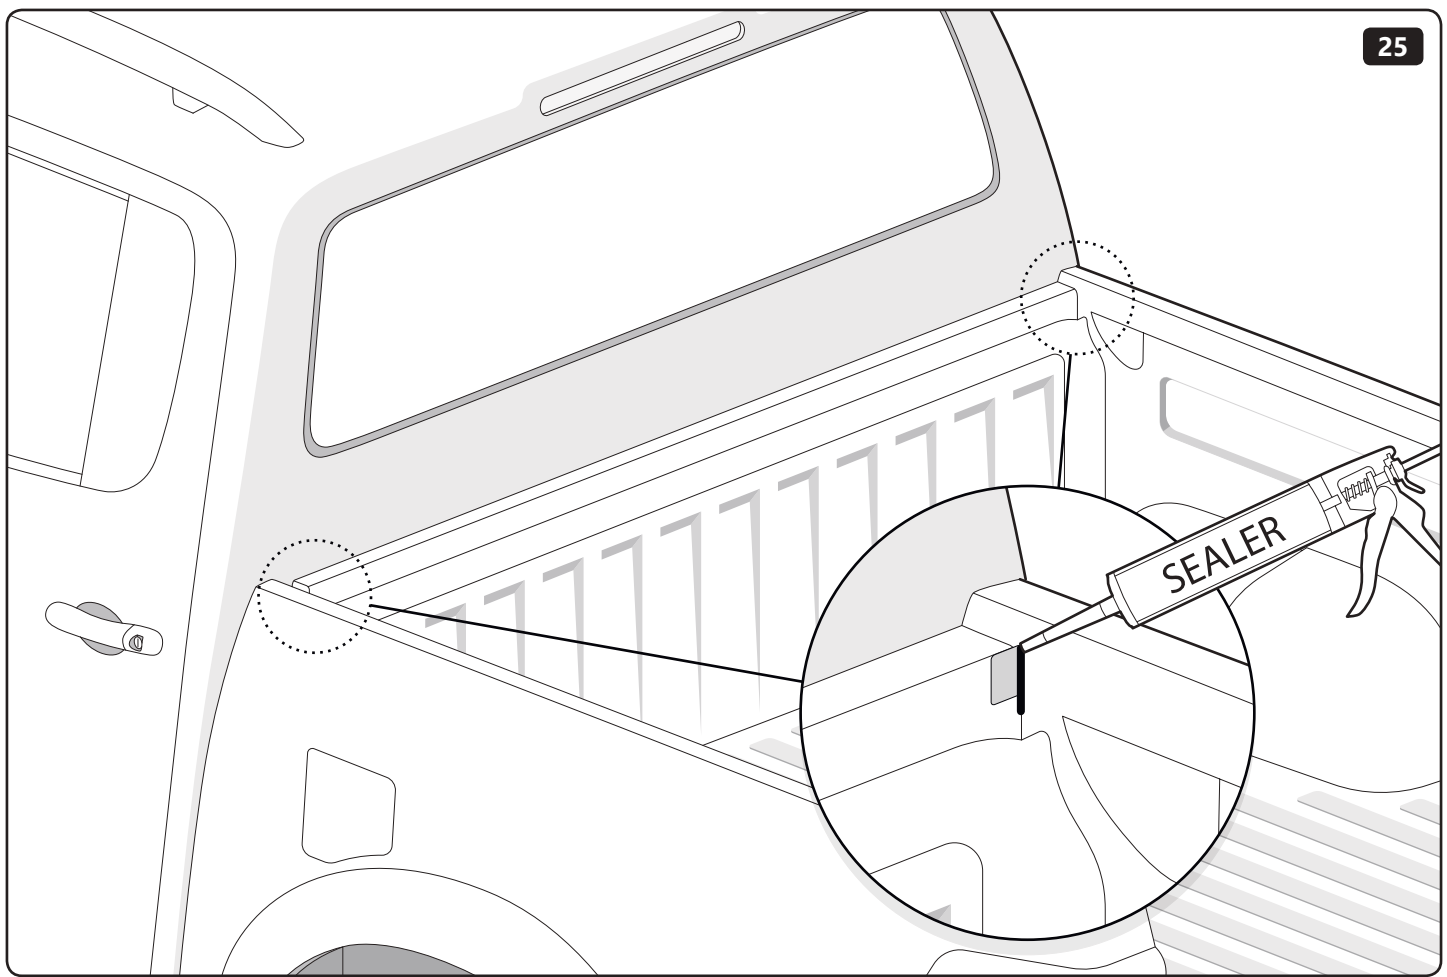


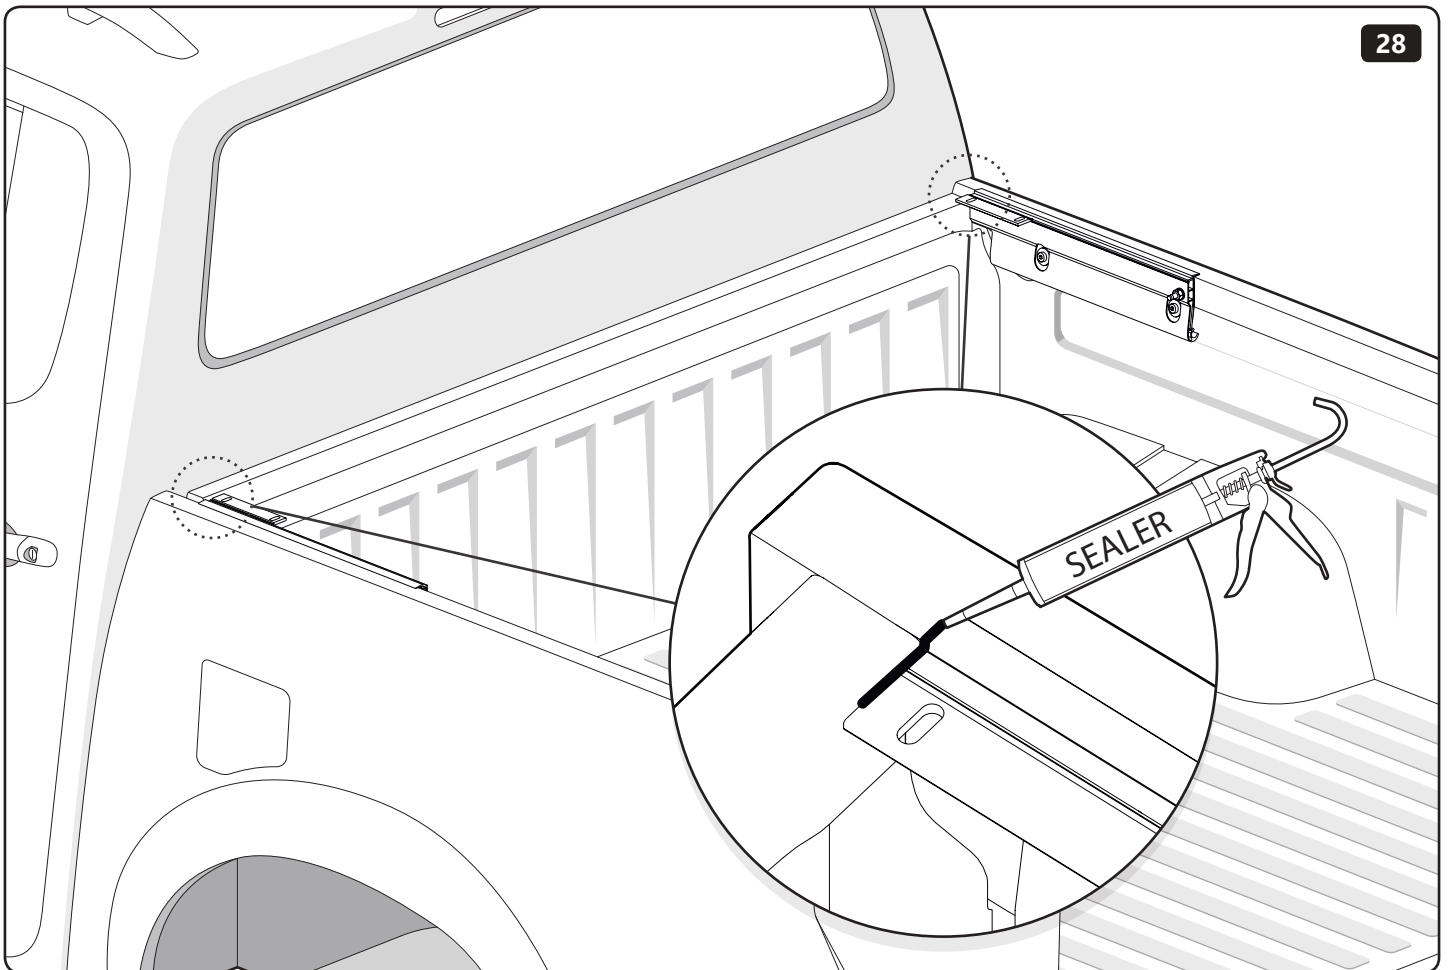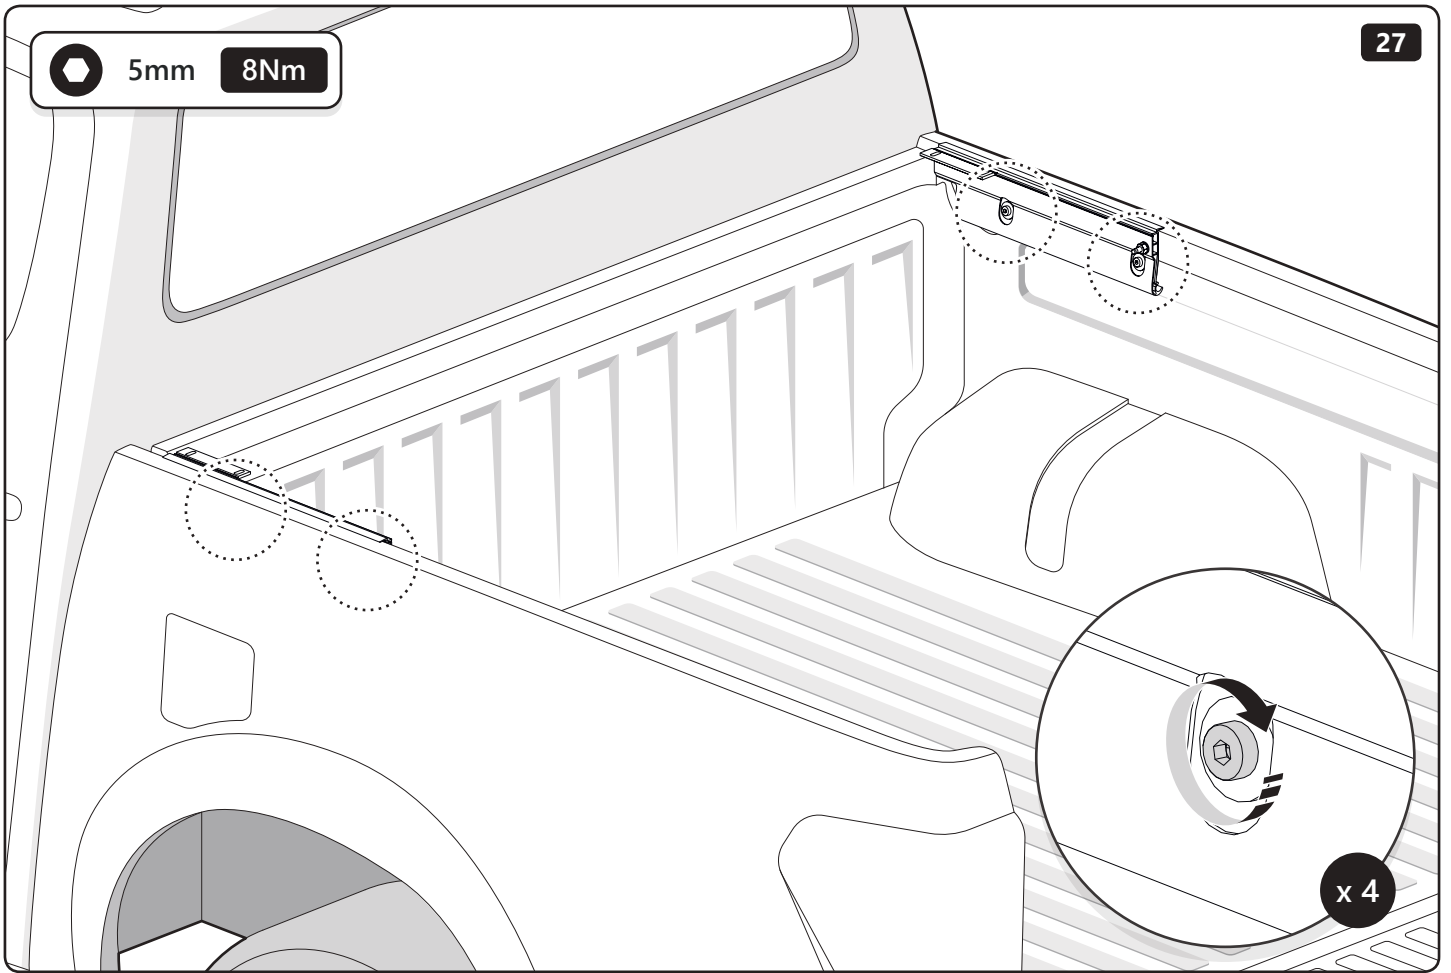

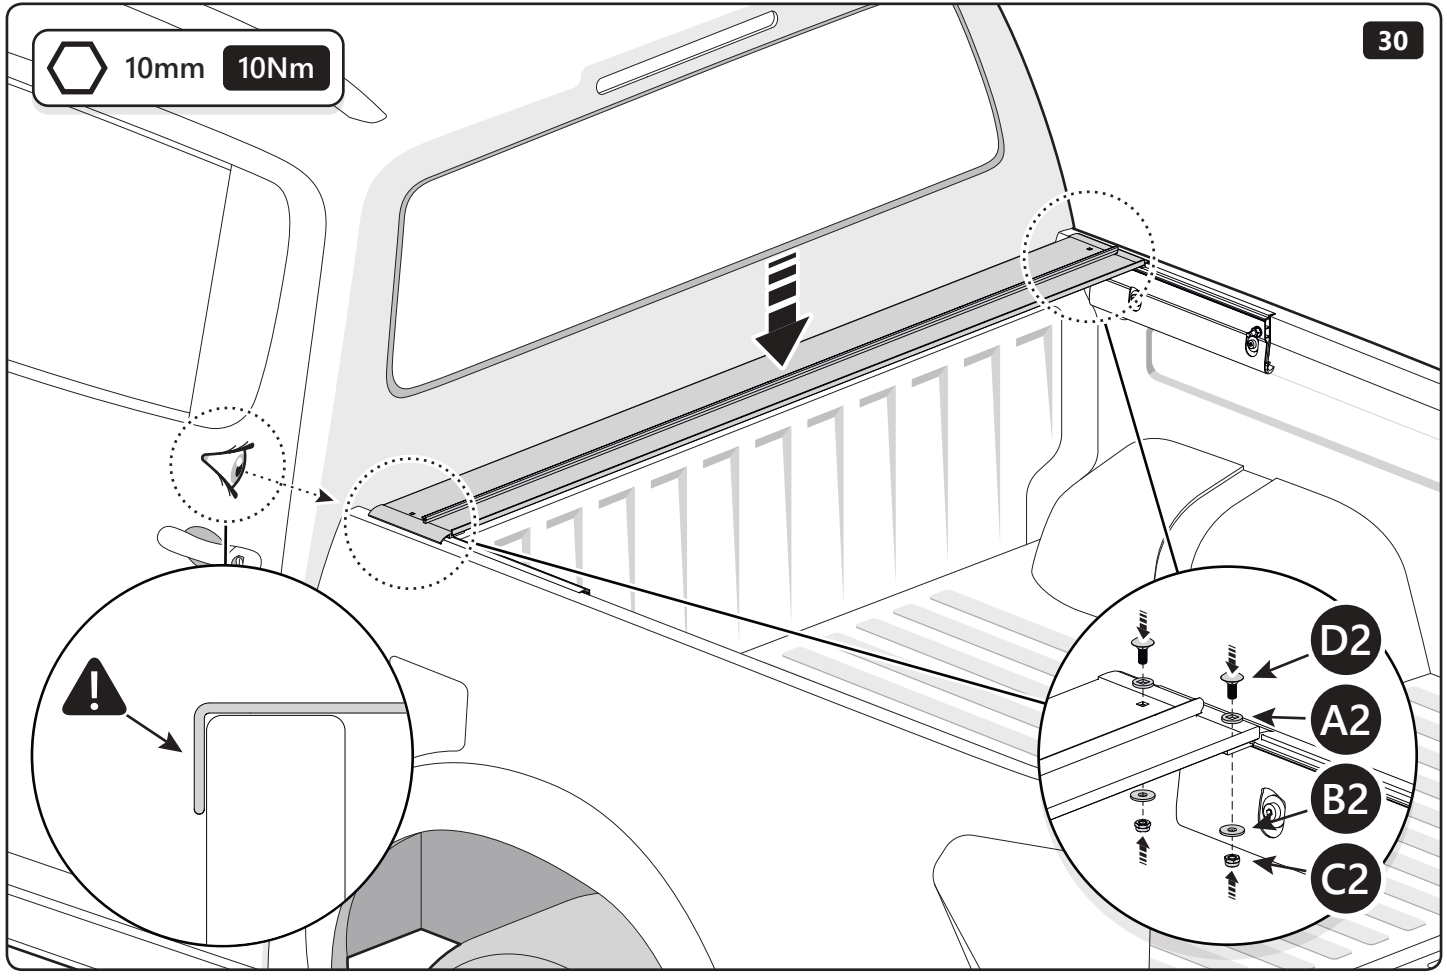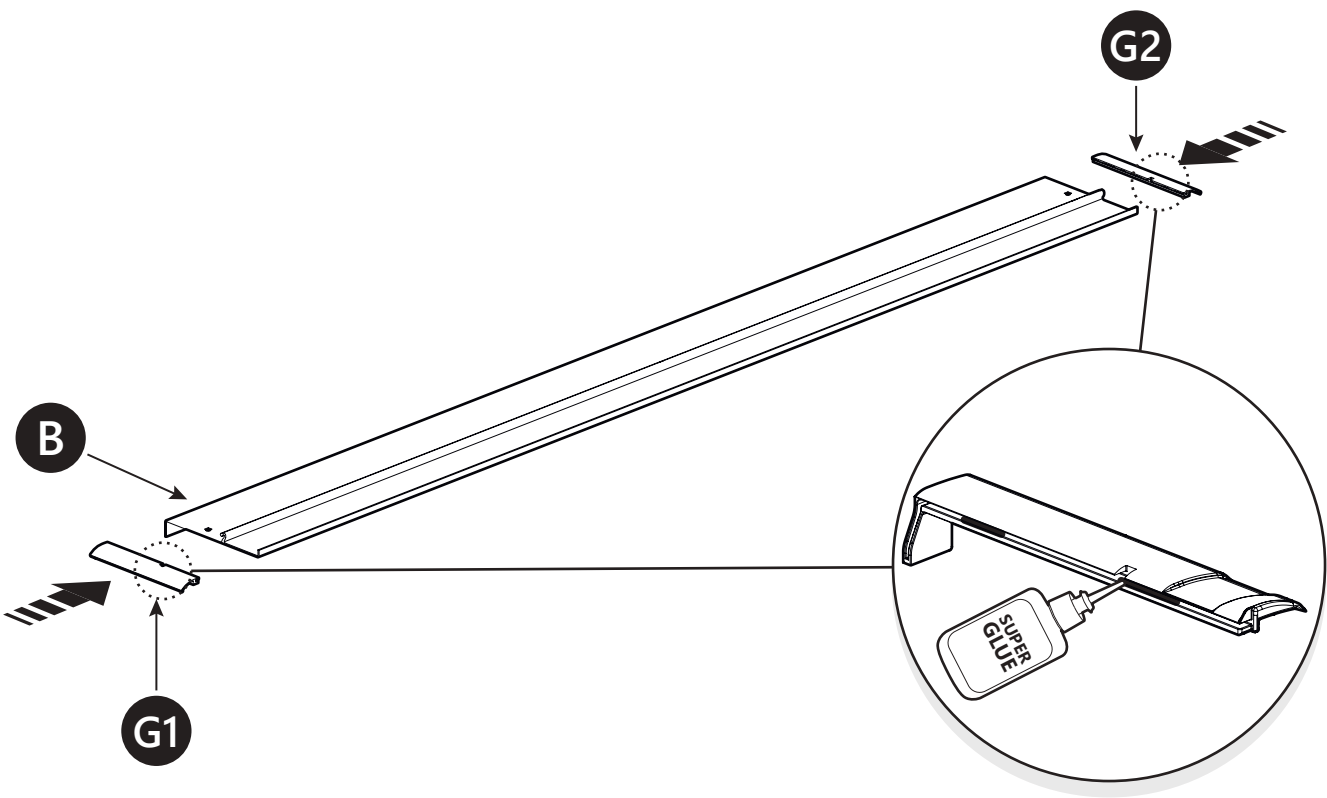




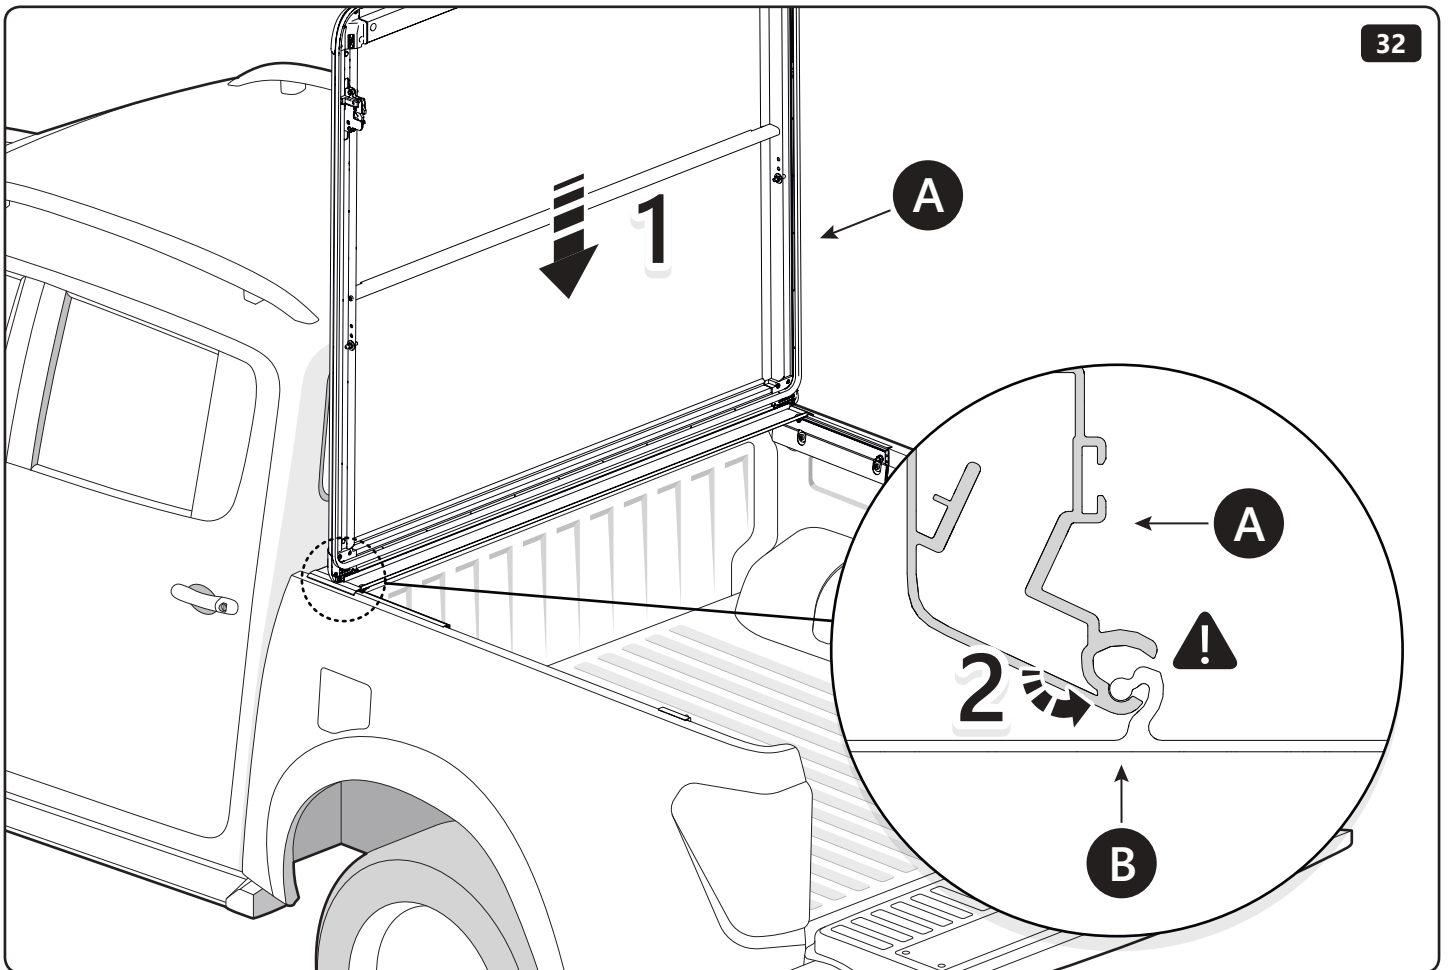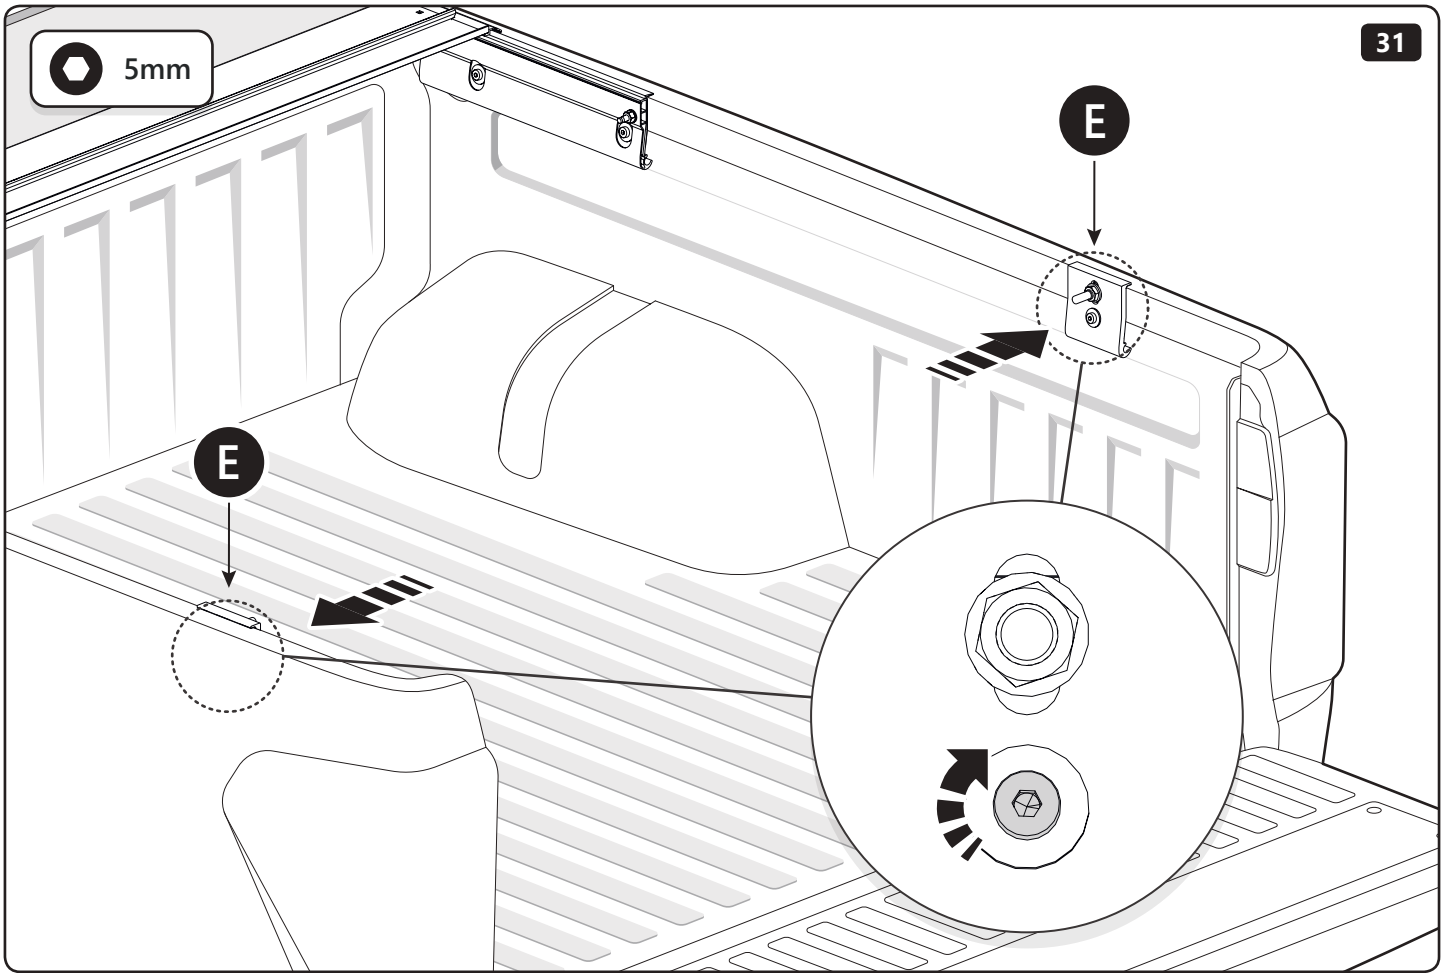


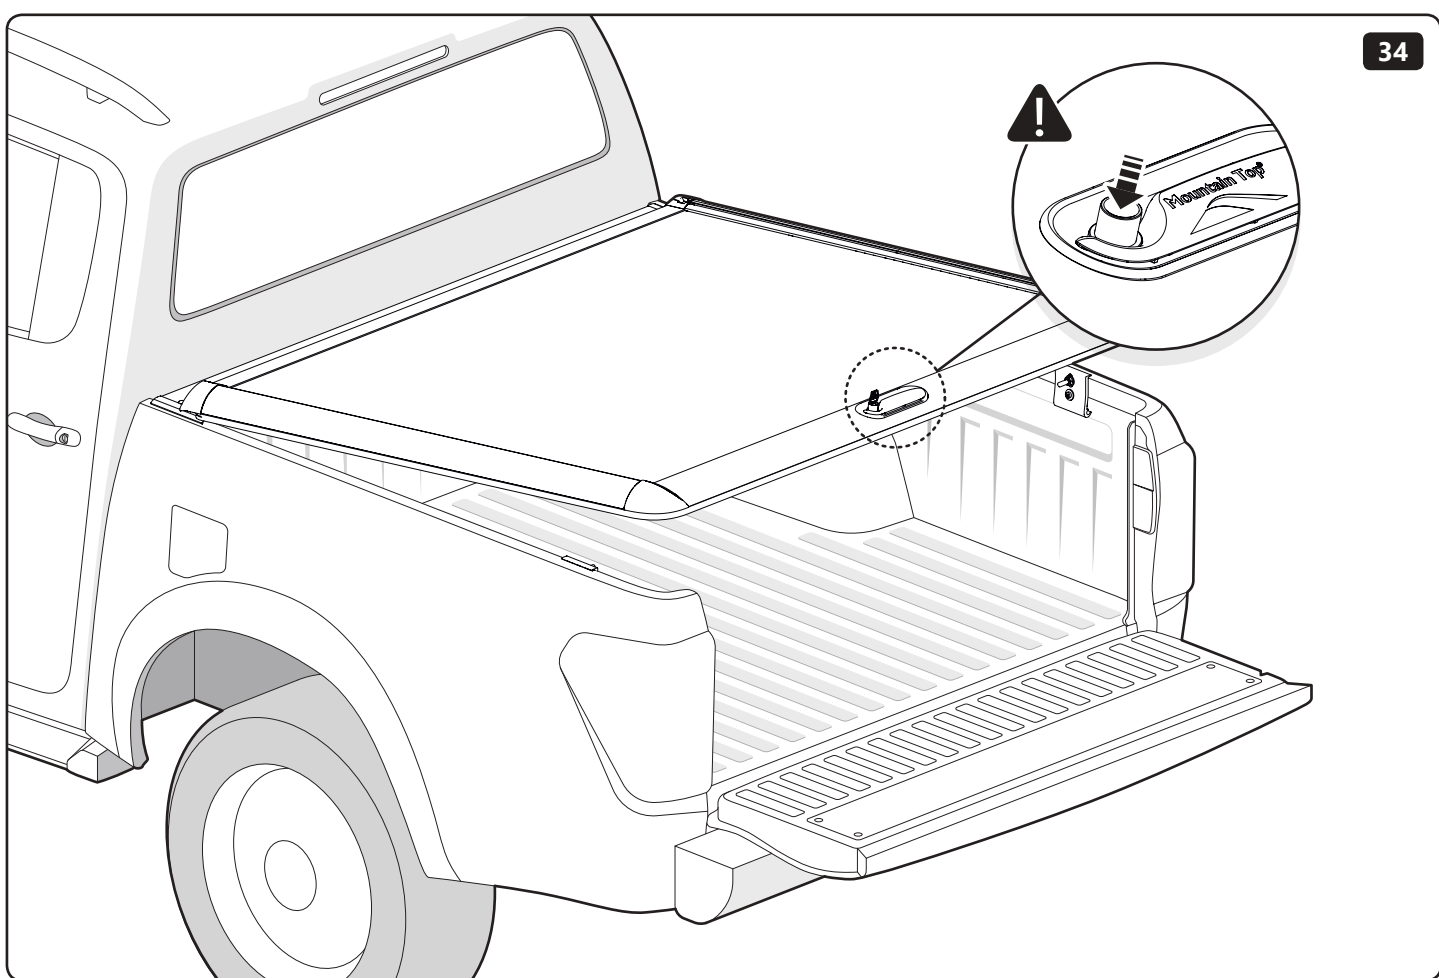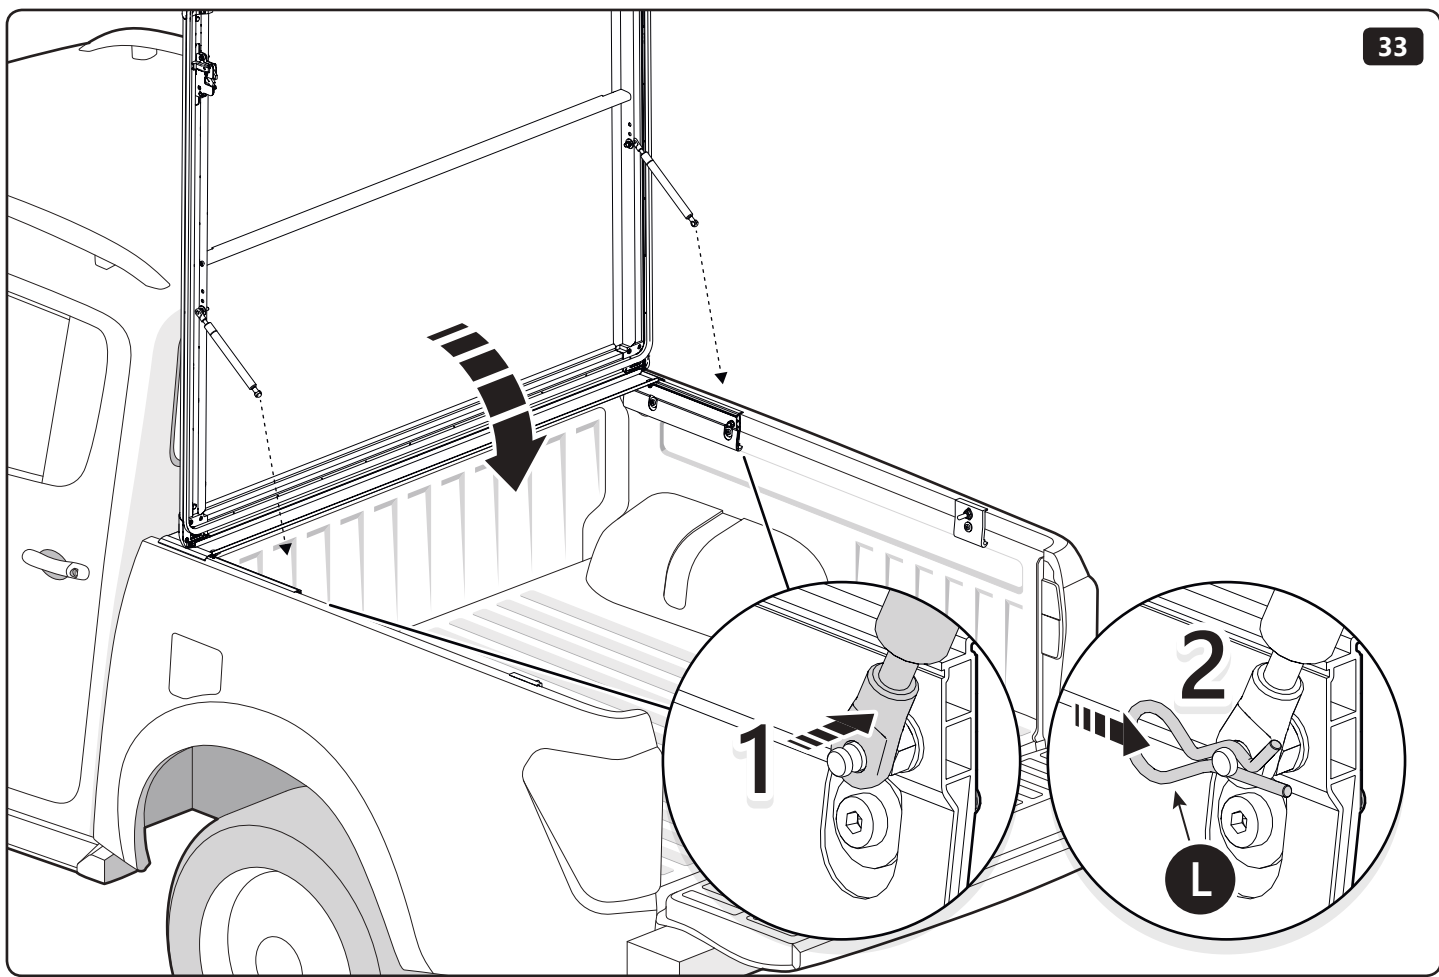



5mm 8Nm


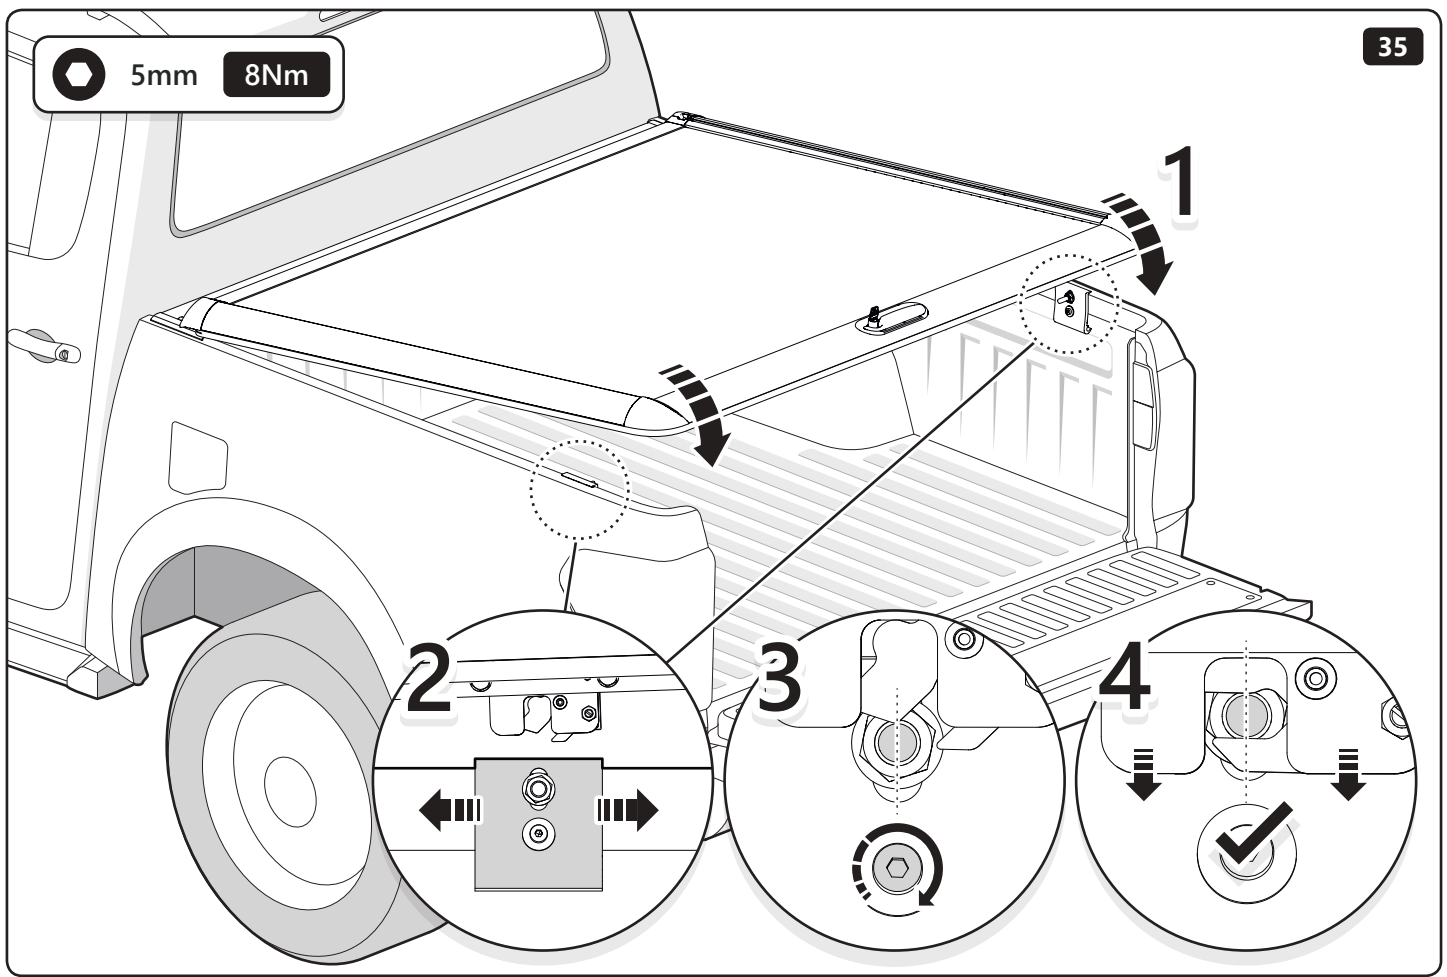




19mm


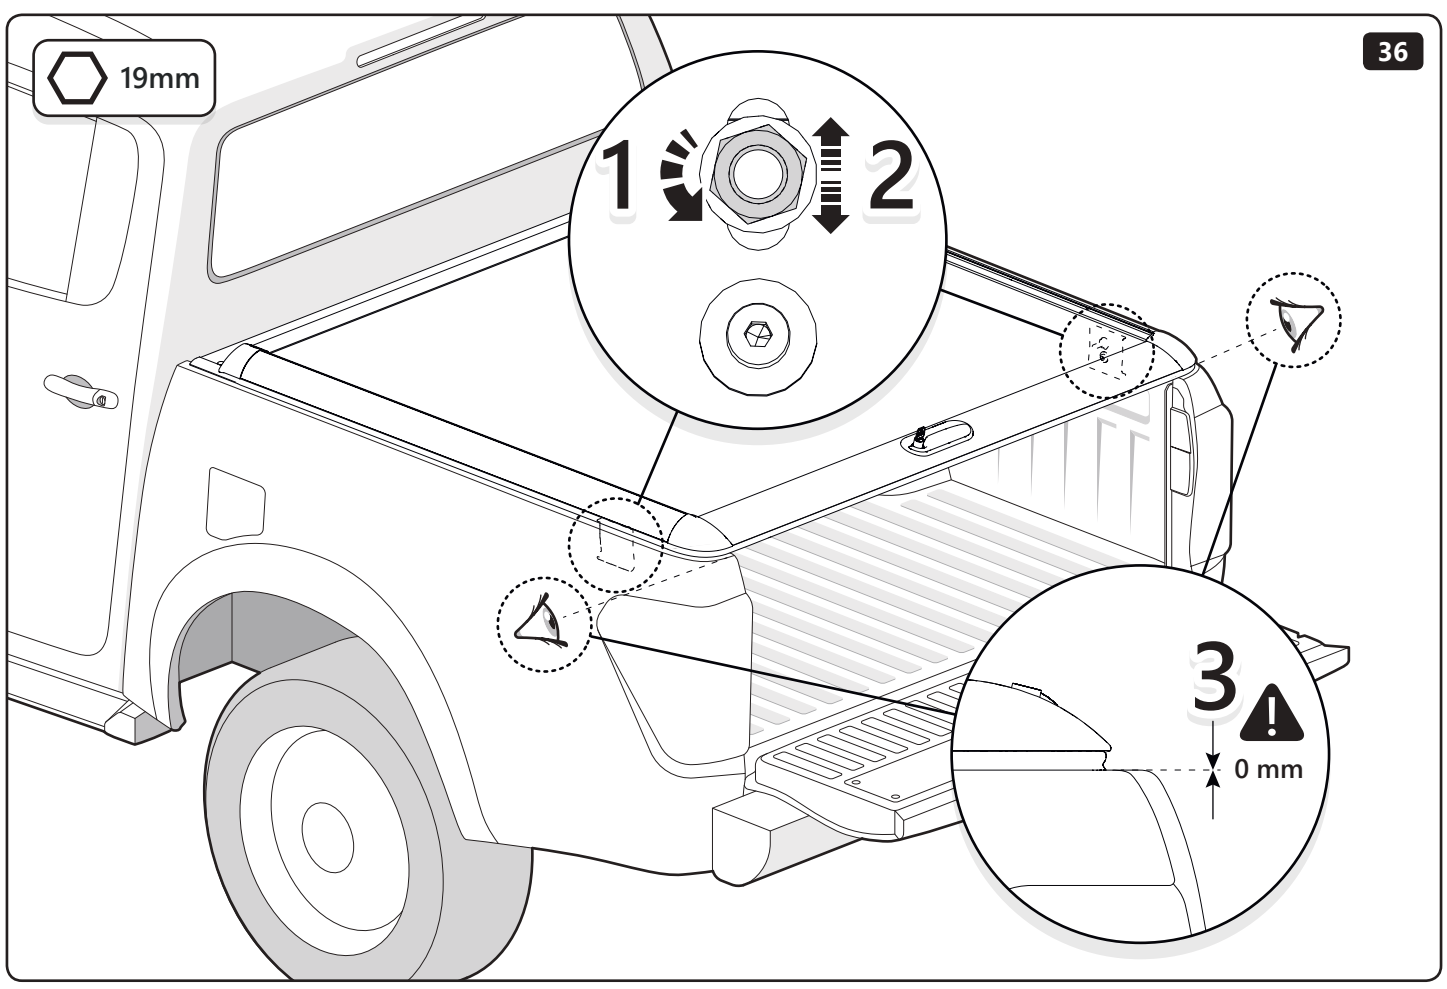




19mm 20Nm

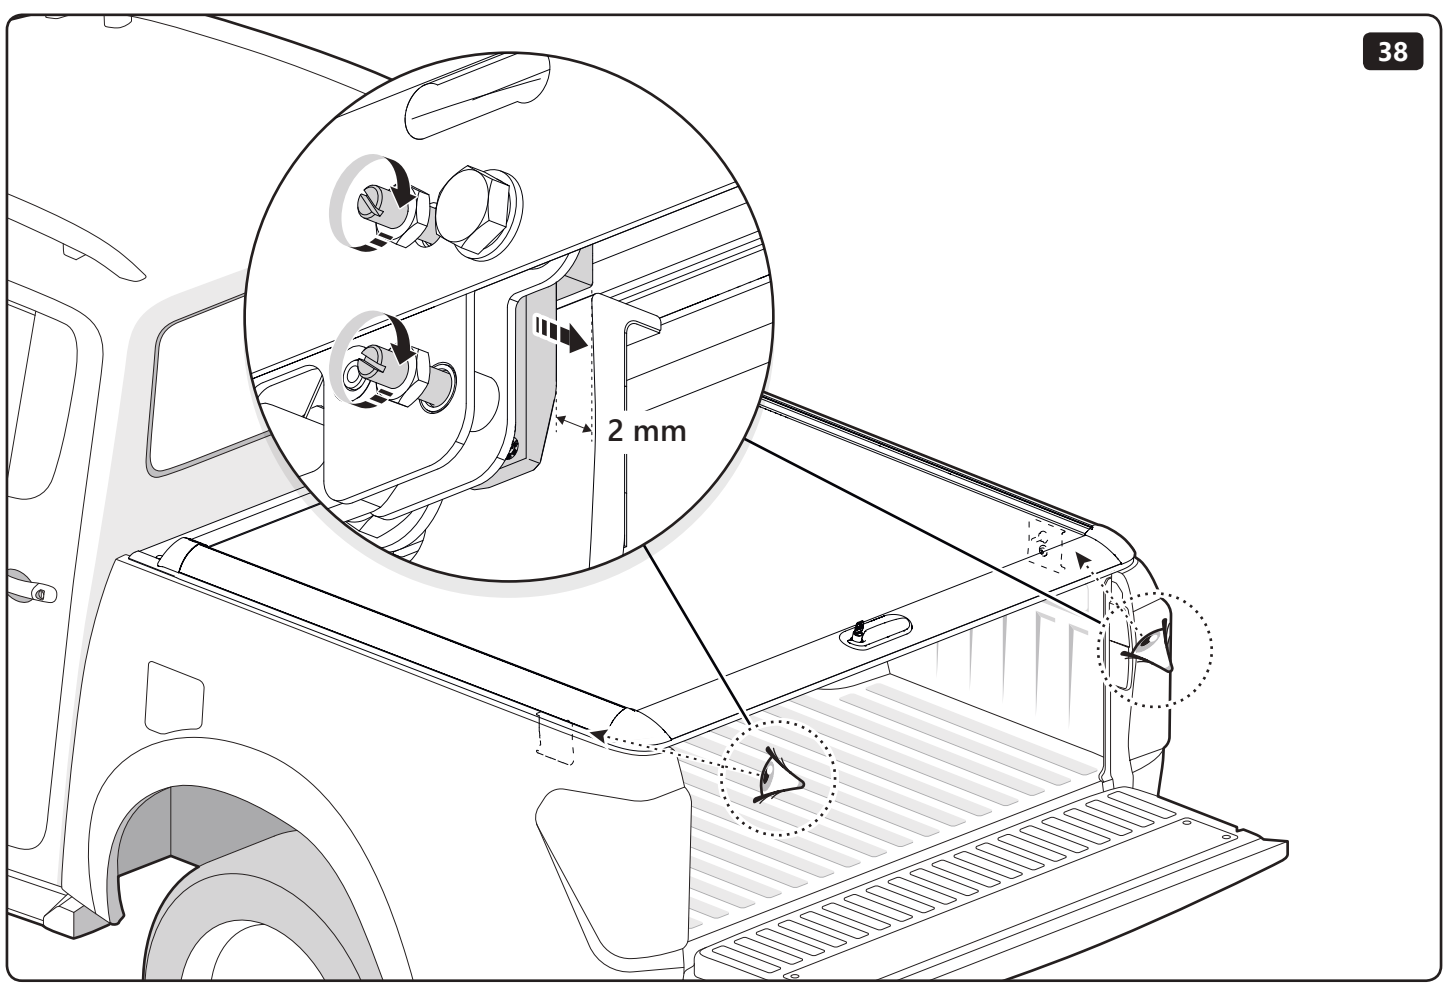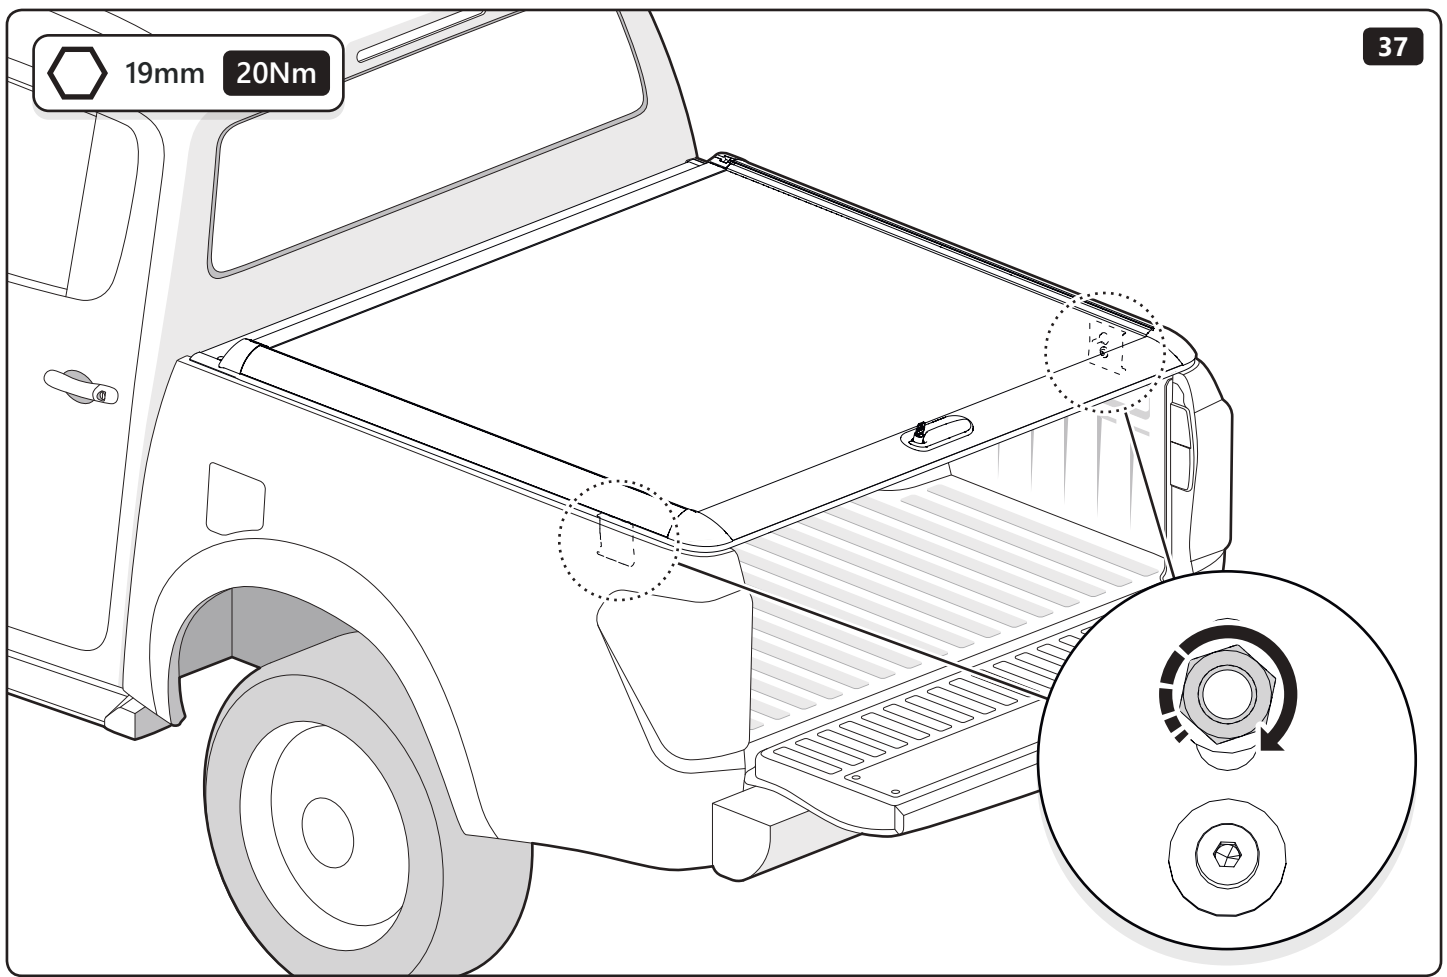

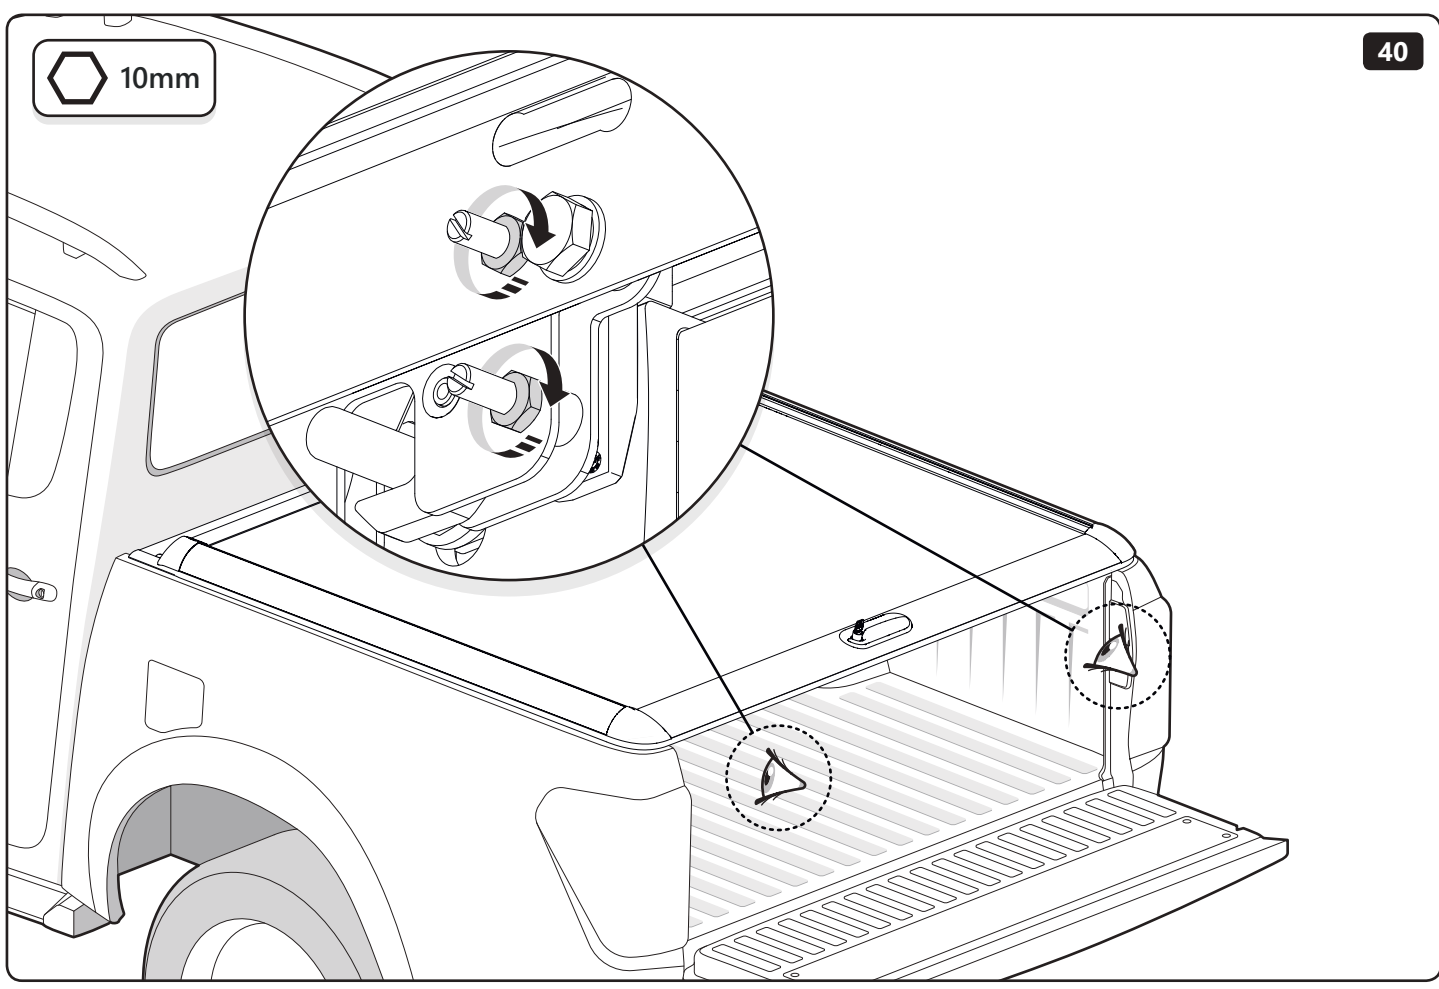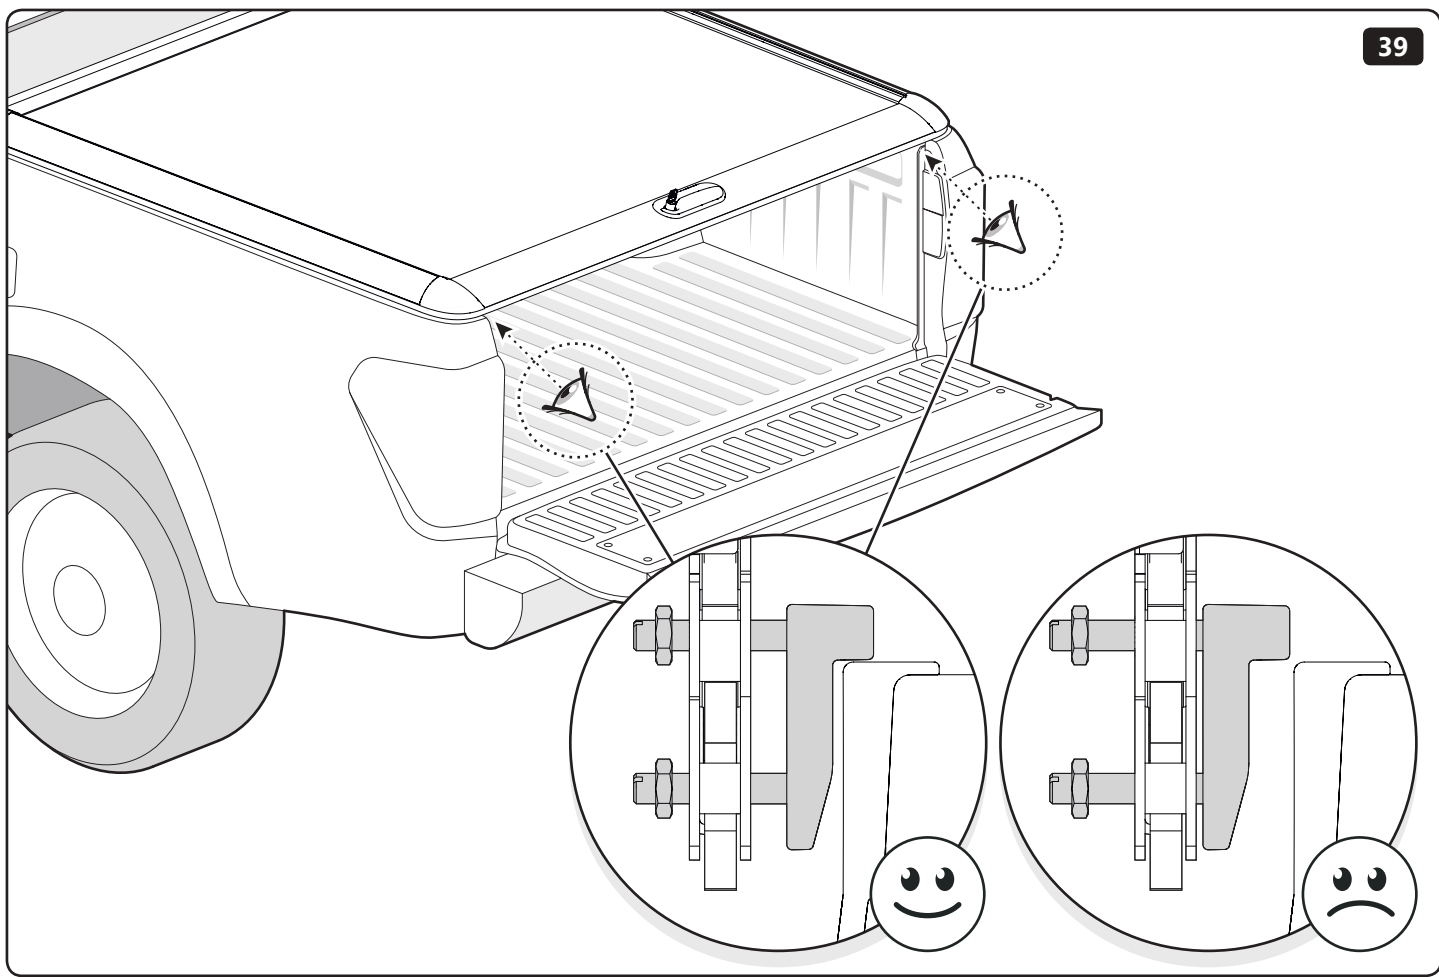

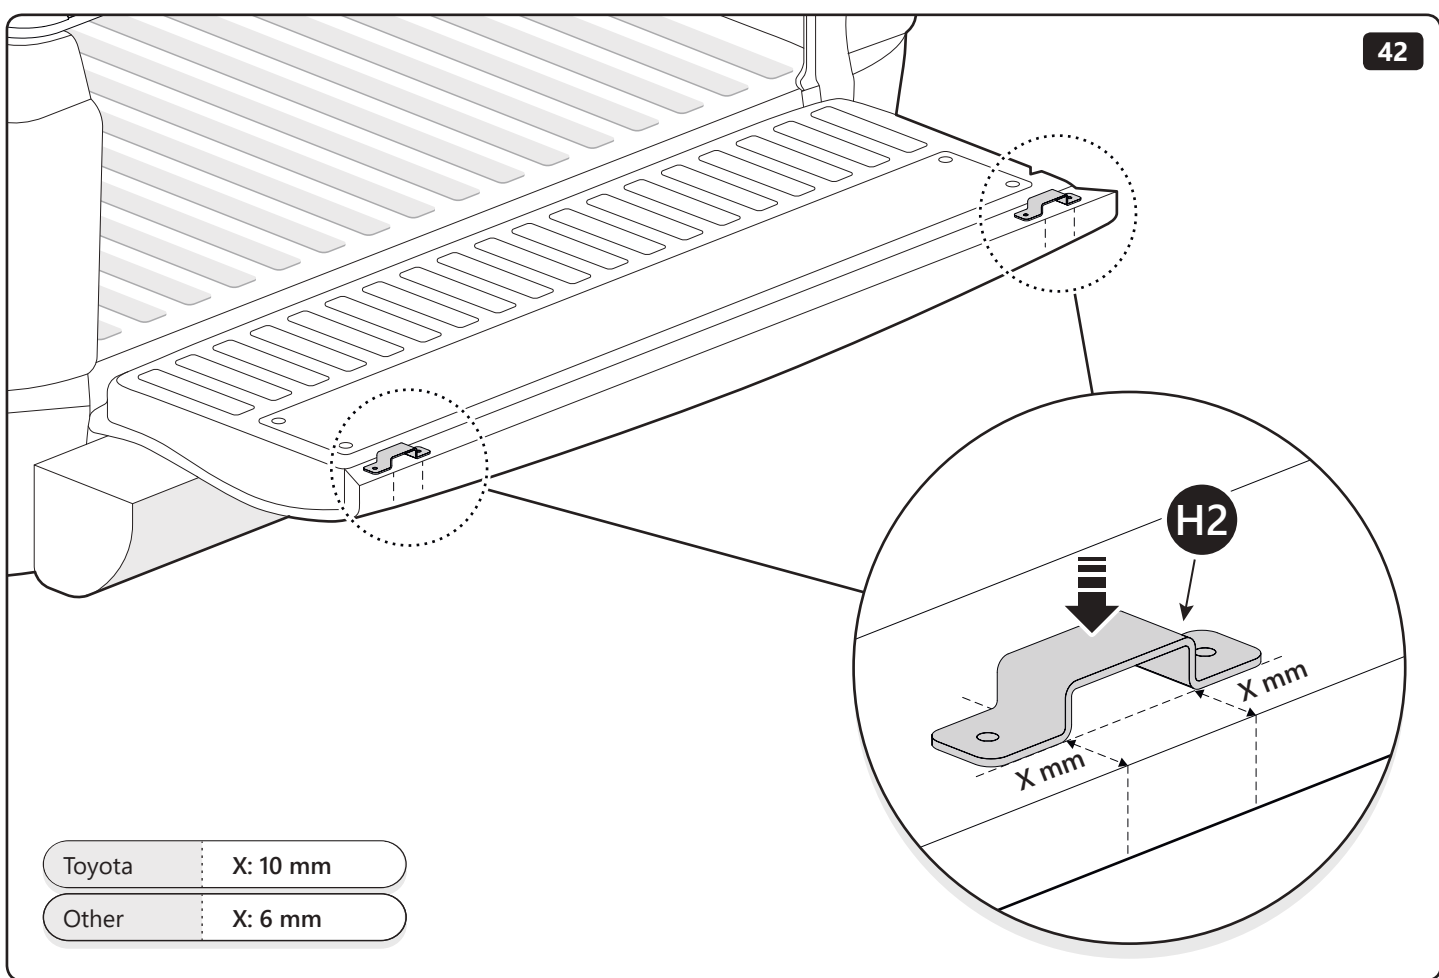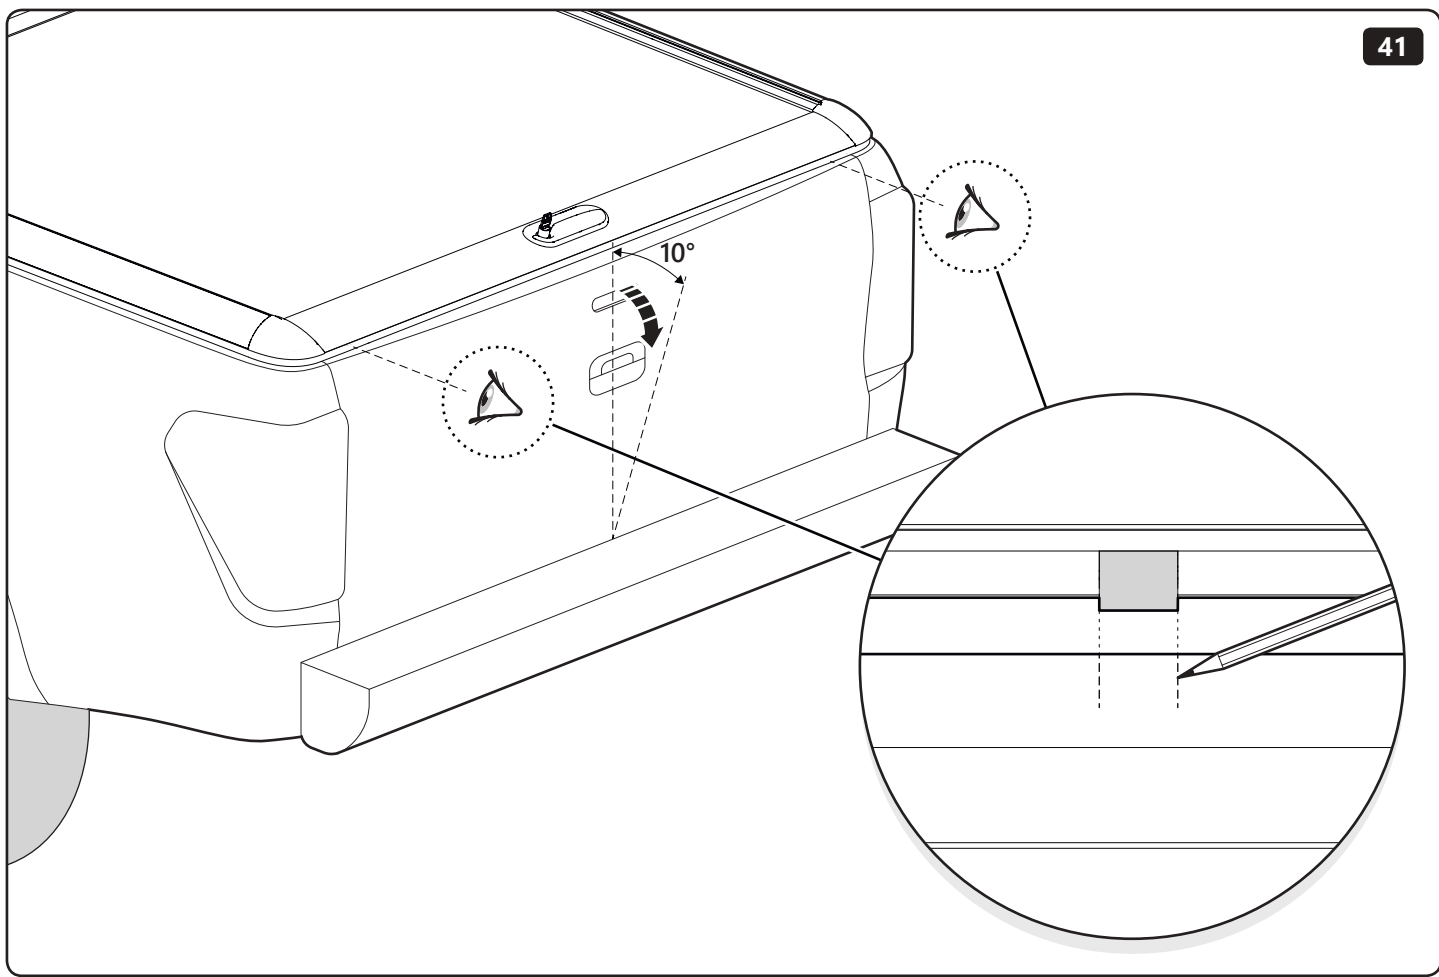

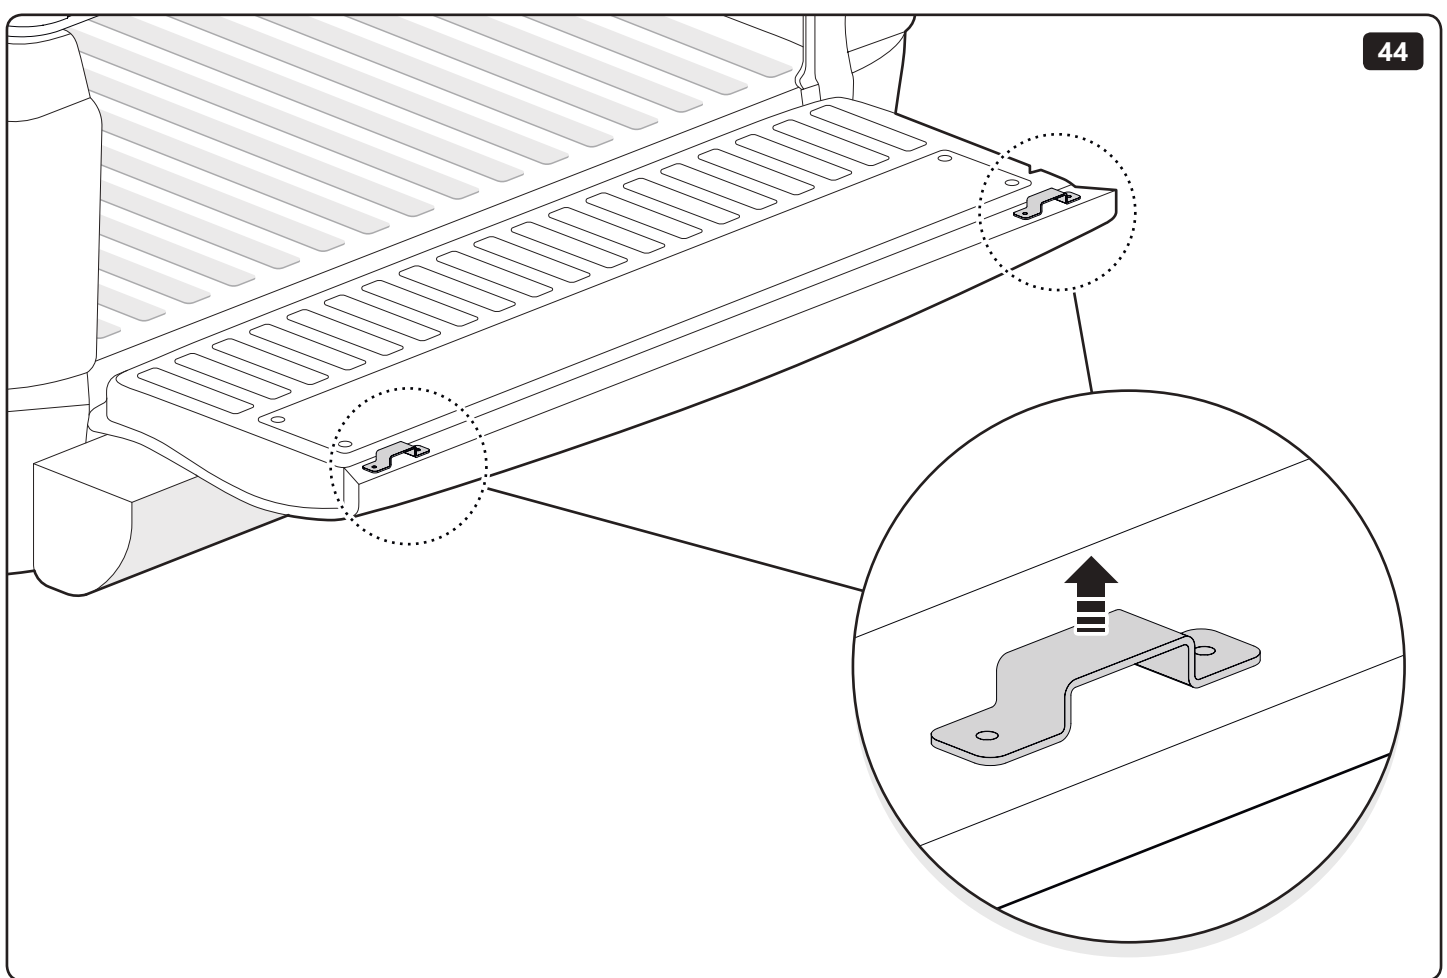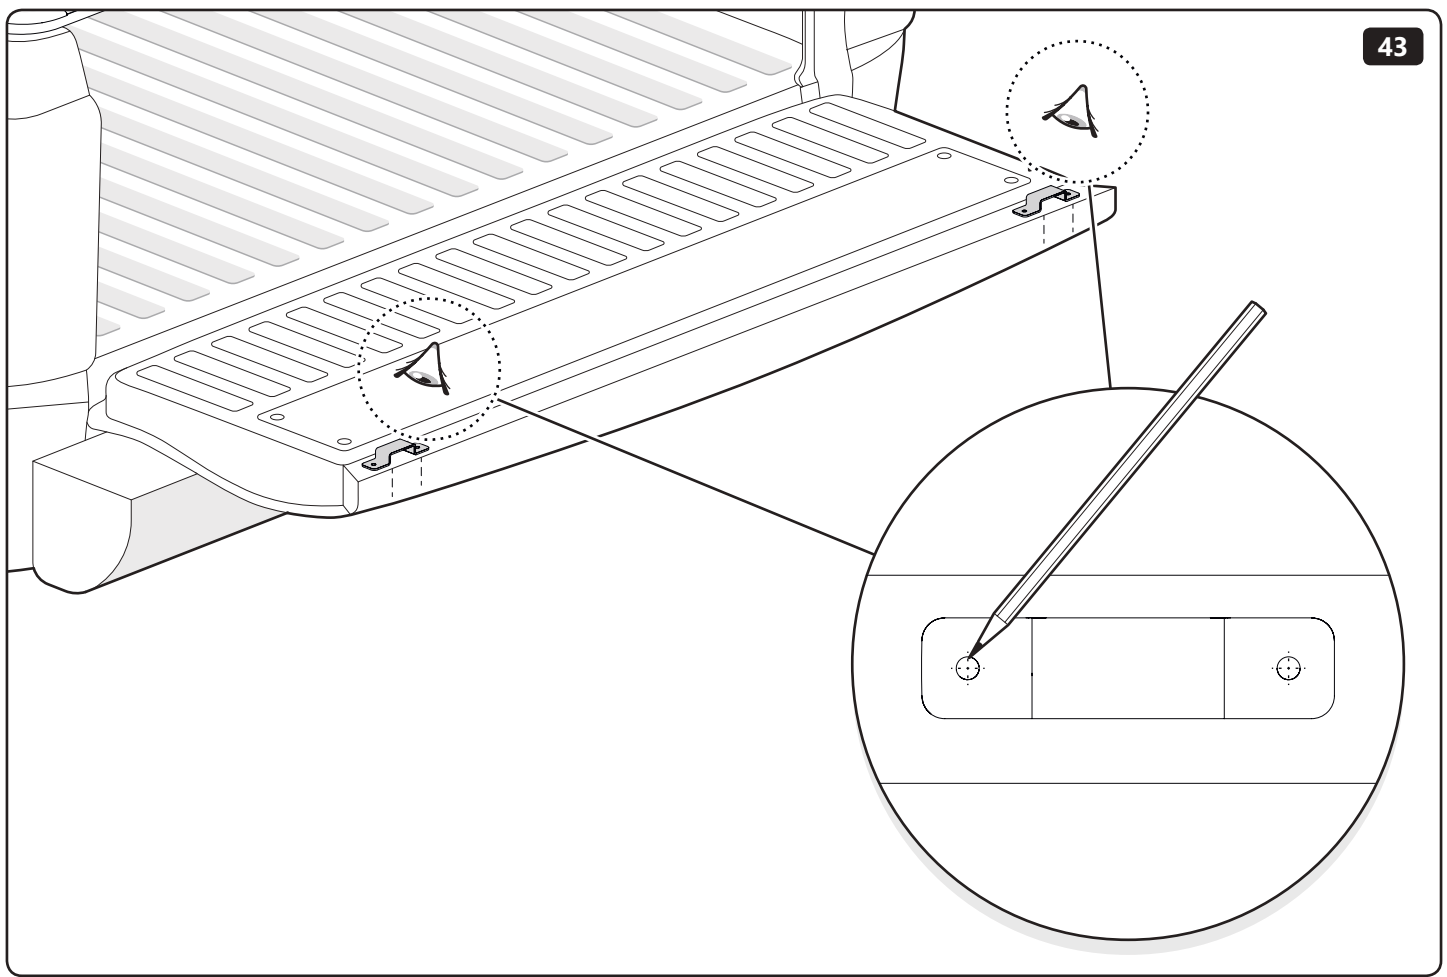

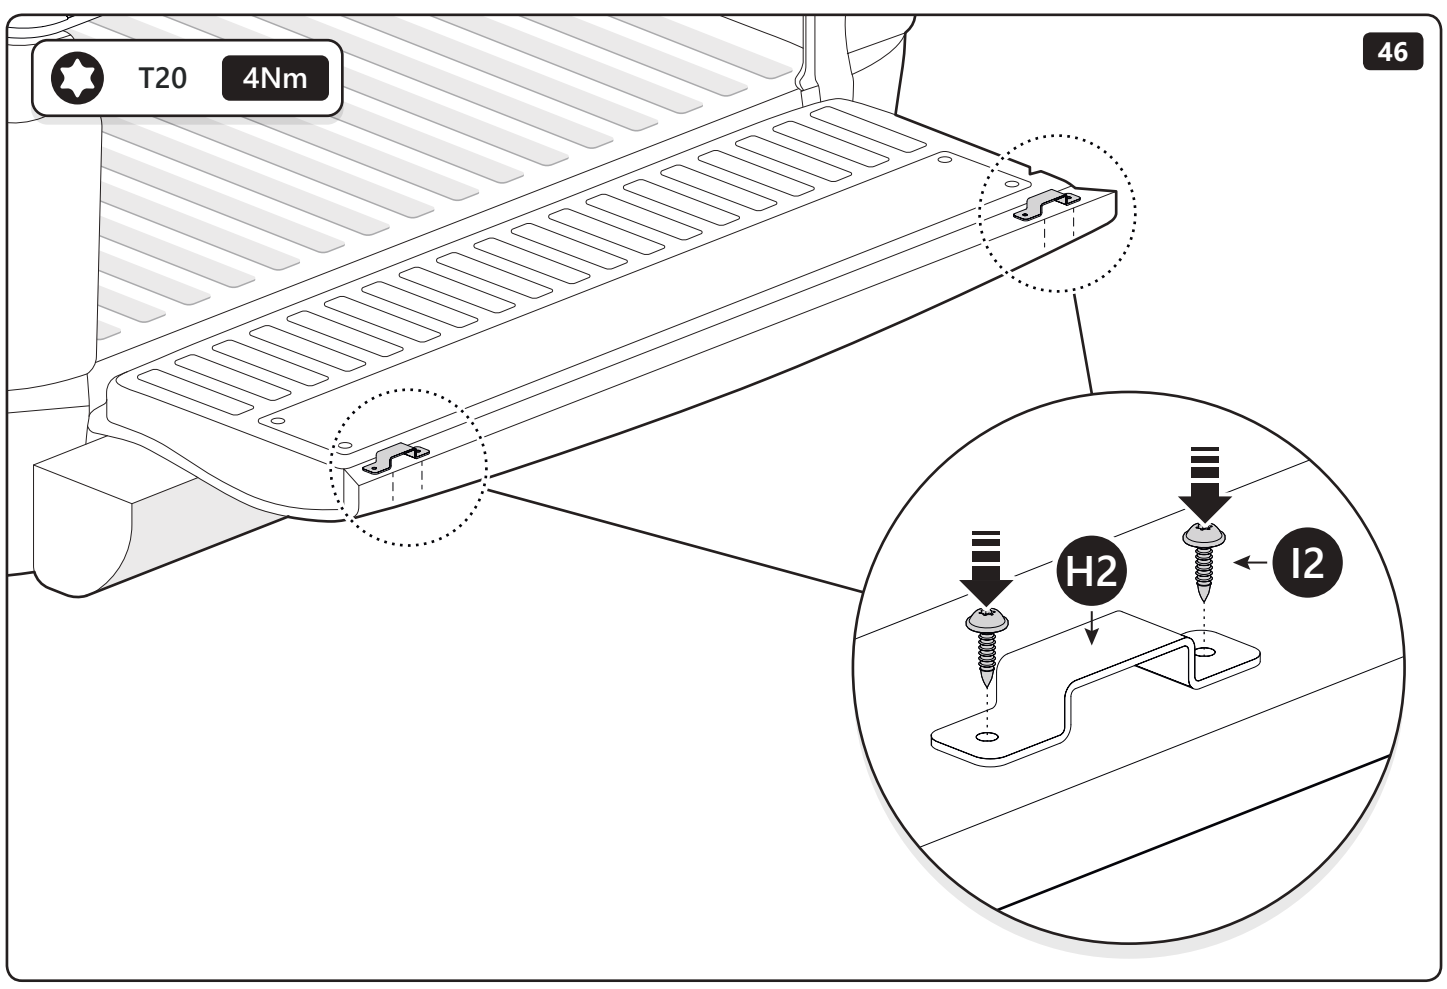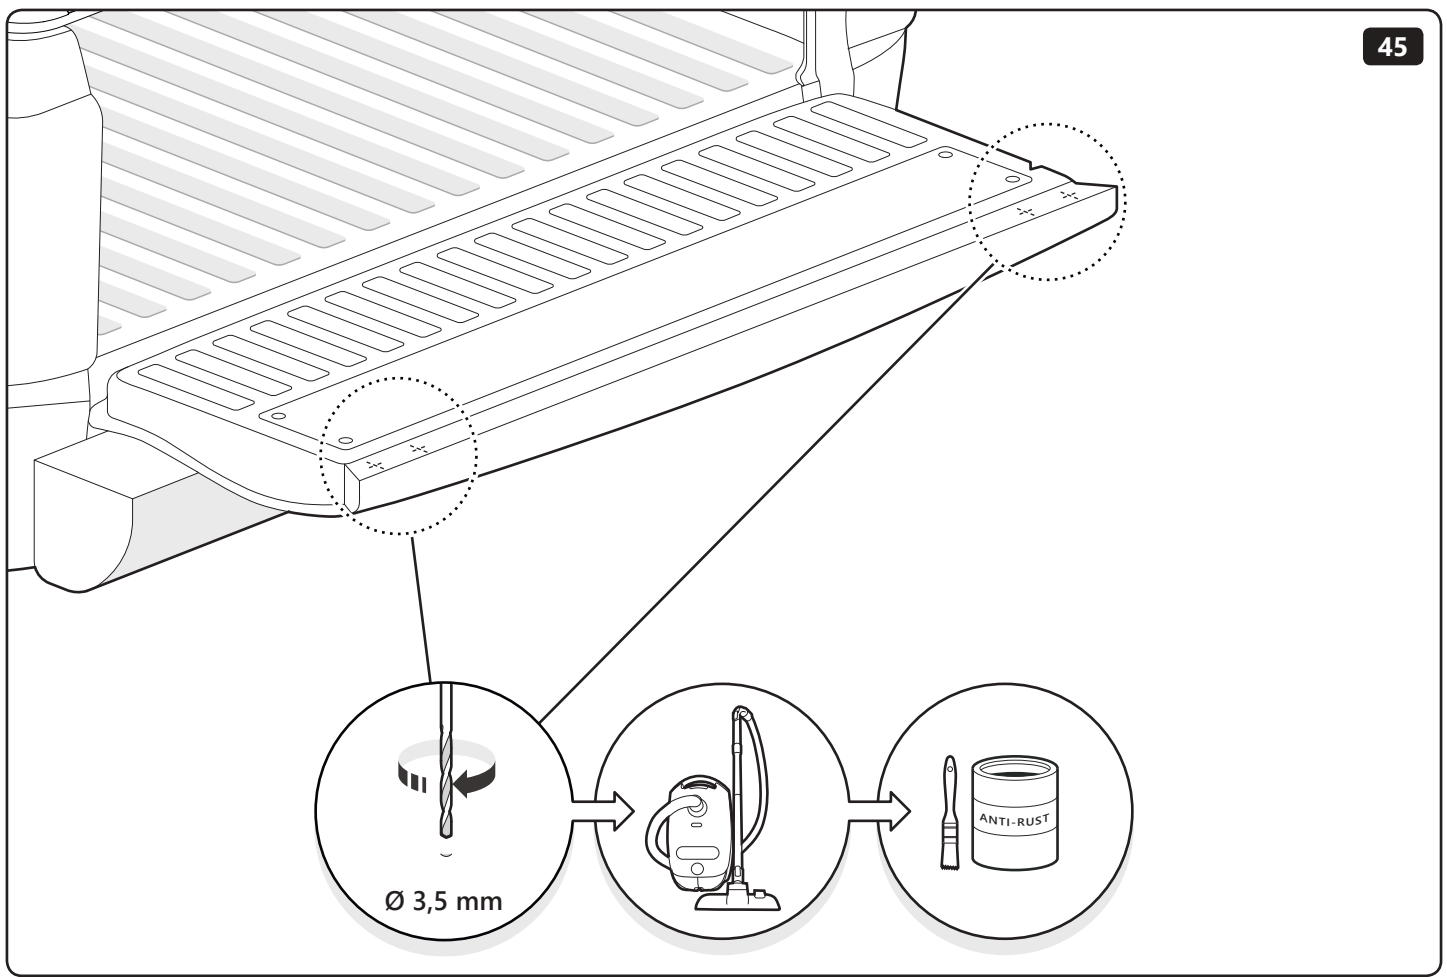











Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Fax +45 4810 2960  
Support info@mountaintop.dk  
Website www.mountaintop.dk  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MT2 TO90/91	Toyota / 2015 →	Double / Extra	1 hour(s)	29 - 40 Kg
MT2 IS90/91	Isuzu / 2006 - 2011	Double / Space	1 hour(s)	29 - 40 Kg
MT2 FO90/91	Ford / 2011 →	Double / Super	1 hour(s)	29 - 40 Kg
MT2 MI91	Mitsubishi / 2015 →	Club	1 hour(s)	29 - 40 Kg
MT2 VW80	Volkswagen / 2010 →	Double	1 hour(s)	29 - 40 Kg

**GB** Installation manual

**SF** Asennusohje

**F** Notice de montage

**PL** Instrukcja montażu

**NL** Installatie-instructies

**TR** Montaj Talimatı

**S** Monteringsanvisning

**E** Instrucciones de montaje

**H** Szerelési utasítás

**P** Instruções de instalação

**RUS** Инструкция по установке

**N** Monteringsvejledning

**D** Einbauanleitung

**CZ** Návod k instalaci

**I** Istruzioni de montaggio

**GR** Οδηγίες Εγκατάστασης

**DK** Monteringsvejledning

**RO** Instructiuni de instalare