
L05-0143A; Rev.00



INSTALLATION INSTRUCTIONS MANUAL

MAXCOVER 45 FOR OEM STYLISH BAR WITH REMOTE LOCKING

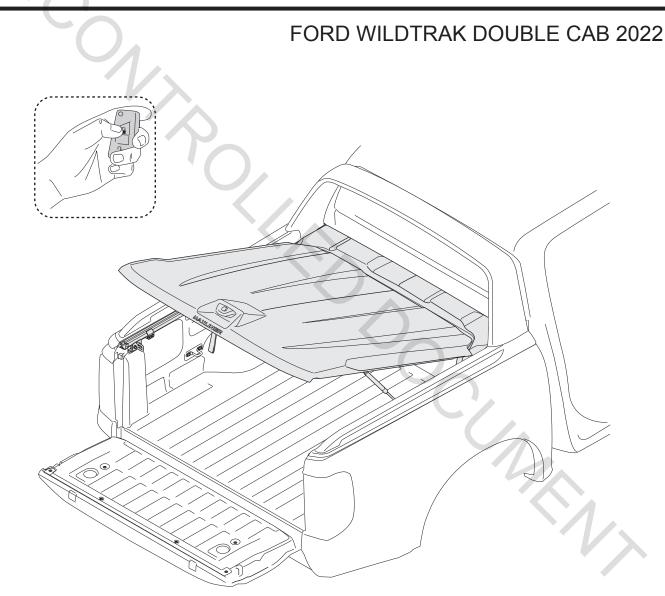

Contact us



THAILAND OFFICE + (66 38) 468 008 ext 2001


<u>info@maxliner.com</u> 700/135 Moo 5, Amata Nakorn, Klongtumru, Muang Chonburi, 20000 Thailand


EUROPE OFFICE


- + 31 (0) 850 201 887
- infoEurope@vandapac.com
- Aphroditestraat 1, 5074TW Tilburg, Netherlands Chamber of Commerce : 71512799 VAT identification number : NL858744272801

AUSTRALIA/OCEANIA OFFICE

- + 61 1800 592 192
- sales@maxliner.com.au
- A 2 Dexter Drive Epping 3076 Australia

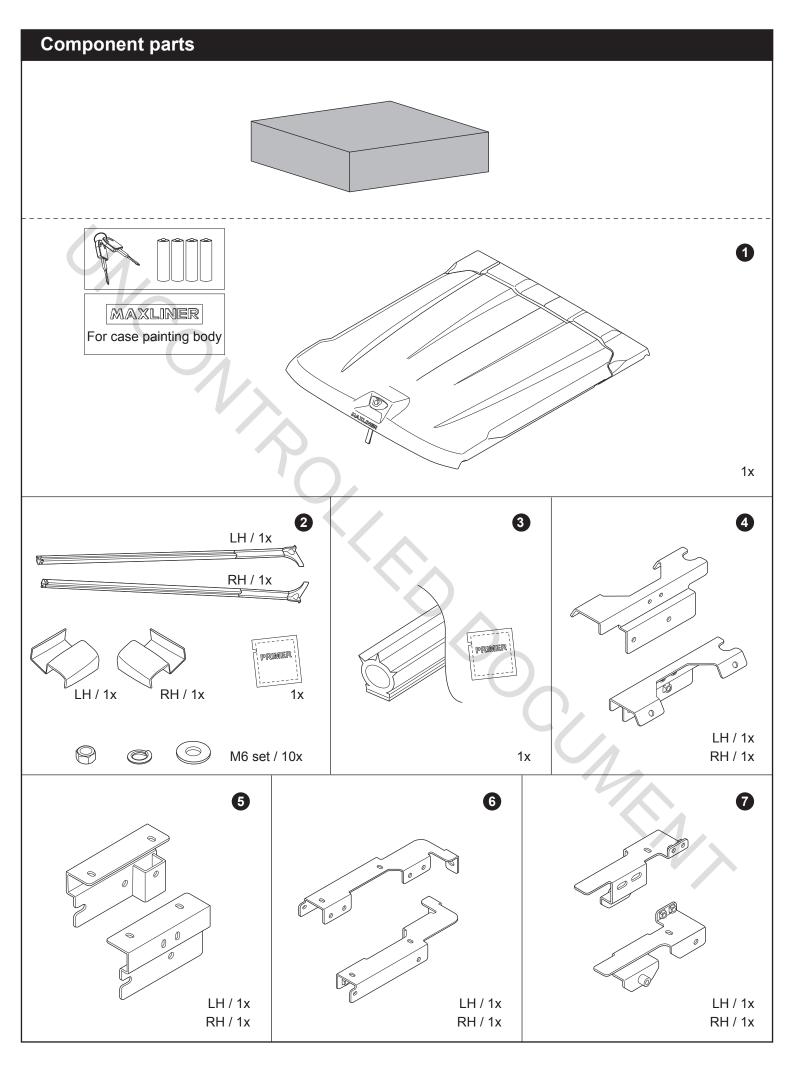

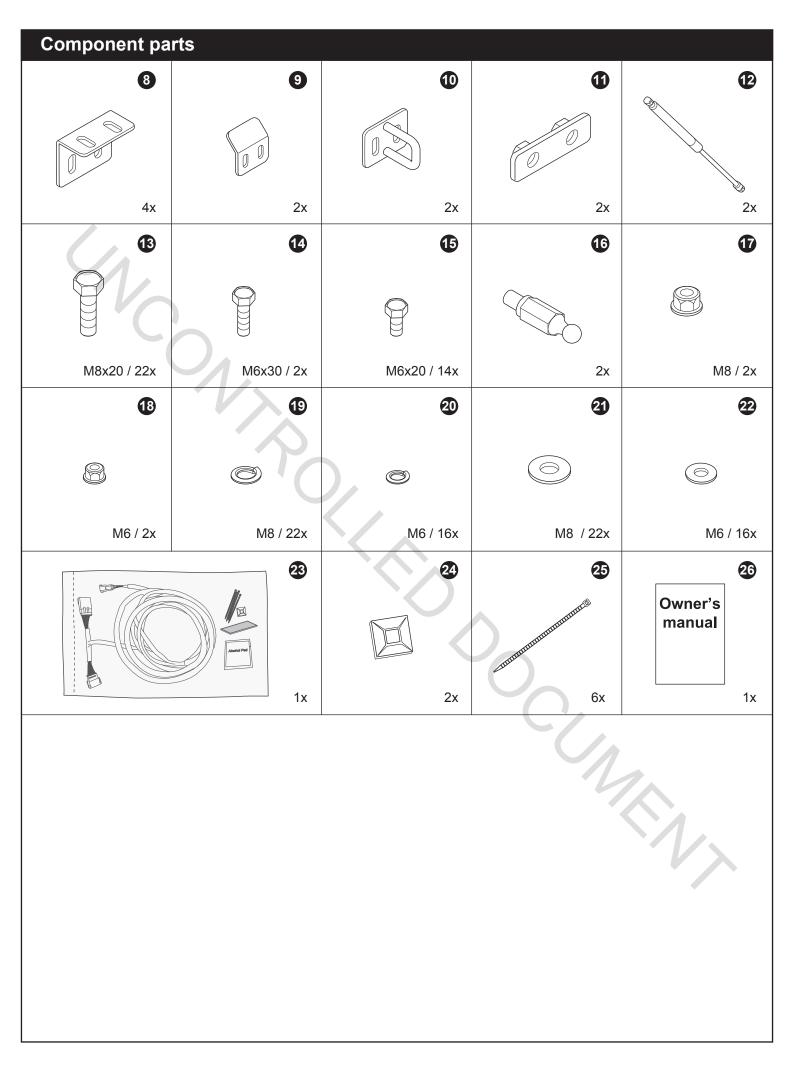

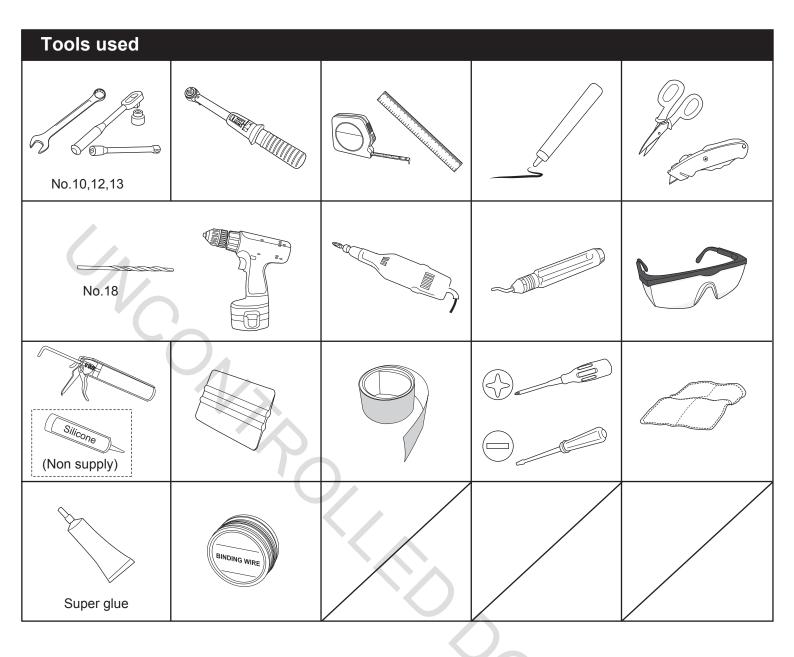





Caution for installation


Read this mounting manual carefully, before your start the installation.

- 1. Area where to install product should be clean.
- 2. During installation, person who installed should take off any ornaments.
- 3. Wear the protective eyewear before installation.

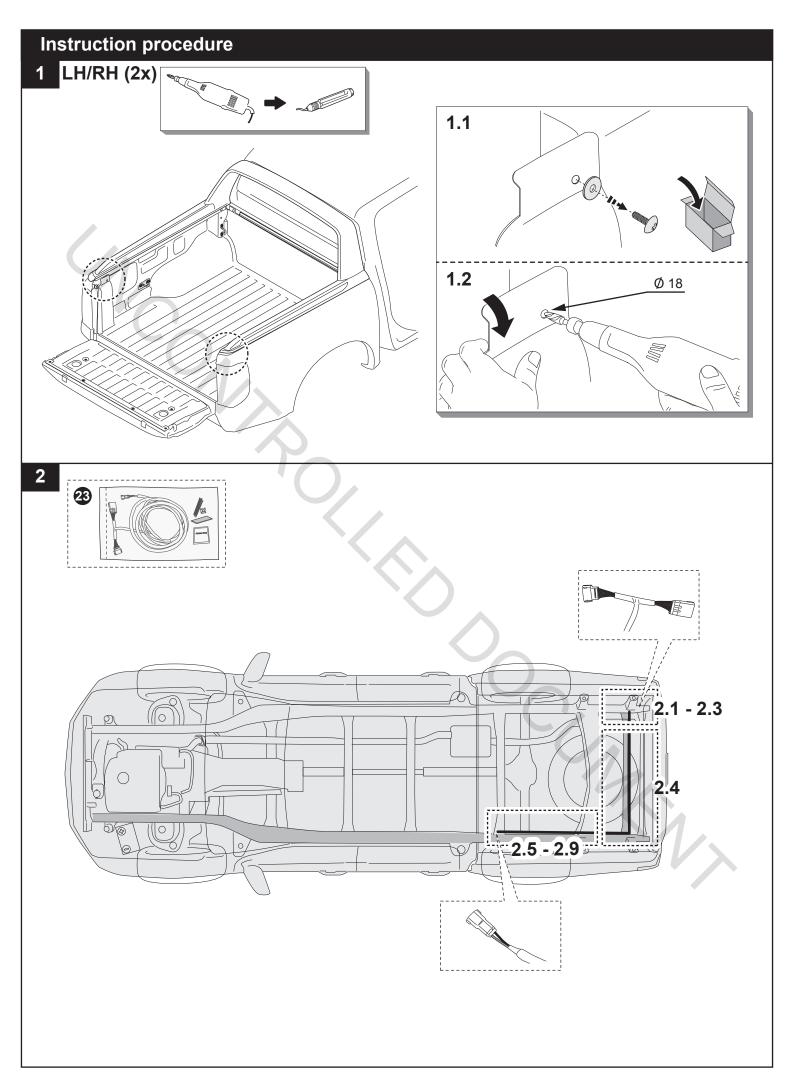



Instruction procedure

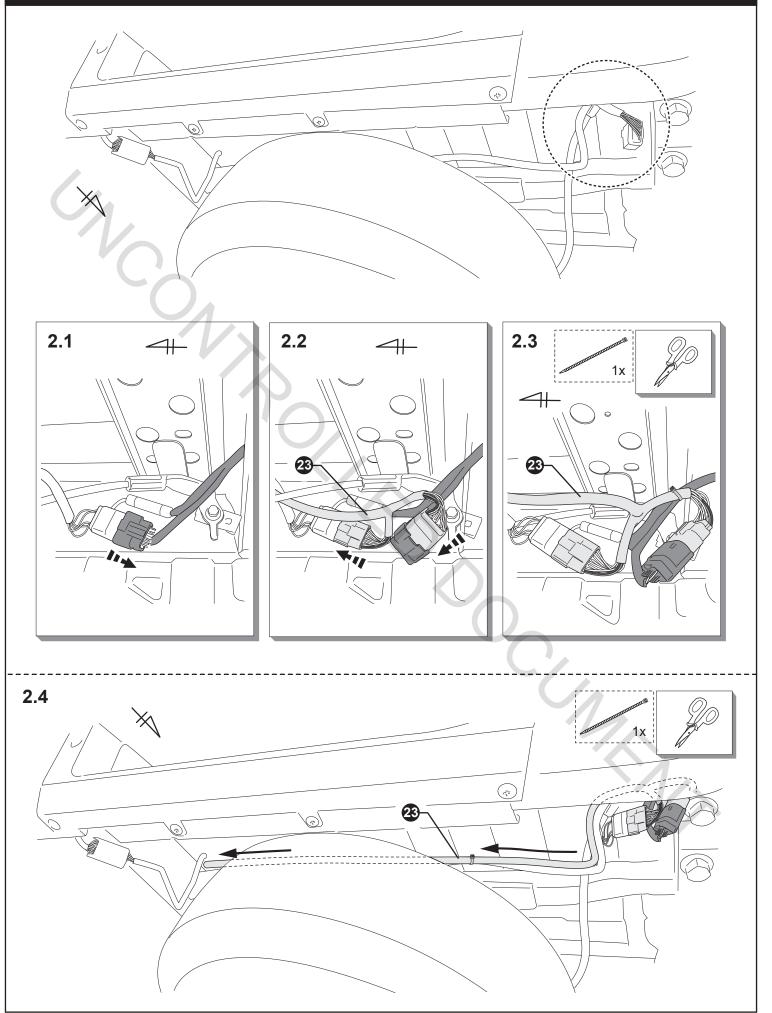


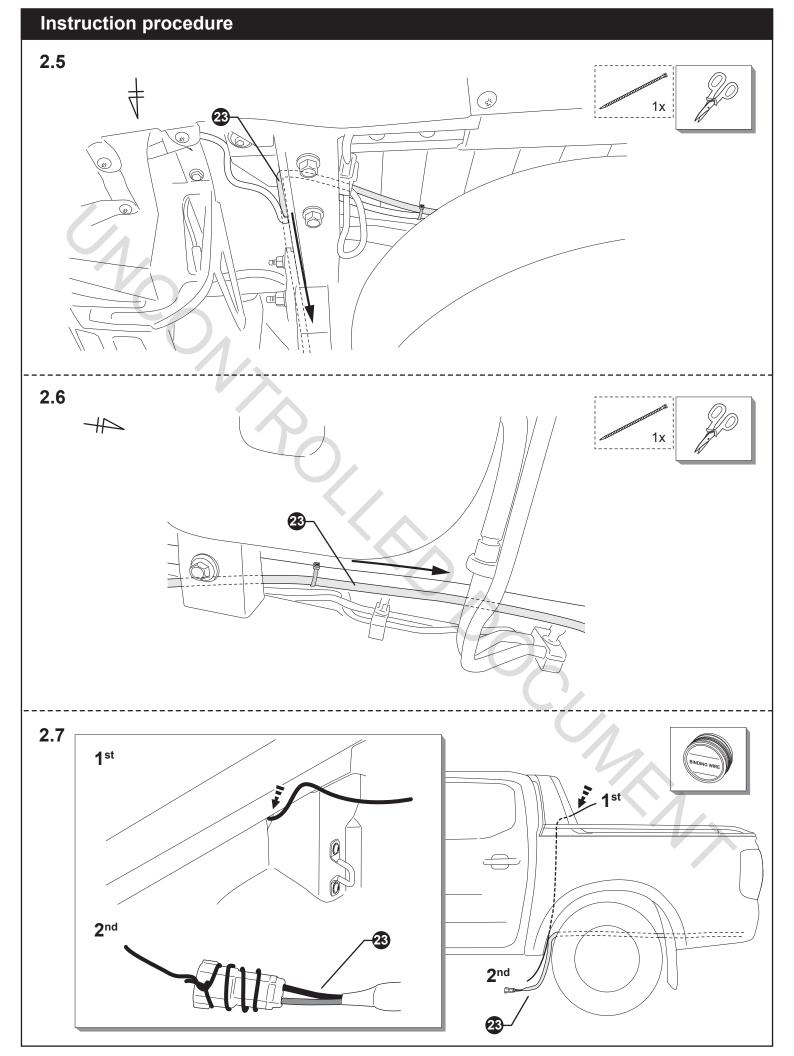



Instruction procedure

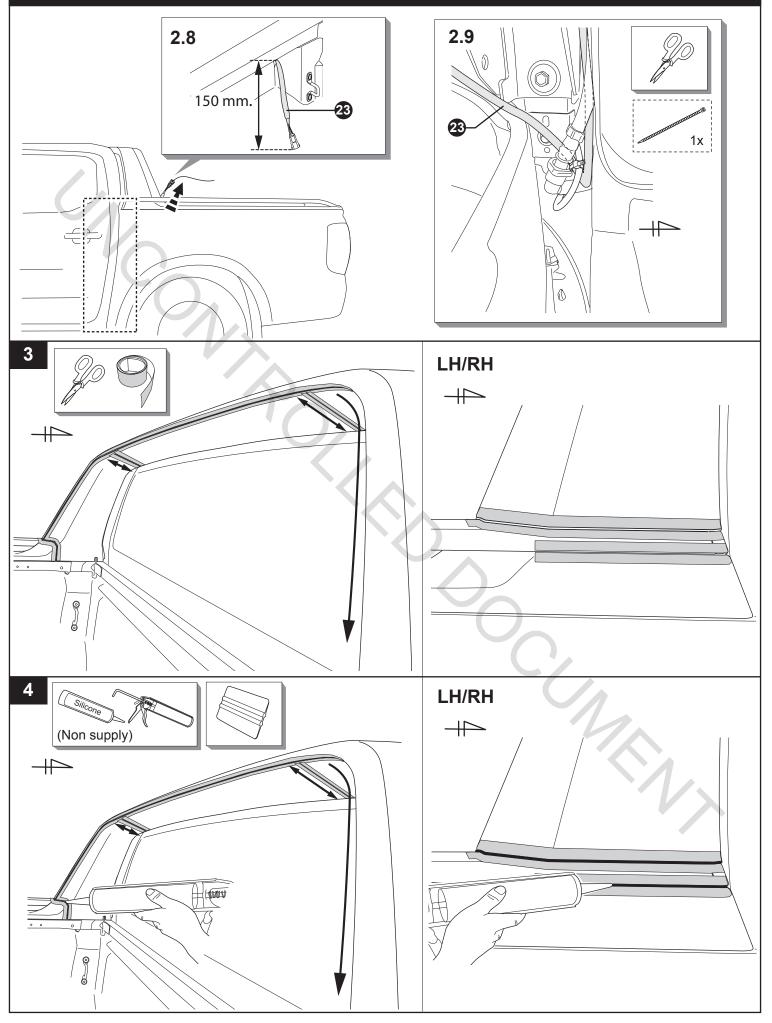


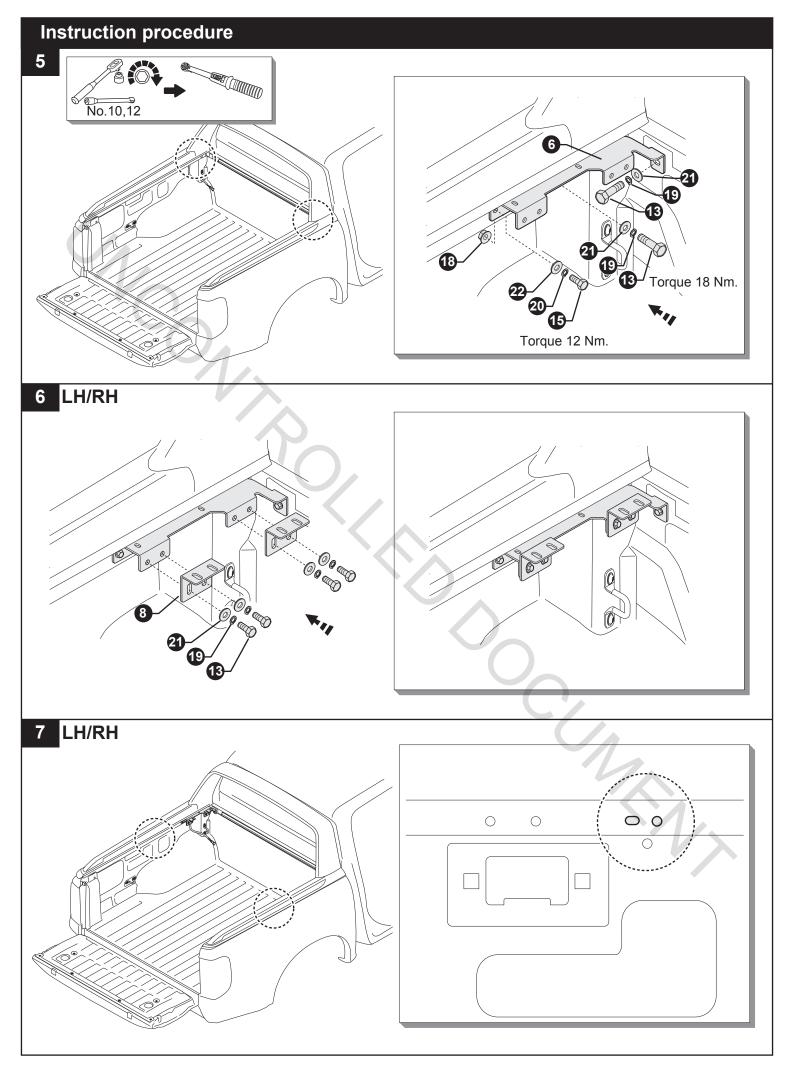


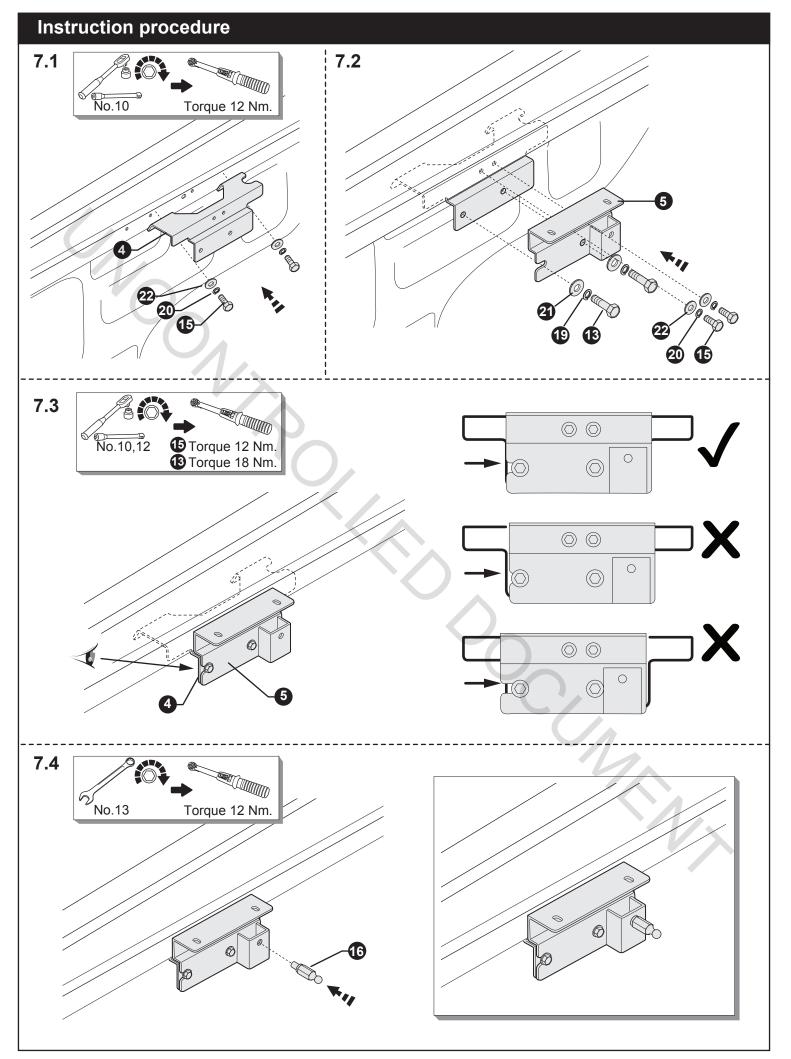


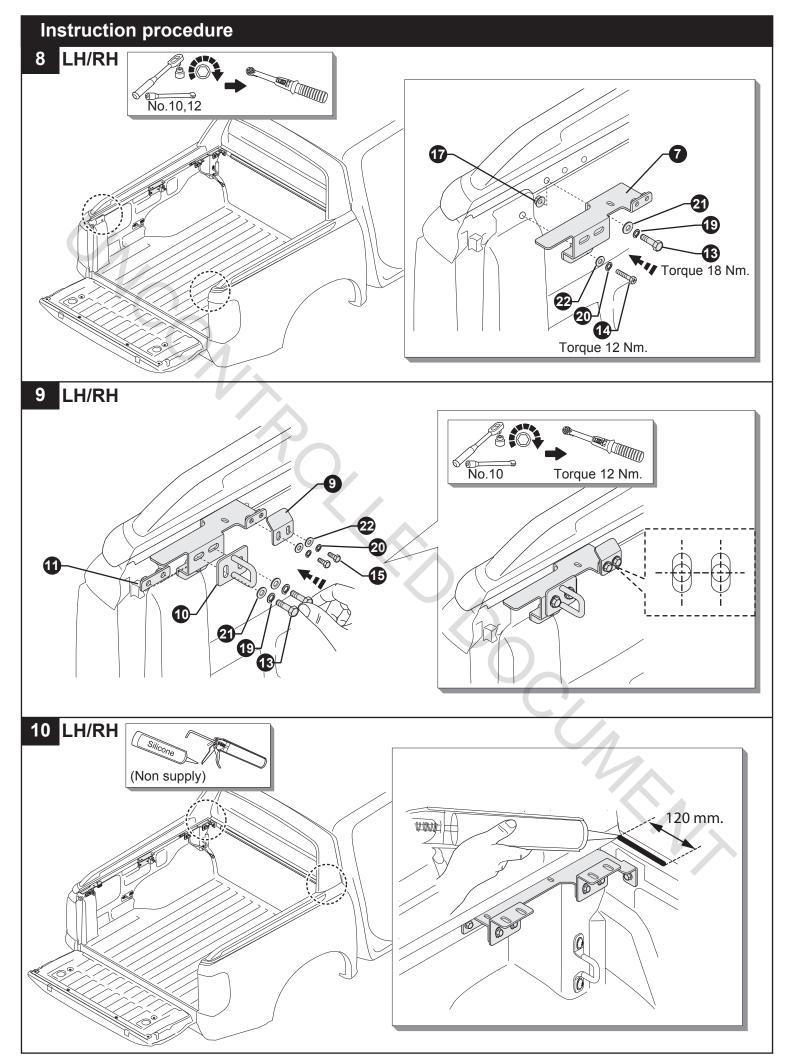


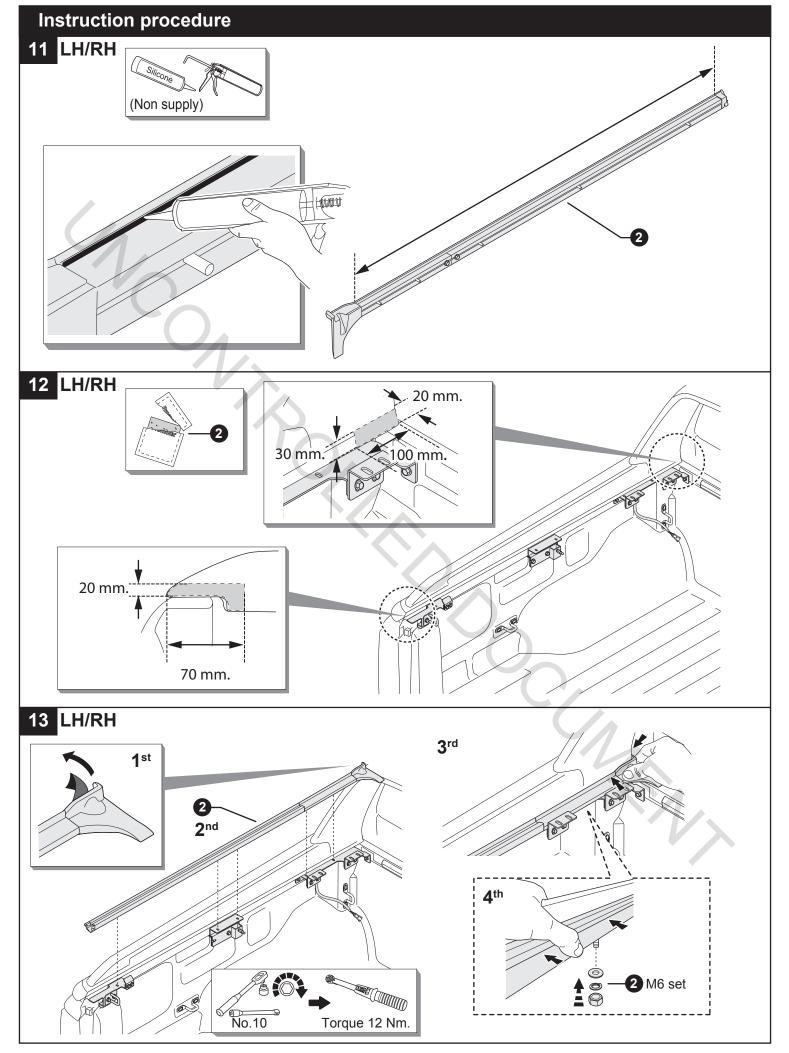


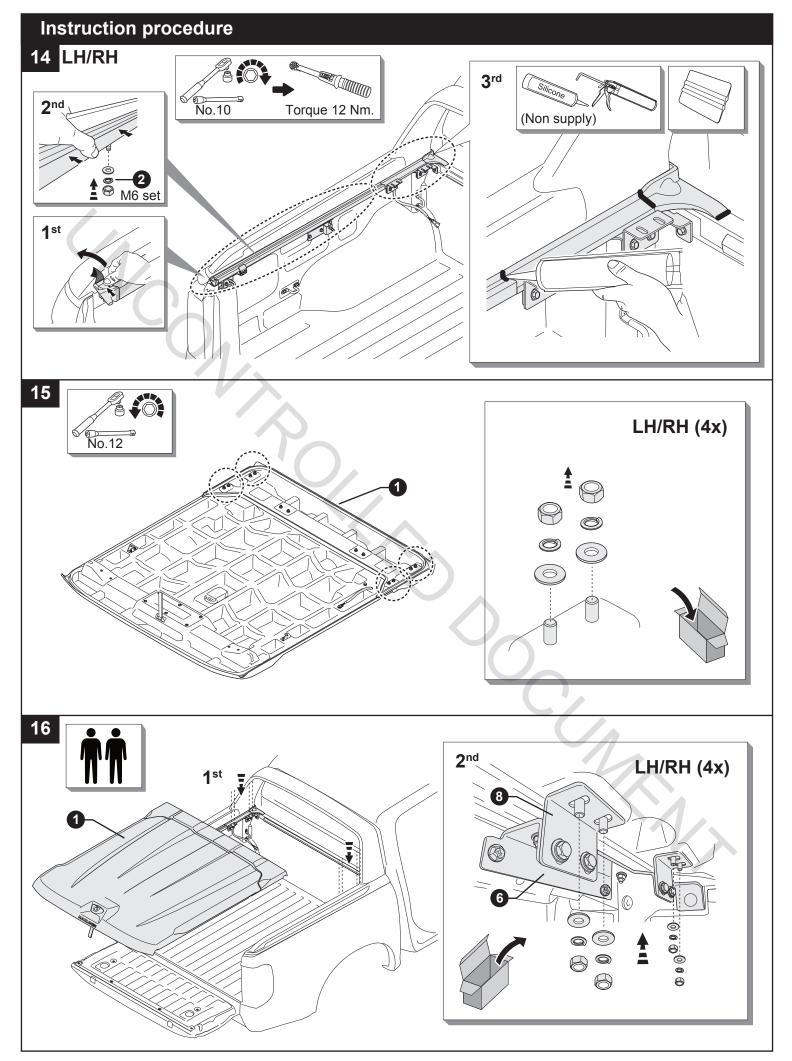

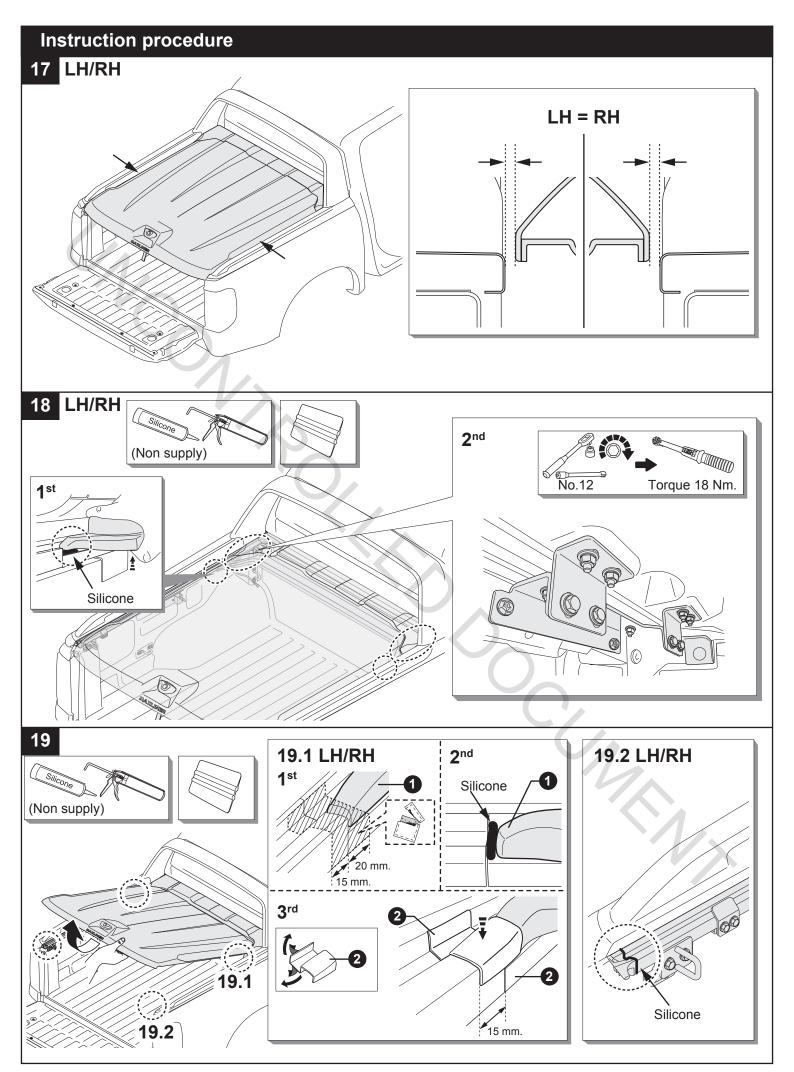

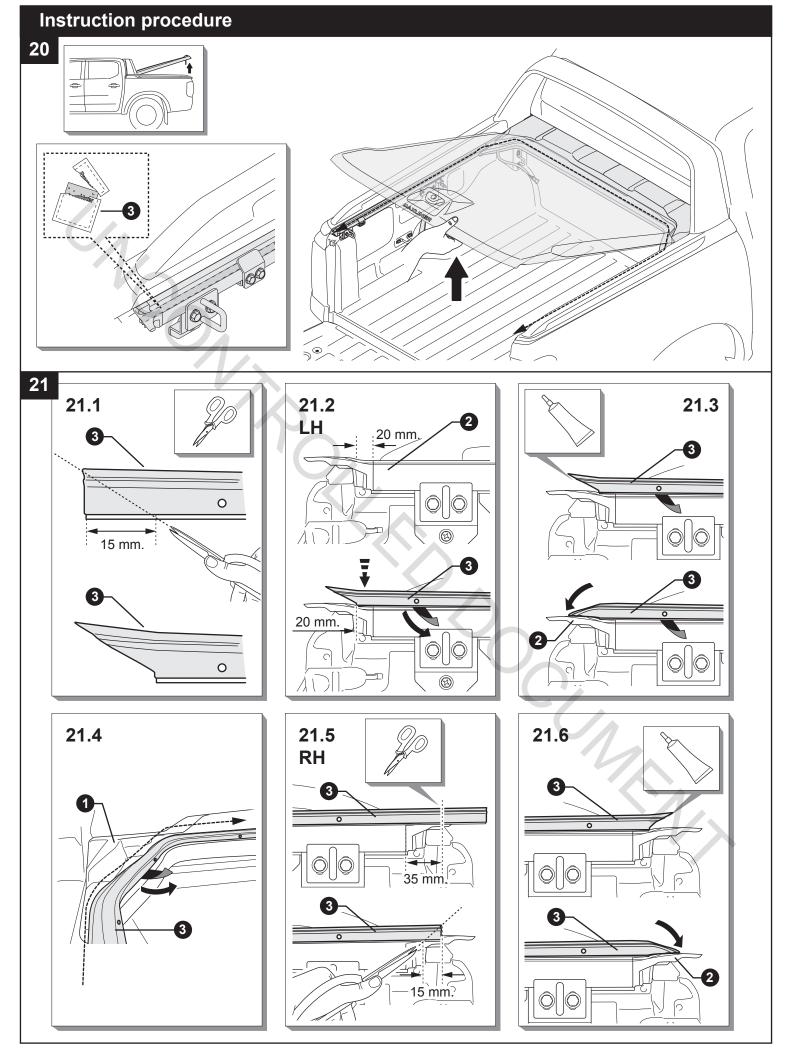

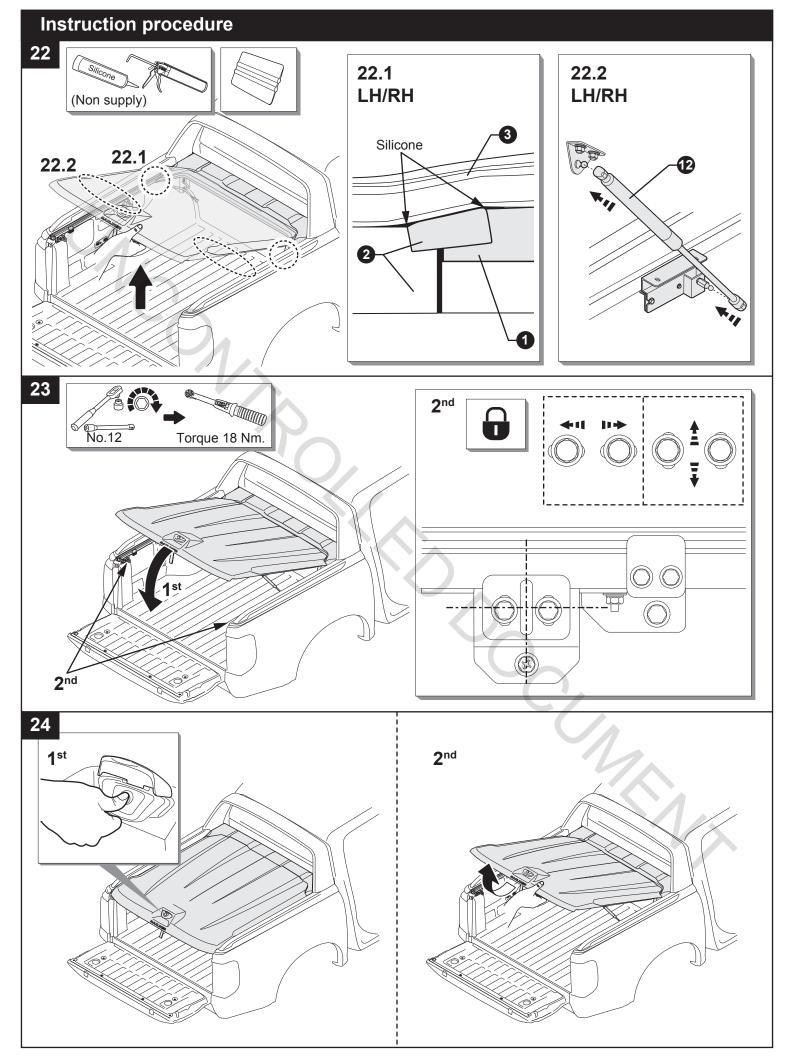

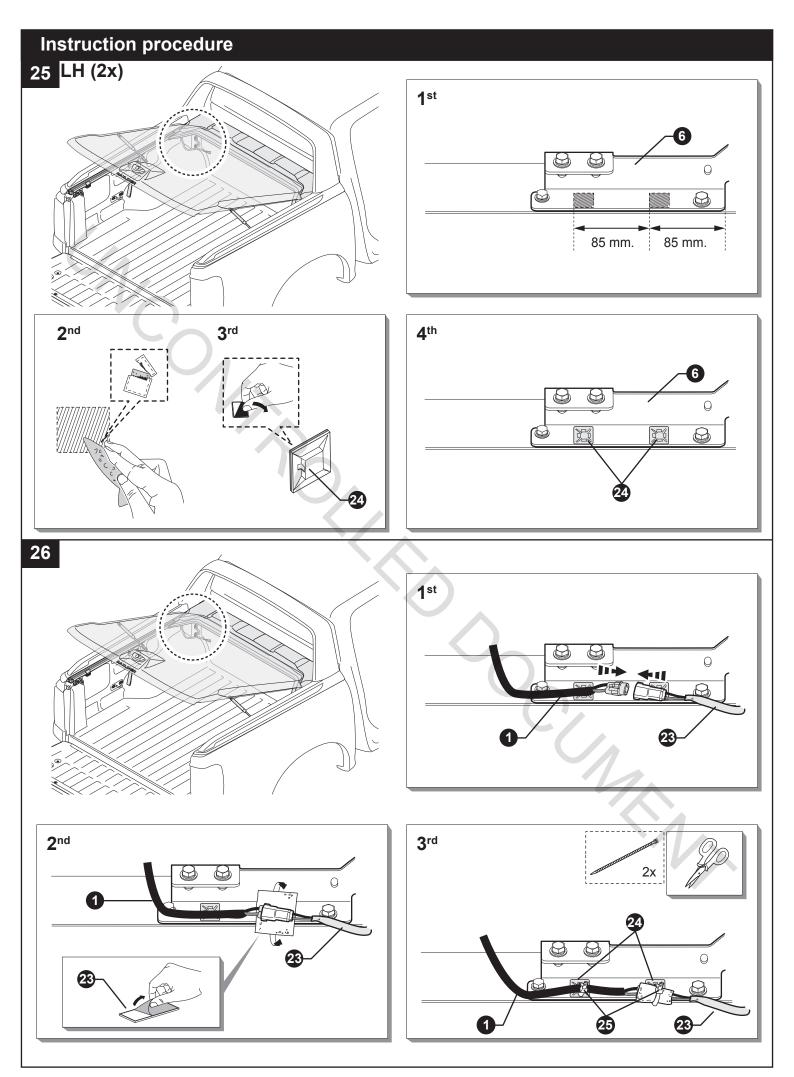

Instruction procedure 27 27.1 27.2 ~ 3 mm. 27.1 ~ 3 mm. ~ 3 mm. ~ 3 mm. -Truck 27.1 27.2 Truck -28 Silicone 28.1 (Non supply) Silicone Silicone 28.1 HAM 28.1 28.2 28.2 28.3 Silicone ~

