Catalytic Converter Marking & Registration Kit

(Included with your CATLOC® product as standard)

MARKING

Ensure surface to be marked is clean & dry. Ensure CAT is either cold or cool to the touch. Peel label from backing paper and place on the CAT. Apply metal marking fluid on the label ONLY. Ensure all holes are filled with fluid. Start vehicle and allow to idle for approx. 2mins.



WINDOW STICKERS

Ensure window stickers are placed in a prominent position on two front windows.



REGISTRATION

It is very important that details of your vehicle with your name and contact information are recorded on the ISR®. To register visit www.TheISR.org and follow the instructions or complete and return the enclosed registration form.

INSTALLATION SAFETY POINTS

- The fluid should be stored in cool conditions and away from direct sunlight. It should be kept away from food and drink and out of the reach of children and animals.
- Harmful if swallowed. Avoid contact with skin and eyes.
- Do not eat, drink or smoke while using.
- Contains Ammonium Cupric Chloride.
- For more information, see full instruction leaflet enclosed with pack.



Installation Guide

model no: 1002




CATLOC

ADVANCED EXHAUST SYSTEM PROTECTION

WWW.CATLOC.EU

CATLOC_1002_InstallGuide_A4_RevE.indd 1 15/12/2011 13:31:06



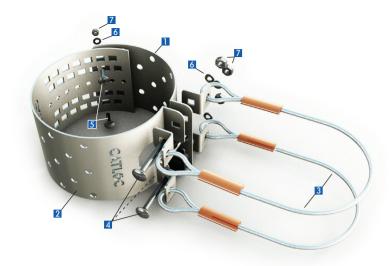

PARTS LIST

Prior to installation, please check the following parts are included:

- 1. 1x Curved Plate [Small]
- 2. 1x Curved Plate [Large]
- 3. 2x Security Fixing Cables
- 4. 3x M8 x 50mm Stainless Steel Bolts
- 5. 2x M8 x 20mm Stainless Steel Bolts
- 6. 5x M8 Stainless Steel Washers
- 7. 5x M8 Stainless Steel Security Nuts
- 8. 1x Loctite® 3ml thread locker (not shown)
- 9. 1x CATLOC® ISR® security marking kit (not shown)

In the unlikely event any parts are missing, please email info@catloc.eu

INSTALLATION SAFETY POINTS

- CAUTION: Vehicle catalytic converters get extremely hot during driving. We recommend waiting a minimum of 2-3 hours after using the vehicle, before installing our product.
- Secure fixing cables away from moving parts.
- Protect your eyes during installation.
- Do not put CATLOC® components in your mouth.
- Loctite® can be harmful. Keep away from your mouth and seek medical advice immediately if ingested.

INSTALLATION INSTRUCTIONS

Important Installation Notes:

This CATLOC® product is a permanent installation on your vehicle. Read all instructions carefully prior to installation.

*Permanent Fix Method: To ensure maximum security, this product is supplied with security nuts and Loctite® thread locker. Thread locker must be applied to bolt thread before applying the washer and nut. To prevent removal of the CATLOC® product, all nuts must be tightened until nut head breaks off.

1. Locate vehicles catalytic converter / DPF

The catalytic converter (CAT) or DPF can be found along the vehicles exhaust pipe, usually between the engine and muffler. If in doubt, consult a professional or check with the manufacturer.

2. Establish product setting

To establish the product setting, measure the circumference of the CAT or DPF (this is the measurement ground the outside).

With the large plate inside the small plate (as per illustration) locate small bolts through the two nearest fixing holes to the circumference, locate washers and nuts. Test fitment. If setting needs adjustment, repeat above step until product is set at nearest setting (ensure that the product is set slightly smaller than the actual circumference).

3. Permanently set product

Once setting is confirmed, set the product using the *Permanent Fix Method.

4. Fit CATLOC® to vehicle

With the product in place, insert large bolt athrough centre fixing hole on flange of product and locate washer and nut . Loosely tighten to keep product in place.

Locate suitable position to wrap cable around underside of vehicle, being careful to keep away from all moving parts, ensuring it does not hang too low. Work the cable back to the CATLOC®.

Insert large bolt a through cable bracket and locate through fixing position on product flange.

Locate and loosely fit washer and nut on to large bolt a.

Repeat above steps for second cable **1.** Locate second cable to a separate location where possible.

Once both cables are in place, secure all bolts using the *Permanent Fix Method, as previously described.

