
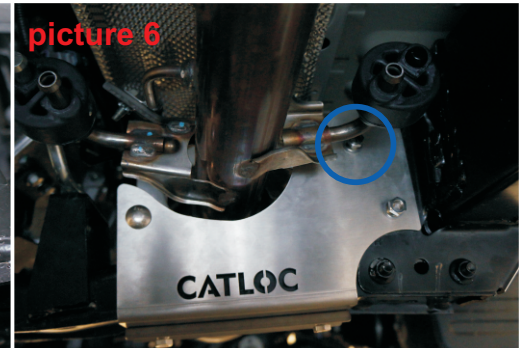
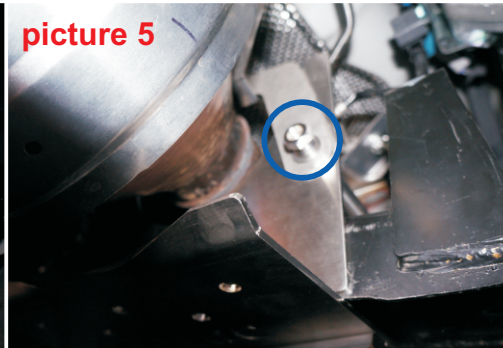
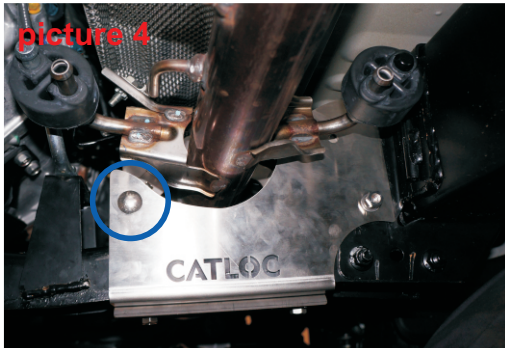
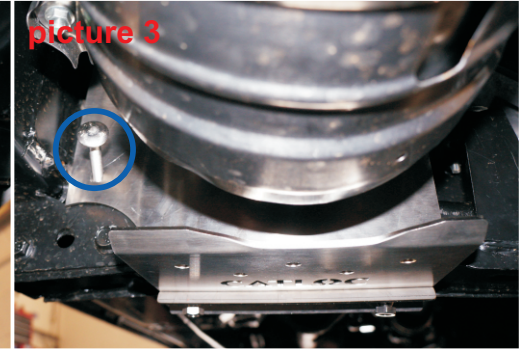
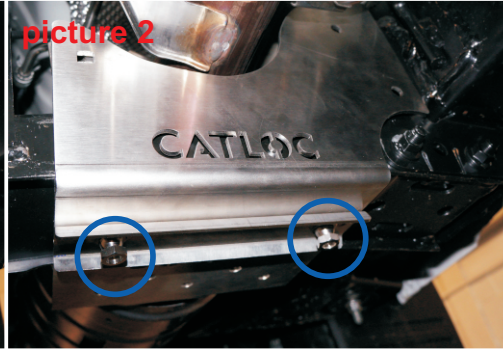


This CATLOC® product is a permanent installation on your vehicle. Read all instructions carefully prior to installation.

*** Permanent Fix Method:** To ensure maximum security, this product is supplied with security shear nuts and bolts. To prevent easy removal of this product, all nuts and bolts must be tightened until the nut head breaks off. This should only be done when instructed and once all final checks have taken place.

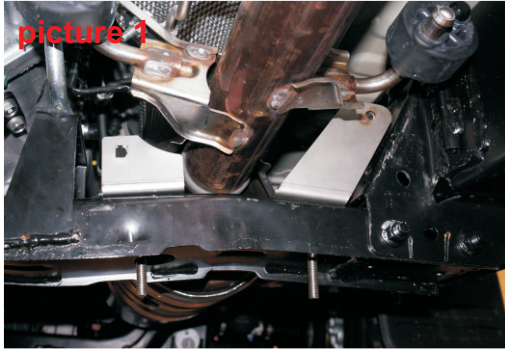

PICTURE 1: *image taken facing front of the vehicle

Place both small and large mounting brackets onto the vehicle's cross member as shown. Ensure large fixing bracket sits on the right. When correctly in position, the attached bolts will locate through existing holes in cross member.

PICTURE 2: *image taken facing front of the vehicle

Locate angled protection plate. Both fixing holes should align with the mounting bracket bolt threads. Pass thread through the holes and loosely fit washer and shear nut.

PICTURE 3: *image taken facing rear of the vehicle

Slide the flat protection plate into position against the cross member. Locate one M8x110mm coach bolt through the lower left hand side fixing hole as shown. Pass the thread through the angled protection plate and fit washer and shear nut.

PICTURE 4: *image taken facing front of the vehicle

Insert a second M8x110mm coach bolt, through the top left fixing hole as shown. Ensure thread faces the front of the vehicle, and must be inserted through reinforcing tube on small mounting bracket.

PICTURE 5: *image taken facing rear of the vehicle

Position the top 'U' protection plate over bolt thread and fit washer and shear nut.

PICTURE 6: *image taken facing front of the vehicle

With all bolts in position, locate the remaining M8x110mm coach bolt through the second fixing position on 'U' plate. Ensure the bolt thread passes through the mounting bracket and angled protection plate. Fit washer and shear nut.



FINAL CHECK and PERMANENT FIX: *image taken facing front of the vehicle

Check that all of the components are correctly installed to the vehicle as per instructed. Once confirmed, use *** Permanent Fix Method** on all nut fixings.

IMPORTANT - Marking and Registration Process

This product is supplied with the CATLOC ISR catalytic converter marking and registration system. This is an integral part of the complete anti-theft solution and your catalytic converter should be marked and registered as part of this full installation process (instructions can be found inside the CATLOC ISR pack)