


Installation Instructions for Catloc1007
Ford Transit Custom [euro5]
Ford Transit SWB/FWD [euro5]
All New Ford Transit V363 FWD [euro5]

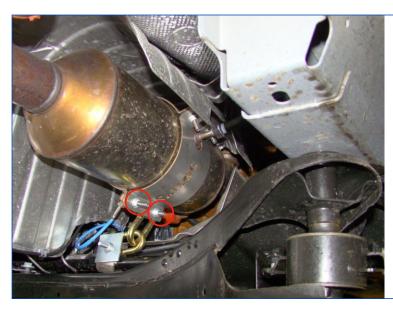

These instructions are a guide to installing this Catloc product. The reverse of this page provides further instructions for installing and registering the ISR marking kit, **this** must be installed as part of the installation.

Please read through all instructions carefully, prior to installation.

For any installation queries, call 01295 533

Tools required for installation: 13mm spanner or socket

#### IMPORTANT:

Ensure the catalytic converter is cold or cool to the touch.

Do not over tighten security nut fixings until the end steps of this installation.

Locate the large curved body over the top of the catalytic converter.

Locate the small curved plate, to the lower half of the catalytic converter, insert the 2x M8 carriage bolts through the top square holes on the large plate. Secure by hand tightening with M8 washers and M8 security shear nuts.

Slide chain link between Catloc product at the forward lower hole as shown and fit lower fixings with M8 coach bolts, washers and nuts.

Fit chain clamp bracket to anti-roll bar, insert chain between bracket and fit M8x50mm carriage bolt and standard M8 flange nut.

Tighten nut until clamp tightens onto bracket and chain - the chain nor bracket should move once tight.

Fit 3mm deflection bracket over remaining thread on clamp and secure with M8 security shear nut.

Ensure all fixings are correctly in place, and the product is correctly fitted.

Now starting with the lower nuts on product (circled in red on above image), fully tighten until each of the nut heads shear off.

Next tighten top 2x fixings, again ensuring the nut shears once fully tightened.

Lastly fully tighten anti-roll bar deflection bracket nut.

NOTE: To ensure this product cannot be easily removed, it is essential that on completing this installation, all of the security nuts are fully tightened until the heads of each nut shears off.



# Marking and Registration Instructions for the ISR catalytic converter protection

#### **Contents**

1x Ultra-Destruct Label | 2x Window Warning Labels | Metal Marking Fluid | Applicator | ISR Contact Card

#### **Safety Instructions**

The fluid should be stored in cool conditions and away from direct sunlight. It should be kept away from food and drink and out of the reach of children

Spillage of small quantities can be mopped up with a tissue and disposed of in normal waste.

Harmful if swallowed. Avoid contact with skin and eyes.

Do not eat, drink or smoke whilst using.

- Eye contact: Irrigate the eye thoroughly for at least ten minutes. Seek immediate medical attention.
- Skin Contact: Wash off with soap and water. Product is harmless to skin but may stain.
- Swallowing: The nature of this product makes it difficult to ingest in harmful quantities, except by deliberate action. If a quantity is swallowed, seek immediate medical attention and show these instructions.
- Inhalation: If the fluid is used in the quantities supplied for its specific use, it should be impossible to inhale sufficient vapour to cause any medical problems.

#### **Contains Ammonium Cupric Chloride**

Marking - Please note, this is a permanent label and should not be removed during OR after installation.

**IMPORTANT:** Ensure marking position is either cold or cool to the touch.

Labels will adhere to all surfaces likely to be encountered, provided the surfaces to be marked are clean and dry.

Due to the powerful adhesive, make sure you have prepared the position for the label prior to removing the backing paper.

Locate label in prominent position, ensuring it is clearly visible to any person looking underneath the vehicle.

Peel the label from the backing paper and place in the position.

Apply the metal marking fluid to the code and telephone number area, taking care to keep the fluid only on the label. Ensure all holes are filled with fluid.

Start the vehicle and allow to idle for approximately 2 minutes.

Note: It is not necessary to remove the excess fluid as it will crystallise and disperse naturally.

# **Window Warning Labels**

These should be positioned on the two front side windows (image 2).

### Registration

It is very important that details of the vehicle with customer name and contact information are recorded on the ISR. To register visit www.catloc.eu and click on the register button which will re-direct you to the relevant form to complete on the ISR website. Complete all information boxes on this page and then submit.

NOTE: An email address must be entered to receive two acknowledgement emails from the ISR. The first will confirm that they have received the information and the second will be sent once the information has been verified and registered onto the database. If you do not have the customers email address, please enter an alternative email and pass on all paperwork.

## **ISR Contact Card -** retained by customer.

This contains the ISR contact information and unique code with which the vehicles has been marked. In the event of theft, the customer should report this by phone or online at www.TheISR.org. When telephoning they will be asked for their unique code printed on the card.



